



## User's Manual

---

1. Usage Notice

---

2. Introduction

---

3. Basic Operations

---

4. User Settings

---


5. Troubleshooting

---

6. Replacing the lamp

---

7. Appendices

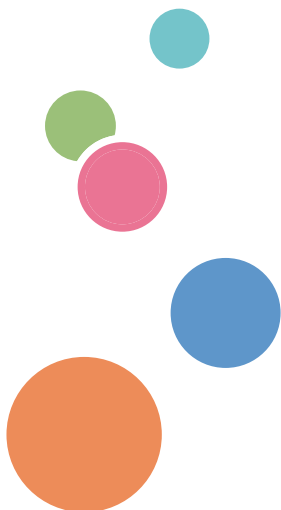

Read this manual carefully before you use this machine and keep it handy for future reference. For safe and correct use, be sure to read the Precautions in this manual before using the machine.



# Table of Contents

<b>Table of Contents</b> .....	<b>1</b>	<b>Troubleshooting</b> .....	<b>57</b>
<b>Usage Notice</b> .....	<b>2</b>	<b>Replacing the lamp</b> .....	<b>62</b>
<i>Precautions</i> .....	2	<b>Appendices</b> .....	<b>63</b>
<i>Safety Labels of This Machine</i> .....	12	<i>List of Compatible Signals</i> .....	63
<i>Regulation &amp; Safety Notices</i> .....	13	<i>Configurations of Terminals</i> .....	68
<i>Other Information</i> .....	18	<i>Terminal: Computer In (Mini D-sub 15 pin)</i> 68	
<b>Introduction</b> .....	<b>19</b>	<i>Terminal: PC Control (D-sub 9 pin)</i> .....	68
<i>Product Features</i> .....	19	<i>Specifications</i> .....	69
<i>Package Overview</i> .....	20	<i>Cabinet Dimensions</i> .....	70
<i>Product Overview</i> .....	21	<i>Trademarks</i> .....	71
<i>Connection Ports</i> .....	22		
<i>Control Panel</i> .....	23		
<i>Remote Control</i> .....	24		
<i>Remote Control Battery Installation</i> .....	26		
<i>Remote Control Operating Range</i> .....	27		
<b>Basic Operations</b> .....	<b>28</b>		
<i>Connecting the Projector</i> .....	28		
<i>Connect to Computer/Notebook</i> .....	28		
<i>Connect to AV Equipment</i> .....	30		
<i>Powering On/Off the Projector</i> .....	32		
<i>Powering On the Projector</i> .....	32		
<i>Powering Off the Projector</i> .....	33		
<i>Warning Indicator</i> .....	34		
<i>Adjusting the Projected Image</i> .....	35		
<i>Adjusting the Position of Projector Image</i> ...	35		
<i>Adjusting the Projector Zoom and Focus</i> ..	36		
<i>Adjusting Projection Image Size</i> .....	37		
<b>User Settings</b> .....	<b>39</b>		
<i>Using the On Screen Display (OSD)</i> 39			
<i>How to operate</i> .....	39		
<i>PICTURE</i> .....	40		
<i>SCREEN</i> .....	45		
<i>SETTING</i> .....	48		
<i>AUDIO</i> .....	50		
<i>OPTIONS</i> .....	51		
<i>3D</i> .....	56		

# Usage Notice

## Precautions



*Follow all warnings, precautions and maintenance as recommended in this user's guide to maximize the life of your unit.*

- Warning- **Indicates a potentially hazardous situation which, if instructions are not followed, could result in death or serious injury.**
- Caution- **Indicates a potentially hazardous situation which, if instructions are not followed, may result in minor or moderate injury or damage to property.**
  
- Warning- Do not place vases, plant pots, cups, toiletries, medicines, small metal objects, or containers holding water or any other liquids, on or close to this machine. Fire or electric shock could result from spillage or if such objects or substances fall inside this machine
- Warning- Keep the machine and attachments out of the reach of children. If the machine is near children, it may cause injury.
- Warning- Plastic bags can be dangerous, please do not leave near babies and young children. To avoid the threat of suffocation, please keep away from their nose and mouth.
- Warning- Do not use any power sources other than those that match the specifications shown in this manual. Doing so could result in fire or electric shock.
- Warning- Do not damage, break, or modify the power cord. Also, do not place heavy objects on the power cord, or pull the cord or bend it severely. Doing so could result in fire or electric shock.
- Warning- Touching the prongs of the power cable's plug with anything metallic constitutes a fire and electric shock hazard.
- Warning- Do not use flammable sprays or solvents in the vicinity of this machine. Also, avoid placing these items in the vicinity of this machine. Doing so could result in fire or electric shock.
- Warning- Be sure to use the power cord supplied in this projector.



# Usage Notice

- Warning- The supplied power cord is for use with this machine only. Do not use it with other appliances. Doing so could result in fire or electric shock.
- Warning- It is dangerous to handle the power cord plug with wet hands. Doing so could result in electric shock.
- Warning- Be sure to disconnect the plug from the wall outlet at least once a year and check for the following:
  - There are burn marks on the plug.
  - The prongs on the plug are deformed.If any of the above conditions exist, do not use the plug and consult your dealer or service representative. Use of the plug could result in fire or electric shock.
- Warning- Be sure to disconnect the power cord from the wall outlet at least once a year and check for the following:
  - The power cord's inner wires are exposed, broken, etc.
  - The power cord's coating has a crack or dent.
  - When bending the power cord, the power turns off and on.
  - Part of the power cord becomes hot.
  - The power cord is damaged.If any of the above conditions exist, do not use the power cord and consult your dealer or service representative. Use of the power cord could result in fire or electric shock.
- Warning- Be sure to locate the machine as close as possible to a wall outlet. This will allow easy disconnection of the power cord in the event of an emergency.
- Warning- Do not use the connection cable if it is deformed, cracked, or damaged. Doing so could result in fire or electric shock. If the connection cable is deformed, cracked, or damaged, contact your service representative to request a replacement cable.
- Warning- When using an extension cord or power strip, only connect equipment whose total power consumption is within the power rating for the extension cord or power strip. If the power rating is exceeded, it may cause heat buildup and result in fire.
- Warning- If the machine emits smoke or odours, or if it behaves unusually, you must turn off its power immediately. After turning off the power, be sure to disconnect the power cord plug from the wall outlet. Then contact your service representative and report the problem.

# Usage Notice

- Warning- Do not use the machine. Doing so could result in fire or electric shock.
- Warning- If metal objects, or water or other fluids fall inside this machine, you must turn off its power immediately. After turning off the power, be sure to disconnect the power cord plug from the wall outlet. Then contact your service representative and report the problem. Do not use the machine. Doing so could result in fire or electric shock.
- Warning- Never operate this unit on AC power during a thunderstorm. If you see lightning or hear thunder, never touch the unit, cables and/or peripherals. An electric surge caused by the storm, may result in an electrical shock or damage to the unit.
- Warning- If the machine topples, or if a cover or other part gets broken, you must turn off its power immediately. After turning off the power, be sure to disconnect the power cord plug from the wall outlet. Then contact your service representative and report the problem. Do not use the machine. Doing so could result in fire or electric shock.
- Warning- Do not use lens cap when projector is powered on
- Warning- Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- Warning- Do not place or keep the projector within the reach of the children. It may fall or tip over, possibly causing serious injury
- Warning- Do not remove any covers or screws that are not mentioned in this manual. There are high voltage components inside the machine that may cause electric shock. Contact your service representative if any of the machine's internal components require maintenance, adjustment, or repair.
- Warning- Do not disassemble or modify the machine. Doing so may cause injury or malfunction.
- Warning- Installing the Projector on a Wall or Ceiling:
  - a) Do not attempt to clean or replace parts for a machine that is installed in a high location on a wall or ceiling. Doing so may cause it to fall down, resulting in an injury.

# Usage Notice

- b) Do not open the lamp cover of a machine that is installed on a wall or ceiling. Doing so may cause the lamp cover to fall down. If the lamp is broken, pieces of glass may fall and cause an injury.
- c) Contact your sales or service representative to clean or replace parts for a machine that is installed on a wall or ceiling.
- d) If a machine is incorrectly installed on a wall or ceiling, it may fall down and cause an injury. Contact your sales or service representative if you want to install a machine on a wall or ceiling.
- e) Do not obstruct the machine's vents. Doing so risks fire caused by overheated internal components.
- f) For users, do not install the projector by yourself. Contact your sales or service representative if you want to install the projector on a wall or ceiling.
- g) For sales or service representatives:
  - Use brackets that are strong enough to support the projector.
  - \* PJ S2440/X2440/WX2440 Series weigh less than 2.6kg.
  - The projector must be installed in a location that is sturdy enough to support the full weight of the projector and brackets.
  - Use only the screws (three M4~16 screws) provided with the projector to attach the brackets to the projector.

- Caution- Keep the machine away from humidity and dust. Otherwise a fire or an electric shock might occur.
- Caution- Do not place any objects on the machine. Doing so may cause the machine to topple over, possibly resulting in injury.
- Caution- Do not place the machine on an unstable or tilted surface. If it topples over, an injury might occur.
- Caution- Do not place the machine or use it in an environment where it might get wet such as from snow, rain, or being near water. Doing so could result in fire or electric shock.
- Caution- Do not put your face or hand near the exhaust vents. Doing so could result in burns or an accident due to hot air coming from the exhaust vents.
- Caution- Do not use the machine on soft material such as paper or cloth that might get sucked into the intake vents. Doing so may cause heat buildup inside the machine, resulting in malfunction, burns, or fire.

# Usage Notice

- Caution- Do not place the machine in a location where air flow is poor. Doing so may cause fire due to internal components becoming overheated.
- Caution- Do not place or store the machine in a location where direct sunlight or heat generation might occur. The heat may deform or wear out the exterior parts or negatively affect internal parts. Doing so could result in fire.
- Caution- Do not place low heat resistant material near the exhaust vents. Hot air may come from the exhaust vents, resulting in damage to the machine or an accident.
- Caution- Do not obstruct the machine's vents. Doing so risks fire caused by overheated internal components.
- Caution- Push the power plug all the way into the power outlet. Do not use a power outlet with a loose connection. Doing so may result in heat buildup. Plug the power cord in the correct direction into the base. If they are not plugged in correctly, it could result in smoke, fire, or electric shock.
- Caution- If this machine is not going to be used for several days or longer at a time, disconnect its power cord from the wall outlet.
- Caution- When disconnecting the power cord from the wall outlet, always pull the plug, not the cord. Pulling the cord can damage the power cord. Use of damaged power cords could result in fire or electric shock.
- Caution- Be sure to disconnect the plug from the wall outlet and clean the prongs and the area around the prongs at least once a year. Allowing dust to build up on the plug constitutes a fire hazard.
- Caution- When performing maintenance on the machine, always disconnect the power cord from the wall outlet.
- Caution- Do not place the power cord and connection cable in a way that might cause someone to trip and fall. The machine might fall over and cause an injury.
- Caution- The machine may be very hot after it is turned off, especially the vents and the lower part of the unit where the lamp is located. Avoid touching these areas. Doing so may result in burns.
- Caution- Do not place the machine on other equipment or vice versa. Doing so may cause heat buildup inside the machine or cause the other equipment to malfunction.

# Usage Notice

- Caution- Do not increase the volume unless you are listening while increasing the volume. Also, lower the volume before turning off the power, because a loud sound may be emitted when the power is turned on and cause hearing damage.
- Caution- Do not tilt the machine horizontally more than  $\pm 20$  degrees. Doing so may cause the entrance of foreign objects in the housing of the machine which could result in fire or electric shock.
- Caution- If the machine's interior is not cleaned regularly, dust will accumulate. Fire and breakdown can result from heavy accumulation of dust inside this machine. Contact your sales or service representative for details about and charges for cleaning the machine's interior.
- Caution- Unplug the power cord from the wall outlet before you move the machine. While moving the machine, take care that the power cord is not damaged under the machine. Failing to take these precautions could result in fire or electric shock.
- Caution- Do not use attachments not recommended by RICOH. Use of an incompatible attachments could cause hazards or damage to the product.
- Caution- Unplug this product from the wall outlet and take the product to qualified service personnel if you encounter any of the following conditions:
  - a) The power supply cord or plug is damaged.
  - b) Liquid has been spilled, or objects have fallen into the product.
  - c) The product has been exposed to rain or water.
  - d) The product does not operate normally when following the operating instructions. Adjust only those controls that are covered by the operating instructions.
  - e) The product has been dropped or damaged in any way. (If the cabinet should break, please handle with care to avoid injury.)
- Caution- This product incorporates glass components, including a lens and a lamp. If these should break, please handle with care to avoid injury and contact your sales representative for repair service. Avoid any broken pieces of glass since they may cause injury. In the unlikely event that the lamp ruptures, thoroughly clean the area around the projector and discard any edible items placed in that area since they may be contaminated.

# Usage Notice

- Caution- Do not place anything in front of the lens while the projector is operating. Things placed in front of the lens may overheat and burn or start a fire.
- Caution- Unauthorized substitutions may result in fire, electric shock, or other hazards. (Only the replacement of the lamp should be made by users.)  
Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to verify that the product is in proper operating condition.
- Caution- Do not use the product in a closed installation location. Do not place the product in a box or in any other closed installation location. Otherwise it may overheat, which could result in a risk of fire

# Usage Notice

## ABOUT THE LAMP

- **Warning-** When the lamp reaches the end of its life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn back on until the lamp module has been replaced. To replace the lamp, follow the procedures listed under “Replacing the Lamp”.
- **Warning-** Before replacing the lamp, turn off the power and wait at least one hour to allow the machine to cool completely. If it is not completely cool, you may burn or injure yourself due to the inside of the machine and lamp unit being hot. If you replace the lamp without unplugging the power cord from the power outlet, electric shock or explosion may occur.
- **Warning-** Be careful when handling the used lamp so that it does not break. If it breaks, it may cause injury.
- **Caution-** This projector will detect the life of the lamp itself. Be sure to change the lamp when it shows warning messages.
- **Caution-** The machine’s light uses a mercury vapor lamp that becomes high pressure when it is turned on. The lamp has the following characteristics, so be sure to handle it with care after understanding the contents. If the lamp explodes and you are either injured from broken pieces of glass, think you have gotten glass particles or mercury vapour in your eyes, or have inhaled glass particles or mercury vapour, contact a doctor immediately.
  - Deterioration or shock can cause the lamp’s life span to end or the lamp to explode. If the lamp explodes, it may make a big noise.
  - The time that it takes for the lamp to reach its life span or explode depends on each individual lamp and its operating conditions. It is possible that it might explode the first time it is used.
  - If you use the lamp past its replacement period, the possibility of explosion increases.
  - If the lamp explodes, broken glass pieces may be scattered around the inside of the machine and ejected from the vent or other opening.

# Usage Notice

- If the lamp explodes, a very small amount of mercury vapor in the lamp tube and broken glass pieces may be ejected from the vents or other opening.

## **What to do if a lamp has exploded**

**If the lamp explodes, remove the power cord from the projector, leave the room while making sure it is thoroughly ventilated.**

**If the lamp explodes and you think that you have gotten glass particles or mercury vapor in your eyes or have inhaled either, contact a doctor immediately.**

**Clean up the area around the projector completely while being careful not to get injured from any broken glass pieces.**

**Throw away any food that was near the projector.**

**Ask your service representative to replace the lamp and inspect the projector.**



# Usage Notice

## REMOTE CONTROL BATTERY

### Warning

- Never throw batteries into a fire.

Using the batteries improperly may cause them to explode or leak and may result in serious injury. If battery-leaking fluid contacts skin, wash the fluid off immediately with clean water and consult a doctor. If the fluid spills on an instrument, avoid contact and wipe it off using tissue paper. Then dispose of the used tissue paper as flammable garbage after moistening the tissue with water.

- Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

### Notes


- Be sure to use AAA (R03) size batteries.
- Dispose of batteries in a designated disposal area.
- Attention should be drawn to the environmental aspects of battery disposal.
- If the remote control does not operate correctly, or if the operating range becomes reduced, replace the batteries.
- Avoid contact with water or liquid.
- Do not expose the remote control to moisture or heat.
- Do not drop the remote control.
- If the batteries have leaked in the remote control, carefully wipe the case clean and install new batteries.
- Dispose of used batteries according to the instructions.
- The remote control may fail to operate if the infrared remote sensor is exposed to bright sunlight or fluorescent lighting.

**Important:**

*Contents of this manual are subject to change without prior notice. In no event will the company be liable for direct, indirect, special, incidental, or consequential damages as a result of handling or operating this product.*

## Safety Labels of This Machine

- 1 To replace the lamp, unplug the power cord and then wait for 60 minutes.
- 2 Do not place anything in front of the lens while the projector is operating. Things placed in front of the lens may overheat and burn or start a fire. If you want to temporarily stop the projected image, use the AV mute on the remote control or the keypad.
- 3 Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyesight.
- 4 This product should be operated only from the type of power source which does not exceed the voltage range specified on the rating label and the power cord.
- 5 Do not block the air intake or exhaust. Doing so could cause a fire due to internal overheating. Do not place your hands, face, or other objects near the air exhaust, the lamp cover or the bottom of the unit. Doing so could result in injury and/or damage the object.

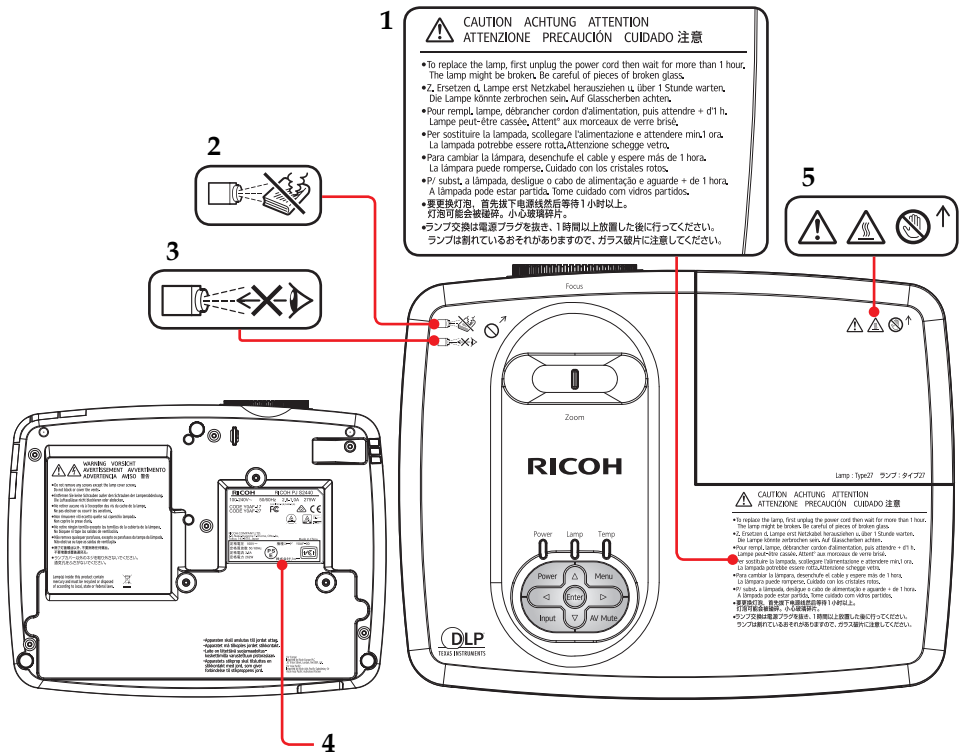


## Regulation & Safety Notices

*This appendix lists the general notices of your Projector.*

### ***Notice: Users in the United States of America***

#### ***FCC notice***

**MODEL NAME: RICOH PJ S2440/ X2440/ WX2440**

TRADE NAME: PROJECTOR MODEL NAME: RICOH PJ S2440/ X2440/ WX2440 Tested To Comply  With FCC Standards FOR HOME OR OFFICE USE
--

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

# Usage Notice

RESPONSIBLE PARTY: Ricoh Americas Corporation  
5 Dedrick Place, West Caldwell, NJ 07006  
Phone: 973-882-2000

## ***Notice: Shielded cables***

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

## ***Caution***

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.

LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS.

## ***Notes to Users in the State of California***

Perchlorate Material - special handling may apply, See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).

**WARNING:** Handling the cord on this product will expose you to lead, a chemical known to the State of California to cause cancer, and birth defects or other reproductive harm.  
*Wash hands after handling.*

## ***Notes to Canadian Users***

## ***Remarques à l'attention des utilisateurs au Canada***

### **Contains mercury / Contient du mercure**

For more information on safe handling procedures, the measures to be taken in case of accidental breakage and safe disposal option visit:

[www.ec.gc.ca/mercure-mercury](http://www.ec.gc.ca/mercure-mercury)

Dispose of or recycle in accordance with applicable laws.

Pour plus d' informations sur les procédures de manutention sécuritaire, les mesures à prendre en cas de bris accidentel et option d' élimination sécuritaire visitez:

[www.ec.gc.ca/mercure-mercury/default.asp?lang=Fr&n=DB6D2996-1](http://www.ec.gc.ca/mercure-mercury/default.asp?lang=Fr&n=DB6D2996-1)

Éliminez ou les recyclez conformément aux lois applicables.

# Usage Notice

## *Declaration of Conformity for EU countries*

- EMC Directive 2014/30/EC (including amendments)
- Low Voltage Directive 2014/35/EC

## *Notice: Users in EU countries*

### *CE Marking Traceability Information (For EU Countries Only)*

Manufacturer:  
Ricoh Co., Ltd.  
3-6 Nakamagome 1-chome, Ohta-ku, Tokyo. 143-8555,  
Japan

Importer:  
Ricoh Europe PLC  
20 Triton Street, London. NW1 3BF, United Kingdom

## *User Information on Electrical and Electronic Equipment*

Users in the countries where this symbol shown in this section has been specified in national law on collection and treatment of E-waste.

Our Products contain high quality components and are designed to facilitate recycling.

Our products or product packaging are marked with the symbol below.



This product contains substances which are harmful to humans and the environment.

# Usage Notice

- The lamp contains mercury.

Please dispose of this product or used lamps in accordance with local regulations.

The symbol indicates that the product must not be treated as municipal waste. It must be disposed of separately via the appropriate return and collection systems available. By following these instructions you ensure that this product is treated correctly and help to reduce potential impacts on the environment and human health, which could otherwise result from inappropriate handling. Recycling of products helps to conserve natural resources and protect the environment.

For more detailed information on collection and recycling systems for this product, please contact the shop where you purchased it, your local dealer or sales/service representatives.

## *Notice: Users in Turkey*

EEE Yönetmeliğine Uygundur.

Bu sistem sarf malzemeleri ve yedek parçaları da dahil olmak üzere EEE Yönetmeliğine Uygundur.

## *All Other Users*

If you wish to discard this product, please contact your local authorities, the shop where you bought this product, your local dealer or sales/service representatives.

# Usage Notice

## *Notice: Users in the EU*

### *Note for the Battery and/or Accumulator Symbol*



In accordance with the Battery Directive 2006/66/EC Article 20 Information for end-users Annex II, the above symbol is printed on batteries and accumulators. This symbol means that in the European Union, used batteries and accumulators should be disposed of separately from your household waste. In the EU, there are separate collection systems for not only used electrical and electronic products but also batteries and accumulators. Please dispose of them correctly at your local community waste collection/recycling centre.

## *Notice: Users in Taiwan*



廢電池請回收

請勿將電池當作一般垃圾丟棄。這個標誌表示電池不應視為一般垃圾丟棄。僅適用於台灣。

## Other Information

### Copyrights to Images

When projecting images using the projector, be careful not to infringe the copyright of protected materials.

The following are examples that may infringe the copyright of protected materials.

- Broadcasting images or movies for commercial purposes
- Modifying images or movies using functions such as freeze, magnify, or zoom to broadcast images for commercial purposes or public viewing
- Varying the aspect ratio of images or movies using a function that changes the screen size to broadcast images for commercial purposes or public viewing

---

### Note to Users Viewing 3D Images

---

Pay attention to the following points when viewing images using 3D glasses with projector:

- How 3D images are viewed may vary according to the individual.
- Do not use 3D glasses for viewing any material other than 3D images.
- Before viewing 3D images, make sure to read the manuals provided with your 3D glasses and 3D compatible content.
- Avoid viewing 3D images for a long period of time. Take a break of 15 minutes or longer after every hour of viewing.
- If you feel sick while viewing 3D images, stop viewing them. If you continue to feel sick, consult a doctor.
- When viewing 3D image in a room where on LED lighting system or fluorescent lights are used, you may feel that the light in the room flickers. If this is the case, dim the lights until you do not notice any flickers, or turn off the lights.
- If you or any member of your family has a history of light-sensitive seizures, consult a doctor before viewing 3D images.



## Product Features

*Outstanding features include:*

- True 800x600 (SVGA) / 1024x768 (XGA)/ 1280x800 (WXGA) resolution, 16.7M True colors
- Weight <2.6kg(5.75lbs)
- Manual focus projection 1:1.10 zoom lens
- Built-in full screen NTSC/PAL/SECAM video capability with S-video/ Composite/ component through D-sub terminals
- UXGA/ WXGA/ Quad VGA/ SXGA+/ SXGA/ XGA/ SVGA/ VGA/ MAC compatibility
- User friendly multilingual on screen display
- Automatic image resizing to 800x600 (SVGA)/ 1024x768 (XGA)/ 1280x800 (WXGA) and full screen


# Introduction

## Package Overview

*This projector comes with all the items shown below. Check to make sure your unit is complete. Contact your dealer immediately if anything is missing.*

### Note


❖ Due to the difference in applications for each country, some regions may have different accessories.

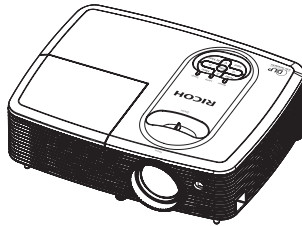


Projector




Lens Cap

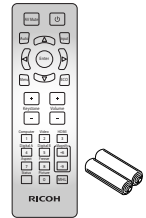


Remote Control  
(with Batteries,  
please see page 27)

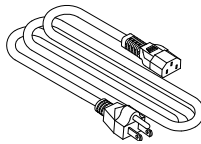

Power Cord

 

CD-ROM

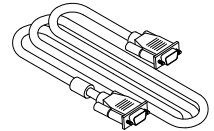

RGB Cable



Read This First


### ❖ About the CD-ROM

Contains the user's manual in PDF format and the projector management software.

Support languages of the user's manual are English, Japanese and Chinese. For the other languages, visit RICOH Web site.

# Introduction

## Product Overview

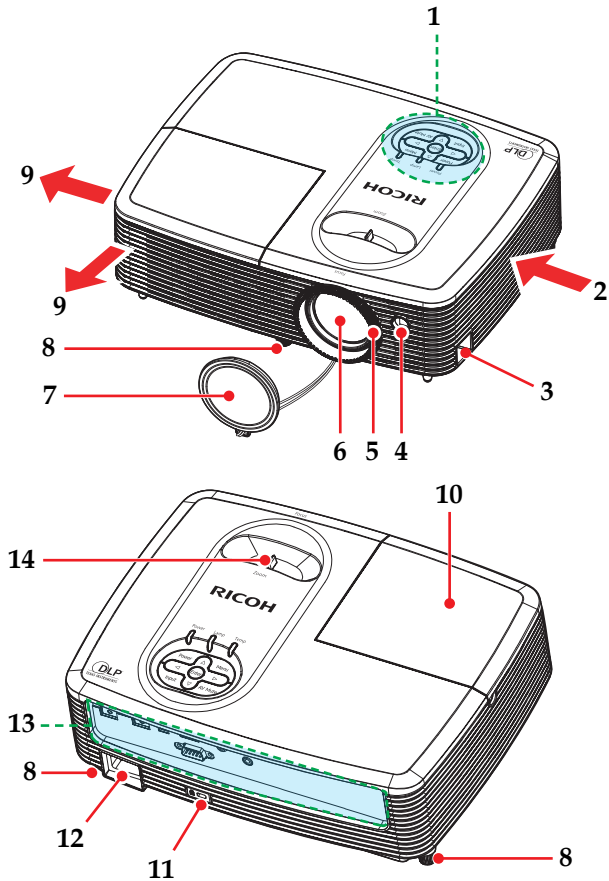


- |                        |  |
|------------------------|--|
| 1. Control panel       | 9. Ventilation (outlet)                        |
| 2. Ventilation (inlet) | 10. Lamp cover                                 |
| 3. Security Bar        | 11. Anti-theft lock hole<br>(Kensington™ lock) |
| 4. Remote Receiver     | 12. AC In socket                               |
| 5. Focus ring          | 13. Connection ports                           |
| 6. Lens                | 14. Zoom lever                                 |
| 7. Lens cap            |  |
| 8. Adjustable feet     |  |

# Introduction

## Connection Ports


### SVGA

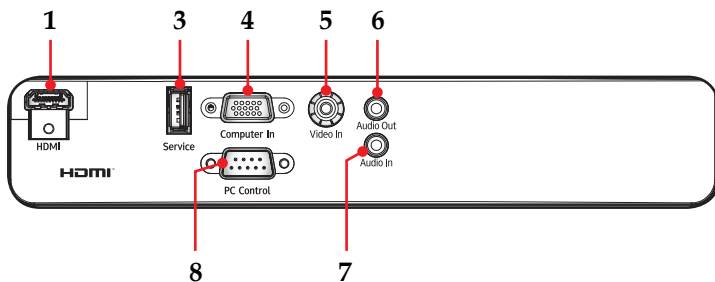

### Note

- ❖ The interface is subject to model's specifications.
- ❖ Compatible with MHL version 2.1, the charging current 5V@0.9A.


### XGA/WXGA

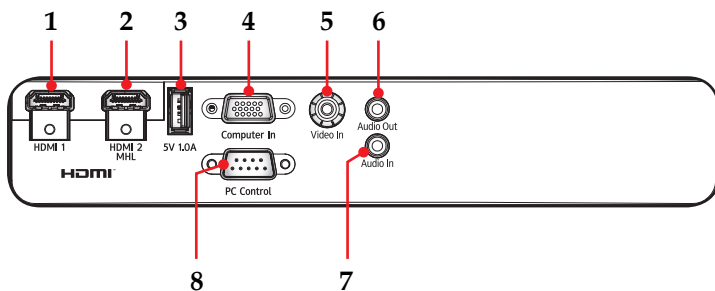

- |                             |                        |
|-----------------------------|------------------------|
| 1. HDMI/HDMI 1 In terminal  | 5. Video In terminal   |
| 2. HDMI 2/MHL In terminal   | 6. Audio Out terminal  |
| 3. Service/5V 1.0A terminal | 7. Audio In terminal   |
| 4. Computer In terminal     | 8. PC Control terminal |


# Introduction

## Control Panel

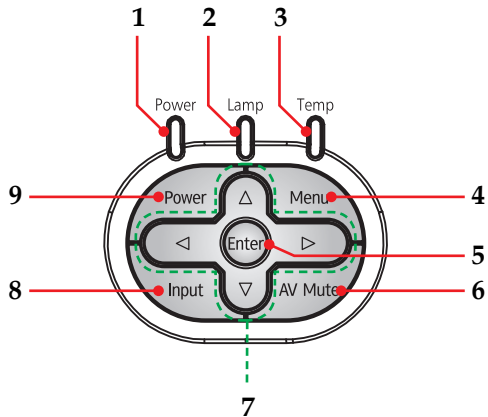

1	Power indicator	Indicate the projector's power status.
2	Lamp indicator	Indicate the projector's lamp status.
3	Temp indicator	Indicate the inside of the projector's temperature status.
4	Menu	Press "Menu" to launch the on screen display (OSD), or go back to the previous menu. (See page 39)
5	Enter	Select or confirm settings.
6	AV Mute	Momentarily turn off/on the audio and video.
7	Four Directional Select Keys	Use ▲ or ▼ or ◀ or ▶ to select items or make adjustments to your selection.
8	Input	Select the input source.
9	Power	Refer to the "Power On/Off the Projector" section. (See pages 32~33)

## Remote Control

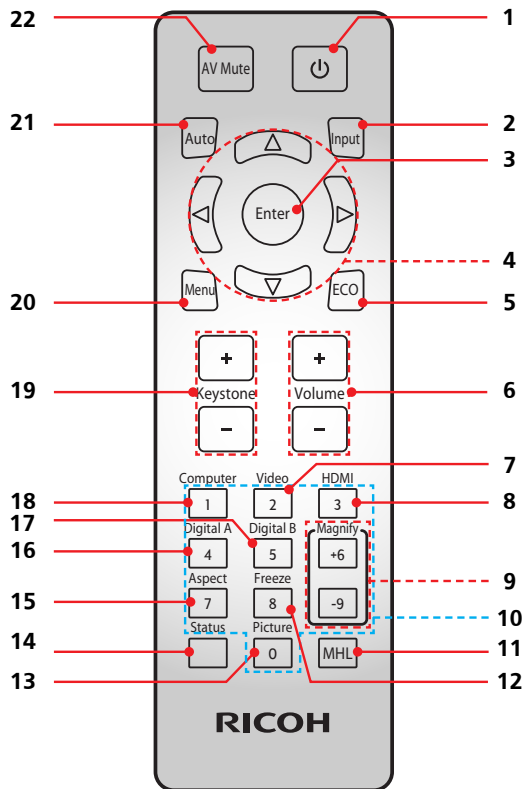

1	Power	Refer to the “Power On/Off the Projector” section. (See pages 32~33)
2	Input	Press “Input” to choose your desired input source.
3	Enter	Confirm your selection of items in sub menu operation.
4	Four Directional Select Keys	Use ▲, ▼, ◀, or ▶ to select items or make adjustments to your selection.

# Introduction

## Note


❖ SVGA model supports only HDMI input, MHL input is not supported.

5	ECO	Display Lamp Power Mode popup menu. (See page 52)
6	Volume +/-	Increase or decrease speaker volume.
7	Video	Press “Video” to choose Video In terminal.
8	HDMI	Press “HDMI” to choose HDMI source for PJ S2440 or HDMI1 and HDMI2/MHL source for PJ WX2440 and PJ X2440.
9	Magnify	Zoom in the projector display.
10	Number (0~9)	Input numbers.
11	MHL Control	Press “MHL Control” to control your MHL device.
12	Freeze	Pause the screen image. Press again to resume the screen image.
13	Picture	Select the preset picture mode.
14	Status	Display the projector status.
15	Aspect	Use this function to choose your desired aspect ratio.
16	Digital A	This function is not supported.
17	Digital B	This function is not supported.
18	Computer	Press “Computer” to choose Computer in terminal.
19	Keystone +/-	Adjust the image to compensate for distortion caused by tilting the projector.
20	Menu	Press “Menu” to launch the On Screen Display (OSD), back to the top level of OSD for the OSD main menu operation. (See page 39)
21	Auto	Automatically synchronize the projector to the input source.
22	AV Mute	Momentarily turn off/on the audio and video.


# Introduction

## Remote Control Battery Installation


- 1 Push the clip to release the battery cover.

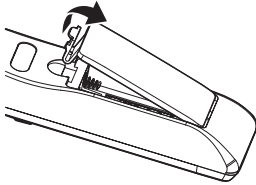

- 2 Install new batteries (AAA/R03). Ensure that you have the batteries' polarity (+/-) aligned correctly.

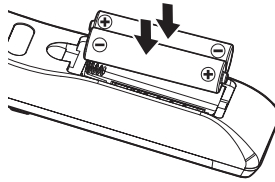

- 3 Close the battery cover and press it down until it clicks into place. Do not mix different types of batteries or new and old batteries.

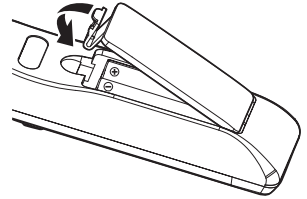

To ensure safe operation, please observe the following precautions :

- Use AAA/R03 type battery.
- Avoid contact with water or liquid.
- Do not expose the remote control to moisture or heat.
- Do not drop the remote control.
- If the battery has leaked in the remote control, carefully wipe the case clean and install new battery.
- Risk of an explosion if battery is replaced by an incorrect type.
- Dispose of used battery according to the instructions.
- Remove batteries from remote control when not using for extended periods.
- The remote control may fail to operate if the infrared remote sensor is exposed to bright sunlight or fluorescent lighting.




# Introduction

## Remote Control Operating Range

Point the remote control toward the projector (Remote Receiver) when pressing any button.

Maximum operating range for the remote control is about 26.0' (8m) and  $\pm 30^\circ$  (horizontally),  $\pm 20^\circ$  (vertically) in front of the projector.

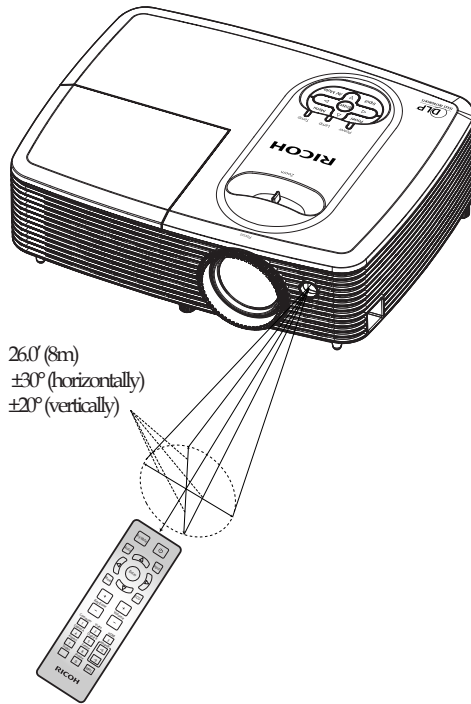


## Connecting the Projector

### Connect to Computer/Notebook

SVGA

#### Note

- ❖ Make sure that the power plug is fully inserted into both the projector AC inlet and the wall outlet.
- ❖ The AC outlet must be near this equipment and must be easily accessible.
- ❖ Due to the difference in applications for each country, some regions may have different accessories.
- ❖ When Audio Out is connected, the built-in speaker doesn't produce sound.
- ❖ To ensure the projector works well with your computer, please make sure the timing of the display mode is compatible with your projector. (See pages 63~67)
- ❖ Use the cables that come with the projector. (\*)

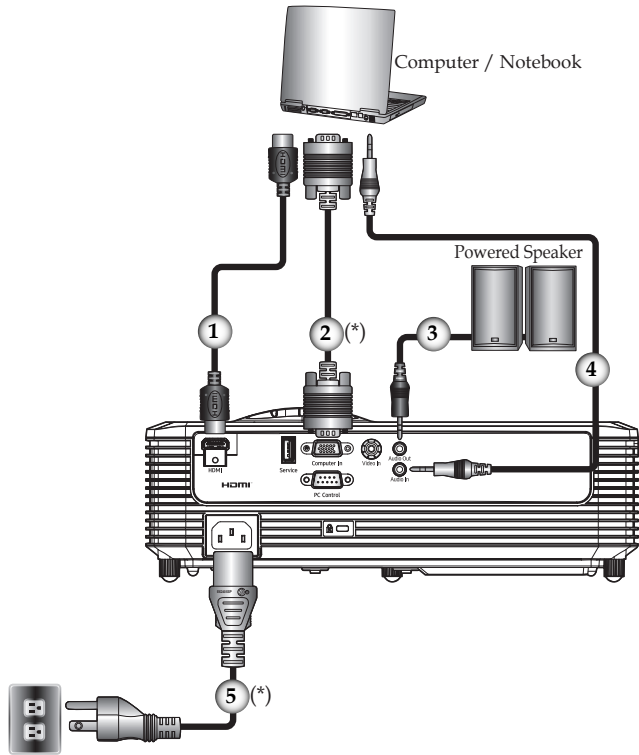


- |        |                       |
|--------|-----------------------|
| 1..... | HDMI cable            |
| 2..... | RGB cable (supplied)  |
| 3..... | Audio cable           |
| 4..... | Audio cable           |
| 5..... | Power cord (supplied) |

# Basic Operations

## XGA/WXGA

### Note

- ❖ Make sure that the power plug is fully inserted into both the projector AC inlet and the wall outlet.
- ❖ The AC outlet must be near this equipment and must be easily accessible.
- ❖ Due to the difference in applications for each country, some regions may have different accessories.
- ❖ When Audio Out is connected, the built-in speaker doesn't produce sound.
- ❖ To ensure the projector works well with your computer, please make sure the timing of the display mode is compatible with your projector. (See pages 63~67)
- ❖ Use the cables that come with the projector. (\*)

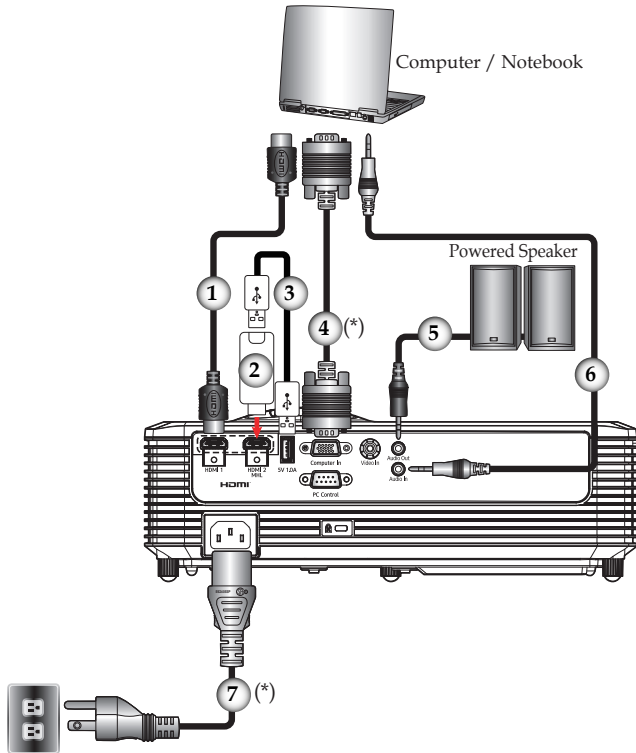

1.....	HDMI cable
2.....	HDMI dongle
3.....	USB cable
4.....	RGB cable (supplied)
5.....	Audio cable
6.....	Audio cable
7.....	Power cord (supplied)


# Basic Operations

## Connect to AV Equipment

### SVGA

#### Note

- ❖ Make sure that the power plug is fully inserted into both the projector AC inlet and the wall outlet.
- ❖ The AC outlet must be near this equipment and must be easily accessible.
- ❖ Due to the difference in applications for each country, some regions may have different accessories.
- ❖ When HDMI input is selected, only audio signal with HDMI can be output.
- ❖ When Audio Out is connected, Built-in speaker doesn't sound.
- ❖ Use the cables that come with the projector. (\*)

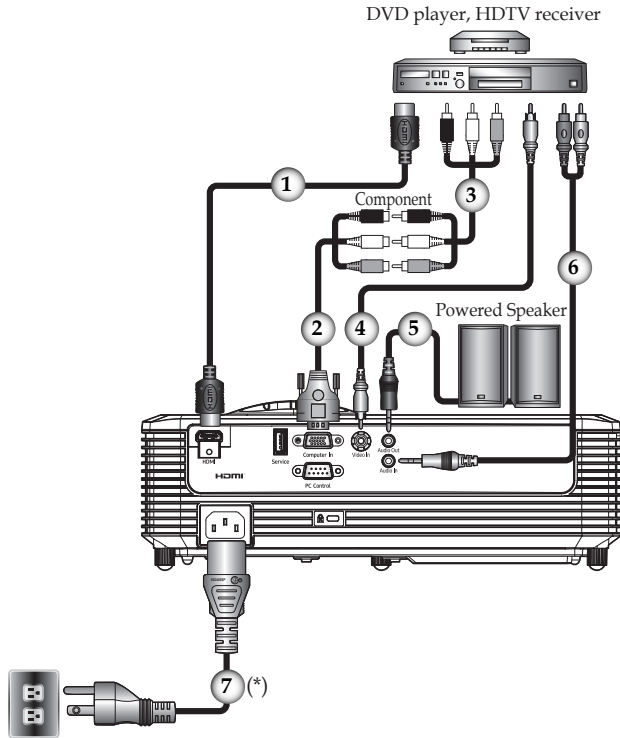


- |        |                       |
|--------|-----------------------|
| 1..... | HDMI cable            |
| 2..... | Component-RGB Cable   |
| 3..... | Component Cable       |
| 4..... | Video cable           |
| 5..... | Audio cable           |
| 6..... | Audio cable           |
| 7..... | Power cord (supplied) |

# Basic Operations

## XGA/WXGA

### Note

- ❖ Make sure that the power plug is fully inserted into both the projector AC inlet and the wall outlet.
- ❖ The AC outlet must be near this equipment and must be easily accessible.
- ❖ Due to the difference in applications for each country, some regions may have different accessories.
- ❖ When HDMI input is selected, only audio signal with HDMI can be output.
- ❖ When Audio Out is connected, Built-in speaker doesn't sound.
- ❖ Use the cables that come with the projector. (\*)

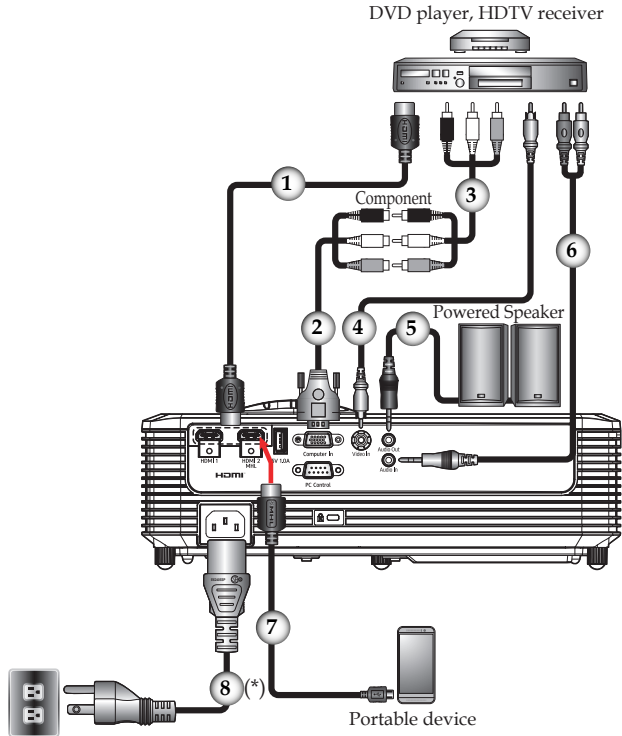


1.....	HDMI cable
2.....	Component-RGB Cable
3.....	Component Video cable
4.....	Video cable
5.....	Audio cable
6.....	Audio cable
7.....	HDMI/MHL cable
8.....	Power cord (supplied)

# Basic Operations
 
## Powering On/Off the Projector

### Powering On the Projector

1. Ensure that the power cord and signal cable are securely connected. The Power indicator will turn red.
2. Remove the lens cap. ❶
3. Turn on the lamp by pressing the “Power” button on the control panel or the “” button on the remote control. ❷ The Power indicator will flash blue.

The startup screen will display and the Power indicator will turn blue.

4. The first time you use the projector, you will be asked to select the preferred language. Turn on your source (computer, notebook, video player, etc.) The projector will detect your source automatically.

Make sure that the “Auto Source” has been set to “On”.

#### Note


❖ If you connect multiple sources at the same time, press “Input” to switch inputs.

#### Note

❖ Turn on the projector first and then the signal sources.

#### CAUTION:

- Do not look into the lens while the lamp is on. The strong light from the lamp may cause damage to your eyesight.
- Do not block the air intake or exhaust. Doing so could cause a fire due to internal overheating.
- Do not place your hands, face, or other objects near the air exhaust, the lamp cover or the bottom of the unit. Doing so could result in injury and/or damage the object.

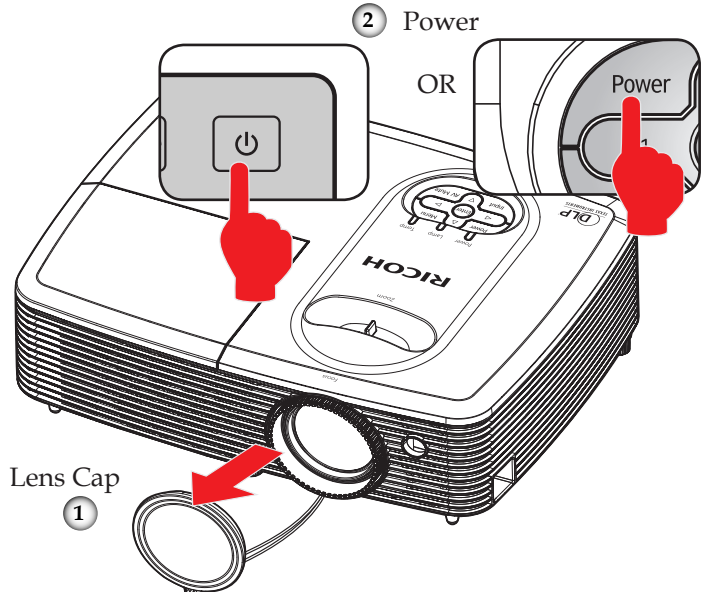

# Basic Operations

## Powering Off the Projector

1. Press the “⏻” button and you will see a message as below on the on-screen display.



2. Press the “⏻” button again to turn off the projector lamp.
3. The cooling fan continues to operate for about 30 seconds for cooling cycle and the Power indicator will flash red. After cooling down, the light stops flashing, and then the projector will enter the standby mode.

If you wish to turn the projector back on, you must wait until the projector has completed the cooling cycle and has entered standby mode. Once in standby mode, simply press the “⏻” button to restart the projector.

 
4. Disconnect the power cord from the electrical outlet and the projector.

## Warning Indicator


- ❖ When the “Temp” indicator lights red, it indicates the projector has overheated. The projector will automatically shut itself down.



- ❖ When the “Lamp” indicator lights red, and you see the message below displays on-screen, the projector has detected that the lamp is approaching its end of life. Please change the lamp as soon as possible or contact your local dealer or our service center.



 - ❖ When the “Temp” indicator flashes red (0.5 sec on, 0.5 sec off) and the message below displays, it indicates the cooling fan failed. Stop using the projector and disconnect the power cord from the electrical outlet, then contact your local dealer or our service center.



For more information of the warning indicator, please see page 61.




## Adjusting the Projected Image

### Adjusting the Position of Projector Image

*The projector is equipped with adjustable feet to raise and lower the image to fill the screen.*

1. Locate the adjustable foot you wish to modify on the underside of the projector.
2. Rotate the adjustable ring clockwise to raise the projector or counter clockwise to lower it. Repeat with the remaining feet as necessary.

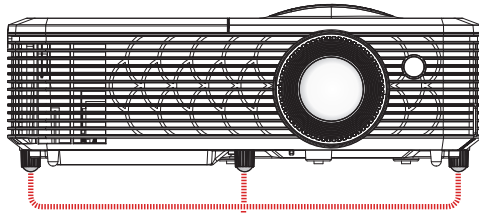


Front and rear  
Adjustable feet



#### Note

❖ The projector has one adjustable foot in the front and two adjustable feet on the rear. The maximum length of the feet is 26mm. The maximum tilt angle is 8°.

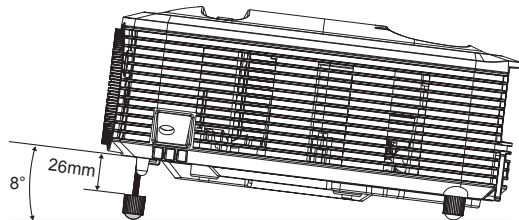

# Basic Operations


## Adjusting the Projector Zoom and Focus

You may turn the zoom lever to zoom in or out. To focus the image, rotate the focus ring until the image is clear.

▶ Focus at distances:

–SVGA / XGA: from 3.94 to 39.40 feet  
(from 1.2 to 12 meters)


–WXGA : from 3.64 to 32.8 feet  
(from 1.1 to 10 meters)

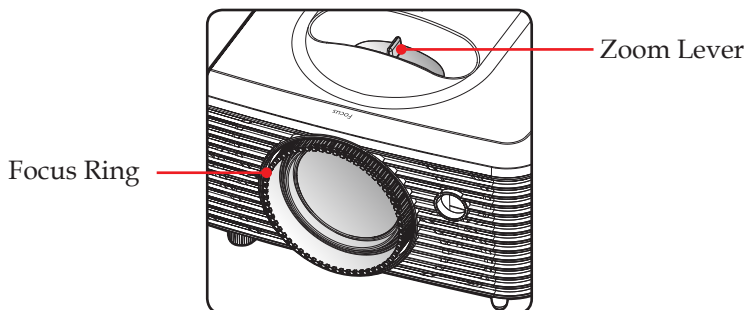

# Basic Operations

## Adjusting Projection Image Size

- ▶ SVGA/XGA/WXGA: Projection image size from 30" to 300".

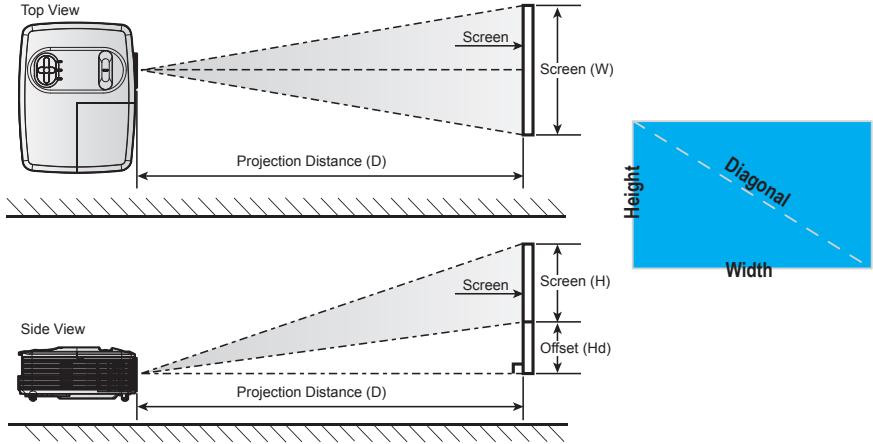

### SVGA/XGA

Diagonal length (inch) size of 4:3 Screen	Screen Size W x H				Projection Distance (D)				Offset (Hd)	
	(m)		(inch)		(m)		(feet)		(cm)	(feet)
	Width	Height	Width	Height	wide	tele	wide	tele		
30	0.61	0.46	24	18	1.2	1.3	3.86	4.30	7	0.23
40	0.81	0.61	32	24	1.6	1.8	5.15	5.73	9	0.30
60	1.22	0.91	48	36	2.4	2.6	7.72	8.60	14	0.45
70	1.42	1.07	56	42	2.8	3.1	9.01	10.03	16	0.53
80	1.63	1.22	64	48	3.1	3.5	10.29	11.47	18	0.60
90	1.83	1.37	72	54	3.5	3.9	11.58	12.90	21	0.68
100	2.03	1.52	80	60	3.9	4.4	12.87	14.33	23	0.75
120	2.44	1.83	96	72	4.7	5.2	15.44	17.20	27	0.90
150	3.05	2.29	120	90	5.8	6.6	19.30	21.50	34	1.13
200	4.06	3.05	160	120	7.8	8.7	25.73	28.67	46	1.50
250	5.08	3.81	200	150	9.8	10.9	32.17	35.83	57	1.88
300	6.10	4.57	240	180	11.8	13.1	38.60	43.00	69	2.25

❖ This table is for user's reference only.

# Basic Operations

## WXGA

Diagonal length (inch) size of 16:10 Screen	Screen Size W x H				Projection Distance (D)				Offset (Hd)	
	(m)		(inch)		(m)		(feet)		(cm)	(feet)
	Width	Height	Width	Height	wide	tele	wide	tele		
30	0.65	0.40	25.4	15.9	1.0	1.1	3.27	3.65	5	0.16
40	0.86	0.54	33.9	21.2	1.3	1.5	4.36	4.86	7	0.22
60	1.29	0.81	50.9	31.8	2.0	2.2	6.55	7.29	10	0.33
70	1.51	0.94	59.4	37.1	2.3	2.6	7.64	8.51	12	0.38
80	1.72	1.08	67.8	42.4	2.7	3.0	8.73	9.72	13	0.44
90	1.94	1.21	76.3	47.7	3.0	3.3	9.82	10.94	15	0.49
100	2.15	1.35	84.8	53.0	3.3	3.7	10.91	12.15	17	0.55
120	2.58	1.62	101.8	63.6	4.0	4.5	13.09	14.59	20	0.66
150	3.23	2.02	127.2	79.5	5.0	5.6	16.37	18.23	25	0.82
200	4.31	2.69	169.6	106.0	6.7	7.4	21.82	24.31	33	1.10
250	5.38	3.37	212.0	132.5	8.3	9.3	27.28	30.39	42	1.37
300	6.46	4.04	254.4	159.0	10.0	11.1	32.73	36.46	50	1.64

❖ This table is for user's reference only.

# User Settings

## Using the On Screen Display (OSD)


The Projector has a multilingual On Screen Display that allows you to make image adjustments and change a variety of settings.

### How to operate


1. To open the OSD, press “Menu” on the Control Panel or Remote Control.
2. When OSD is displayed, use ▲▼ keys to select any item in the main menu. While making a selection on a particular page, press “Enter” to enter sub menu.
3. Use ▲▼ keys to select the desired item in the sub menu and press “Enter” to view further settings. Adjust the settings by using ◀▶ key or ▲▼ key.
4. Select the next item to be adjusted in the sub menu and adjust as described above.
5. Press “Enter” or “Menu” to confirm, and the screen will return to the previous menu.
6. To exit, press “Menu” again. The OSD menu will close and the projector will automatically save the new settings.

#### Note

❖ If no button operation is made for 3 - 10 seconds, the OSD will be closed automatically.

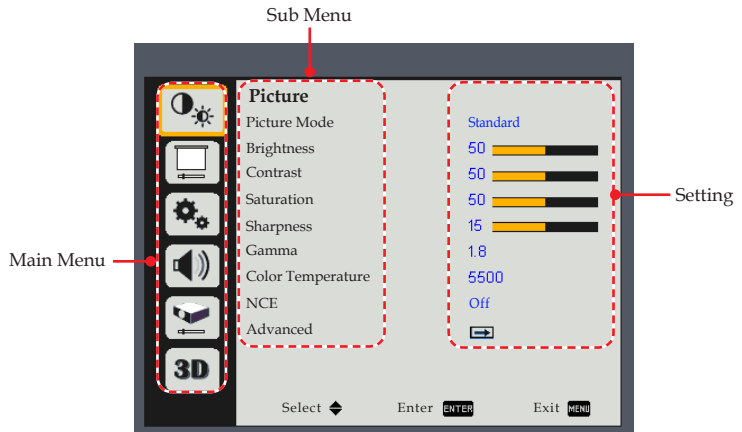

# User Settings

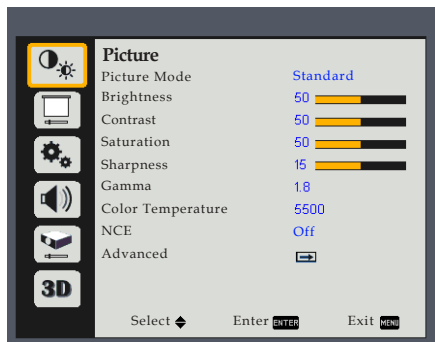

## PICTURE

### Picture Mode

There are many factory presets optimized for various types of images. The available options:

#### Note

 
- ❖ Bright function is grayed out in 3D mode.
- ❖ Picture Mode, Color Temperature, NCE, and Advanced functions are grayed out in 3D mode.

- ▶ Bright: Mode for emphasizing brightness.
- ▶ Standard: Mode for optimizing the balance between brightness and color reproduction.
- ▶ Vivid: Mode for emphasizing color.
- ▶ sRGB: Standard color values.
- ▶ DICOM SIM.: This mode is suitable for projecting a monochrome medical image such as an X ray radiography, MRI, etc.



### Brightness

Adjust the brightness of the image.




- ▶ Press the ◀ key to darken image.
- ▶ Press the ▶ key to lighten the image.

# User Settings
 
## Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture. Adjusting the contrast changes the amount of black and white in the image.



- ▶ Press the ◀ key to decrease the contrast.
- ▶ Press the ▶ key to increase the contrast.

### Note

❖ “Saturation” and “Sharpness” functions are only supported under Video/Composite Signal sources.

## Saturation

Adjust the color saturation of the image.



- ▶ Press the ◀ key to decrease the amount of color in the image.
- ▶ Press the ▶ key to increase the amount of color in the image.

## Sharpness

Adjust the sharpness of the image.



- ▶ Press the ◀ key to decrease the sharpness.
- ▶ Press the ▶ key to increase the sharpness.

## Gamma

Use this function to optimize the image output.

 
The available options: 1.8 / 2.0 / Standard(2.2) / 2.4 / Shine.



## Color Temperature

Use this function to select the preset color temperature.

The available options: 5500 / 6500 / 7500 / Native.



# User Settings


## NCE (Natural Color Enhancer)

Use this function to enhance color and reproduce vivid colors.

- ▶ On: Enable NCE.
- ▶ Off: Disable NCE.

## Advanced


Configure the advanced image settings.

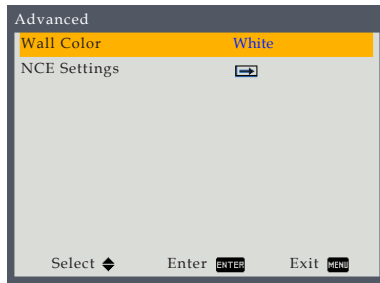

- ▶ Wall Color: Use this function to obtain an optimized screen image according to the wall color. The available options: White/ Light Yellow/ Light Blue/ Pink / Dark Green.



- ▶ NCE Settings: Configure the image color settings (Hue/ Saturation/Gain) when Color is Red/Green/Blue/Cyan/ Magenta/Yellow).

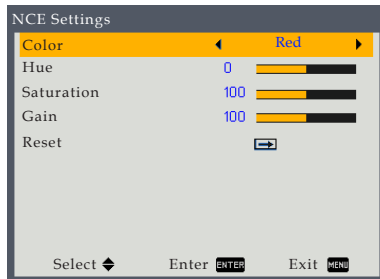



# User Settings

- Color: Use the ◀ or ▶ key to adjust the red, green, blue, cyan, magenta, and yellow.
- Hue: Use the ◀ or ▶ key to adjust the color balance of red and green when Color is red, green, blue, cyan, magenta, and yellow.



- Saturation: Use the ◀ or ▶ key to adjust the color saturation when Color is red, green, blue, cyan, magenta, and yellow.




- Gain: Use the ◀ or ▶ key to adjust the color brightness when Color is red, green, blue, cyan, magenta, and yellow.




- Reset: Reset the color settings to the factory defaults.

- ▶ NCE Settings: Configure the image color settings (Red/Green/Blue when Color is White).

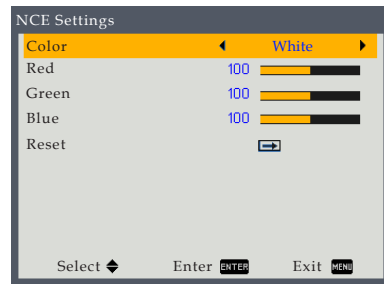

 - Color: Use the ◀ or ▶ key to adjust the red, green, blue.
- Red: Use the ◀ or ▶ key to adjust the gain of red when Color is White.



# User Settings

- Green: Use the ◀ or ▶ key to adjust the gain of green when Color is White.




- Blue: Use the ◀ or ▶ key to adjust the gain of blue when Color is White.



- Reset: Reset the color settings to the factory defaults.

# User Settings

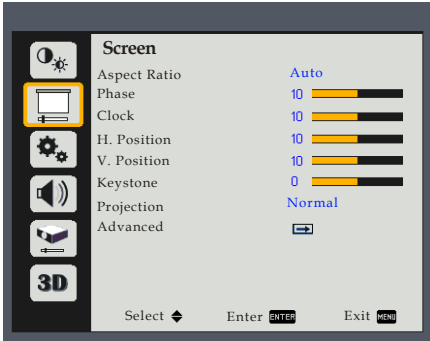

## SCREEN

### Aspect Ratio

Use this function to choose your desired aspect ratio.



- ▶ Auto: Automatically selects the appropriate display format. When input is 4:3, the image is displayed as 4:3. When input is 16:9 above, the image is displayed as 16:9.
- ▶ 4:3: Displays 4:3 aspect ratio.
- ▶ 16:9: Displays 16:9 aspect ratio.
- ▶ 16:10: Displays 16:10 aspect ratio.

### Phase

Eliminate flicker from the image displayed. Use the ◀ or ▶ key to adjust the value.



### Clock

Adjust the number of total dots in one horizontal period. Use the ◀ or ▶ key to adjust number to match your PC image.



#### Note

❖ “Phase” and “Clock” functions are only supported under Computer Signal source.

# User Settings

## Note

❖ “H. Position” and “V. Position” functions are only supported under Computer Signal source.

## H. Position (Horizontal Position)

 
Shift the projected image position horizontally.



- ▶ Press the ◀ key to move the image left.
- ▶ Press the ▶ key to move the image right.

## V. Position (Vertical Position)

Shift the projected image position vertically.



- ▶ Press the ◀ key to move the image down.
- ▶ Press the ▶ key to move the image up.

## Keystone

Use this function to make an image look visually correct when it is projected onto the screen.



- ▶ Keystone: Press the ◀ or ▶ key to adjust image distortion caused by tilting the projector.

## Projection

Use this function to select the projector, depending upon how the projector is mounted.




- ▶ Normal: This is the default selection. The image is projected straight on the screen.
- ▶ Ceiling: When selected, the image will turn upside down.
- ▶ Rear: When selected, the image will appear reversed.
- ▶ Rear Ceiling: When selected, the image will appear reversed in upside down position.

# User Settings

## Advanced

Configure the advanced screen settings.

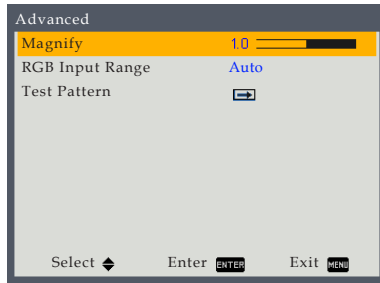

- ▶ Magnify: Use the ◀ or ▶ key to zoom in or zoom out the image.



- ▶ RGB Input Range: Adjust the color range of the HDMI image data.



- Auto: Automatically detect RGB range.
- Limited Range: Process the input image with a limited RGB range.
- Full Range: Select this mode when computer signal or full range signal from AV equipment is input.


- ▶ Test Pattern: Use this function to choose your desired test pattern between grid and white. Choose “Off” to disable this function.



### Note

❖ “RGB Input Range” function is only supported under HDMI source.

# User Settings

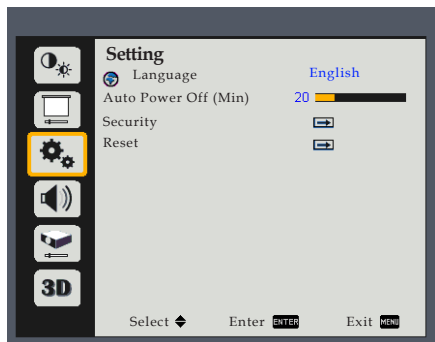

## SETTING

### Language

Choose the multilingual OSD. Press “Enter” to open the sub menu and then use the ▲ or ▼ or ◀ or ▶ key to select your preferred language. Press “Enter” to finalize the selection.



### Auto Power Off (Min)

Set the countdown timer interval (in minutes). The countdown timer will start, when there is no signal being sent to the projector. The projector will automatically power off when the countdown has finished. When countdown timer is selected to “0”, auto power off is disabled.

#### Not


- ❖ Default value of “Auto Power Off (Min)” is 20 min.



# User Settings

## Security

Configure the security settings.

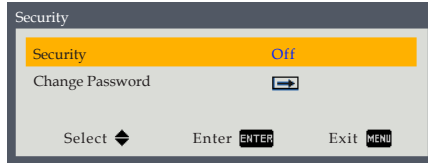

- ▶ Security: Select “On” to use the security verification when the turning on the projector. Select “Off” to be able to switch on the projector without a password verification.



- ▶ Change Password: Set the password. The default password is “123456”.




## Reset

Return the adjustments and settings to the factory default values. Choose “OK” to return the display parameters on all menus except Language, Lamp Hours Used, Filter Reminder, Filter Hours Used, Security and Password to the factory default settings.



# User Settings

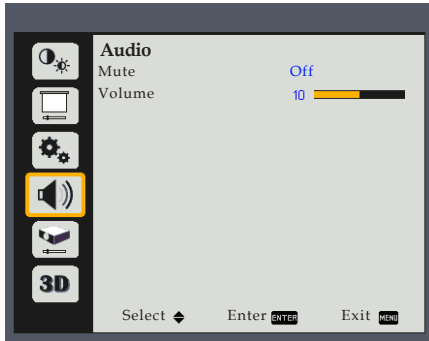

## AUDIO

### Note

❖ “Mute” function affects both internal and external speaker volume.

### Mute

Temporarily turn off the sound.



- ▶ Choose “On” to mute the sound.
- ▶ Choose “Off” to turn mute off.

### Volume


Adjust the volume level.



- ▶ Press the ◀ key to decrease the volume.
- ▶ Press the ▶ key to increase the volume.




# User Settings

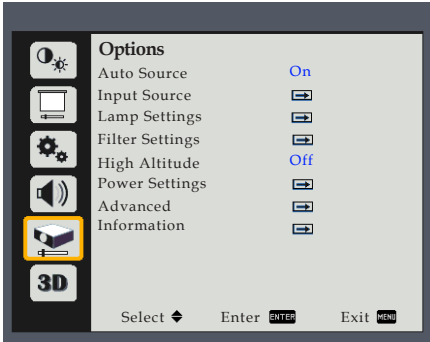

## OPTIONS

### Auto Source

 When this function is turned "On", the projector will search for other signals if the current input signal is lost. When this function is turned "Off", it will only search a specified connection port.




### Input Source

Use this option to enable/disable input sources. Press "Enter" to select which sources you require. Press "Menu" to finalize the selection. The projector will only search for inputs that are enabled.

For SVGA:




For XGA/WXGA:

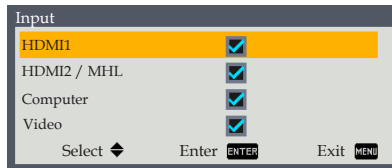

# User Settings

## Lamp Settings

Use this option to view the lamp life status and configure the lamp settings. Press "Enter" to enter the sub menu and configure the desired settings.

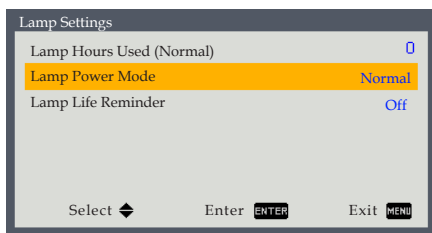

### Note

❖ When ambient temperature is over 40°C in operating, the projector will switch to "Eco." automatically.

- ▶ Lamp Hours Used (Normal): Display the projection time. Lamp Hours Used in Eco. mode or "Image ECO" mode "On" will be converted to Lamp Hours Used in "Normal" mode.
- ▶ Lamp Power Mode: Set the brightness mode. Choose "Normal" to increase the brightness or choose "Eco." to dim the projector lamp which will lower power consumption and extend the lamp life. Choose "Image ECO" to dim the lamp power, depending on the brightness level of images, and significantly reduce the lamp power consumption. The lamp life will be extended.



- ▶ Lamp Life Reminder: Choose this function to show or to hide the warning message when the changing lamp message is displayed. The message will appear 30 hours before suggested replacement of lamp.



# User Settings

## Note


❖ Due to the difference in applications for each country, some regions may have different accessories.

❖ Optional filter is separately sold. Use “RICOH PJ Replacement Air Filter Type 6 (Black)/ (White)”.

## Filter Settings

Use this option to view the filter status and configure the filter settings. Press “Enter” to enter the sub menu and configure the desired settings.


This item is disabled for the projector sold in some regions.

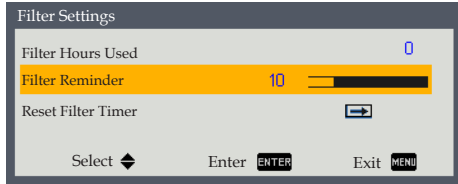

- ▶ Filter Hours Used: Display the filter hours.
- ▶ Filter Reminder: Set the maximum filter time usage.



 If the reminder function is enabled and the usage time reached its limit, a message will appear on the screen to remind you to clean or change the filter.



- ▶ Reset Filter Timer: Choose this function to reset Filter Hours Used.

## High Altitude


When “On” is selected, the fans will spin faster. Set High Altitude mode to “On” when the projector is used over 2500ft (750m) elevation.



# User Settings

## Power Settings

Use this option to configure the power settings. Press “Enter” to enter the sub menu and configure the desired settings.

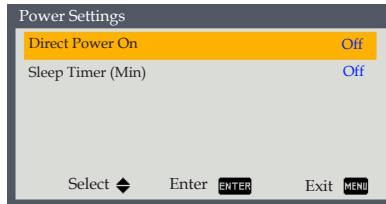

- ▶ **Direct Power On:** Select “On” to automatically power on the projector when the AC power is supplied. If this option is set to “Off”, user needs to press the “Power” button on the control panel or the “ $\mathcal{P}$ ” button on the remote control to power on the projector. If changes are made, they will take effect the next time the projector is powered on.




- ▶ **Sleep Timer (Min):** Set the countdown timer interval. The countdown timer will start, when there is signal being sent to the projector. The projector will shut down automatically after the countdown has reached 0.



## Advanced

Use this option to configure advanced options. Press “Enter” to enter the sub menu and configure the desired settings.

If changes are made, they will take effect the next time the projector is powered on.

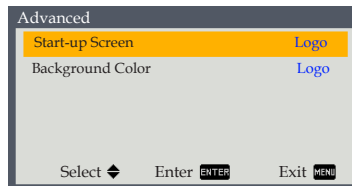


- ▶ **Start-up Screen:** Choose this function to show or hide the logo at projector startup.
- ▶ **Background Color:** Choose this function to display “Logo”, “Blue”, or “Black” as a background color.

# User Settings

## Information


Display the projector information.

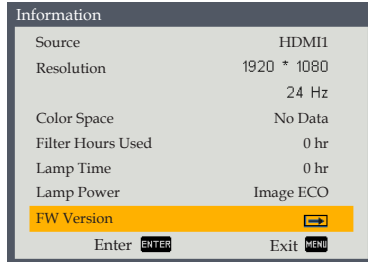

Information	
Source	HDMI
Resolution	1920 * 1080
	24 Hz
Color Space	No Data
Filter Hours Used	0 hr
Lamp Time	0 hr
Lamp Power	Image ECO
FW Version	
Enter	ENTER
Exit	MENU

- ▶ Source: Display the input source that is currently connected to.
- ▶ Resolution: Display the resolution setting of the current input source.
- ▶ Color Space: Display the color space of the source.
- ▶ Filter Hours Used: Display the filter hours.
- ▶ Lamp Time: Display the lamp hours.
- ▶ Lamp Power: Display the currently used lamp mode.
- ▶ FW Version: Display the current firmware version.

# User Settings

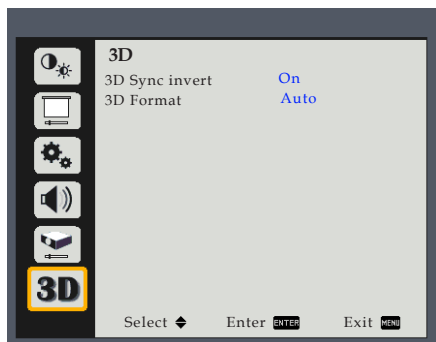

## 3D

### Note

❖ “3D Sync Invert” is only available when 3D is enabled.

❖ This setting may need to change when re-start running 3D movie.

❖ 3D function is turned on automatically when Blu-ray 3D source is input.

❖ Picture Mode, Color Temperature, NCE, and Advanced functions are grayed out in 3D mode.

## 3D Sync Invert


Use this option to enable/disable the 3D sync invert function.



- ▶ Off: Choose “Off” for default frame contents.
- ▶ On: Choose “On” to invert left and right frame contents.

## 3D Format

Use this option to select the appropriate 3D format content.

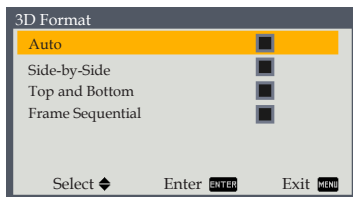

- ▶ Auto: Use this mode to let the system to automatically select the appropriate 3D format content.
- ▶ Side-by-Side: Use this mode for “Side-by-Side” format 3D content.
- ▶ Top and Bottom: Use this mode for “Top and Bottom” format 3D content.
- ▶ Frame Sequential: Use this mode for “Frame Sequential” format 3D content.

# Troubleshooting

*If you experience trouble with the projector, refer to the following information. If the problem persists, please contact your local dealer or service center.*

## **Problem: No image appears on screen**

- ▶ Ensure all the cables and power connections are correctly and securely connected as described in the “Connecting the Projector” section.
- ▶ Ensure the pins of terminals are not crooked or broken.
- ▶ Check if the projection lamp has been securely installed. Refer to the “Replacing the lamp” section for more information.
- ▶ Make sure you have removed the lens cap and the projector is switched on.
- ▶ Ensure that the “AV Mute” feature is not turned on.

## **Problem: Partial, scrolling or incorrectly displayed image**

- ▶ Press “Auto” on the remote control.
- ▶ Adjust the computer display settings. Verify the resolution setting is less than or equal to 1600 x 1200 resolution. See your operating system’s Help file.
- ▶ If you are using a Notebook:
  1. First, follow the steps above to adjust resolution of the computer.
  2. Press the toggle output settings. For example: [Fn]+[F3]

PANASONIC, NEC => Fn+F3  
HP, SHARP, TOSHIBA => Fn+F5  
IBM, SONY => Fn+F7  
DELL, EPSON => Fn+F8  
FUJITSU => Fn+F10  
APPLE => F7

- ▶ If you experience difficulty changing resolutions or your monitor freezes, restart all equipment including the projector.

**Problem: The screen of the Notebook computer is not displaying a presentation**

▶ If you are using a Notebook PC:

Some Notebook PCs may deactivate their own screens when a second display device is in use. Each has a different way to be reactivated. Refer to your computer's documentation for detailed information.

**Problem: Image is unstable or flickering**

- ▶ Adjust the "Phase" or "Clock" to correct it. Refer to the "H. Position" or "V. Position" section for more information.
- ▶ Check and reconfigure the display mode of your graphic card to make it compatible with the product.

**Problem: Image is out of focus**

- ▶ Adjust the Focus Ring on the projector lens.
- ▶ Make sure the projection screen is between the required distance. (refer to pages 37~38)

**Problem: The image is stretched when displaying 16:9 DVD**

Change the aspect ratio by pressing the "Aspect" button on the remote control or select "Screen > Aspect Ratio" from the OSD menu to show image with proper aspect ratio.

**Problem: Image is too small or too large**

- ▶ Adjust the Zoom lever on the top of the projector.
- ▶ Move the projector closer to or further from the screen.
- ▶ Press the "Aspect" button on the remote control or press the "Menu" button on the projector panel, go to "Screen > Aspect Ratio" and try the different settings.



**Problem: Image is reversed**



























- ▶ Select “Screen > Projection” from the OSD menu to adjust the image.

**Problem: Lamp burns out or makes a popping sound**



- ▶ When the lamp reaches its end of life, it will burn out and may make a loud popping sound. If this happens, the projector will not turn on until the lamp module has been replaced. To replace the lamp, follow the procedures in the “Replacing the Lamp”.

# Troubleshooting

## Problem: Indicator lighting message

Message	POWER indicator	TEMP indicator	LAMP indicator
	(Red/Blue)	(Red)	(Red)
Standby (Input power cord)	 (Red)		
Normal (Power on)	 (Blue)		
Powering up (Warming up)	Flashing Blue (0.5 sec)		
Power off (Cooling Down)	Flashing Red (0.5 sec)		
Programming	 (Blue and Red)		
Temperature Error (Over temperature)	 Blue		
Lamp Error (Lamp hours below 100 hours)	Flashing Blue (1 sec)		
Lamp Error (Lamp hours between 100 and 1000 hours)	 (Blue and Red)		
Lamp Error (Lamp hours over 1000 hours)	 Red		
Fan Lock (Fan failed)	 Blue	Flashing (0.5 sec)	

### Note

 
Steady light =>   
 No light => 

## Problem: Message Reminders


- ▶ Temperature Error - the projector is overheat inside. Check the environmental condition.



- ▶ Replacing the lamp - the lamp is about to reach its maximum lifetime. Prepare to replace it soon.



 - ▶ Fan Error - the cooling system fan is not working.




- ▶ Replacing the filter - the filter is about to reach its maximum usage time. Clean or replace the filter soon.



# Replacing the lamp

 The projector will detect the lamp life itself. It will show you a warning message:



Warning: To avoid burns, allow the projector to cool for at least 60 minutes before you replace the lamp!




Warning: Do not drop the lamp module or touch the glass parts. The glass parts may shatter and cause injury if it is dropped.

Warning: For continued safety replace with Replacement Lamp Type 27.

Caution: If the lamp should break, handle with care to avoid injury due to broken pieces and contact your sales representative for repair service.

When you see this message, change the lamp as soon as possible. Make sure the projector has been cooled down for at least 60 minutes before changing the lamp.

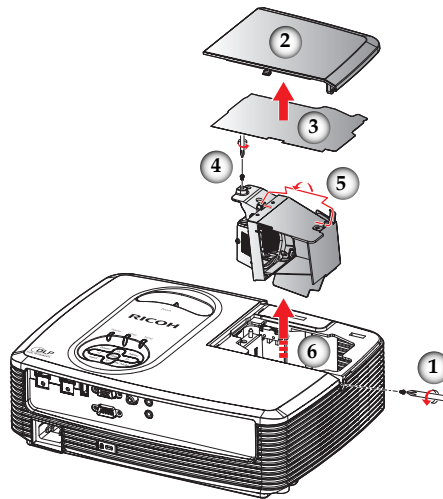

## Lamp Replacing Procedure:

1. Switch off the power to the projector by pressing the "Power" button on the control panel or the "O" button on the remote control.
2. Allow the projector to cool down at least 60 minutes.
3. Disconnect the power cord.
4. Remove the screw on the lamp cover. ①
5. Slide the lamp cover to the side and remove the cover. ②
6. Remove the mylar. ③
7. Remove the screw on the lamp module. ④
8. Lift up the lamp handle. ⑤
9. Carefully remove the lamp module. ⑥
10. Install the new lamp module by reversing the previous steps. See the lamp's manual for instructions on resetting the lamp time.

## Used Lamps

This projector's lamp contains trace amounts of environmentally harmful inorganic mercury. Be careful not to break used lamps, and dispose of them in accordance with local regulations or contact your sales representative.

# Appendices

## List of Compatible Signals

A. VGA Analog			
(1) VGA Analog - PC Signal			
Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)
VGA	640 x 480	60	31.47
	640 x 480	72	37.86
	640 x 480	75	37.5
	640 x 480	85	43.27
SVGA	800 x 600	56	35.2
	800 x 600	60	37.88
	800 x 600	72	48.08
	800 x 600	75	46.88
	800 x 600	85	53.67
XGA	1024 x 768	60	48.36
	1024 x 768	70	56.48
	1024 x 768	75	60.02
	1024 x 768	85	68.67
SXGA	1152 x 864	70	63.8
	1152 x 864	75	67.5
	1152 x 864	85	77.1
	1280 x 1024	60	63.98
	1280 x 1024	72	77.9
	1280 x 1024	75	79.98
	1280 x 1024	85	91.15
Quad VGA	1280 x 960	60	60
	1280 x 960	75	75
SXGA+	1400 x 1050	60	65.32
UXGA	1600 x 1200	60	75
PowerBook G4	640 x 480	60	31.5
	640 x 480	66.6(67)	35
	800 x 600	60	37.88
	1024 x 768	60	48.36
	1152 x 870	75	68.68
	1280 x 960	75	75.2
i Mac DV(G3)	1024 x 768	75	60.3

# Appendices

<b>A. VGA Analog</b>			
<b>(2) VGA Analog - Extended Wide Timing</b>			
Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)
WSVGA	1024 x 600	60	37.3
WXGA	1280 x 768	60	47.78
	1280 x 768	75	60.29
	1280 x 768	85	68.63
	1280 x 720	60	44.8
	1280 x 800	60	49.6
	1366 x 768	60	47.71
WXGA+	1440 x 900	60	55.9
WSXGA	1680 x 1050	60	65.3
WUXGA	1920 x 1080-RB	60	66.6
	1920 x 1080-EIA	60	67.5
<b>(3) VGA Analog - Component Signal</b>			
480i	720 x 480	59.94(29.97)	27
480p	720 x 480	59.94	31.47
576i	720 x 576	50(25)	27
576p	720 x 576	50	31.25
720p	1280 x 720	60	45
720p	1280 x 720	50	37.5
1080i	1920 x 1080	60(30)	33.75
1080i	1920 x 1080	50(25)	33.75
1080p	1920 x 1080	60	67.5
1080p	1920 x 1080	50	56.25

# Appendices

B. HDMI			
(1) HDMI - PC Signal			
Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)
VGA	640 x 480	60	31.47
	640 x 480	72	37.86
	640 x 480	75	37.5
	640 x 480	85	43.27
SVGA	800 x 600	56	35.2
	800 x 600	60	37.88
	800 x 600	72	48.08
	800 x 600	75	46.88
	800 x 600	85	53.67
XGA	1024 x 768	60	48.36
	1024 x 768	70	56.48
	1024 x 768	75	60.02
	1024 x 768	85	68.67
SXGA	1152 x 864	70	63.8
	1152 x 864	75	67.5
	1152 x 864	85	77.1
	1280 x 1024	60	63.98
	1280 x 1024	72	77.9
	1280 x 1024	75	79.98
	1280 x 1024	85	91.15
Quad VGA	1280 x 960	60	60
	1280 x 960	75	75
SXGA+	1400 x 1050	60	65.32
UXGA	1600 x 1200	60	75
PowerBook G4	640 x 480	60	31.5
	640 x 480	66.6(67)	35
	800 x 600	60	37.88
	1024 x 768	60	48.36
	1152 x 870	75	68.68
	1280 x 960	75	75.2
i Mac DV(G3)	1024 x 768	75	60.3

# Appendices

<b>B. HDMI</b>			
<b>(2) HDMI - Extended Wide Timing</b>			
Modes	Resolution	V.Frequency (Hz)	H.Frequency (kHz)
WSVGA	1024 x 600	60	37.3
WXGA	1280 x 768	60	47.78
	1280 x 768	75	60.29
	1280 x 768	85	68.63
	1280 x 720	60	44.8
	1280 x 800	60	49.6
	1366 x 768	60	47.71
WXGA+	1440 x 900	60	55.9
WSXGA	1680 x 1050	60	65.3
WUXGA	1920 x 1080-RB	60	66.6
	1920 x 1080-EIA	60	67.5
	1920 x 1200-RB	59.95	74.04
<b>(3) HDMI - Video Signal</b>			
480i	720 x 480	59.94(29.97)	27
480p	720 x 480	59.94	31.47
576i	720 x 576	50(25)	27
576p	720 x 576	50	31.25
720p	1280 x 720	60	45
720p	1280 x 720	50	37.5
1080i	1920 x 1080	60(30)	33.75
1080i	1920 x 1080	50(25)	33.75
1080p	1920 x 1080	60	67.5
1080p	1920 x 1080	50	56.25
1080p	1920 x 1080	23.97/ 24	27




# Appendices

C. 3D Timing				
Input Resolutions	HDMI 3D Input (with 3D Info Frame information)	Input timing		
		1280 x 720P @ 50Hz	Top - and - Bottom	
		1280 x 720P @ 60Hz	Top - and - Bottom	
		1280 x 720P @ 50Hz	Frame packing	
		1280 x 720P @ 60Hz	Frame packing	
		1920 x 1080i @ 50 Hz	Side- by-Side (Half)	
		1920 x 1080i @ 60 Hz	Side- by-Side (Half)	
		1920 x 1080P @ 24 Hz	Top - and - Bottom	
		1920 x 1080P @ 24 Hz	Frame packing	
	HDMI 3D Input (without 3D Info Frame information)	1920 x 1080i @ 50Hz	Side- by-Side (Half)	SBS mode is on
		1920 x1080i @ 60Hz		
		1280 x 720P @ 50Hz		
		1280 x 720P @ 60Hz	Top-and- Bottom	TAB mode is on
		1920 x 1080i @ 50Hz		
		1920 x1080i @ 60Hz		
		1280 x 720P @ 50Hz		
		1280 x 720P @ 60Hz		
	480i	HQFS		
	VGA (PC)	800 x 600 @ 60Hz	SBS or TAB	
		1024 x 768 @ 60Hz		
		800 x 600 @ 120Hz	Frame Sequential	
		1024 x768 @ 120Hz		
	Composite	NTSC	HQFS	
S-Video	NTSC	HQFS		

## Configurations of Terminals


### Terminal: Computer In (Mini D-sub 15 pin)

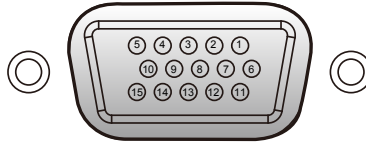

1	Red (R/Cr) Input [R Output]	9	DDC 5V [NC*]
2	Green (G/Y) Input [G Output]	10	Ground (Ver. sync.)
3	Blue (B/Cb) Input [B Output]	11	NC*
4	NC*	12	DDC Data [NC*]
5	Ground (Horiz.sync.)	13	Horiz. sync. Input [Output] (Composite H/V sync. Input)
6	Ground (Red)		
7	Ground (Green)	14	Vert. sync. Input [Output]
8	Ground (Blue)	15	DDC CLK [NC*]

\* Do not connect anything.

### Terminal: PC Control (D-sub 9 pin)

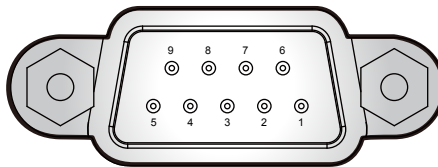

1	NC*	6	NC*
2	TXD (Sending Data)	7	NC*
3	RXD (Receiving Data)	8	NC*
4	NC*	9	NC*
5	GND	* Do not connect anything.	

#### Note

- ❖ Contact your dealer for control cable and commands.

## Specifications

### ■ List of general specifications

Item	PJ S2440	PJ X2440	PJ WX2440
DMD chip	0.55" SVGA DMD	0.55" XGA DMD	0.65" WXGA DMD
Lamp Type	190W		
Projection Lens	1:1.10x manual zoom and manual focus		
Projection Distance (Focus range)	1.2 to 12m		1.1~10m
Throw Ratio (distance/width)	1.95 to 2.15		1.54 to 1.72
Dimension (WxDxH)	298 x 237 x 92 mm (w/o protruding part)		
	298 x 237 x 105 mm (with protruding part)		
Weight	Approx. 2.6kg		
I/O Terminal	<ul style="list-style-type: none"> <li>• HDMI In</li> <li>• Service</li> <li>• Computer In</li> <li>• Video In</li> <li>• Audio In</li> <li>• Audio Out</li> <li>• PC Control</li> </ul>	<ul style="list-style-type: none"> <li>• HDMI 1 In</li> <li>• HDMI 2/ MHL In</li> <li>• 5V 1.0A</li> <li>• Computer In</li> <li>• Video In</li> <li>• Audio In</li> <li>• Audio Out</li> <li>• PC Control</li> </ul>	
Speaker	2W		
Lamp life	<ul style="list-style-type: none"> <li>• Normal: 5000 hours</li> <li>• ECO: 6000 hours</li> </ul>		
Noise Level	<ul style="list-style-type: none"> <li>• Normal: Typ. 34dB(A) Max. 36dB(A)</li> <li>• ECO: Typ. 31dB(A) Max. 33dB(A)</li> </ul>		
Standby Power (Monitor Out Off)	0.5W or less		
Environment	<ul style="list-style-type: none"> <li>• Operation: Temperatures: 41° to 104°F (5° to 40°C) Humidity (non-condensing): 20% to 80%</li> <li>• Storage : Temperatures: -4° to 140°F (-20° to 60°C) Humidity (non-condensing): 20% to 80%</li> </ul>		
Power Consumption	ECO Mode: <ul style="list-style-type: none"> <li>• Typ. 196W, Max.216W @ 110Vac</li> <li>• Typ. 191W, Max.210W @ 220Vac</li> </ul> Normal Mode: <ul style="list-style-type: none"> <li>• Typ. 238W, Max.262W @ 110Vac</li> <li>• Typ. 232W, Max.255W @ 220Vac</li> </ul>		

#### Note

- This model complies with the above specifications.
- Designs and specifications are subject to change without notice.
- This model may not be compatible with features and/or specifications that may be added in the future.


### ■ Separately sold product

RICOH PJ Replacement Lamp Type 27

RICOH PJ Replacement Air Filter Type6 (Black) / (White)

## Cabinet Dimensions

Unit: mm

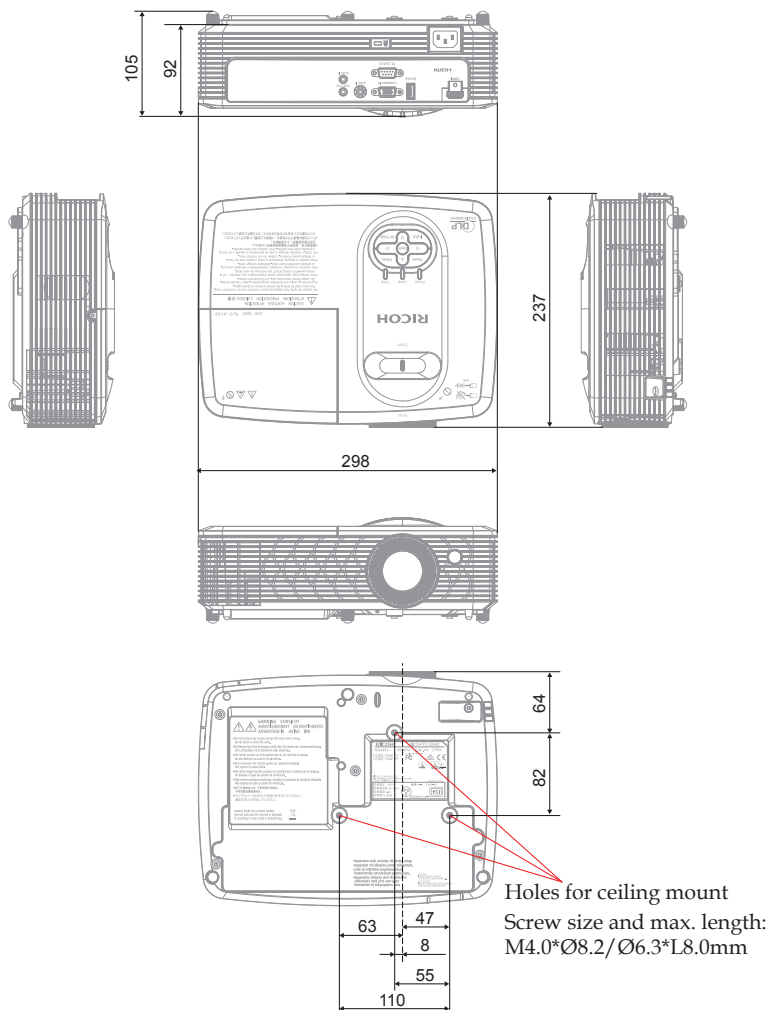

## Trademarks

- DLP is trademarks or registered trademark of Texas Instruments.
- IBM is a trademark or registered trademark of International Business Machines Corporation.
- Macintosh, Mac OS X, iMac, and PowerBook are trademarks of Apple Inc., registered in the U.S. and other countries.
- Microsoft, Windows, Windows Vista, Internet Explorer and PowerPoint are either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- HDMI, the HDMI Logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- DisplayPort, DisplayPort Compliance Logo are registered trademarks of Video Electronics Standards Association.
- MHL, Mobile High-Definition Link, and MHL Logo are trademarks or registered trademarks of MHL, LLC.
- Kensington is a trademark or registered trademark of ACCO Brands.
- Blu-ray is a trademark of Blu-ray Association.
- Other product and company names mentioned in this user's manual may be the trademarks or registered trademarks of their respective holders.