
Quick Reference Guide

Unlocked¹

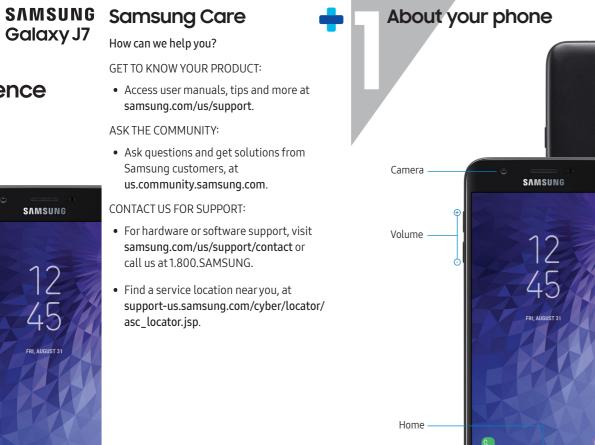



Recents





INSERT SIM/microSD CARD

Slide the SIM card and the optional microSD card (microSD card sold separately) into the tray with the gold contacts facing down.



BACKUP AND RESTORE

For help transferring content from your old phone, visit: samsung.com/smartswitch

Caution: Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

Customize your phone

Pinch the home screen to change the look of your phone:



Wallpapers Themes



From a home screen swipe up, and then tap Settings 🚳 to customize, connect or turn on options to personalize your

\subset CONNECTIONS

phone:

Connect to a Wi-Fi network, Bluetooth device and other connection options.

SOUNDS AND VIBRATION Set device volume and sounds.

DISPLAY

- L Customize the home screen and display brightness.
- LOCK SCREEN ما
- Select a screen lock type and set security options.

BIOMETRIC AND SECURITY Set biometric security options

Widaets Home screen settinas

Bixby

Set reminders, send messages, search and access content on your phone and Internet. To launch Bixby, from the home

screen, swipe right.

Note: For more information about Bixby, visit samsung. com/us/support/ owners/app/Bixby.

Learn more

Need help?

÷

SAMSUN

Bixby Home

D WEATHER

New York

🥯 75°

GALAXY APPS

Get the most popular apps.

acebook Hancom Amazon Sams

Office Shared shopping

Top apps

74[°]
4 PM
37[™]

72' 8 PM 2%

70° 12 PM 78%

The Help setting displays the device user manual. The user manual provides information about the following and more.

- To open, from the Home screen, swipe up and tap Settings 🚳 > Help (?).
 - Make a call
 - Contacts
 - Health & Fitness
 - Personalized device support
 - Accessibility settings

Search

?

From the home screen swipe up, and search for anything on the phone. For example enter an app or settings name.



Contacts

- Tap 🕂 to add a new contacts.
- Enter the desired information and tap SAVE to store the new entry.
- To edit, tap a name > Details > EDIT.
- Tap SAVE to complete.
- To delete, touch and hold a contact name and tap **DELETE**.

Messages

• Tap 回 to create a new message.

Note: If entering a phone number, press (+) to add the phone number as a recipient

- Tap START to compose a message.
- Tap (+) to add an attachment.
- Touch and hold 🐠 to create an audio message.
- Tap 🔄 to add a sticker or a GIF.
- Tap 🕢 to send the message.



Picture & Video

- Tap 🔵 to take a photo.
- Drag Oleft or right to zoom in or out.
- Tap or swipe up to take selfies.
- Swipe right to select a mode.
- Swipe left to select an effect.
- Tap to begin recording.
- Tap 💿 to capture a picture while recordina.
- Tap to pause a recording.
- Tap (•) to end a video.

¹Wireless voice, data and messaging services compatible with most major U.S. GSM and CDMA networks. Visit www.samsung.com for more information on your device. Support for certain features and services such as VoWiFi and hotspot, vary by wireless service provider. See provider for compatibility details

©2018 Samsung Electronics America, Inc. Samsung and Galaxy J7 are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of phone may vary

