

Quick Reference Manual



Samsung Care

How can we help you?

GET TO KNOW YOUR PRODUCT:

- Access user manuals, tips and more at samsung.com/us/support.

ASK THE COMMUNITY:

- Ask questions and get solutions from Samsung customers, at us.community.samsung.com.

CONTACT US FOR SUPPORT:

- For hardware or software support, visit samsung.com/us/support/contact or call us at 1.800.SAMSUNG.
- Find a service location near you, at support-us.samsung.com/cyber/locator/asc_locator.jsp.



1 About your phone




2 Set up your phone

Your SIM card may be pre-installed.

REMOVE SIM/microSD™ TRAY

Use the tool to open the SIM/microSD card tray.

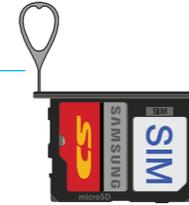

INSERT SIM/microSD CARD

Slide the SIM card and the optional microSD card (microSD card sold separately) into the tray with the gold contacts facing down.



Battery is non-removable

CHARGE YOUR DEVICE

Before turning on your phone, charge it fully.

BACKUP AND RESTORE

For help transferring content from your old phone, visit: samsung.com/smarts witch

Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.



3

Customize your phone

Pinch the home screen to change the look of your phone:



Wallpaper



Themes



Widgets



Home screen settings

From a home screen swipe up, and then tap **Settings** to customize, connect or turn on options to personalize your phone:

CONNECTIONS

Connect to a Wi-Fi® network, Bluetooth® device and other connection options.

SOUNDS AND VIBRATION

Set device volume and sounds.

DISPLAY

Customize the home screen and display brightness.

LOCK SCREEN

Select a screen lock type and set security options.

BIOMETRIC AND SECURITY


Set biometric security options.

Bixby

Set reminders, send messages, search and access content on your phone and Internet.

To launch Bixby, from the home screen, swipe right.

Note: For more information about Bixby, visit samsung.com/us/support/owners/app/Bixby.

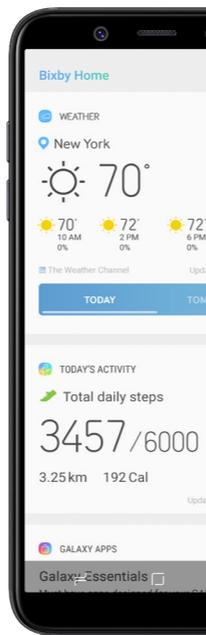

Learn more

Need help?



The Help setting displays the device user manual. The user manual provides information about the following and more.

To open, from the Home screen, swipe up and tap **Settings** > **Help** .



Make a call



Wi-Fi Calling & USB Tethering



Contacts



Samsung Health



Samsung + device support



Accessibility settings



Connect to smart devices

Search

From the home screen swipe up, and search for anything on the phone. For example enter an app or settings name.



Calls



- Tap to make a phone call or to make a video call.
- To answer a call, touch and slide .
- To reject and route a call to your voicemail, touch and slide .

Note: Press and hold to set up or access your voicemail.

- To end a call, touch and slide .

Contacts



- Tap to add a new contacts.
- Enter the desired information and tap **SAVE** to store the new entry.
- To edit, tap a name > **Details** > **EDIT**.
- Tap **SAVE** to complete.
- To delete, touch and hold a contact name and tap **DELETE**.

Messages



- Tap to create a new message.
- Tap **START** to compose a message.
- Tap to add an attachment.
- Touch and hold to create an audio message.
- Tap to add a sticker or a GIF.
- Tap to send the message.

Picture & Video



- Tap to take a photo.
- Drag left or right to zoom in or out.
- Tap or swipe up to take selfies.
- Swipe right to select a mode.
- Swipe left to select an effect.
- Tap to begin recording.
- Tap to pause a recording.
- Tap to end a video.

©2018 Samsung Electronics America, Inc. Samsung and Galaxy A6 are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of phone may vary.