



# Safety, Warranty, and Setup Guide

Lenovo N42-20/N42-20 Touch Chromebook

 


PN: SP40L85347  
Rev. AA00

Lenovo® electronic manuals... for a greener planet!

Refer to the electronic *User Guide* for detailed product information: <http://support.lenovo.com>


## Unpack

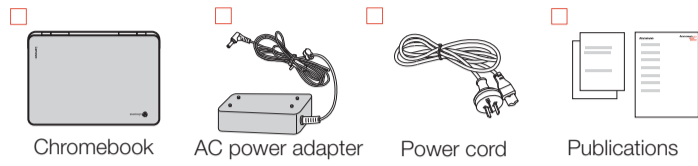

Note: The plug of the power cord varies by countries or regions.

## Initial setup instructions

 1. Connect to power. Ensure that all plugs are securely and completely inserted into receptacles.

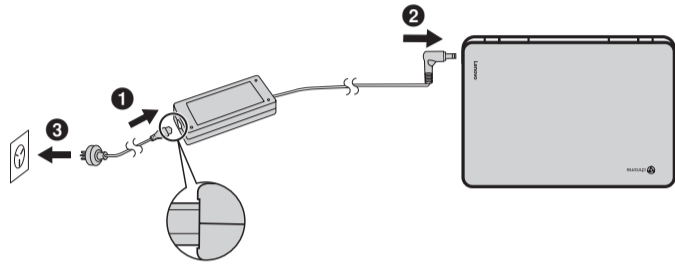

2. Open the LCD cover. The Chromebook starts automatically.



Note: If the Chromebook does not start automatically, press the Power button.


3. Select language and keyboard, and set up network connection.  
Note: The network should have Internet connection and this step cannot be skipped.

4. Sign in with your Google Account.

Read and follow all safety precautions in the *User Guide* before continuing with your Chromebook computer. To view or download the *User Guide*, refer to "Electronic publications" later in this document.

## Features, controls, and connectors

 - 1 Camera
- 2 Microphone hole
- 3 Shortcut keys
- 4 Power button
- 5 Touch pad
- 6 AC power connector
- 7 DC-in indicator
- 8 HDMI-out connector
- 9 USB 3.0 connector
- 10 Memory card (SD/MMC) slot
- 11 Combo audio jack
- 12 Speakers
- 13 Security keyhole

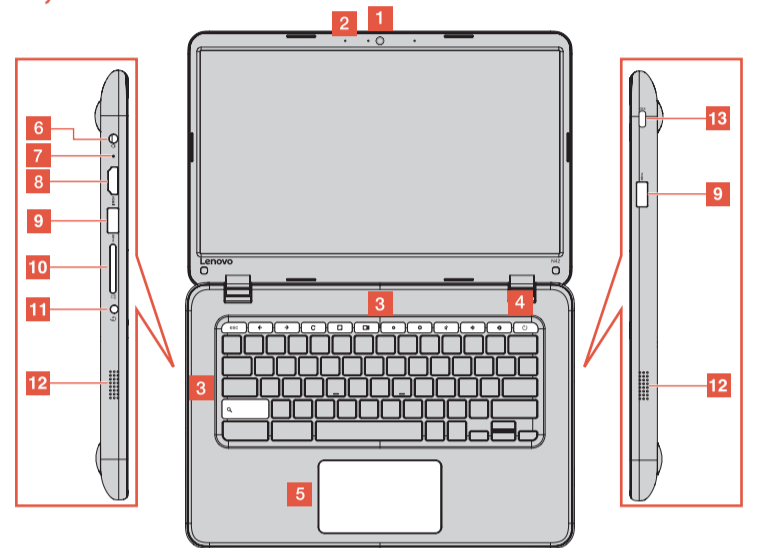

## Keyboard shortcuts

### One key

- ← Back
- Forward
- ↻ Reload page
- ☐ Full screen
- ☐☐ Switch window
- ⚙ Increase brightness
- ⚙ Decrease brightness
- 🔇 Mute
- 🔊 Volume down
- 🔊 Volume up
- 🔌 Power off/Lock screen
- 🔍 Search

### Two-key combinations

- Ctrl - ☐☐: Take screenshot
- Ctrl - -: Zoom out
- Ctrl - +: Zoom in
- Ctrl - 0: Reset zoom
- Ctrl - D: Bookmark current page
- Ctrl - R: Reload page
- Ctrl - N: Open a new window
- Ctrl - M: Minimize window
- Ctrl - W: Close tab
- Ctrl - ?: Start Help
- Alt - 🔍: Toggle caps lock
- Alt - Shift: Cycle through input methods
- Alt - [: Dock window left
- Alt - ]: Dock window right
- Alt - ⬅: Back
- Alt - ➡: Forward
- Alt - ⬆: Page up
- Alt - ⬇: Page down
- Alt - ☐: Switch primary monitor
- Shift - Esc: Start the task manager

### Three-key combinations

 
- Ctrl - Shift - Q: Sign out
- Ctrl - Shift - ⌂: Rotate screen
- Alt - Shift - M: Start the file manager

Note: For a complete list of keyboard shortcuts, press Ctrl - Alt - /.

Reduce | Reuse | Recycle



## New to Chromebook?

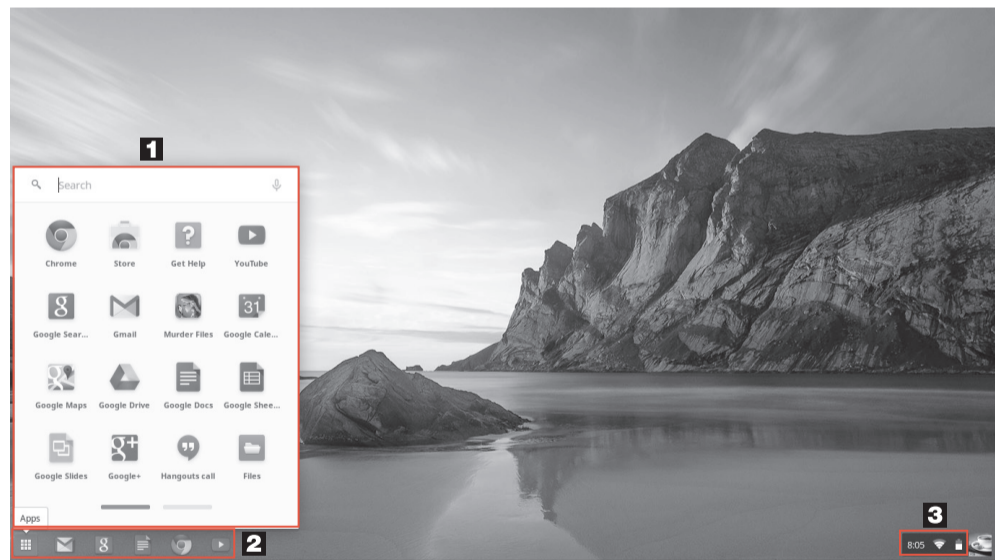

- 1 Apps launcher
- 2 Quick launch bar
- 3 Status area

