

# EOS 100D

## Quick Reference Guide

This quick reference guide explains the basic function settings and how to shoot and play back images. You can take this guide with you when shooting. For detailed instructions, refer to the EOS 100D Instruction Manual.

ENGLISH

CEL-SU3WA210

© CANON INC. 2013

## Quick Start Guide

- 1** Insert the battery.
- 2** Insert a SD card.
- 3** Attach the lens. Align the lens' white or red index with the camera's index in the matching color.
- 4** Set the lens focus mode switch to <AF>.
- 5** Set the power switch to <ON>.

- 6** Set the Mode Dial to <A+> (Scene Intelligent Auto).
  - 7** Focus the subject. Aim the viewfinder center over the subject and press the shutter button halfway to autofocus.
  - 8** Take the picture. Press the shutter button completely to take the picture.
  - 9** View the image. The captured image will be displayed for 2 sec. on the LCD monitor.
- The ☆ on the right of the function indicates that the function is available only in Creative Zone modes.
  - Number of Possible Shots (Viewfinder Shooting)**
- |                |                   |                   |
|----------------|-------------------|-------------------|
| Temperature    | No Flash          | 50% Flash Use     |
| At 23°C / 73°F | Approx. 480 shots | Approx. 380 shots |

### Image Playback

Index: A grid of thumbnails to navigate through images.

Magnify: A larger view of the selected image.

Select image: A small thumbnail to select a specific image.


Erase: An icon to delete the selected image.

Playback: A play button icon to view the image.

INFO. Shooting information: A screen showing technical data like aperture, shutter speed, and ISO.

## Preparation

### Menu Operations

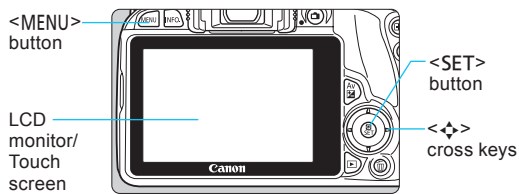


- Press the <MENU> button to display the menu.
- Press the <◀> <▶> keys to select a tab, then press the <▲> <▼> keys to select the desired item.
- Press <SET> to display the setting.
- After setting the item, press <SET>.

### Basic Zone Modes




### Creative Zone Modes

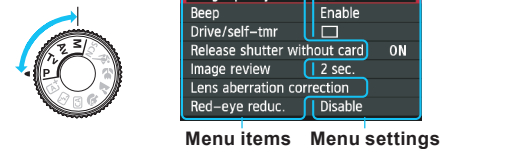


### Image-Recording Quality

- Select [1: Image quality], then press <SET>.
- Press the <◀> <▶> keys to select the quality, then press <SET>.

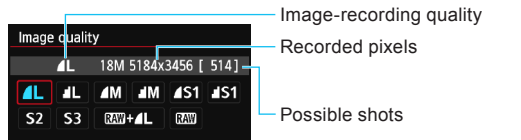


### Picture Style ☆

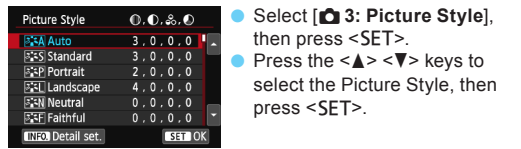


Style	Description
Auto	Color tones optimized for the particular scene.
Standard	Vivid colors and sharp images.
Portrait	Nice skin tones and slightly sharp images.
Landscape	Vivid blue skies and greenery and very sharp images.
Monochrome	Black-and-white images.

- For <Neutral> (Neutral) and <Faithful> (Faithful), refer to the camera's instruction manual.


### Quick Control

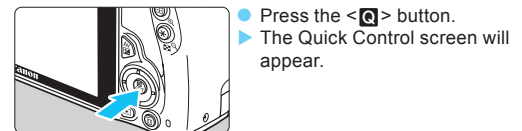


### Basic Zone Modes

 

### Creative Zone Modes

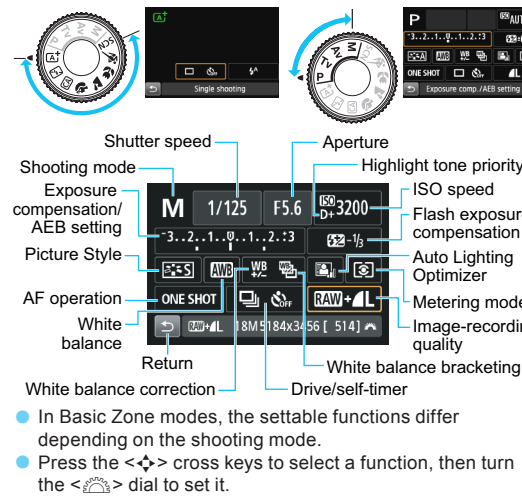

### Touch Screen


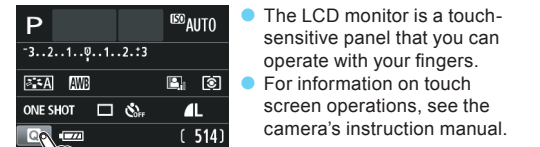


## Custom Functions ☆


- ### C.Fn I: Exposure
- Exposure level increments
  - ISO expansion
- ### C.Fn II: Image
- Highlight tone priority
- ### C.Fn III: Autofocus/Drive
- AF-assist beam firing
  - Mirror lockup
- ### C.Fn IV: Operation/Others
- Shutter/AE lock button
  - Assign SET button
  - LCD display when power ON

# Shooting Operation


## Nomenclature

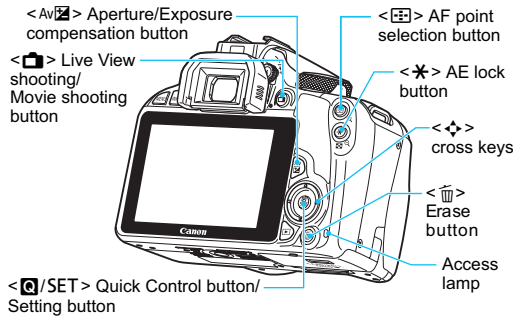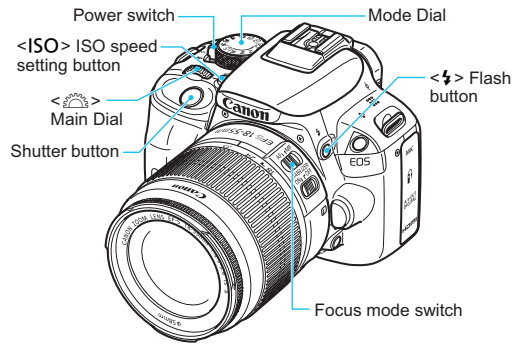


## Shooting Settings

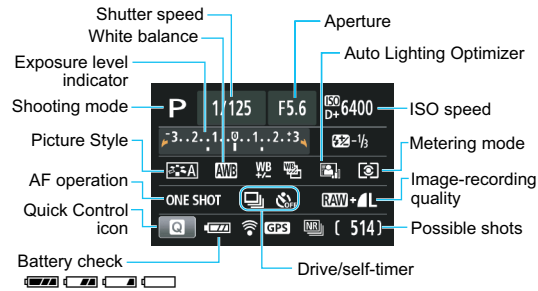

## Viewfinder Information

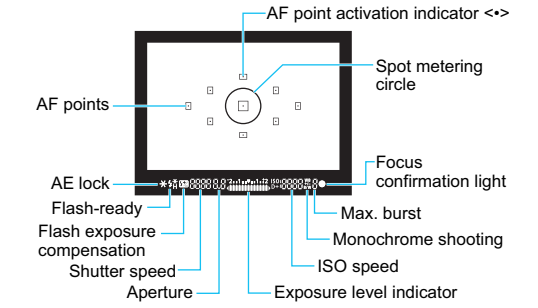

## Basic Zone Modes

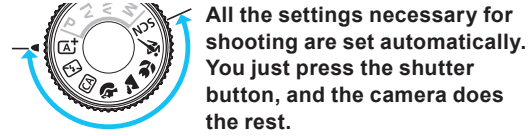


- A+** Scene Intelligent Auto
- Flash Off**
- CA** Creative Auto
- P** Portrait
- L** Landscape
- Cl** Close-up
- S** Sports
- SCN** Special scene
  - Kids
  - Food
  - Candlelight
  - Night Portrait
  - Handheld Night Scene
  - HDR Backlight Control

## Using the Built-in Flash

 - Basic Zone Modes**  
If necessary, the built-in flash will be raised and fire automatically in low-light or backlit conditions (with certain shooting modes).
- Creative Zone Modes**
- Press the <Av/> button to raise the built-in flash, then shoot.

## Creative Zone Modes



### P: Program AE

- The camera automatically sets the shutter speed and aperture in the same way as the <A+> mode.
- Set the Mode Dial to <P>.

### Tv: Shutter-priority AE

- 
- Set the Mode Dial to <Tv>.
  - Turn the <Av/> dial to set the desired shutter speed, then focus the subject.
  - The aperture will be set automatically.
  - If the aperture display blinks, turn the <Av/> dial until it stops blinking.

### Av: Aperture-priority AE

- 
- Set the Mode Dial to <Av>.
  - Turn the <Av/> dial to set the desired aperture, then focus the subject.
  - The shutter speed will be set automatically.
  - If the shutter speed display blinks, turn the <Av/> dial until it stops blinking.

## AF: AF Operation

- 
- Set the lens focus mode switch to <AF>.
  - Select [**3**: AF operation], then press <SET>.
  - Press the <Left> <Right> keys to select the AF operation, then press <SET>.
- ONE SHOT** (One-Shot AF): For still subjects
- AI FOCUS** (AI Focus AF): Switches the AF operation automatically
- AI SERVO** (AI Servo AF): For moving subjects

## AF Point

- 
- Press the <AF point selection> button.
  - Press the <Cross keys> to select the AF point.
  - While looking through the viewfinder, you can select the AF point by turning the <Av/> dial until the desired AF point flashes in red.
  - Pressing <SET> toggles the AF point selection between the center AF point and automatic AF point selection.

## ISO: ISO Speed

- 
- Press the <ISO> button.
  - Press the <Left> <Right> keys or turn the <Av/> dial to select the ISO speed, then press <SET>.
  - When [AUTO] is selected, the ISO speed is set automatically. When you press the shutter button halfway, the ISO speed setting is displayed.

## Drive Mode

- 
- Select [**1**: Drive/self-tmr], then press <SET>.
  - Press the <Left> <Right> keys to select the drive mode, then press <SET>.
- Single shooting**
  - Continuous shooting**
  - Silent single shooting\***
  - Silent continuous shooting\***
  - Self-timer: 10 sec./Remote control**
  - Self-timer: 2 sec.**
  - Self-timer: Continuous**

\* Not selectable in Basic Zone modes.

## Live View Shooting

- 
- Press the <Live View> button to display the Live View image.
  - Press the shutter button halfway to focus.
  - Press the shutter button completely to take the picture.

### Number of Possible Shots (Live View Shooting)

Temperature	No Flash	50% Flash Use
At 23°C / 73°F	Approx. 160 shots	Approx. 150 shots

## Movie Shooting (Autoexposure)

- 
- Set the power switch to <Movie>.
  - Set the Mode Dial to any shooting mode except <M>.
  - Press the <Live View> button to start shooting a movie.
  - To stop movie shooting, press the <Live View> button again.
- Recording movie
- Microphone