

Quick Installation Guide

This guide contains the basic information you need to quickly setup the Camera. For detailed information on installations or operations, please refer to the Hardware Manual and Firmware Manual on ACTi website (<u>www.acti.com</u>).

Step 1: Unpack the Device

Check the camera package and make sure all items are present. The complete package list is shown on the camera Hardware Manual.

Step 2: Mount the Device

Mounting varies per camera model. Check the most suitable mounting method from the Hardware Manual or from our Mounting Accessory Selector Tool (<u>www.acti.com/mountingselector</u>).

Step 3: Connect the Device



Step 4: Access the Device

On Network with DHCP Server / Router (Automatic IP)

- 1. Connect the device and the PC within the same network segment. Once connected, an IP address will be assigned to the Camera.
- 2. Find the Camera via Windows Explorer or IP Utility.

By Windows Explorer

- Go to Start > My Computer > Network.
- b. Double-click on the device name.



By IP Utility

- a. Download **IP Utility** from our website (<u>www.acti.com</u>).
- b. Run **IP Utility** to start searching for network devices.
- c. Click the IP address of the Camera.

0							
Q	Rebesh Device Sellings C		Change Selwork Address	Dange Selvork Address Firmware Upgrade		andy Restore Resel	Resel Excelificion
	Account	adnin. Passwo	ed be				
	PASPiss	Senal No.	MAC Address	Fittlenen	Medel	Wellcost P	
0	172.16.25.125	E91-A-XX-138-00154	00.07:70.04.06.09	A10-585-VE0E16-AC	Megapixal P Dome	228.5.6.1	
	172 16 26 35	E918-A-XXL 14D-80918	00-0P 7C 00-5P 17	A10-500-VE 07:10-AC	Megapixel P Dome	228.5.6.1	
	172.16.26.190	E918-A-XX-14D-00019	00.0F.7C.0D.5F.80	A10-600-VE.07.10-AC	Megapixal P Dome	228.5.8.1	
	172.16.26.21	C0108A-301-14D-80018	00-07/70/00/57/90	A10-580-VE07.10-AC	Megapixal P Dome	226.5.6.1	
	172 18:26 34	8010-LLXX 142-2008	00-07-70-00-57-00	A10.400.VE07.10.AC	Henispherie Camera	228.5.6.1	
	172.16.26.37	E9198A-00-140-0008	000F7C006871	A10-585-VE-87.15-AC	Henispheric Camera	228.5.6.1	
0	175.16.56.55	PARTY A NOT THE REAL	ALAR 37.00.01 M	440 490 10 47 48 48 40	Managements Common	224.4.4.4	
0	172 16 26 40	E8216A-301-140-80018	00-07 70:00-68-99	A10-500-VE07 10-AC	Henispheric Camera	228.5.6.1	
0	172162633	100 142-00018	00.07.7C 00.66 AD	A10-585-VE8715-AC	Megaporal P Zome	228.5.8.1	
	172.16.25.29	9-00-140-00018	0007700068-01	A10-580-VE07.10-AC	Megapixal P Dome	226.5.6.1	
	172.16.26.43	022-006140-00018	000770006805	A10-585-VE07.10-AC	Henispheric Camera	226.5.6.1	
	172.18.26.135	E923-A-006 14D-00019	000770004806	A10-500-VE-07.10-AC	Henispheric Camera	228.5.6.1	
	172.16.26.30	E9236A-301-142-80018	00-07/70/00-68/09	A10-588-VE07.10-A0	Henispheric Camera	228.5.6.1	
	172.16.26.123	EH-A-00-13-00054	00.0f //C 09.AE 80	A10-500-VE07.07-AC	Megaporal P Dome	226.5.6.1	
	192 105 0 151	E95-A-XX-130-00016	000F7C0827.0F	A10-580-VE8521-AC	Megapost P Zome	226.5.6.1	
	172.16.25.141	E97-A-306-536-00147	00:0F:70:00:60:5A	A10-588-VE45.23-A0	Megapixal P Dome	226.5.6.1	
	172.16.26.36	E98-A-XX-140-00018	000770006468	A10-680-VE 07.10-AC	Henispheric Camera	228.5.6.1	

3. The **Web Configurator** appears with the IP address of the Camera on the URL bar. Login to access the Camera.

Note: For full functionality, it is recommended to use Microsoft Internet Explorer[®]. When using non-IE browsers, free 3rd party software plug-ins may be required. Refer to the device Firmware Manual for more information.

On Network without DHCP Server (Default IP)

1. If necessary, configure the IP settings of your PC to match with the network segment of the Camera.



How to configure the PC IP address?

Click Start > Control Panel > Network and Sharing Center > Change adapter settings. Then follow the steps below:



2. Open a web browser and type **192.168.0.100** on the URL address bar. The **Web Configurator** appears. Login to access the Camera.

Note: For full functionality, it is recommended to use Microsoft Internet Explorer[®]. When using non-IE browsers, free 3rd party software plug-ins may be required. Refer to the device Firmware Manual for more information.

Step 5: Log-in

1. On the Login page, type the Account and Password.

Default Account: admin Password: 123456

- 2. Select Language, if necessary.
- 3. Click Login.

The **Live View** screen appears.

4. Click to access the **Setup** menu to modify the Camera settings.





For more detailed instructions, please refer to the "Firmware Manual" downloadable from the website (<u>www.acti.com</u>).

ACTi Connecting Vision and its logo are registered trademarks of ACTi Corporation.

Microsoft® and Windows® are registered trademarks of Microsoft Corporation.

All other products or company names mentioned in this document are trademarks or registered trademarks of their respective owners.

Copyright © 2014, ACTi Corporation All Rights Reserved