



# REAL ARCADE Pro.V HAYABUSA

for Nintendo Switch™

## Instruction Manual

Thank you for purchasing this product. Before using this product please read the instructions carefully. After reading the instruction sheet, please keep it with you for reference.



Make sure that your Nintendo Switch™ is updated with the latest system software.

---

• Caution .....	2
• Included .....	2
• Platform .....	2
• Layout .....	3
• How to connect .....	3
• How to carry .....	3
• How to extract the cable .....	4
• Stick Control Toggle Switch .....	4
• Nintendo Switch™ / PC System Toggle Switch .....	4
• How to use the Turbo Functions .....	5
• How to change Turbo Speed .....	6
• Assign Mode .....	6
• Warranty .....	7

 
## Caution




Warning. Not suitable for children under 36 months. Small parts.

Please read carefully before using this product.  
Keep this product away from children.  
Do not drop or throw this controller.  
Do not pull roughly or bend the cable of the controller.  
Keep the controller away from dusty or humid areas.  
If product needs cleaning, use only a soft dry cloth.  
Do not use any chemical agents like benzine or thinner.

## Included

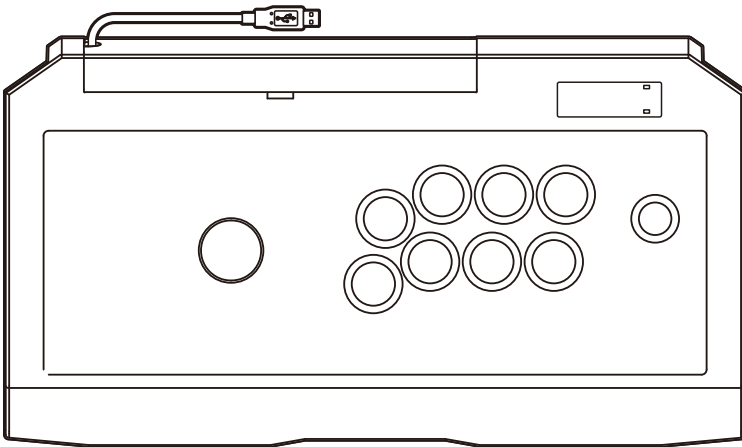

Controller x 1

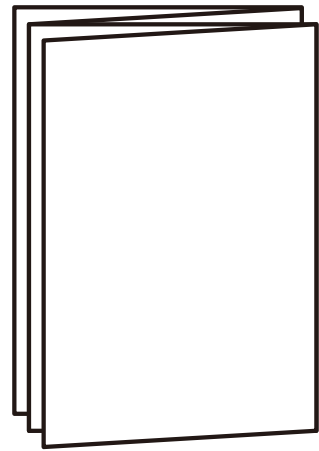 

Instruction manual x 1

## Platform

 
# Nintendo Switch™ / PC

System Requirements • Windows 10 / 8.1 / 8 / 7 • USB Port / Port USB

Functions as PC controller through XInput. ※ This product does not support analog input.

\*Make sure that your Nintendo Switch™ is updated with the latest system software.

# Layout

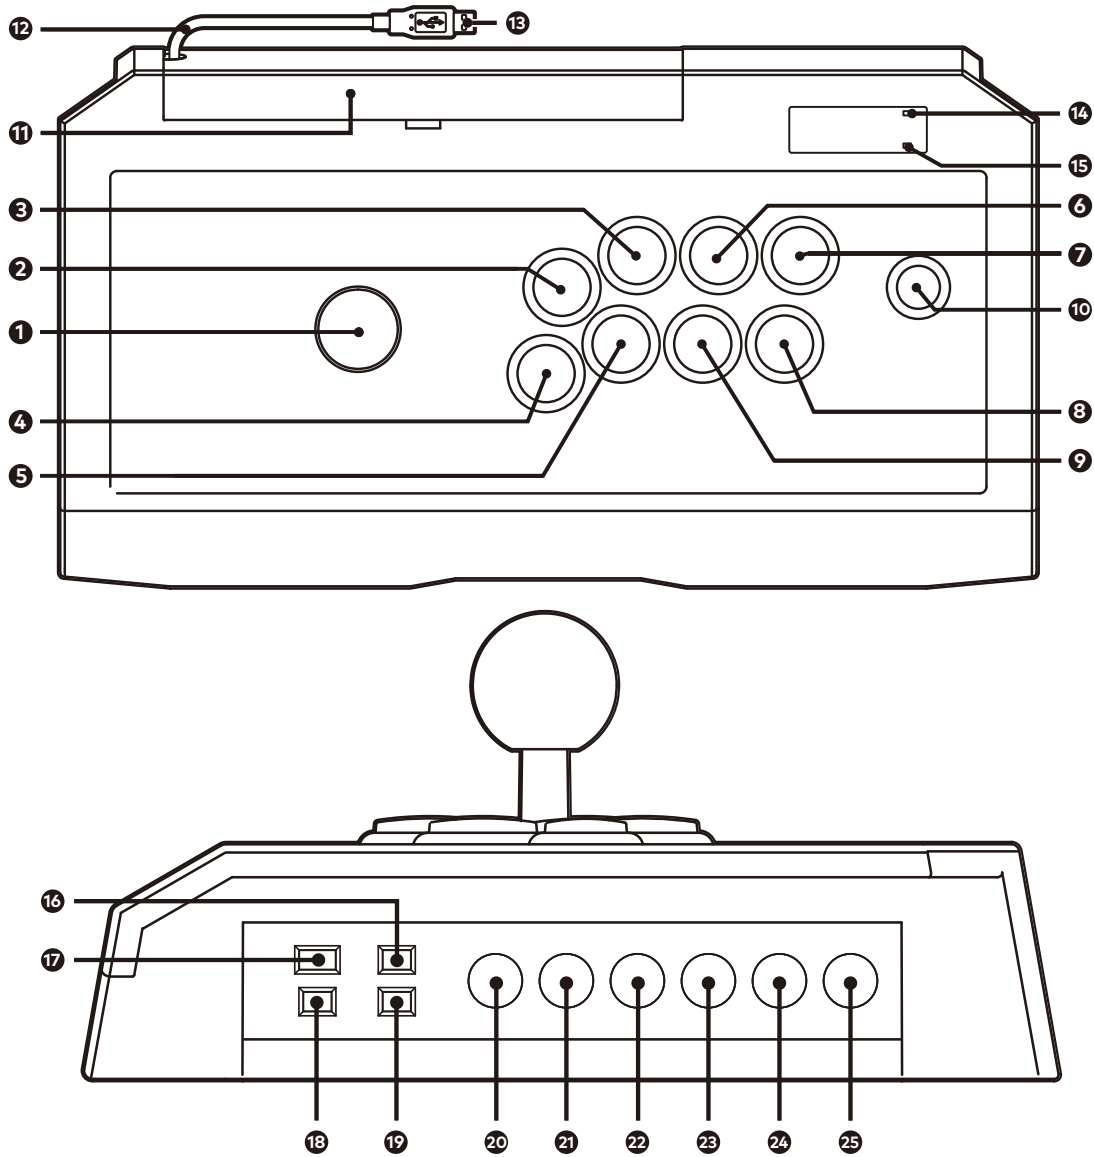

- |                     |             |                      |   |                       |
|---------------------|-------------|----------------------|---|-----------------------|
| 1 Direction buttons | 6 R Button  | 11 Cable storage box | 16 Assign Mode Switch                         | 21 - Button           |
| 2 Y Button          | 7 L Button  | 12 Controller cable  | 17 Stick Control Toggle Switch                | 22 Left Stick Button  |
| 3 X Button          | 8 ZL Button | 13 Connector         | 18 Nintendo Switch™ / PC System Toggle Switch | 23 Right Stick Button |
| 4 B Button          | 9 ZR Button | 14 Assign LED        | 19 Tournament mode switch                     | 24 Capture Button     |
| 5 A Button          | 10 + Button | 15 TURBO LED         | 20 TURBO Button                               | 25 HOME Button        |

## How to connect


Please insert the USB connector of the controller into the USB port of the Nintendo Switch™ Dock.




**Nintendo Switch™ Dock**

## How to carry

Hold as shown in the image.

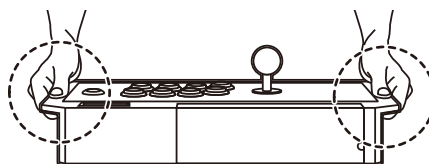

## How to extract the cable

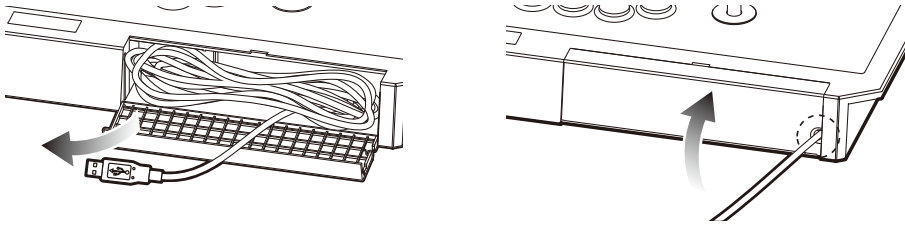

The controller cable is stored within the storage compartment found at the rear of the controller. Open the cable storage as shown in the image. Use of excessive force to open the cover will cause it to come off. Feed the controller cable through the hole as shown in the image and close the cover. Please follow these steps in reverse when placing the cable back in the storage box. Be careful not to get the controller cable caught when closing the cover.

## Stick Control Toggle Switch

Stick control can be toggled to left stick, right stick control, and Directional Button.

Directional Button



DP LS RS



Left stick



DP LS RS



Right stick



DP LS RS



This product's stick control toggle function is not guaranteed to work with all software.

\* Please refer to software's instruction book.

This product does not work with Analog mode.

## Nintendo Switch™ / PC System Toggle Switch

The Nintendo Switch™ / PC System Toggle Switch allows the product to be compatible with the Nintendo Switch™ / PC systems.

※ Please set the Nintendo Switch™ / PC System Toggle Switch to the desired system before connecting the product.

When connecting to the Nintendo Switch™ system

 


NS PC

When connecting to the PC system



NS PC

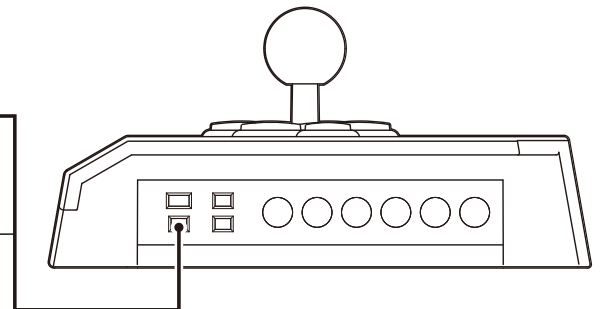

# How to use the Turbo Functions

The Turbo hold function allows continuous rapid fire without having to hold the button. (Pressing the assigned button deactivates this).

The following buttons can be set to Turbo or Turbo hold mode:

A / B / X / Y / L / R / ZL / ZR / Left Stick Button / Right Stick Button / + Button / Direction buttons (UP / DOWN / LEFT / RIGHT)

Direction buttons (UP, DOWN, LEFT or RIGHT) are not compatible with the Turbo hold mode, and can only be set to Turbo mode.

## Setting method

## Turbo Indicator

### Turbo Mode



Hold down the Turbo button and then press the button that you want to set to Turbo mode.



ON

Blinking

OFF



LED light

### Turbo Hold



Press the button once more, and the button will remain in Turbo (Turbo Hold).



ON

LED light

OFF




Blinking

### Turbo OFF



Pressing the button again once more will deactivate the Turbo function.

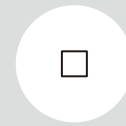

OFF

In the case that after deactivating the turbo function, the turbo Indicator LED does not turn off, this means that there is still a button set to Turbo/Turbo Hold.

### OFF (All buttons)



Hold the TURBO Button and press the SELECT Button



OFF

If you forget which buttons you have set to Turbo mode, deactivate them all and reassign, as you require.

The directional buttons up and down, or left and right cannot be assigned to TURBO hold simultaneously. When stick control toggle switch is assigned to Left stick or Right stick, TURBO • TURBO Hold feature cannot be assigned.

By pressing the HOME Button, all Turbo function and Turbo hold settings will be deactivated. When returning back to game play, you will need to reset the Turbo and Turbo Hold setting.

Turbo Function may not be compatible with all software titles. Please try adjusting the Turbo settings or simply turn OFF TURBO.

## How to change Turbo Speed

You can adjust the Turbo mode to 3 different speeds.



+



5 times/second → 12 times/second → 20 times/second



+



20 times/second → 12 times/second → 5 times/second

## Assign Mode

 
Remap up to 3 buttons to the L, ZL, and + Button or disable button functionality.

※The + button can be remapped to the TURBO button if a different button has been assigned to the + button.  
(A / B / X / Y / L / R / ZL / ZR / Left Stick Button / Right Stick Button / + Button)


1. Set Assign Mode Switch to A-ON.




2. Press the button to be remapped. (Select between L, LZ, + buttons.)



 3. Press up to 3 buttons simultaneously to be remapped.



4. Set Assign Mode Switch to A-OFF.

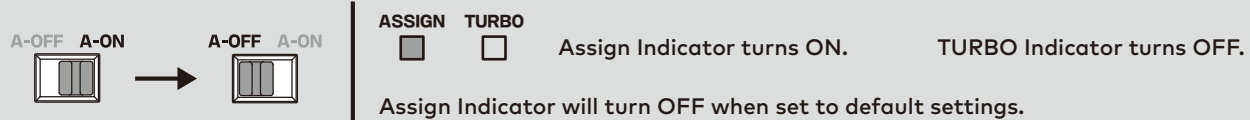

● How to reset all buttons to default.

Press the HOME button after performing Step 1.

● How to reset selected buttons to default.

Press and hold 1 button for 3 seconds after performing Step 2.

● How to turn OFF button functionality on a selected button.

Press and hold the TURBO button for 3 seconds after performing Step 2.

※The above step can be performed even if the + button has been assigned to the TURBO button.

The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.

### PRODUCT DISPOSAL INFORMATION

[Bin symbol as on the right] Where you see either symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in Europe.

To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

The wires are not to be inserted into socket-outlets.

The packaging must be retained since it contains important information.



### THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

### Warranty

HORI warrants to the original purchaser that the product purchased new in its original packaging shall be free of any defects in material and workmanship for a period of 90 days from the original date of purchase.

If the warranty claim cannot be processed through the original retailer

please address directly to HORI at [infous@hori.jp](mailto:infous@hori.jp). Please visit <http://stores.horiusa.com/policies/> for warranty details.

Please retain contact information for future reference.

The manufacturer reserves the right to change the product design or specifications without notice.

The image on the package may differ from the actual product.

HORI and HORI logo are registered trademarks of HORI.