

PURE

Evoked

D2



Pure Warranty Statement for Australia

This statement replaces any reference to warranty which may be contained elsewhere within this manual.

What do you need to do now?

Option 1: You can register your purchase on-line at <https://www.pure.com/au/register/register.asp>

Option 2: Or you can do nothing other than keep your proof of purchase as evidence of your purchase date. This proof of purchase would need to be presented if warranty service was ever required.

If you have any questions about your warranty you can call us toll free: 1800 988 268

What's covered by this warranty?

- Pure agrees to refund, repair or replace, at your election, without charge to you, any part found to be defective during the warranty period.
- If equipment has been used according to its accompanying instruction manual and is used in a domestic situation, a two year warranty period applies (excludes rechargeable ChargePAK where fitted. A one year warranty period applies to all ChargePAKs).

How do you make your claim?

Call 1800 988 268 for instructions on how to return your Pure product for warranty service or go to: <http://support.pure.com/au/> and complete the contact us form.

What's NOT covered by this warranty?

Under this express warranty Pure will not be liable for loss or damage of any kind whatsoever, whether direct, indirect, incidental, consequential or otherwise.

- Replacement of parts due to normal wear and tear.
- Products with serial number defacement, modification or removal.
- Water damage or corrosion caused by dampness.
- Any damage or deterioration due to shipments.
- Any damage or deterioration due to shipment.
- Any product which has been subjected to misuse, abuse or accident.


Australian consumers — The benefits to the consumer given by this express warranty are in addition to other rights and remedies of the consumer under a law in relation to the goods or services to which this warranty relates. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law, You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Pure is distributed and supported in Australia by PIONEER ELECTRONICS AUSTRALIA PTY LTD, 5 ARCO LANE, HEATHERTON, VICTORIA, 3202.

Evoke

D2

Thank you for choosing Evoke D2. This manual will help you get your product up and running in no time and explains how to get the best out of all its great features. If you need any further assistance, please visit the support pages on our website at www.pure.com.

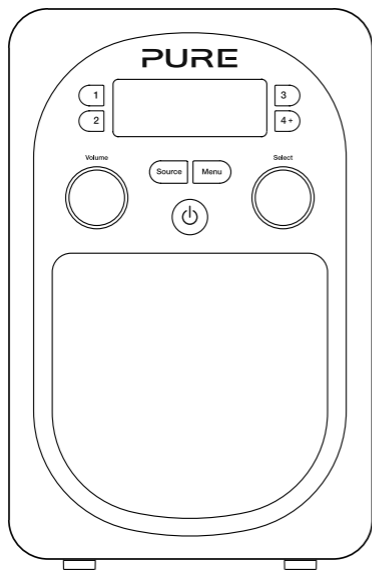

Safety information

1. Keep the unit away from heat sources such as radiators, heaters or other appliances that produce heat.
2. Do not expose the unit to direct sunlight.
3. Do not use the unit near water.
4. Avoid objects or liquids getting into the unit.
5. Do not remove screws from or open the unit casing.
6. Fit the mains adaptor to an easily accessible socket, located near the radio and ONLY use the mains power adapter supplied.
7. Should not be immersed in water, used in shower or bathroom if plugged into the mains.

ChargePAK B1 Safety Instructions

1. Read the instructions for ChargePAK use in this document.
2. Only use your ChargePAK with original Pure products.
3. Store ChargePAK in a cool, dry place at normal room temperature. Remove from devices that will be stored unused for extended periods.
4. Do not puncture, modify, drop, throw, or cause other unnecessary shocks to your ChargePAK. May present a risk of fire, explosion, or chemical burn if mistreated.
5. Do not dispose of ChargePAK in a fire or incinerator, or leave in hot places such as a motor car under direct sunlight. Do not store near oven, stove, or other heat source.
6. Do not connect ChargePAK directly to an electrical source, such as a building outlet or automobile power-point. Do not place into a microwave oven, or any other high-pressure container.
7. Do not immerse ChargePAK in water or otherwise expose it to liquids.
8. Do not short circuit ChargePAK.
9. Do not use or charge a ChargePAK that appears to be leaking, discoloured, rusty, deformed; emitting an odour; or is otherwise abnormal.
10. Do not touch a leaking ChargePAK directly; wear protective material to remove and dispose of it properly immediately.
11. Do not store where children may have access.
12. Dispose of ChargePAK as per normal rechargeable batteries according to the local laws and regulations of your region. Some batteries may be recycled, and may be accepted for disposal at your local recycling centre.



Damage to hearing can occur with consistent exposure to high volume when using headphones. Always check the volume level before inserting headphones into your ears.

Use of headphones while operating a vehicle is not recommended and is illegal in some areas. Stop listening to your Evoke if you find it distracting while operating any type of vehicle or performing any other activity that requires your full attention.

Contents

4 Getting started

- 4 Quick set up
- 5 Controls
- 6 Rear panel
- 7 Display

8 Using your Evoke

- 8 Selecting digital radio
- 8 Selecting FM radio
- 8 Pausing and controlling scrolling text

10 Storing and selecting presets

- 10 To quick-store a station to a preset button (1–3)
- 10 To store a station to the preset list (1–10)
- 10 To recall a preset when listening to digital radio or FM radio

11 Setting the alarm and sleep timer

- 11 Setting the alarm
- 12 Cancelling a sounding alarm
- 12 Snoozing a sounding alarm
- 12 Disabling an alarm
- 12 Setting the sleep timer

13 Options and settings

- 13 General settings
- 14 Digital radio settings
- 14 FM settings
- 15 Display settings
- 16 Clock settings
- 17 Audio settings

 
18 Installing the ChargePAK B1

19 Technical specifications


Getting started

Quick set up

Note: If you have a ChargePAK B1 rechargeable battery (sold separately) fit it now before plugging Evoke in. See page 18 for more information.

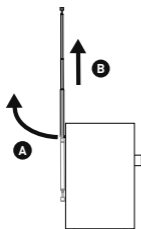

- 1 Unclip the aerial and fully extend it (steps **A** and **B**).

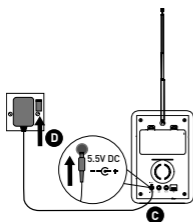


- 2 • Insert the jack of the supplied mains adapter into the socket on the rear of the radio (**C**).
- Plug the mains adapter into the mains supply (**D**).



- 3 Wait for the radio to complete an Autotune for all available stations. When the Autotune is complete, a station will be selected.


Note: By default, the menus on Evoke are displayed in English. To use another language (Italian, German, French or Spanish) see page 13.

Controls

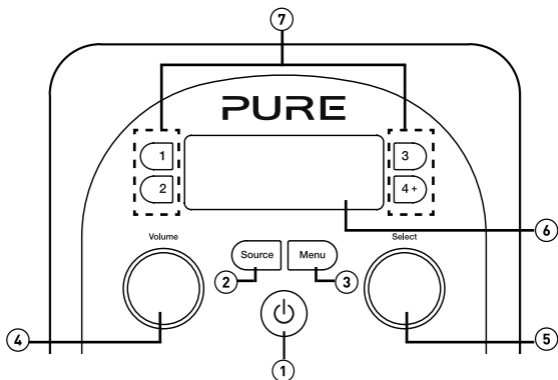


No.	Item	Description
1	Standby	On/standby switch (mains powered) or on/off switch (ChargePAK powered).
2	Source	Press to switch between Digital radio, FM radio and Auxiliary input.
3	Menu	Press to access setup options.
4	Volume	Turn to adjust volume. Push to mute and un-mute.
5	Select	Turn and press to browse and select radio stations (see page 8), select and adjust menu options or pause and control scrolling text (see page 8).
6	Display	See page 7 for more information on the display options.
7	Presets 1 - 4+	Store up to 10 digital or 10 FM radio preset stations

Rear panel

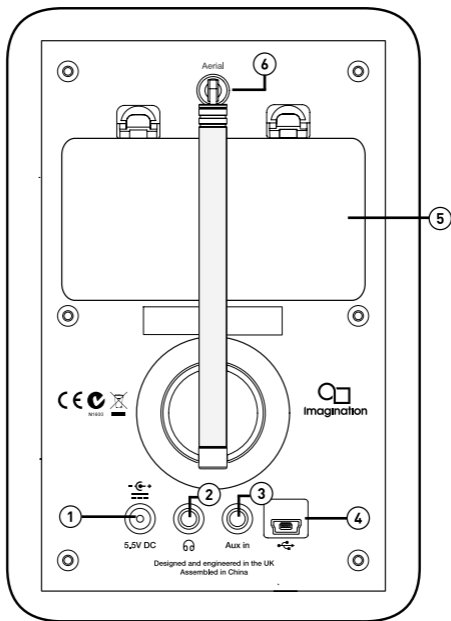

1. 5.5V DC input connection for supplied mains adapter.
2. 3.5mm stereo headphone socket.
3. 3.5mm auxiliary input connection for an iPod, MP3 player, etc.
4. Mini-B type USB connector for USB software updates.
5. Compartment for ChargePAK B1 rechargeable battery (sold separately).
6. Telescopic antenna.

Display

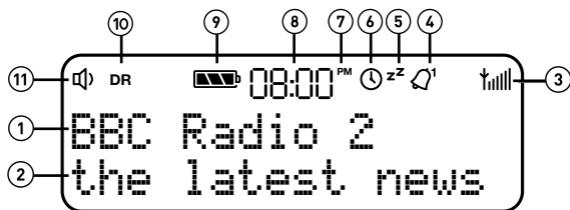

1. Displays station name.
2. Displays date, scrolling text, settings and station information (see page 15).
3. Signal strength.
4. Alarm set indicator (see page 11).
5. Alarm snooze indicator (see page 12).
6. Sleep and kitchen timer indicator (see page 12).
7. AM/PM indicator.
8. Current time.
9. ChargePAK indicator.
10. Source indicator.
11. Volume/mute indicator.

Using your Evoke

DR



Selecting digital radio

 
Press **Source** until 'DR' is displayed at the top of the screen.



Changing digital stations


1. Turn the **Select** dial to the station you want to listen to.
2. Push the **Select** dial to tune into the station.

FM




Selecting FM radio

 Press **Source** until 'FM' is displayed at the top of the screen.




Seek tuning

 Turn and release the **Select** dial right or left to seek to the next or previous FM radio station that has a strong signal.



Manual tuning

 1. Change the FM radio tuning mode to 'Manual' (see page 14).
2. Turn the **Select** dial right or left to step up or down 0.05 MHz.



Pausing and controlling scrolling text

1. When 'Scrolling text' information is displayed in either digital or FM radio, push the **Select** dial to pause the scrolling text.
2. Turn the **Select** dial to scroll forwards and backwards through the text. To exit push the **Select** dial again.



Using the auxiliary input


1. Connect the line out or headphone socket of your auxiliary device to the Aux In socket on your Evoke using a suitable cable.
2. Press **Source** until 'AUX' is displayed at the top of the screen.
3. The Auxiliary input screen will display and Evoke will play any audio that is playing on the auxiliary device.

Storing and selecting presets


Store up to 10 digital and 10 FM radio stations for quick access.



 
on 08:00 full
BBC Radio 2
the latest news




on 08:00 full
BBC Radio 2
Preset 2 saved

 

on 08:00 full
Empty Preset
*Preset 02 *

 

on 08:00 full
BBC Radio 2
*Preset 02 *

 

on 08:00 full
Preset Store
*1: BBC Radio *



on 08:00 full
BBC Radio 2
the latest news

To quick-store a station to a preset button (1–3)

Tune to the digital or FM radio station you want to store. Press and hold one of the numbered preset buttons (1–3) for two seconds to save the current station as a preset. You can save over existing presets.

To store a station to the preset list (1–10)

1. Tune to the digital radio or FM radio station you want to store.
2. Press and release the **4+** button to view the numerical list of stored presets, then turn the **Select** dial to choose any preset number between 1 and 10. You can overwrite existing presets.
3. Press and hold the **Select** dial until you see the 'Preset stored' message.

To recall a preset when listening to digital radio or FM radio

To tune to presets 1 to 3, press the corresponding numbered button on Evoke (1 to 3).

To access the full list of presets (from 1 to 10):

1. Press and release the **4+** button.
2. Turn the **Select** dial right or left to scroll through the list of presets and push the **Select** dial to tune to the selected preset.

 
Setting the alarm and sleep timer

The alarm in Evoke switches the radio on (if in standby) and tunes to a digital or FM radio station or sounds a tone.

Note: The alarm function does not work when Evoke is being powered by the ChargePAK B1.

Setting the alarm

1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Alarm'.



3. Turn and press the **Select** dial to choose 'On'.
4. Turn and press the **Select** dial to set the hour for the alarm. Repeat to set the minutes for the alarm.
5. Turn and press the **Select** dial to specify one of the following alarm repeat options: 'Once', 'Daily', 'Weekdays', 'Weekends', 'Every Saturday' or every 'Every Sunday' and press **Select** to confirm.
6. Turn and press the **Select** dial to specify 'FM', 'DAB' or 'Tone'. If you are specifying a tone alarm, skip to step 9.
7. Turn and press the **Select** dial to specify which station should be played when the alarm goes off. You have the option of selecting one of your preset stations or you can select 'Last Used' to select the station that you were last listening to.
8. Turn and press the **Select** dial to set the volume that the radio will play at when the alarm sounds.
9. The alarm icon will appear on the display to show that the alarm is set.



Canceling a sounding alarm

To cancel a sounding alarm, press either the **3**, **4+**, **Menu** or **Source** button, or push the **Select** dial. If you press the **Standby** button during a sounding alarm, Evoke will enter standby.

Snoozing a sounding alarm

 
To snooze a sounding alarm, press either the Preset number 1 or Preset number 2 button.

Disabling an alarm


1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Alarm'.
3. Turn and press the **Select** dial to choose 'Off'.
4. The alarm icon on the display will disappear.

Setting the sleep timer

The sleep timer can be set to switch Evoke off after a period of time.




1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Sleep timer'.
3. Turn and press the **Select** dial to set the timer for up to 90 minutes or choose **Sleep off** to cancel.
4. The sleep timer icon will appear on the display to show that the sleep timer is set.

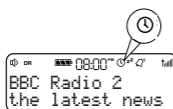


Options and settings

 General settings



Changing the language

 
1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Settings'.
3. Turn and press the **Select** dial to choose 'Language'.
4. Turn and press the **Select** dial to select a menu language from 'English', 'French', 'German', 'Italian' or 'Spanish'.



Factory reset

Resetting your Evoke removes all presets, stored stations, alarms and resets all other options to default settings.

 1. Press **Menu**.
2. Turn and press the **Select** dial to 'Settings'.
3. Turn and press the **Select** dial to 'Factory reset'.
4. Press the **Select** dial to confirm that you want to reset the Evoke to default settings.



Version

To display the software version:

1. Press **Menu**.
2. Turn and press the **Select** dial to 'Settings'.
3. Turn and press the **Select** dial to 'Version'.

Update

 
Contact Pure technical support (<http://support.pure.com>) for more information on how to update Evoke to the latest software version.

Digital radio settings

Autotune

You can use the autotune function to automatically scan for new digital radio stations and remove inactive ones.

Note: Autotune is only available when you have selected 'Digital' as the radio source.



To carry out an autotune:

1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Autotune'. The number of stations found will be displayed during the autotune.

 
When the autotune has finished, Evoke will tune to the last station that you were listening to.

FM settings

FM stereo option

You can choose between 'Stereo' or 'Mono' reception when listening to FM radio. You may want to choose Stereo if listening using headphones.

Note: The FM stereo option is only available when you have selected 'FM' as the radio source.




To change between Stereo or Mono reception:

1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'FM stereo'.
3. Turn and press the **Select** dial to choose between 'Stereo' or 'Mono' FM reception.

FM tuning mode

 Press **Menu** and turn and press the **Select** dial to choose 'FM Tuning Mode'. Choose from the following two modes:




Seek: When you turn the **Select** dial, the radio tunes to the next station with a good signal.

Manual: When you turn the **Select** dial, the radio tunes up or down the FM radio frequency range by 0.05 MHz.

Display settings


Backlight

 You can adjust the brightness and time-out duration of the backlight for when the unit is switched on and in standby.



To change the backlight options:

 1. Press **Menu** and turn and press the **Select** dial to choose 'Display settings'.
2. Now choose either 'Active' to change the settings that apply when the unit is switched on, or 'Standby' to change the settings that apply in standby.



Changing the backlight time-out duration

Press **Menu** and turn and press the **Select** dial to choose 'Duration'. Choose from the following two modes:

Always on: The backlight is always set to your preferred brightness level.

 
Timed off: The backlight is set to your preferred brightness level when a button is pressed and then switches off after 7 seconds of inactivity.

Changing your preferred brightness level

Press **Menu** and turn and press the **Select** dial to choose 'Level' and set a brightness level between 1 (dim) and 5 (bright).

Information

You can choose the information shown on the display.



1. Press **Menu** and turn and press the **Select** dial to choose 'Information'.
2. Turn and press the **Select** dial to choose one of the following options:

 
Scrolling text: Provided by the broadcaster.

Signal strength: The clear block indicates reliable reception level.

Date: Displays the current date.

Signal quality: (Digital radio only) From 0 (low) to 100 (high).

Clock settings




Setting the time and date

The time and date on Evoke are automatically set by the FM or digital radio signal. If the time/date does not update automatically, you can manually set it using this option.

Note: Any time or date updates received by an FM or a digital broadcast will override manual settings, if clock synchronisation is enabled (see the following page for more information).


Setting the time and date manually

 1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Clock'.
3. Turn and press the **Select** dial to choose 'Set Time/Date'.
4. Turn and press the **Select** dial to set the hour. Repeat to adjust the minutes.
5. Turn and press the **Select** dial to set the day of the month. Repeat to set the month and year.




Changing the time format

 1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Clock'.
3. Turn and press the **Select** dial to choose 'Set 12/24 hour'. Repeat to set the required time format.



Changing the date format

 1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Clock'.
3. Turn and press the **Select** dial to choose 'Set date format'. Repeat to set the required date format.



Clock synchronisation options

 
You can select the radio sources that you want to use for setting the time. By default, Evoke uses both the FM and digital radio signals to synchronise the time.

Turn and press the **Select** dial to specify the synchronisation options:

1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Clock'.
3. Turn and press the **Select** dial to choose 'Clock synch'.
4. Turn and press the **Select** dial to choose the required clock synchronisation option and press **Select**.

Audio settings


To adjust the bass and treble settings:




1. Press **Menu**.
2. Turn and press the **Select** dial to choose 'Audio'.
3. Turn and press the **Select** dial to choose 'Bass' or 'Treble'.
4. Turn and press the **Select** dial to set the level from -6 (low) to 6 (high).

Installing the ChargePAK B1


2

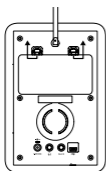


3

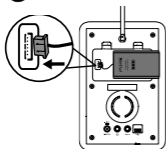

4

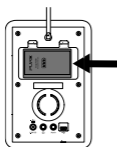


5

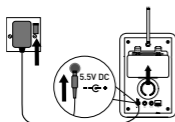

1. Switch Evoke off and disconnect from the mains power supply.
2. Open the battery compartment.
3. Insert the ChargePAK connector plug into the socket in the compartment. Line up the ridges on the plug with the slots in the socket to ensure correct orientation. Do not force the plug.
4. Insert ChargePAK into the battery compartment, logo side out.
5. Replace the battery cover and connect Evoke to the mains.
6. ChargePAK will begin charging.

Note: When charging your ChargePAK for the first time or after an extended period of inactivity it is recommended that it is charged for around 24 hours to ensure full battery power. If ChargePAK is in a highly discharged state there may be a slight delay before the battery charging indicator is displayed.

Technical specifications

Radio	Digital and FM, UK products receive DAB and FM; non-UK products receive DAB/DAB+/DMB-Radio/FM depending on region.
Audio	1.6W RMS. Full-range 3" drive unit.
Input Connectors	5.5V DC power adaptor socket (230V supplied), Mini USB connector for product updates, 3.5mm Line-in for auxiliary devices
Output Connectors	3.5mm stereo headphone socket.
Power	230V AC to 5.5V (1.0A) DC external power adapter or optional ChargePAK B1.
Power Consumption	Standby: 0.7W, Active: 1.9W.
Dimensions	115 mm wide x 180 mm high x 120 mm deep
Approvals	 CE marked. Compliant with the EMC and Low Voltage Directives (2004/108/EC and 2006/95/EC) ETSI EN 300 401 compliant. Australian C-Tick N1600 and Electrical Safety.

Warranty information

Imagination Technologies Limited warrants to the end user that this product will be free from defects in materials and workmanship in the course of normal use for a period of two years from the date of purchase. This guarantee covers breakdowns due to manufacturing or design faults; it does not apply in cases such as accidental damage, however caused, wear and tear, negligence, adjustment, modification or repair not authorised by us. Should you have a problem with your unit please contact your supplier or contact Pure Support at <http://support.pure.com>.

Disclaimer

Imagination Technologies Limited makes no representation or warranties with respect to the content of this document and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Imagination Technologies Limited reserves the right to revise this publication and to make changes in it from time to time without obligation of Imagination Technologies Limited to notify any person or organization of such revisions or changes.

Trademarks

Evoke D2, ChargePAK, Pure, the Pure logo, Imagination Technologies, and the Imagination Technologies logo are trademarks or registered trademarks of Imagination Technologies Limited.

Copyright

Copyright © 2013 Imagination Technologies Limited. All rights reserved. No part of this publication may be copied or distributed, transmitted, transcribed, stored in a retrieval system, or translated into any human or computer language, in any form or by any means, electronic, mechanical, magnetic, manual or otherwise, or disclosed to third parties without the express written permission of Imagination Technologies Limited. Version 1 April 2013.

Disposal of Waste Electrical & Electronic Equipment



This symbol on the product or on its packaging indicates that this product should not be treated as household waste. Instead it should be handed over to a suitable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

PURE

www.pure.com

connect.pure.com

www.facebook.com/pure

Pure

Imagination Technologies Limited
Home Park Estate
Kings Langley
Herts, WD4 8LZ
United Kingdom
<http://support.pure.com>

Pure Australasia Pty Ltd

PO Box 5049
Wonga Park
Victoria 3115
Australia
sales.au@pure.com
<http://support.pure.com/au>