

ideapad Y700-15 17 Series Hardware Maintenance Manual

Notes:

- Before using this information and the product it supports, be sure to read the general information under “Notices” on page 88.
- This manual applies to the following models: Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK. The illustrations used in this manual are for Lenovo ideapad Y700-15ACZ, unless otherwise stated.

First Edition (September 2015)

© Copyright Lenovo 2015. All rights reserved.

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant a General Services Administration “GSA” contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

© 2015 Lenovo

Contents

About this manual	iv		
Safety information	1		
General safety	2		
Electrical safety	3		
Safety inspection guide	5		
Handling devices that are sensitive to electrostatic discharge	6		
Grounding requirements	6		
Safety notices: multilingual translations	7		
Laser compliance statement	14		
Important service information	16		
Strategy for replacing FRUs	16		
Strategy for replacing a hard disk drive	17		
Important notice for replacing a system board	17		
Important information about replacing RoHS compliant FRUs	18		
General checkout	19		
What to do first	20		
Power system checkout	21		
Checking the AC adapter	21		
Checking operational charging	22		
Checking the battery pack	22		
Related service information	23		
Restoring the factory contents by using OneKey Recovery	23		
Restore of factory default	23		
Passwords	24		
Power-on password	24		
Hard-disk password	24		
Administrator password	24		
Power management	25		
Screen blank state	25		
Putting the computer to sleep or shutting it down	25		
Putting your computer to sleep	25		
Shutting down the computer	25		
Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK	26		
Specifications	26		
Status indicators	28		
Fn key combinations	30		
FRU replacement notices	31		
Screw notices	31		
Removing and replacing an FRU	32		
1010 Base cover	33		
1020 Battery pack	38		
1030 Solid state disk and hard disk drive	40		
		1040 PCI Express Mini Card for wireless LAN	43
		1050 DIMM	45
		1060 LED board	46
		1070 Subwoofer	47
		1080 USB board	48
		1090 Fan assembly and Heat Sink assembly	50
		1100 System board	52
		1110 Upper case	55
		1120 Speakers	58
		1130 RTC battery and DC-in cable	59
		1140 LCD unit	61
		Locations	71
		Front and right-side view	71
		Bottom and left-side view	72
		Parts list	73
		Overall	74
		LCD FRUs	80
		Miscellaneous parts	84
		AC adapters	84
		Screws	84
		Power cords	85
		Notices	88
		Trademarks	89

About this manual

This manual contains service and reference information for the following Lenovo product:

Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK

Use this manual to troubleshoot problems.

The manual is divided into the following sections:

- The common sections provide general information, guidelines, and safety information required for servicing computers.
- The product-specific section includes service, reference, and product-specific parts information.

Important:

This manual is intended only for trained servicers who are familiar with Lenovo products. Use this manual to troubleshoot problems effectively.

Before servicing a Lenovo product, make sure to read all the information under “Safety information” on page 1 and “Important service information” on page 16.

Safety information

This chapter presents the following safety information that you need to get familiar with before you service a Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK computer:

- “General safety” on page 2
- “Electrical safety” on page 3
- “Safety inspection guide” on page 5
- “Handling devices that are sensitive to electrostatic discharge” on page 6
- “Grounding requirements” on page 6
- “Safety notices: multilingual translations” on page 7
- “Laser compliance statement” on page 14

General safety

Follow these rules below to ensure general safety:

- Observe a good housekeeping in the area where the machines are put during and after the maintenance.
- When lifting any heavy object:
 1. Make sure that you can stand safely without slipping.
 2. Distribute the weight of the object equally between your feet.
 3. Use a slow lifting force. Never move suddenly or twist when you attempt to lift it.
 4. Lift it by standing or pushing up with your leg muscles; this action could avoid the strain from the muscles in your back. Do not attempt to lift any object that weighs more than 16 kg (35 lb) or that you think is too heavy for you.
- Do not perform any action that causes hazards to the customer, or that makes the machine unsafe.
- Before you start the machine, make sure that other service representatives and the customer are not in a hazardous position.
- Please remove covers and other parts in a safe place, away from all personnel, while you are servicing the machine.
- Keep your toolcase away from walk areas so that other people will not trip over it.
- Do not wear loose clothing that can be trapped in the moving parts of the machine. Make sure that your sleeves are fastened or rolled up above your elbows. If your hair is long, fasten it.
- Insert the ends of your necktie or scarf inside clothing or fasten it with the nonconductive clip, about 8 centimeters (3 inches) from the end.
- Do not wear jewelry, chains, metal-frame eyeglasses, or metal fasteners for your clothing.

Attention: Metal objects are good electrical conductors.
- Wear safety glasses when you are hammering, drilling, soldering, cutting wire, attaching springs, using solvents, or working in any other conditions that may be hazardous to your eyes.
- After service, reinstall all safety shields, guards, labels, and ground wires. Replace any safety device that is worn or defective.
- Reinstall all covers correctly before returning the machine to the customer.
- Fan louvers on the machine help to prevent the overheating of internal components. Do not obstruct fan louvers or cover them with labels or stickers.

Electrical safety

Observe the following rules when working on electrical equipments.

Important:

Use only approved tools and test equipments. Some hand tools have handles covered with a soft material that does not insulate you when working with live electrical currents.

Many customers have rubber floor mats near their machines that contain small conductive fibers to decrease electrostatic discharges. Do not use such kind of mat to protect yourself from electrical shock.

- Find the room emergency power-off (EPO) switch, disconnecting switch or electrical outlet. If an electrical accident occurs, you can then operate the switch or unplug the power cord quickly.
- Do not work alone under hazardous conditions or near the equipment that has hazardous voltages.
- Disconnect all power before:
 - Performing a mechanical inspection
 - Working near power supplies
 - Removing or installing main units
- Before you start to work on the machine, unplug the power cord. If you cannot unplug it, ask the customer to power-off the wall box that supplies power to the machine, and to lock the wall box in the off position.
- If you need to work on a machine that has exposed electrical circuits, observe the following precautions:
 - Ensure that another person, familiar with the power-off controls, is near you.

Attention: Another person must be there to switch off the power, if necessary.
 - Use only one hand when working with powered-on electrical equipment; keep the other hand in your pocket or behind your back.

Attention: An electrical shock can occur only when there is a complete circuit. By observing the above rule, you may prevent a current from passing through your body.
 - When using testers, set the controls correctly and use the approved probe leads and accessories for that tester.
 - Stand on suitable rubber mats (obtained locally, if necessary) to insulate you from grounds such as metal floor strips and machine frames.

Observe the special safety precautions when you work with very high voltages; instructions for these precautions are in the safety sections of maintenance information. Be extremely careful when you measure the high voltages.

- Regularly inspect and maintain your electrical hand tools for safe operational condition.
- Do not use worn or broken tools and testers.
- Never assume that power has been disconnected from a circuit. First, check it to make sure that it has been powered off.



ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

- Always look carefully for possible hazards in your work area. Examples of these hazards are moist floors, nongrounded power extension cables, power surges, and missing safety grounds.
- Do not touch live electrical circuits with the reflective surface of a plastic dental mirror. The surface is conductive; such touching can cause personal injury and machine damage.
- Do not service the following parts with the power on when they are removed from their normal operating places in a machine:
 - Power supply units
 - Pumps
 - Blowers and fans
 - Motor generatorsand similar units. (This practice ensures correct grounding of the units.)
- If an electrical accident occurs:
 - Caution: do not become a victim yourself.
 - Switch off the power.
 - Send the victim to get medical aid.

Safety inspection guide

The purpose of this inspection guide is to assist you in identifying potential unsafe conditions. As each machine was designed and built, required safety items were installed to protect users and service personnel from injury. This guide addresses only those items. You should use good judgment to identify potential safety hazards according to the attachment of non-Lenovo features or options not covered by this inspection guide.

If any unsafe conditions are present, you must determine how serious the apparent hazard could be and whether you can continue without first correcting the problem.

Consider these conditions and the safety hazards they present:

- Electrical hazards, especially primary power (primary voltage on the frame can cause serious or fatal electrical shock)
- Explosive hazards, such as a damaged CRT face or a bulging capacitor
- Mechanical hazards, such as loose or missing hardware

To determine whether there are any potential unsafe conditions, use the following checklist at the beginning of every service task. Begin the checks with the power off, and the power cord disconnected.

Checklist:

1. Check exterior covers for damage (loose, broken, or sharp edges).
2. Turn off the computer. Disconnect the power cord.
3. Check the power cord for:
 - a. A third-wire ground connector in good condition. Use a meter to measure third-wire ground continuity for 0.1 ohm or less between the external ground pin and the frame ground.
 - b. The power cord should be the type specified in the parts list.
 - c. Insulation must not be frayed or worn.
4. Check for cracked or bulging batteries.
5. Remove the cover.
6. Check for any obvious non-Lenovo alterations. Use good judgment as to the safety of any non-Lenovo alterations.
7. Check inside the unit for any obvious unsafe conditions, such as metal filings, contamination, water or other liquids, or signs of fire or smoke damage.
8. Check for worn, frayed, or pinched cables.
9. Check that the power-supply cover fasteners (screws or rivets) have not been removed or tampered with.

Handling devices that are sensitive to electrostatic discharge

Any computer part containing transistors or integrated circuits (ICs) should be considered sensitive to electrostatic discharge (ESD). ESD damage can occur when there is a difference in charge between objects. Protect against ESD damage by equalizing the charge so that the machine, the part, the work mat, and the person handling the part are all at the same charge.

Notes:

1. Use product-specific ESD procedures when they exceed the requirements noted here.
2. Make sure that the ESD protective devices you use have been certified (ISO 9000) as fully effective.

When handling ESD-sensitive parts:

- Keep the parts in protective packages until they are inserted into the product.
- Avoid contact with other people.
- Wear a grounded wrist strap against your skin to eliminate static on your body.
- Prevent the part from touching your clothing. Most clothing is insulative and retains a charge even when you are wearing a wrist strap.
- Use the black side of a grounded work mat to provide a static-free work surface. The mat is especially useful when handling ESD-sensitive devices.
- Select a grounding system, such as those listed below, to provide protection that meets the specific service requirement.

Note:

The use of a grounding system to guard against ESD damage is desirable but not necessary.

- Attach the ESD ground clip to any frame ground, ground braid, or green-wire ground.
- When working on a double-insulated or battery-operated system, use an ESD common ground or reference point. You can use coax or connector-outside shells on these systems.
- Use the round ground prong of the ac plug on ac-operated computers.

Grounding requirements

Electrical grounding of the computer is required for operator safety and correct system function. Proper grounding of the electrical outlet can be verified by a certified electrician.

Safety notices: multilingual translations

The safety notices in this section are provided in English, French, German, Hebrew, Italian, Japanese, and Spanish.

Safety notice 1

Before the computer is powered on after FRU replacement, make sure all screws, springs, and other small parts are in place and are not left loose inside the computer. Verify this by shaking the computer and listening for rattling sounds. Metallic parts or metal flakes can cause electrical shorts.

Avant de remettre l'ordinateur sous tension après remplacement d'une unité en clientèle, vérifiez que tous les ressorts, vis et autres pièces sont bien en place et bien fixées. Pour ce faire, secouez l'unité et assurez-vous qu'aucun bruit suspect ne se produit. Des pièces métalliques ou des copeaux de métal pourraient causer un court-circuit.

Bevor nach einem FRU-Austausch der Computer wieder angeschlossen wird, muß sichergestellt werden, daß keine Schrauben, Federn oder andere Kleinteile fehlen oder im Gehäuse vergessen wurden. Der Computer muß geschüttelt und auf Klappergeräusche geprüft werden. Metallteile oder-splitter können Kurzschlüsse erzeugen.

לפני הפעלת המחשב לאחר החלפת FRU יש לוודא שכל הברגים, הקפיצים, וחלקים קטנים אחרים נמצאים במקומם ואינם חופשיים לזוז בתוך המחשב. כדי לוודא זאת, יש לטלטל את המחשב ולהקשיב לגילוי קולות שקשוק. חלקי או שבבי מתכת עלולים לגרום לקצרים חשמליים.

Prima di accendere l'elaboratore dopo che é stata effettuata la sostituzione di una FRU, accertarsi che tutte le viti, le molle e tutte le altri parti di piccole dimensioni siano nella corretta posizione e non siano sparse all'interno dell'elaboratore. Verificare ciò scuotendo l'elaboratore e prestando attenzione ad eventuali rumori; eventuali parti o pezzetti metallici possono provocare cortocircuiti pericolosi.

FRUの交換後、コンピュータの電源を入れる前に、ねじ、バネ、その他の小さな部品がすべて正しい位置にあり、またコンピュータの内部で緩んでいないことを確認してください。これを確認するには、コンピュータを振って、カチャカチャと音がしないか確かめます。金属部品や金属破片はショートの原因になることがあります。

Antes de encender el sistema despues de sustituir una FRU, compruebe que todos los tornillos, muelles y demás piezas pequeñas se encuentran en su sitio y no se encuentran sueltas dentro del sistema. Compruébelo agitando el sistema y escuchando los posibles ruidos que provocarían. Las piezas metálicas pueden causar cortocircuitos eléctricos.

Safety notice 2

⚠ DANGER

Some standby batteries contain a small amount of nickel and cadmium. Do not disassemble a standby battery, recharge it, throw it into fire or water, or short-circuit it. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

Certaines batteries de secours contiennent du nickel et du cadmium. Ne les démontez pas, ne les rechargez pas, ne les exposez ni au feu ni à l'eau. Ne les mettez pas en court-circuit. Pour les mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la pile de sauvegarde ou celle de l'horloge temps réel, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. Une batterie ou une pile inappropriée risque de prendre feu ou d'exploser.

Die Bereitschaftsbatterie, die sich unter dem Diskettenlaufwerk befindet, kann geringe Mengen Nickel und Cadmium enthalten. Sie darf nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Bereitschafts- oder Systembatterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללות המתנה מסוימות מכילות כמות קטנה של ניקל וקדמיום. אין לפקד, לשלוק או לזרוק אותה באש או למים או לקצר אותה. יש לשלוק את הסוללה כנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה. שימוש בסוללה לא מתאימה עלול לגרום להצתה או התפוצצות של הסוללה.

Alcune batterie di riserva contengono una piccola quantità di nichel e cadmio. Non smontarle, ricaricarle, gettarle nel fuoco o nell'acqua né cortocircuitarle. Smaltirle secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria dell'RTC (real time clock) o la batteria di supporto, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

予備バッテリーの中には少量のニッケルとカドミウムが含まれているものがあります。したがって、予備バッテリーの分解、再充電、火または水の中への投棄、またはショートさせることは決して行わないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Algunas baterías de reserva contienen una pequeña cantidad de níquel y cadmio. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 3**⚠ DANGER**

The battery pack contains small amounts of nickel. Do not disassemble it, throw it into fire or water, or short-circuit it. Dispose of the battery pack as required by local ordinances or regulations. Use only the battery in the appropriate parts listing when replacing the battery pack. Use of an incorrect battery can result in ignition or explosion of the battery.

La batterie contient du nickel. Ne la démontez pas, ne l'exposez ni au feu ni à l'eau. Ne la mettez pas en court-circuit. Pour la mettre au rebut, conformez-vous à la réglementation en vigueur. Lorsque vous remplacez la batterie, veillez à n'utiliser que les modèles cités dans la liste de pièces détachées adéquate. En effet, une batterie inappropriée risque de prendre feu ou d'exploser.

Akkus enthalten geringe Mengen von Nickel. Sie dürfen nicht zerlegt, wiederaufgeladen, kurzgeschlossen, oder Feuer oder Wasser ausgesetzt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

מארוז הסוללה מכיל כמות קטנה של ניקל וקדמיום. אין לפרק את מארוז הסוללה, להשליך אותו לאש או למים או לקצר אותו. יש לסלק את מארוז הסוללה הסוללה כנדרש על ידי התקנות והחוקים המקומיים. יש להשתמש רק בסוללה המופיעה ברשימת החלקים המתאימה בזמן החלפת מארוז הסוללה. שימוש בסוללה לא מתאימה עלול לגרום לתוצאה או התפוצצות של הסוללה.

La batteria contiene piccole quantità di nichel. Non smontarla, gettarla nel fuoco o nell'acqua né cortocircuitarla. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). Quando si sostituisce la batteria, utilizzare soltanto i tipi inseriti nell'appropriato Catalogo parti. L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

バッテリー・パックには少量のニッケルが含まれています。バッテリー・パックを分解したり、火または水の中に投げ込んだり、ショートさせないでください。バッテリー・パックの廃棄にあたっては、地方自治体の条例または規則に従ってください。バッテリー・パックを交換するときは、適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

Las baterías contienen pequeñas cantidades de níquel. No las desmonte, ni recargue, ni las eche al fuego o al agua ni las cortocircuite. Deséchelas tal como dispone la normativa local. Utilice sólo baterías que se encuentren en la lista de piezas al sustituir la batería. La utilización de una batería no apropiada puede provocar la ignición o explosión de la misma.

Safety notice 4

⚠ DANGER

The lithium battery can cause a fire, an explosion, or a severe burn. Do not recharge it, remove its polarized connector, disassemble it, heat it above 100°C (212°F), incinerate it, or expose its cell contents to water. Dispose of the battery as required by local ordinances or regulations. Use only the battery in the appropriate parts listing. Use of an incorrect battery can result in ignition or explosion of the battery.

La pile de sauvegarde contient du lithium. Elle présente des risques d'incendie, d'explosion ou de brûlures graves. Ne la rechargez pas, ne retirez pas son connecteur polarisé et ne la démontez pas. Ne l'exposez pas à une température supérieure à 100°C, ne la faites pas brûler et n'en exposez pas le contenu à l'eau. Mettez la pile au rebut conformément à la réglementation en vigueur. Une pile inappropriée risque de prendre feu ou d'exploser.

Die Systematterie ist eine Lithiumatterie. Sie kann sich entzünden, explodieren oder schwere Verbrennungen hervorrufen. Batterien dieses Typs dürfen nicht aufgeladen, zerlegt, über 100 °C erhitzt oder verbrannt werden. Auch darf ihr Inhalt nicht mit Wasser in Verbindung gebracht oder der zur richtigen Polung angebrachte Verbindungsstecker entfernt werden. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Beim Ersetzen der Batterie nur Batterien des Typs verwenden, der in der Ersatzteilliste aufgeführt ist. Der Einsatz falscher Batterien kann zu Entzündung oder Explosion führen.

סוללת הליתיום עלולה לגרום לשריפה, להתפוצצות או לכוויות קשות. אין לטעון אותה מחדש, לשלוק את המחבר המקושר שלה, לפרק אותה או לחמם אותה בטמפרטורה העולה על 100 מעלות צלזיוס. אין לשרוף את הסוללה ואין לחשוף את תוכן התא למים. יש לשלוק את הסוללה כנדרש בתקנות ובחוקים המקומיים. יש להשתמש רק בסוללה המומינה ברשימת החלקים המתאימים. שימוש בסוללה אחרת עלול לגרום לשריפה או התפוצצות.

La batteria di supporto è una batteria al litio e può incendiarsi, esplodere o procurare gravi ustioni. Evitare di ricaricarla, smontarne il connettore polarizzato, smontarla, riscaldarla ad una temperatura superiore ai 100 gradi centigradi, incendiarla o gettarla in acqua. Smaltirla secondo la normativa in vigore (DPR 915/82, successive disposizioni e disposizioni locali). L'impiego di una batteria non adatta potrebbe determinare l'incendio o l'esplosione della batteria stessa.

リチウム・バッテリーは、火災、爆発、または重症のやけどを引き起こすことがあります。バックアップ・バッテリーの充電、その極性コネクタの取り外し、バッテリー本体の分解、100℃(212°F)以上の加熱、焼却、電池の中身を水に浸すことはしないでください。バッテリーを廃棄する場合は地方自治体の条例に従ってください。適切なパーツ・リストにあるバッテリーだけを使用してください。誤ったバッテリーを使用すると、バッテリーが発火したり、爆発したりすることがあります。

La batería de repuesto es una batería de litio y puede provocar incendios, explosiones o quemaduras graves. No la recargue, ni quite el conector polarizado, ni la desmonte, ni caliente por encima de los 100°C (212°F), ni la incinere ni exponga el contenido de sus celdas al agua. Deséchela tal como dispone la normativa local.

Safety notice 5

If the LCD breaks and the fluid from inside the LCD gets into your eyes or on your hands, immediately wash the affected areas with water at least for 15 minutes. Seek medical care if any symptoms caused by the fluid are present after washing.

Si le panneau d'affichage à cristaux liquides se brise et que vous recevez dans les yeux ou sur les mains une partie du fluide, rincez-les abondamment pendant au moins quinze minutes. Consultez un médecin si des symptômes persistent après le lavage.

Die Leuchtstoffröhre im LCD-Bildschirm enthält Quecksilber. Bei der Entsorgung die örtlichen Bestimmungen für Sondermüll beachten. Der LCD-Bildschirm besteht aus Glas und kann zerbrechen, wenn er unsachgemäß behandelt wird oder der Computer auf den Boden fällt. Wenn der Bildschirm beschädigt ist und die darin befindliche Flüssigkeit in Kontakt mit Haut und Augen gerät, sollten die betroffenen Stellen mindestens 15 Minuten mit Wasser abgespült und bei Beschwerden anschließend ein Arzt aufgesucht werden.

אם מסך הנביש הנוזלי (LCD) נשבר והנוזל מתוך המסך בא במגע עם עיניים או ידיים, שטפו את האזורים הנגועים מיד במים במשך 15 דקות לפחות. פנו לקבלת עזרה רפואית אם תסמינים הנובעים מהמגע עם הנוזל נמשכים לאחר השטיפה.

Nel caso che caso l'LCD si dovesse rompere ed il liquido in esso contenuto entrasse in contatto con gli occhi o le mani, lavare immediatamente le parti interessate con acqua corrente per almeno 15 minuti; poi consultare un medico se i sintomi dovessero permanere.

LCD が破損し、LCD 中の液体が目に入ったり、手に触れたりした場合は、液体が触れた部分を少なくとも 15 分間洗い流してください。洗い流した後に、液体によって何らかの症状が現れた場合は、医師の治療を受けてください。

Si la LCD se rompe y el fluido de su interior entra en contacto con sus ojos o sus manos, lave inmediatamente las áreas afectadas con agua durante 15 minutos como mínimo. Obtenga atención medica si se presenta algún síntoma del fluido despues de lavarse.

Safety notice 6

⚠ DANGER

To avoid shock, do not remove the plastic cover that protects the lower part of the inverter card.

Afin d'éviter tout risque de choc électrique, ne retirez pas le cache en plastique protégeant la partie inférieure de la carte d'alimentation.

Aus Sicherheitsgründen die Kunststoffabdeckung, die den unteren Teil der Spannungswandlerplatine umgibt, nicht entfernen.

כדי למנוע התחשמלות, אין להסיר את מכסה הפלסטיק המגן על חלקו התחתון של הכרטיס ההפוך.

Per evitare scosse elettriche, non rimuovere la copertura in plastica che avvolge la parte inferiore della scheda invertitore.

感電を防ぐため、インバーター・カードの下部を保護しているプラスチック・カバーを外さないでください。

Para evitar descargas, no quite la cubierta de plástico que rodea la parte baja de la tarjeta invertida.

Safety notice 7

⚠ DANGER

Though the main batteries have low voltage, a shorted or grounded battery can produce enough current to burn personnel or combustible materials.

Bien que le voltage des batteries principales soit peu élevé, le court-circuit ou la mise à la masse d'une batterie peut produire suffisamment de courant pour brûler des matériaux combustibles ou causer des brûlures corporelles graves.

Obwohl Hauptbatterien eine niedrige Spannung haben, können sie doch bei Kurzschluß oder Erdung genug Strom abgeben, um brennbare Materialien zu entzünden oder Verletzungen bei Personen hervorzurufen.

אף שהסוללות הראשיות הן בעלות מתח נמוך, סוללה מקוצרת או מוארזת עלולה להפיק זרם מספיק לגרימת כוויות או להצתת חומרים דליקים.

Sebbene le batterie di alimentazione siano a basso voltaggio, una batteria in corto circuito o a massa può fornire corrente sufficiente da bruciare materiali combustibili o provocare ustioni ai tecnici di manutenzione.

メイン・バッテリーの電圧は低くても、ショートしたり、接地したバッテリーが、作業者にやけどを負わせたり、可燃物を燃やすだけの電流を発生させる場合があります。

Aunque las baterías principales tienen un voltaje bajo, una batería cortocircuitada o con contacto a tierra puede producir la corriente suficiente como para quemar material combustible o provocar quemaduras en el personal.

Safety notice 8

DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any interconnecting cables.

Avant de retirer une unité remplaçable en clientèle, mettez le système hors tension, débranchez tous les cordons d'alimentation des socles de prise de courant, retirez la batterie et déconnectez tous les cordons d'interface.

Die Stromzufuhr muß abgeschaltet, alle Stromkabel aus der Steckdose gezogen, der Akku entfernt und alle Verbindungskabel abgenommen sein, bevor eine FRU entfernt wird.

לפני סילוק FRU כלשהו, יש לכבות את המחשב,
לנתק את כל כבלי החשמל משקעי החשמל, להוציא
את מארז הסוללה, ואז לנתק כבלי חיבור אחרים
אם יש כאלה.

Prima di rimuovere qualsiasi FRU, spegnere il sistema, scollegare dalle prese elettriche tutti i cavi di alimentazione, rimuovere la batteria e poi scollegare i cavi di interconnessione.

FRU を取り外す前に、ThinkPad の電源を切って、すべての電源コードをコンセントから外してください。次に、バッテリー・パックを外し、相互接続ケーブルを外してください。

Antes de quitar una FRU, apague el sistema, desenchufe todos los cables de las tomas de corriente eléctrica, quite la batería y, a continuación, desconecte cualquier cable de conexión entre dispositivos.

Laser compliance statement

Some models of Lenovo computer are equipped from the factory with an optical storage device such as a CD-ROM drive or a DVD-ROM drive. Such devices are also sold separately as options. If one of these drives is installed, it is certified in the U.S. to conform to the requirements of the Department of Health and Human Services 21 Code of Federal Regulations (DHHS 21 CFR) Subchapter J for Class 1 laser products. Elsewhere, the drive is certified to conform to the requirements of the International Electrotechnical Commission (IEC) 825 and CENELEC EN 60 825 for Class 1 laser products.

If a CD-ROM drive, a DVD-ROM drive, or another laser device is installed, note the following:

⚠ CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

O uso de controles, ajustes ou desempenho de procedimentos diferentes daqueles aqui especificados pode resultar em perigosa exposição à radiação.

**凡未在这里指明的任何控制用法、调整、行为，
都会导致严重后果。**

Pour éviter tout risque d'exposition au rayon laser, respectez les consignes de réglage et d'utilisation des commandes, ainsi que les procédures décrites.

Werden Steuer- und Einstellelemente anders als hier festgesetzt verwendet, kann gefährliche Laserstrahlung auftreten.

Az itt előírt eljárásoktól, beállításoktól és vezérlésektől eltérni a lézersugárzás veszélye miatt kockázatos!

L'utilizzo di controlli, regolazioni o l'esecuzione di procedure diverse da quelle specificate possono provocare l'esposizione a.

Использование элементов настройки и выполнение процедур иных, чем указано здесь, может привести к опасному радиационному облучению.

Použitie kontrol, úprav alebo iných vykonaní od iných výrobcov, ako je v tomto špecifikované, mohlo by mať za následok nebezpečenstvo vystavenia sa vyžiarovaniu.

本書で指定された内容以外の、お客様による整備、調整、または手順を行った場合、レーザー光の放射の危険があります。

El uso de controles o ajustes o la ejecución de procedimientos distintos de los aquí especificados puede provocar la exposición a radiaciones peligrosas.

Opening the CD-ROM drive, the DVD-ROM drive, or any other optical storage device could result in exposure to hazardous laser radiation. There are no serviceable parts inside those drives. **Do not open.**

A CD-ROM drive, a DVD-ROM drive, or any other storage device installed may contain an embedded Class 3A or Class 3B laser diode. Note the following:

 DANGER

Emits visible and invisible laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam.

Radiação por raio laser ao abrir. Não olhe fixo no feixe de luz, não olhe diretamente por meio de instrumentos óticos e evite exposição direta com o feixe de luz.

开启时会有激光发射时，请勿直视激光束，请勿直接查看视觉仪器，并且避免直接接触在激光束之中。

Rayonnement laser si carter ouvert. Évitez de fixer le faisceau, de le regarder directement avec des instruments optiques, ou de vous exposer au rayon.

Laserstrahlung bei geöffnetem Gerät. Nicht direkt oder über optische Instrumente in den Laserstrahl sehen und den Strahlungsbereich meiden.

Kinyitáskor lézersugár ! Ne nézzen bele se szabad szemmel, se optikai eszközökkel. Kerülje a sugárnyalábbal való érintkezést!

Apriendo l'unità vengono emesse radiazioni laser. Non fissare il fascio, non guardarlo direttamente con strumenti ottici e evitare l'esposizione diretta al fascio.

Открывая, берегитесь лазерного излучения.

Не смотрите на луч, не разглядывайте его с помощью оптических инструментов, а также избегайте прямого воздействия лазерного луча.

Keď je laserová jednotka otvorená. Vyhňte sa priamemu pohľadu a nehľadte priamo s optickými nástrojmi do lúča a vyhňte sa priamemu vystaveniu lúčov.

開けるとレーザー光が放射されます。光線を見つめたり、光学機械を使って直接見たりしないでください。

Radiación láser al abrir. No mire fijamente ni examine con instrumental óptico el haz de luz. Evite la exposición directa al haz.

Important service information

This chapter presents the following important service information:

- “Strategy for replacing FRUs” on page 16
 - “Strategy for replacing a hard disk drive” on page 17
 - “Important notice for replacing a system board” on page 17
- “Important information about replacing RoHS compliant FRUs” on page 18

Important:

BIOS and device driver fixes are customer-installable. The BIOS and device drivers are posted on the customer support site:

<http://support.lenovo.com>.

Strategy for replacing FRUs

Before replacing parts:

Make sure that all software fixes, drivers, and BIOS downloads are installed before replacing any FRUs listed in this manual.

After a system board is replaced, ensure that the latest BIOS is loaded to the system board before completing the service action.

To download software fixes, drivers, and BIOS, follow the steps below:

1. Go to <http://support.lenovo.com>.
2. Enter the serial number or select a product or use Lenovo smart downloading.
3. Select the BIOS/Driver/Applications and download.
4. Follow the directions on the screen and install the necessary software.

Use the following strategy to prevent unnecessary expense for replacing and servicing FRUs:

- If you are instructed to replace an FRU, but the replacement does not solve the problem, reinstall the original FRU before you continue.
- Some computers have both a processor board and a system board. If you are instructed to replace either of them, and replacing one of them does not solve the problem, reinstall that board, and then replace the other one.
- If an adapter or a device consists of more than one FRU, any of the FRUs may be the cause of the error. Before replacing the adapter or device, remove the FRUs one by one to see if the symptoms change. Replace only the FRU that changed the symptoms.

Attention: The setup configuration on the computer you are servicing may have been customized. Running Automatic Configuration may alter the settings. Note the current configuration settings (using the View Configuration option); then, when service has been completed, verify that those settings remain in effect.

Strategy for replacing a hard disk drive

Always try to run a low-level format before replacing a hard disk drive. This will cause all customer data on the hard disk to be lost. Make sure that the customer has a current backup of the data before performing this action.

Attention: The drive startup sequence in the computer you are servicing may have been changed. Be extremely careful during write operations such as copying, saving, or formatting. If you select an incorrect drive, data or programs can be overwritten.

Important notice for replacing a system board

Some components mounted on a system board are very sensitive. Improper handling can cause damage to those components, and may cause a system malfunction.

Attention: When handling a system board:

- Do not drop the system board or apply any excessive force to it.
- Avoid rough handling of any kind.
- Avoid bending the system board and hard pushing to prevent cracking at each BGA (Ball Grid Array) chipset.

Important information about replacing RoHS compliant FRUs

RoHS, The Restriction of Hazardous Substances in Electrical and Electronic Equipment Directive (2002/95/EC) is a European Union legal requirement affecting the global electronics industry. RoHS requirements must be implemented on Lenovo products placed on the market after June 2006. Products on the market before June 2006 are not required to have RoHS compliant parts. If the original FRU parts are non-compliant, replacement parts can also be non-compliant. In all cases if the original FRU parts are RoHS compliant, the replacement part must also be RoHS compliant.

Note: RoHS and non-RoHS FRU part numbers with the same fit and function are identified with unique FRU part numbers.

Lenovo plans to transit to RoHS compliance well before the implementation date and expects its suppliers to be ready to support Lenovo's requirements and schedule in the EU. Products sold in 2005 and 2006 will contain some RoHS compliant FRUs. The following statement pertains to these products and any product Lenovo produces containing RoHS compliant FRUs.

RoHS compliant FRUs have unique FRU part numbers. Before or after the RoHS implementation date, failed RoHS compliant parts must always be replaced with RoHS compliant ones, so only the FRUs identified as compliant in the system HMM or direct substitutions for those FRUs may be used.

Products marketed before June 2006		Products marketed after June 2006	
Current or original part	Replacement FRU	Current or original part	Replacement FRU
Non-RoHS	Can be Non-RoHS	Must be RoHS	Must be RoHS
Non-RoHS	Can be RoHS		
Non-RoHS	Can sub to RoHS		
RoHS	Must be RoHS		

Note: A direct substitution is a part with a different FRU part number that is automatically shipped by the distribution center at the time of the order.

General checkout

This chapter presents the following information:

- “What to do first” on page 20
- “Power system checkout” on page 21

Before you go to the checkout, make sure to read the following important notes:

Important notes:

- **Only certified trained personnel can service the computer.**
- **Before replacing any FRU, read the entire page on removing and replacing FRUs.**
- **Carefully remove screws for reuse when replacing FRUs.**
- **Be extremely careful during such write operations as copying, saving, or formatting.** Drives in the computer that you are servicing sequence might have been altered. If you select an incorrect drive, data or programs might be overwritten.
- **Replace an FRU only with another FRU of the correct model.** When you replace an FRU, make sure that the machine model and the FRU part number are correct by referring to the FRU parts list.
- **An FRU should not be replaced just because of a single, unreproducible failure.** Single failures can occur for a variety of reasons that have nothing to do with a hardware defect, such as cosmic radiation, electrostatic discharge, or software errors. Consider replacing an FRU only when a problem recurs. If you suspect that an FRU is defective, clear the error logs and run the test again. If the error does not recur, do not replace the FRU.
- **Be careful not to replace a nondefective FRU.**

What to do first

When you do return an FRU, you must include the following information in the parts exchange form or parts return form that you attach to it:

1. Name and phone number of servicer
2. Date of service
3. Date on which the machine failed
4. Date of purchase
5. Procedure index and page number in which the failing FRU was detected
6. Failing FRU name and part number
7. Machine type, model number, and serial number
8. Customer's name and address

Note for warranty: During the warranty period, the customer may be responsible for repair costs if the computer damage was caused by misuse, accident, modification, unsuitable physical or operating environment, or improper maintenance by the customer.

The following is a list of some common items that are not covered under warranty and some symptoms that might indicate that the system was subjected to stress beyond normal use.

Before checking problems with the computer, determine whether the damage is covered under the warranty by referring to the following list:

The following are not covered under warranty:

- LCD panel cracked from the application of excessive force or from being dropped
- Scratched (cosmetic) parts
- Distortion, deformation, or discoloration of the cosmetic parts
- Plastic parts, latches, pins, or connectors that have been cracked or broken by excessive force
- Damage caused by liquid spilled into the system
- Damage caused by the improper insertion of a PC Card or the installation of an incompatible card
- Improper disk insertion or use of an optical drive
- Diskette drive damage caused by pressure on the diskette drive cover, foreign material in the drive, or the insertion of a diskette with multiple labels
- Damaged or bent diskette eject button
- Fuses blown by attachment of a nonsupported device
- Forgotten computer password (making the computer unusable)
- Sticky keys caused by spilling a liquid onto the keyboard
- Use of an incorrect AC adapter on laptop products

The following symptoms might indicate damage caused by nonwarranted activities:

- Missing parts might be a symptom of unauthorized service or modification.
- If the spindle of a hard disk drive becomes noisy, it may have been subjected to excessive force, or dropped.

Power system checkout

To verify a symptom, follow the steps below:

1. Turn off the computer.
2. Remove the battery pack.
3. Connect the AC adapter.
4. Make sure that power is supplied when you turn on the computer.
5. Turn off the computer.
6. Disconnect the AC adapter and install the charged battery pack.
7. Make sure that the battery pack supplies power when you turn on the computer.

If you suspect a power problem, see the appropriate one of the following power supply checkouts:

- “Checking the AC adapter” on page 21
- “Checking operational charging” on page 22
- “Checking the battery pack” on page 22


Checking the AC adapter

You are here because the computer fails only when the AC adapter is used.

- If the power-on indicator does not turn on, check the power cord of the AC adapter for correct continuity and installation.
- If the computer does not charge during operation, go to “Checking operational charging”.

To check the AC adapter, follow the steps below:

1. Unplug the AC adapter cable from the computer.
2. Measure the output voltage at the plug of the AC adapter cable. See the following figure:

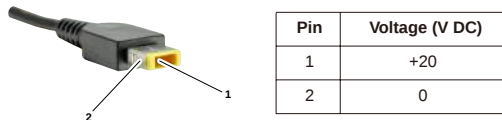

Note: Output voltage for the AC adapter pin No. 2 may differ from the one you are servicing.

3. If the voltage is not correct, replace the AC adapter.
4. If the voltage is acceptable, do the following:
 - Replace the system board.
 - If the problem persists, go to “Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK” on page 26.

Note: Noise from the AC adapter does not always indicate a defect.

Checking operational charging

To check whether the battery charges properly during operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

Perform operational charging. If the battery status indicator or icon does not light on, remove the battery pack and let it return to room temperature. Reinstall the battery pack. If the charge indicator or icon is still off, replace the battery pack.

If the charge indicator still does not light on, replace the system board. Then reinstall the battery pack. If it is still not charged, go to the next section.

Checking the battery pack

Battery charging does not start until the Power Meter shows that less than 95% of the total power remains; under this condition the battery pack can charge to 100% of its capacity. This protects the battery pack from being overcharged or from having a shortened life.

To check your battery, move your cursor to the Power Meter icon in the icon tray of the Windows® taskbar and wait for a moment (but do not click it), and the percentage of battery power remaining is displayed. To get detailed information about the battery, double-click the Power Meter icon.

Note: If the battery pack becomes hot, it may not be able to be charged. Remove it from the computer and leave it at room temperature for a while. After it cools down, reinstall and recharge it.

Related service information

This chapter presents the following information:

- “Restoring the factory contents by using OneKey Recovery” on page 23
- “Passwords” on page 24
- “Power management” on page 25

Restoring the factory contents by using OneKey Recovery

Restore of factory default

The Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK computers come with pre-installed OneKey Recovery System. In order to save application files and the initial backed up files of the system, the hard disk in a Lenovo computer includes a hidden partition when it is shipped. If you need to restore the system to the point of your first boot up, just enter Lenovo OneKey Recovery System and run **System Recovery**. For details of OneKey Recovery System, see *the User Guide for Lenovo OneKey Recovery System*.

Note: This will delete all the new data on the system partition (C drive), which is not recoverable. Make sure to back up your critical data before you perform this action.

Passwords

As many as three passwords may be needed for any Lenovo computer: the power-on password (POP), the hard disk password (HDP), and the administrator password.

If any of these passwords has been set, a prompt for it appears on the screen whenever the computer is turned on. The computer does not start until the password is entered.

Power-on password

A power-on password (POP) protects the system from being powered on by an unauthorized person. The password must be entered before an operating system can be booted.

Hard-disk password

There are two hard-disk passwords (HDPs):

- + User HDP - for the user

- + Master HDP - for the system administrator, who can use it to get access to the hard disk drive even if the user has changed the user HDP

Attention: If the user HDP has been forgotten, check whether a master HDP has been set. If it has, it can be used for access to the hard disk drive. If no master HDP is available, neither Lenovo nor Lenovo authorized service technicians provide any services to reset either the user or the master HDP, or to recover data from the hard disk drive. The hard disk drive can be replaced for a scheduled fee.

Administrator password

Administrator password controls the access of the whole setup utility. Only Administrator password was set then User password can be set. If Administrator password was cleared, the User password was cleared too.

Power management

Note: Power management modes are not supported for APM operating system.

To reduce power consumption, the computer has three power management modes: screen blank, sleep (standby), and shut down.

Screen blank state

If the time set on the "Turn off monitor" timer in the operating system expires, the LCD backlight turns off. You can also turn off the LCD backlight by pressing **Fn + F2**.

To end screen blank state and resume normal operation, press any key.

Putting the computer to sleep or shutting it down

When you have finished working with your computer, you can put it to sleep or shut it down.

Putting your computer to sleep

If you will be away from your computer for only a short time, put the computer to sleep. When the computer is in sleep mode, you can quickly wake it to resume use, bypassing the startup process.

To put the computer to sleep, do one of the following:

- Close the display lid.
- Press the Power button.
- Open the start menu, and then select **Power**  → **Sleep**.

Attention: Wait until the power indicator light starts blinking (indicating that the computer is in sleep mode) before you move your computer. Moving your computer while the hard disk is spinning can damage the hard disk, causing loss of data.

To wake the computer, do one of the following:

- Press any key on the keyboard.
- Press the Power button.

Shutting down the computer

If you are not going to use your computer for a long time, shut it down.

To shut down the computer, do one of the following:

- Open the start menu, and then select **Power**  → **Shut down**.
- Press and hold or right-click the **Start** button in the lower-left corner and select **Shut down or sign out** → **Shut down**.

Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK

This chapter presents the following product-specific service references and product-specific parts information:

- “Specifications” on page 26
- “Status indicators” on page 28
- “Fn key combinations” on page 30
- “FRU replacement notices” on page 31
- “Removing and replacing an FRU” on page 32
- “Locations” on page 71
- “Parts list” on page 73

Specifications

The following table lists the specifications of the Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK:

Table 1. Specifications

Feature	Description
Processor	View the system properties of your computer. You can do this as follows: Open the Control Panel, and then select System and Security → System.
Bus architecture	ideapad Y700-15ACZ: DDR3L 1600MT/s SDRAM PCI Express Gen3 SATA Gen3 USB 3.0 ideapad Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK: DDR4 2133MT/s SDRAM PCI Express Gen3 SATA Gen3 USB 3.0
Graphic memory chip	ideapad Y700-15ACZ: Integrated Graphics / Discreted Graphics: Strato XT ideapad Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK: Integrated Graphics / Discreted Graphics: NV N16P-GX (TBD)
Display	15.6" 16:9, 1,920 × 1,080 pixels FHD (Y700-15ACZ) 15.6" 16:9, 1,920 × 1,080 pixels FHD / 3,840 × 2,160 pixels UHD (Y700-15ISK/Y700 Touch-15ISK) 17.3" 16:9, 1,920 × 1,080 pixels FHD (Y700-17ISK)
Standard memory	DDR4-2133 MHz, SODIMM × 2 (max 16 GB)
CMOS RAM	256 bytes

Table 1. Specifications (continued)

Feature	Description
Hard disk drive	• 2.5-inch, 7 mm SATA III • 500 GB / 1 TB, 5400rpm • HYBRID 1 TB 5400rpm SSHD (8G) • SSD, NGFF, 128 GB / 256 GB / 512 GB
I/O port	• USB 3.0 × 2, USB 2.0 × 1 • Combo audio jack × 1 • RJ-45 × 1 (1000 Mbps) • HDMI × 1 • 4 in 1 slot × 1 (SD/SDHC/SDXC/MMC)
Audio	• 2 in 1 cobmo jack • 2.0 W JBL speakers × 2 • Array Microphone
Ethernet (on the system board)	• 1,000 Mbps
Bluetooth wireless	• Combo w/ Wifi card
Keyboard	• 6 row ISO full size keyboard, w/back-light
Touchpad	• Multi-touch type
Integrated camera	• HD (720p)
Battery	• Li-Polymer, 4 cells, 60 Wh
AC adapter	• 20 V, 135 W
Pre-installed operating system	• ideapad Y700-15ACZ: DOS Windows 10 (Windows 8.1 for frameless at 8/23) • ideapad Y700-15ISK/Y700 Touch-15ISK: DOS Windows 10 • ideapad Y700-17ISK: DOS Windows 10 (or similar update in 12 months)

Status indicators

The system status indicators below show the computer status:



Table 2. Status indicators

Indicator	Indicator status	Charge status	Meaning
1 Power 	On (solid white)	---	The computer is powered on.
	Blinking	---	The computer is in sleep mode.
	Off	---	The computer is powered off.
2 Battery 	On (solid white)	Charging	The battery has more than 80% charge.
		Discharging	The battery has more than 20% charge.
	On (solid amber)	Discharging	The battery has between 5% and 20% charge.
	Blinking slowly (white)	Charging	The battery has between 20% and 80% charge. When the battery reaches 80% charge, the light will stop blinking. However, charging will continue until the battery is fully charged.
	Blinking slowly (amber)	Charging	The battery has less than 20% charge. When the battery charge reaches 20%, the blinking color will change to white.
	Blinking quickly (amber)	Charging/Discharging	The battery has less than 5% charge.
3 Touchpad 	On (solid white)	---	The touchpad is disabled.
	Off	---	The touchpad is enabled.
4 Hard Disk Drive 	Blinking	---	The hard disk drive is reading or writing data.

Fn key combinations

The following table shows the function of each combination of Fn with a function key.

Table 3. Fn key combinations

Fn + F1:	Enters sleep mode.
Fn + F2:	Turns on/off the backlight of the LCD screen.
Fn + F3:	Opens the interface for selecting display options.
Fn + F5:	Enables/disables Airplane mode.
Fn + F6:	Enables/disables the touchpad.
Fn + F9:	Opens the Settings charm.
Fn + F10:	Opens the Search charm.
Fn + F11:	Displays current apps.
Fn + PrtSc:	Activates the system request.
Fn + Insert:	Enables/disables the scroll lock.
Fn + Home:	Activates the pause function.
Fn + End:	Activates the break function.
Fn + ↑ / ↓:	Increases/decreases the display brightness.
Fn + → / ←:	Increases/decreases the volume.
Fn + Space (on select models):	Adjusts the keyboard backlight (off → dim → bright → off).

FRU replacement notices

This section presents notices related to removing and replacing parts. Read this section carefully before replacing any FRU.

Screw notices

Loose screws can cause a reliability problem. In the Lenovo computer, this problem is addressed with special nylon-coated screws that have the following characteristics:

- They maintain tight connections.
- They do not easily come loose, even with shock or vibration.
- They are harder to tighten.


Do the following when you service this machine:

- Keep the screw kit in your tool bag.
- Carefully remove screws for reuse when replacing FRUs.
- Use a torque screwdriver if you have one.

Tighten screws as follows:


- **Plastic to plastic**

Turn an additional 90° after the screw head touches the surface of the plastic part:

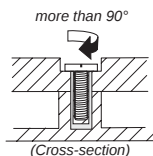

- **Logic card to plastic**

Turn an additional 180° after the screw head touches the surface of the logic card:

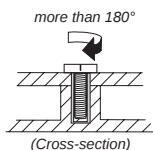

- **Torque driver**

If you have a torque screwdriver, refer to the "Torque" column for each step.

- Make sure that you use the correct screws. If you have a torque screwdriver, tighten all screws firmly to the torque shown in the table. **Carefully remove screws for reuse when replacing FRUs. Make sure that all screws are tightened firmly.**
- Ensure torque screwdrivers are calibrated correctly following country specifications.

Removing and replacing an FRU

This section presents exploded figures with the instructions to indicate how to remove and replace the FRU. Make sure to observe the following general rules:

1. Do not attempt to service any computer unless you have been trained and certified. An untrained person runs the risk of damaging parts.
2. Before replacing any FRU, review "FRU replacement notices" on page 31.
3. Begin by removing any FRUs that have to be removed before the failing FRU. Any of such FRUs are listed at the top of the page. Remove them in the order in which they are listed.
4. Follow the correct sequence in the steps to remove the FRU, as given in the figures by the numbers in square callouts.
5. When turning a screw to replace an FRU, turn it in the direction as given by the arrow in the figure.
6. When removing the FRU, move it in the direction as given by the arrow in the figure.
7. To put the new FRU in place, reverse the removal procedures and follow any of the notes that pertain to replacement. For information about connecting and arranging internal cables, see "Locations" on page 71.
8. When replacing an FRU, use the correct screw as shown in the procedures.

DANGER

Before removing any FRU, turn off the computer, unplug all power cords from electrical outlets, remove the battery pack, and then disconnect any of the interconnecting cables.

Attention: After replacing an FRU, do not turn on the computer until you have made sure that all screws, springs, and other small parts are in place and none are loose inside the computer. Verify this by shaking the computer gently and listening for rattling sounds. Metallic parts or metal flakes can cause electrical short circuits.

Attention: The system board is sensitive to, and can be damaged by, electrostatic discharge. Before touching it, establish personal grounding by touching a ground point with one hand or using an electrostatic discharge (ESD) strap (P/N 6405959) to remove potential shock reasons.

Notes:

- The following procedures about removing and replacing FRUs are the same for the Lenovo ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK.
- The illustrations used in this section are of the Lenovo ideapad Y700-15ACZ, unless otherwise stated.

1010 Base cover

Figure 1. Removal steps of base cover

Remove the screws **1** and **2**.

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK






ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/
Y700-17ISK Hardware Maintenance Manual

Figure 1. Removal steps of base cover (continued)

ideapad Y700-17ISK

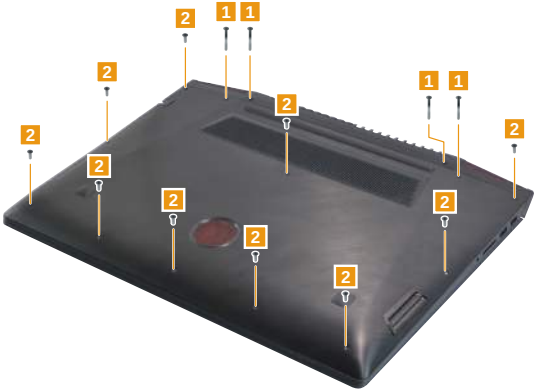


Step	Screw (quantity)	Color	Torque
1	M2.0 × 15 mm, Phillips head, nylok-coated (2) D to C (ideapad Y700-15ACZ/Y700-15ISK/ Y700 Touch-15ISK)	Black	2.0 ± 0.15 kgf.cm
1	M2.0 × 15 mm, Phillips head, nylok-coated (4) D to C (ideapad Y700-17ISK)	Black	2.0 ± 0.15 kgf.cm
2	M2.0 × 5.0 mm, Phillips head, nylok-coated (9) D to C (ideapad Y700-15ACZ/Y700-15ISK/ Y700 Touch-15ISK)	Black	2.0 ± 0.15 kgf.cm
2	M2.0 × 5.0 mm, Phillips head, nylok-coated (10) D to C (ideapad Y700-17ISK)	Black	2.0 ± 0.15 kgf.cm




Figure 1. Removal steps of base cover (continued)

Turn the computer over, and then open the computer display. Separate the base cover from the upper case in the direction shown by arrow **3**.



  Remove the base cover in the directions shown by arrows **4** and **5**.

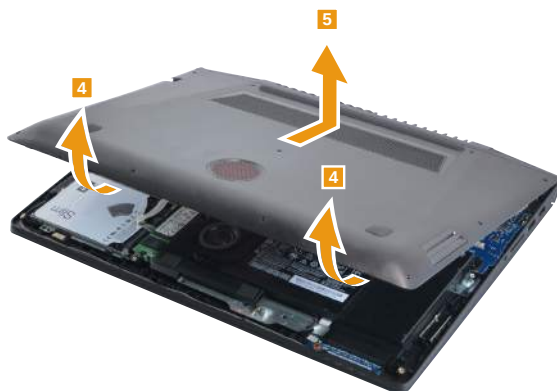

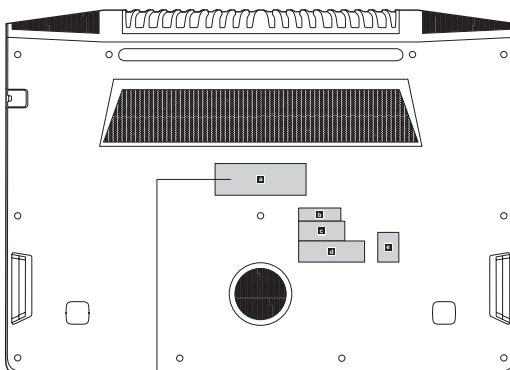ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK

1020 Battery pack

For access, remove this FRU:

- “1010 Base cover” on page 33

⚠ DANGER

Only use the battery specified in the parts list for your computer. Any other battery could ignite or explode.

Figure 2. Removal steps of battery pack

Unplug the battery connector in the direction shown by arrow **1**, then remove the screws **2** and **3**. Remove the battery pack **4**.

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK


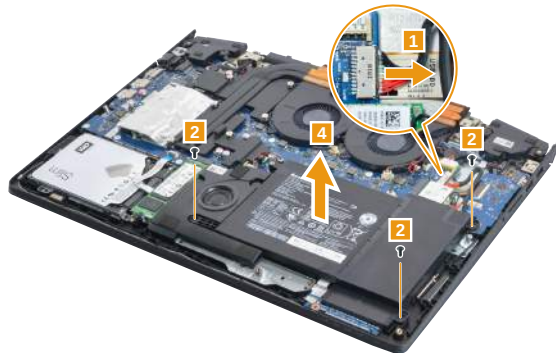


Figure 2. Removal steps of battery pack (continued)

ideapad Y700-17ISK

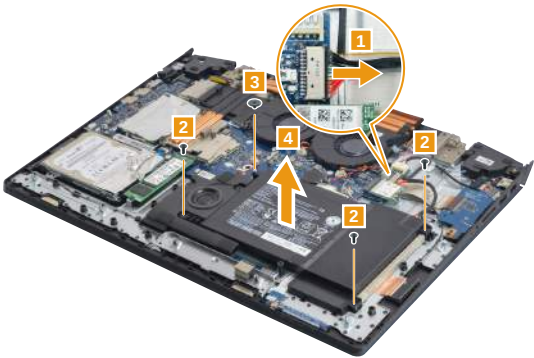

Step	Screw (quantity)	Color	Torque
2	M2.0 × 5.0 mm, Phillips head, nylok-coated (3) Batt to C-cover	Black	2.0 ± 0.15 kgf.cm
3	M2.0 × 3.0 mm, Phillips head, nylok-coated (1) Batt to C-cover (ideapad Y700-17ISK)	Black	2.0 ± 0.15 kgf.cm

When installing: Make sure that the battery connector is attached firmly.

1030 Solid state disk and hard disk drive

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38

Attention:

- **Do not drop the hard disk drive or apply any physical shock to it.** The hard disk drive is sensitive to physical shock. Improper handling can cause damage and permanent loss of data.
- Before removing the drive, suggest the customer to backup all the information on it if possible.
- Never remove the drive while the system is operating or in suspend mode.

Figure 3. Removal steps of solid state disk and hard disk drive

Remove the screw **1**.




Step	Screw (quantity)	Color	Torque
1	M2.0 × 3.2 mm, Phillips head, nylok-coated (1) SSD to C-cover (ideapad Y700-15ACZ/Y700-15ISK/ Y700 Touch-15ISK)	Sliver	2.0 ± 0.15 kgf.cm
1	M2.0 × 3.5 mm, Phillips head, nylok-coated (1) SSD to C-cover (ideapad Y700-17ISK)	Sliver	2.0 ± 0.15 kgf.cm

Figure 3. Removal steps of solid state disk and hard disk drive (continued)

Remove the solid state disk in the direction shown by arrow **2**.



Unplug the HDD connector in the directions shown by arrow **3** and **4**. Remove the screws **5**. Then remove the hard disk drive in the direction shown by arrow **6**.

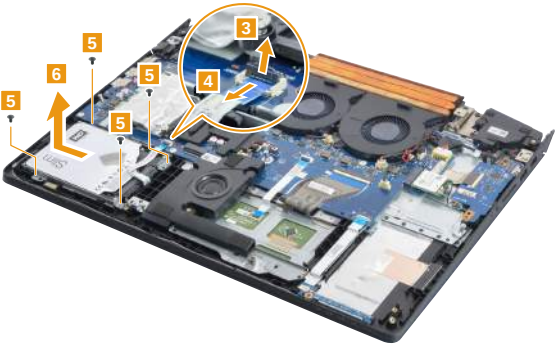

Step	Screw (quantity)	Color	Torque
5	M2.0 × 3.5 mm, Phillips head, nylok-coated (4) HDD Assy to C-cover	Sliver	2.0 ± 0.15 kgf.cm

When installing: Make sure that the HDD connector is attached firmly.

Figure 3. Removal steps of solid state disk and hard disk drive (continued)

Detach the cable from the hard disk drive in the direction shown by arrow **7**.



Remove the screws **8** and detach the metal frame from the hard disk drive.



Step	Screw (quantity)	Color	Torque
8	M3.0 × 3.0 mm, Phillips head, nylok-coated (4) HDD to HDD bracket	Sliver	2.0 ± 0.15 kgf.cm

Note: Aluminium foil is stuck on the HDD bracket. Do not use too much force when removing the aluminium foil, otherwise it might be damaged during disassembly.

1040 PCI Express Mini Card for wireless LAN

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38

Important: The preinstalled WLAN module may only be replaced with a Lenovo approved module in order to comply with FCC and IC regulations. Refer to “Table 4. Parts list—Overall” on page 76 for Lenovo part numbers for the approved modules.

Figure 4. Removal steps of PCI Express Mini Card for wireless LAN

Disconnect the two wireless LAN cables (black, grey) **1**, and then remove the screw **2**.



In step **1**, unplug the jacks by using the removal tool antenna RF connector (P/N: 08K7159), or pick up the connectors with your fingers and gently unplug them in the direction shown by the arrows.

Notes: The wireless LAN card has 2 cables in step **1**.
The wireless LAN card in some models might have 3 cables in step **1**.

Step	Screw (quantity)	Color	Torque
2	M2.0 × 3.5 mm, Phillips head, nylok-coated (1) Wlan to C-cover	Sliver	2.0 ± 0.15 kgf.cm

// ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

Figure 4. Removal steps of PCI Express Mini Card for wireless LAN (continued)

Remove the card in the direction shown by arrow **3**.



When installing:

- In models with a wireless LAN card that has two antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **MAIN**, and the grey cable (2nd) (AUX) into the jack labeled **AUX** on the card.
- In models with a wireless LAN card that has three antenna connectors, plug the black cable (1st) (MAIN) into the jack labeled **1**, the grey cable (3rd) into the jack labeled **3**, and the white cable (2nd) (AUX) into the jack labeled **2** on the card.


1050 DIMM

For access, remove these FRUs in order:


- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38

Figure 5. Removal steps of DIMM

Peel off the mylar covering the DIMM **1**. Release the two latches on both edges of the socket at the same time in the directions shown by arrows **2**, and then unplug the DIMM in the direction shown by arrow **3**.

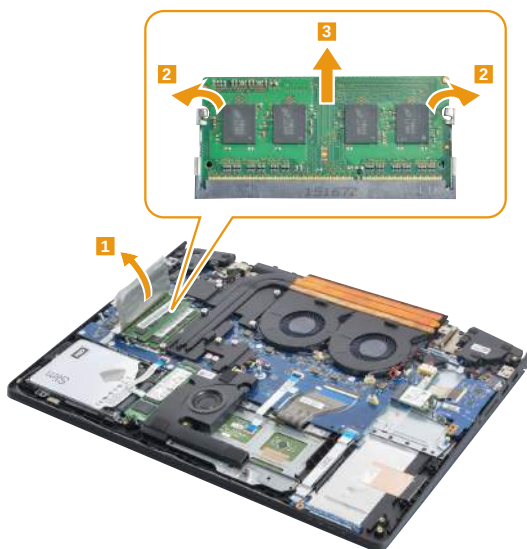

Note: If only one DIMM is used on the computer you are servicing, the card must be installed in SLOT-0 (**a** : lower slot), but not in SLOT-1 (**b** : upper slot).

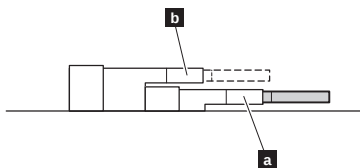

When installing: Insert the notched end of the DIMM into the socket. Push the DIMM firmly, and pivot it until it snaps into place. Make sure that it is firmly fixed in the slot and is difficult to move.


1060 LED board

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38

Figure 6. Removal steps of LED board

Detach the LED board connector in the directions shown by arrows **1** and **2**. Remove the screw **3**. Then remove the LED board in the direction shown by arrow **4**.

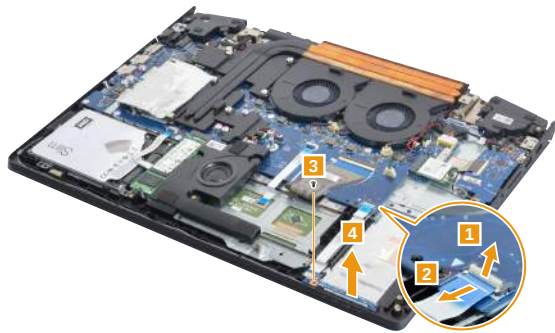

Step	Screw (quantity)	Color	Torque
3	M2.0 × 3.0 mm, Phillips head, nylok-coated (1) Led board to C-cover	Sliver	2.0 ± 0.15 kgf.cm


1070 Subwoofer

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38

Figure 7. Removal steps of subwoofer

Unplug the subwoofer connector in the direction shown by arrow **1**. Remove the screws **2**. Then remove the subwoofer in the direction shown by arrow **3**.

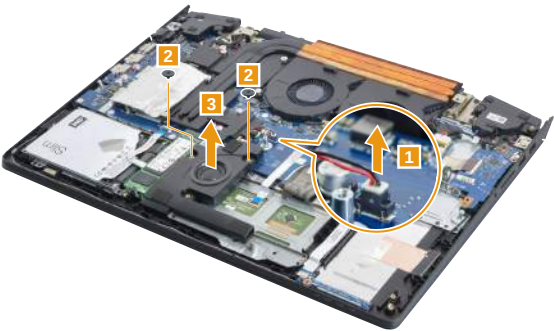

Note: Be careful not to damage the connector.

Step	Screw (quantity)	Color	Torque
2	M2.0 × 3.0 mm, Phillips head, nylok-coated (2) Subwoofer to C-cover	Black	2.0 ± 0.15 kgf.cm

When installing: Make sure that the connector is attached firmly.

1080 USB board

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38

Figure 8. Removal steps of USB board

Detach the connector in the directions shown by arrows **1** and **2** and remove the screws **3**. Remove the USB board in the direction shown by arrow **4**.

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK


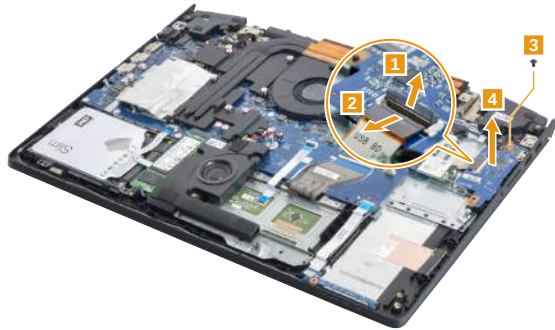


Figure 8. Removal steps of USB board (continued)

ideapad Y700-17ISK

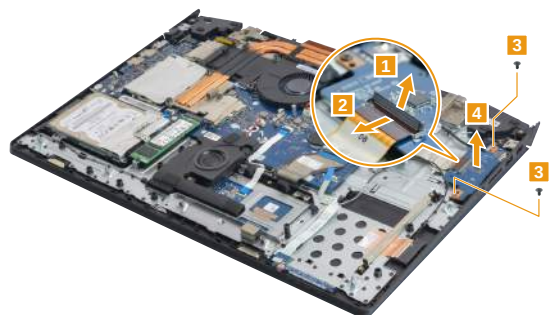

Step	Screw (quantity)	Color	Torque
3	M2.0 × 3.5 mm, Phillips head, nylok-coated (1) IO board to C-cover (ideapad Y700-15ACZ/Y700-15ISK/ Y700 Touch-15ISK)	Sliver	2.0 ± 0.15 kgf.cm
3	M2.0 × 3.5 mm, Phillips head, nylok-coated (2) IO board to C-cover (ideapad Y700-17ISK)	Sliver	2.0 ± 0.15 kgf.cm


1090 Fan assembly and Heat Sink assembly

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38

Figure 9. Removal steps of fan assembly and heat sink assembly


Unplug the fan connector in the direction shown by arrow **1**. Remove the screws **2**. Then remove the fan **3**.

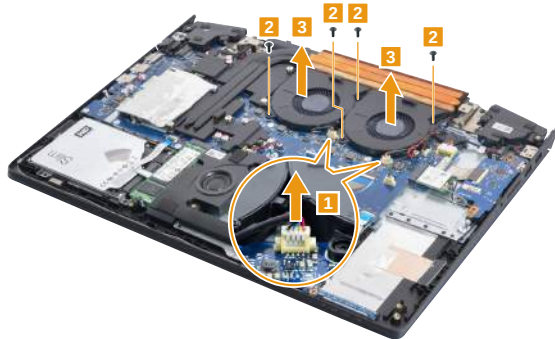


Step	Screw (quantity)	Color	Torque
2	M2.0 × 5.0 mm, Phillips head, nylok-coated (4) Fan to C-cover	Black	2.0 ± 0.15 kgf.cm

Figure 9. Removal steps of fan assembly and heat sink assembly (continued)

Loosen the screws **4**. Then remove the heat sink assembly in the direction shown by arrow **5**.

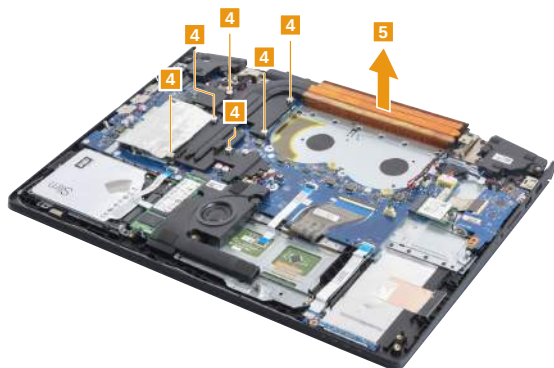

When installing: Make sure that the connectors are attached firmly.

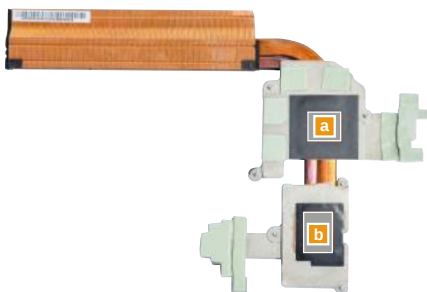

When installing: Before you attach the heat sink assembly to the computer, apply thermal grease, at an amount of 0.2 grams, to the **a** **b** parts shown in the figure above. Either too much or too little grease application can cause a thermal problem due to imperfect contact with a component.

1100 System board

Important notices for handling the system board:

When handling the system board, bear the following in mind.

- Be careful not to drop the system board on a bench top that has a hard surface, such as metal, wood, or composite.
- Avoid rough handling of any kind.
- During the whole process, make sure not to drop or stack the system board.
- If you put a system board down, make sure to put it only on a padded surface such as an ESD mat or conductive corrugated material.

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38
- “1030 Solid state disk and hard disk drive” on page 40
- “1040 PCI Express Mini Card for wireless LAN” on page 43
- “1060 LED board” on page 46
- “1070 Subwoofer” on page 47
- “1080 USB board” on page 48
- “1090 Fan assembly and Heat Sink assembly” on page 50

Figure 10. Removal steps of system board

Disconnect the connectors in the directions shown by arrows **1**, **2** and **3**.
Remove the screws **4** and **5**.

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK


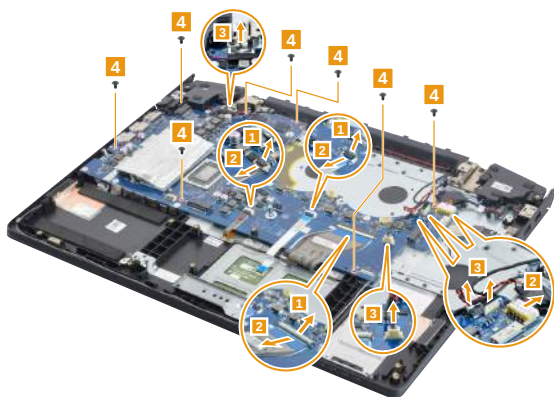


Figure 10. Removal steps of system board (continued)

ideapad Y700-17ISK

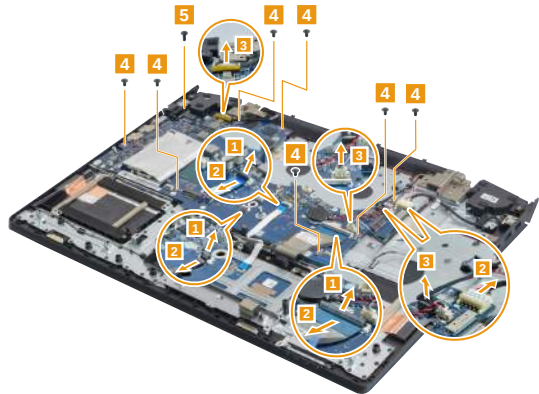


Step	Screw (quantity)	Color	Torque
4	M2.0 × 3.5 mm, Phillips head, nylok-coated (7) MB to C-cover & RJ45 to C-cover (ideapad Y700-15ACZ/Y700-15ISK/ Y700 Touch-15ISK)	Sliver	2.0 ± 0.15 kgf.cm
4	M2.0 × 3.5 mm, Phillips head, nylok-coated (6) MB to C-cover (ideapad Y700-17ISK)	Sliver	2.0 ± 0.15 kgf.cm
5	M2.0 × 5.0 mm, Phillips head, nylok-coated (1) RJ45 to C-cover (ideapad Y700-17ISK)	Black	2.0 ± 0.15 kgf.cm


When installing: Make sure that the connectors are attached firmly.

Figure 10. Removal steps of system board (continued)

Remove the system board in the direction shown by arrow **6**.

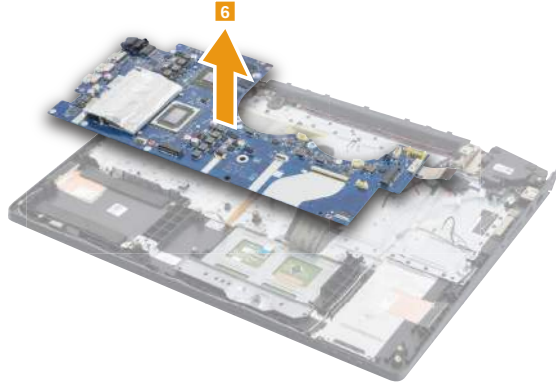

Disconnect the connector in the directions shown by arrows **7** and **8**, then remove the USB board cable **9**.

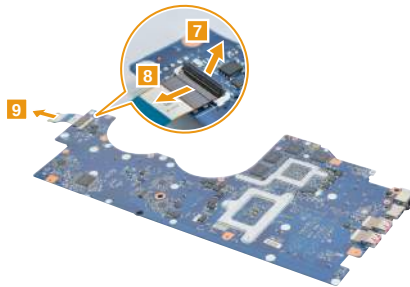

1110 Upper case


For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38
- “1030 Solid state disk and hard disk drive” on page 40
- “1040 PCI Express Mini Card for wireless LAN” on page 43
- “1060 LED board” on page 46
- “1070 Subwoofer” on page 47
- “1080 USB board” on page 48
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 System board” on page 52

Figure 11. Removal steps of upper case

Remove the screws **1**.


ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK

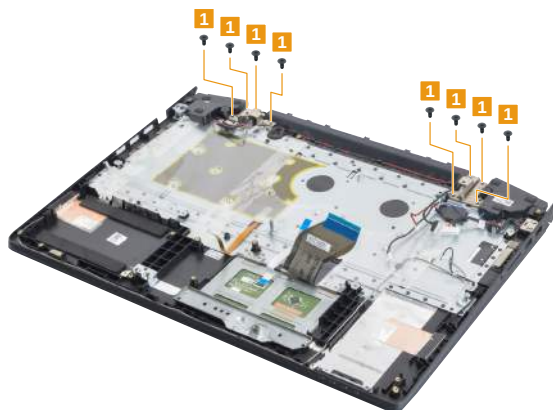

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

Figure 11. Removal steps of upper case (continued)


ideapad Y700-17ISK

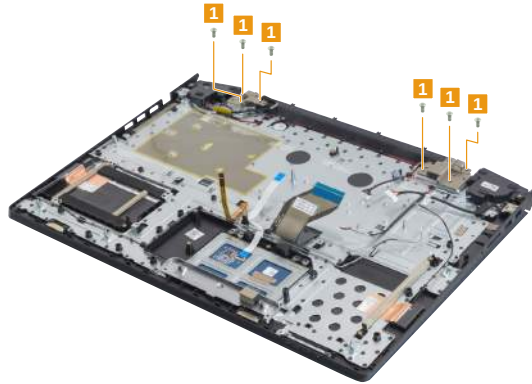


Step	Screw (quantity)	Color	Torque
1	M2.5 × 5.0 mm, Phillips head, nylok-coated (8) Hinge to C-cover (ideapad Y700-15ACZ/Y700-15ISK/ Y700 Touch-15ISK)	Black	3.0 ± 0.15 kgf.cm
1	M2.5 × 5.0 mm, Phillips head, nylok-coated (6) Hinge to C-cover (ideapad Y700-17ISK)	Sliver	3.0 ± 0.15 kgf.cm

Figure 11. Removal steps of upper case (continued)

Open the hinge in the direction shown by arrows 2.

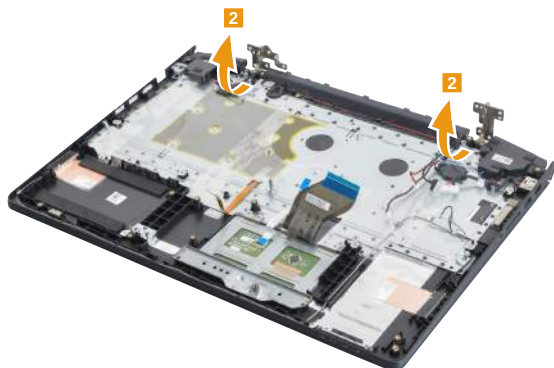

Remove the upper case in the direction shown by arrow 3.

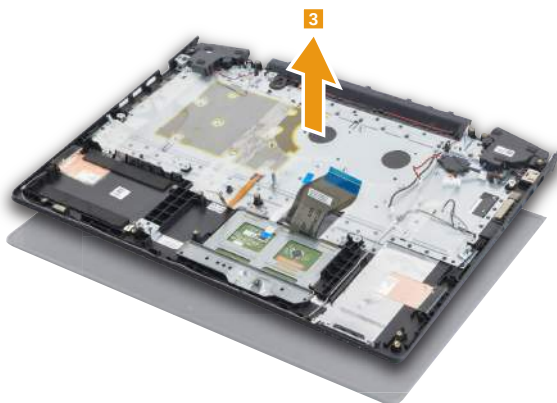


1120 Speakers

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38
- “1030 Solid state disk and hard disk drive” on page 40
- “1040 PCI Express Mini Card for wireless LAN” on page 43
- “1060 LED board” on page 46
- “1070 Subwoofer” on page 47
- “1080 USB board” on page 48
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 System board” on page 52
- “1110 Upper case” on page 55

Figure 12. Removal steps of speakers

Remove the screws **1**. Release the speaker cable from the cable guides **2**.
Remove the speakers in the direction shown by arrows **3**.

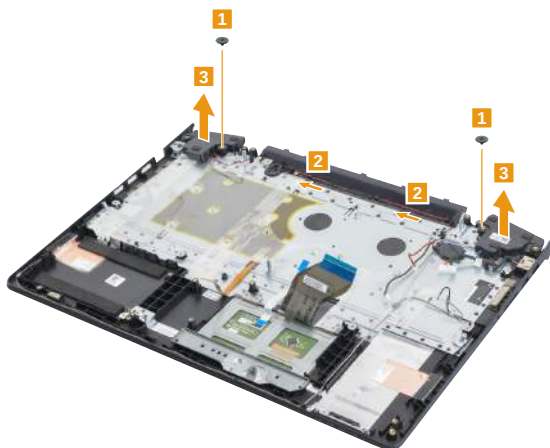

Step	Screw (quantity)	Color	Torque
1	M2.0 × 3.0 mm, Phillips head, nylok-coated (2) Speaker to to C-cover	Black	2.0 ± 0.15 kgf.cm

1130 RTC battery and DC-in cable

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38
- “1030 Solid state disk and hard disk drive” on page 40
- “1040 PCI Express Mini Card for wireless LAN” on page 43
- “1060 LED board” on page 46
- “1070 Subwoofer” on page 47
- “1080 USB board” on page 48
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 System board” on page 52
- “1110 Upper case” on page 55
- “1120 Speakers” on page 58

Figure 13. Removal steps of RTC battery and DC-in cable

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK

Remove the RTC battery and the DC-in cable in the direction shown by arrows **1**.


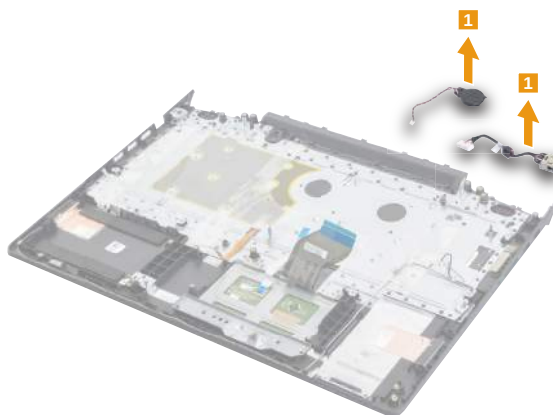


Figure 13. Removal steps of RTC battery and DC-in cable (continued)


ideapad Y700-17ISK

Unplug the connector in the direction shown by arrow **1**. Remove the RTC battery from the system board in the direction shown by arrow **2**.

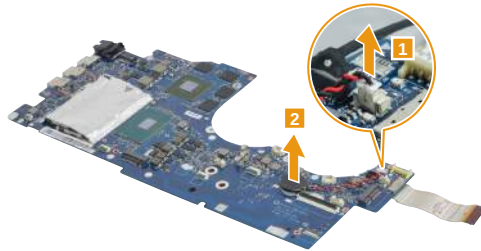

When installing: Make sure that the connector is attached firmly.

Remove the DC-in cable in the direction shown by arrow **3**.

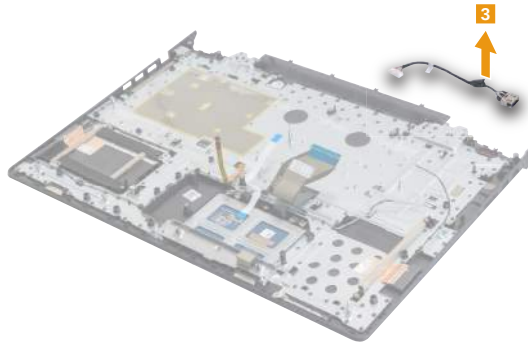

1140 LCD unit

For access, remove these FRUs in order:

- “1010 Base cover” on page 33
- “1020 Battery pack” on page 38
- “1030 Solid state disk and hard disk drive” on page 40
- “1040 PCI Express Mini Card for wireless LAN” on page 43
- “1060 LED board” on page 46
- “1070 Subwoofer” on page 47
- “1080 USB board” on page 48
- “1090 Fan assembly and Heat Sink assembly” on page 50
- “1100 System board” on page 52
- “1110 Upper case” on page 55
- “1120 Speakers” on page 58

Figure 14. Removal steps of LCD unit

Glass LCD module


Carefully remove the hinge cover in the direction shown by arrow **1**.



ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

Figure 14. Removal steps of LCD unit (continued)

Remove the screws **2**. Remove the LCD module in the direction shown by arrow **3**.

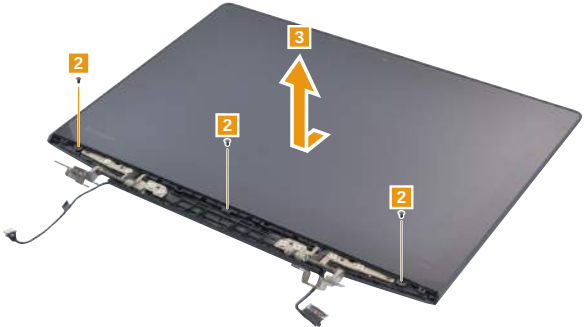

Step	Screw (quantity)	Color	Torque
2	M2.0 × 3.0 mm, Phillips head, nylok-coated (3) B-cover to A-cover	Sliver	2.0 ± 0.15 kgf.cm
2	M2.5 × 4.0 mm, Phillips head, nylok-coated (3) B-cover to A-cover (ideapad Y700-17ISK)	Black	2.0 ± 0.15 kgf.cm

Peel off the adhesive tape and detach the LCD connector in the direction shown by arrow **4**.

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK



Figure 14. Removal steps of LCD unit (continued)

ideapad Y700-17ISK



Remove the LCD cable **5**.

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK

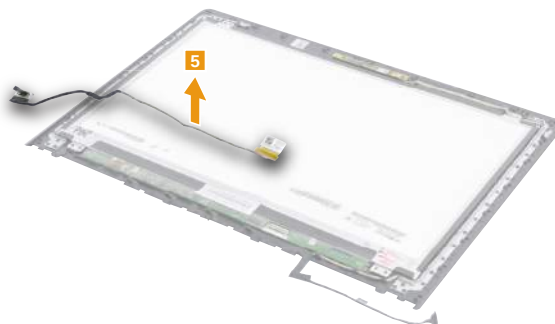


Figure 14. Removal steps of LCD unit (continued)

ideapad Y700-17ISK



Lift the camera board a little in the direction shown by arrow **6**. Disconnect the camera connector in the direction shown by arrow **7**. Then remove the camera board.

Note: The integrated camera is stuck on the top center of the LCD cover.


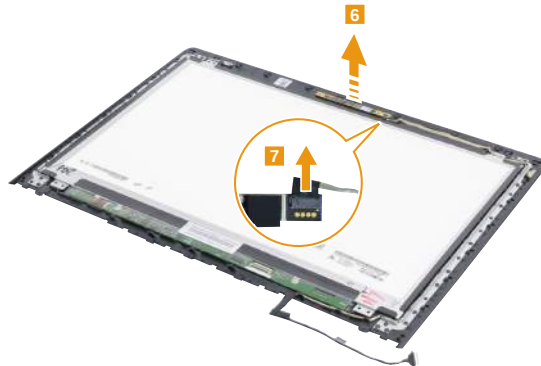


Figure 14. Removal steps of LCD unit (continued)

Remove the camera cable **8**.

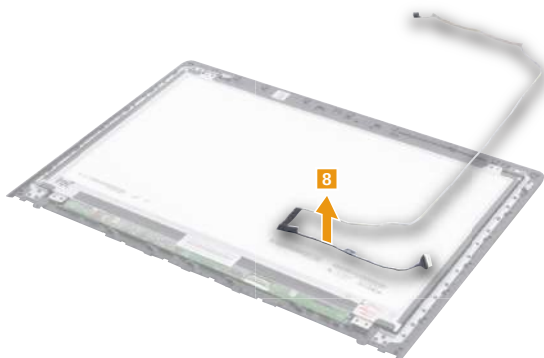

Remove the screws **9** and **10**.


ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK



// ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

Figure 14. Removal steps of LCD unit (continued)

ideapad Y700-17ISK

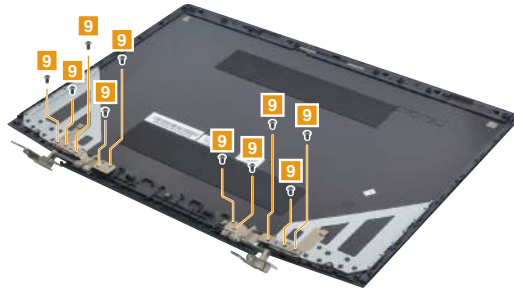

Step	Screw (quantity)	Color	Torque
9	M2.5 × 2.5 mm, Phillips head, nylok-coated (2) Hinge to A-cover (ideapad Y700-15ACZ/Y700-15ISK/ Y700 Touch-15ISK)	Black	3.0 ± 0.15 kgf.cm
9	M2.5 × 4 mm, Phillips head, nylok-coated (10) Hinge to A-cover (ideapad Y700-17ISK)	Black	3.0 ± 0.15 kgf.cm
10	M2.5 × 3.0 mm, Phillips head, nylok-coated (8) Hinge to A-cover (ideapad Y700-15ACZ/Y700-15ISK/ Y700 Touch-15ISK)	Sliver	3.0 ± 0.15 kgf.cm

Then release the hinges in the direction shown by arrows 11.


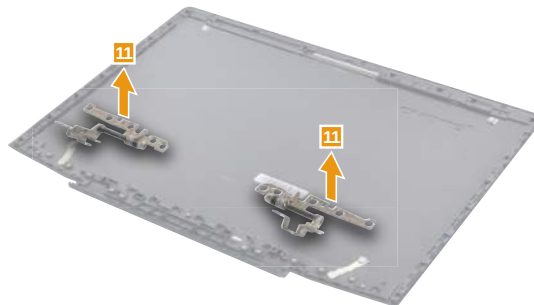


Figure 14. Removal steps of LCD unit (continued)

Normal LCD module

Carefully remove the hinge cover in the direction shown by arrow 1.

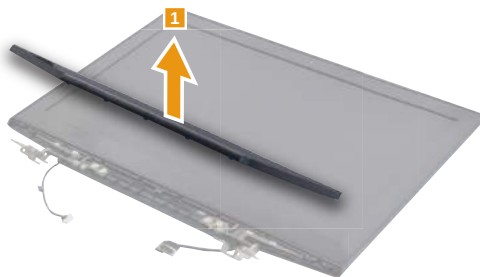

Remove the LCD front bezel in the direction shown by arrows 2.


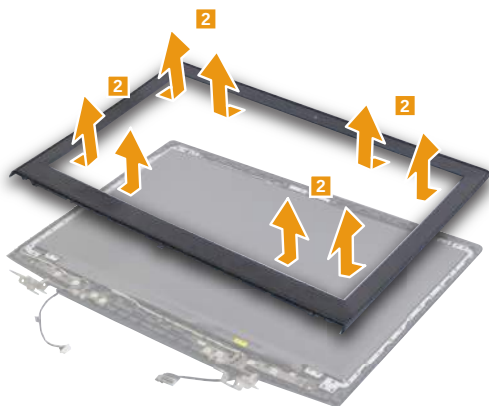


Figure 14. Removal steps of LCD unit (continued)

Remove the screws **3**. Remove the LCD module in the direction shown by arrow **4**.

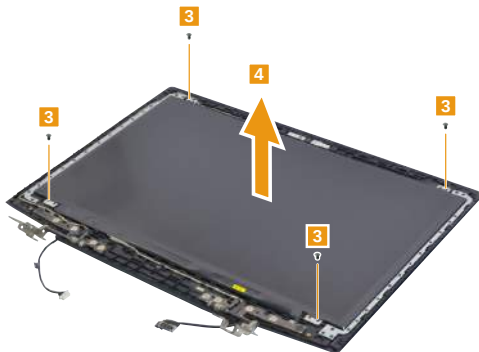

Step	Screw (quantity)	Color	Torque
3	M2.0 × 3.0 mm, Phillips head, nylok-coated (3) LCD to A cover	Sliver	2.0 ± 0.15 kgf.cm


Peel off the adhesive tape and detach the LCD connector in the direction shown by arrow **5**. Then remove the LCD cable.




Figure 14. Removal steps of LCD unit (continued)

Lift the camera board a little in the direction shown by arrow **6**. Disconnect the camera connector in the direction shown by arrow **7**. Then remove the camera board.

Note: The integrated camera is stuck on the top center of the LCD cover.

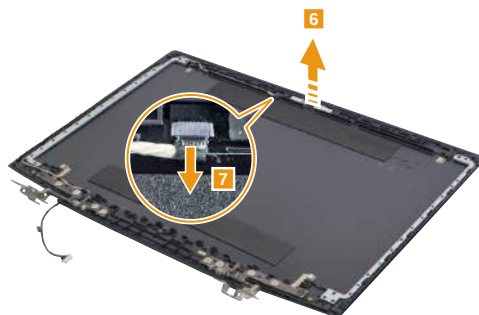


Remove the camera cable **8**.

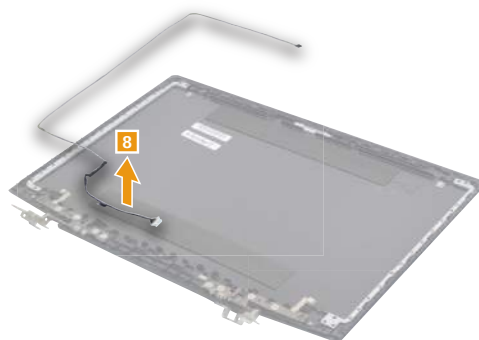

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual


Figure 14. Removal steps of LCD unit (continued)

Remove the screws **9** and **10**.

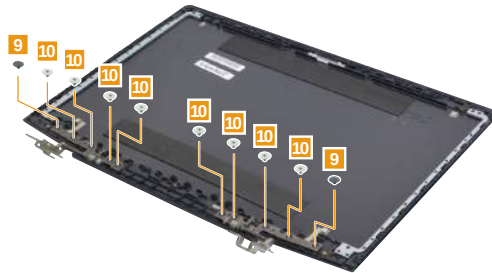

Step	Screw (quantity)	Color	Torque
9	M2.5 × 2.5 mm, Phillips head, nylok-coated (2) Hinge to A-cover	Black	3.0 ± 0.15 kgf.cm
10	M2.5 × 3.0 mm, Phillips head, nylok-coated (8) Hinge to A-cover	Sliver	3.0 ± 0.15 kgf.cm

Then release the hinges in the direction shown by arrows **11**.

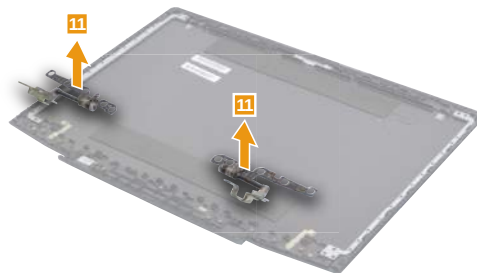

Locations

Front and right-side view

- 1 Integrated camera
- 2 Built-in microphone
- 3 Computer display
- 4 Power button
- 5 Speaker
- 6 Wireless LAN antennas
- 7 System status indicators


Note: For the description of each indicator, see “Status indicators” on page 28.

- 8 Touchpad
- 9 USB port
- 10 HDMI port
- 11 RJ-45 port
- 12 Kensington lock slot



Bottom and left-side view

- 1** Novo button
- 2** Combo audio jack
- 3** Memory card slot
- 4** USB port
- 5** AC power adapter jack
- 6** Ventilation slots
- 7** Speaker

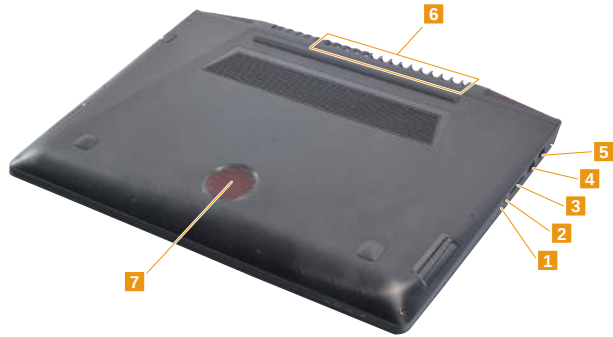

Parts list

This section presents the following service parts:

- “Overall” on page 74
- “LCD FRUs” on page 80
- “Miscellaneous parts” on page 84
- “AC adapters” on page 84
- “Screws” on page 84
- “Power cords” on page 85

Note:

Each FRU is available for all types or models, unless specific types or models are specified.


Attention:

Do not attempt to replace an FRU on your own. If an FRU is damaged, contact a Lenovo authorized servicer or a marketing representative for replacement or repair. Only qualified technicians can inspect or repair this product.


// ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

Overall

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK

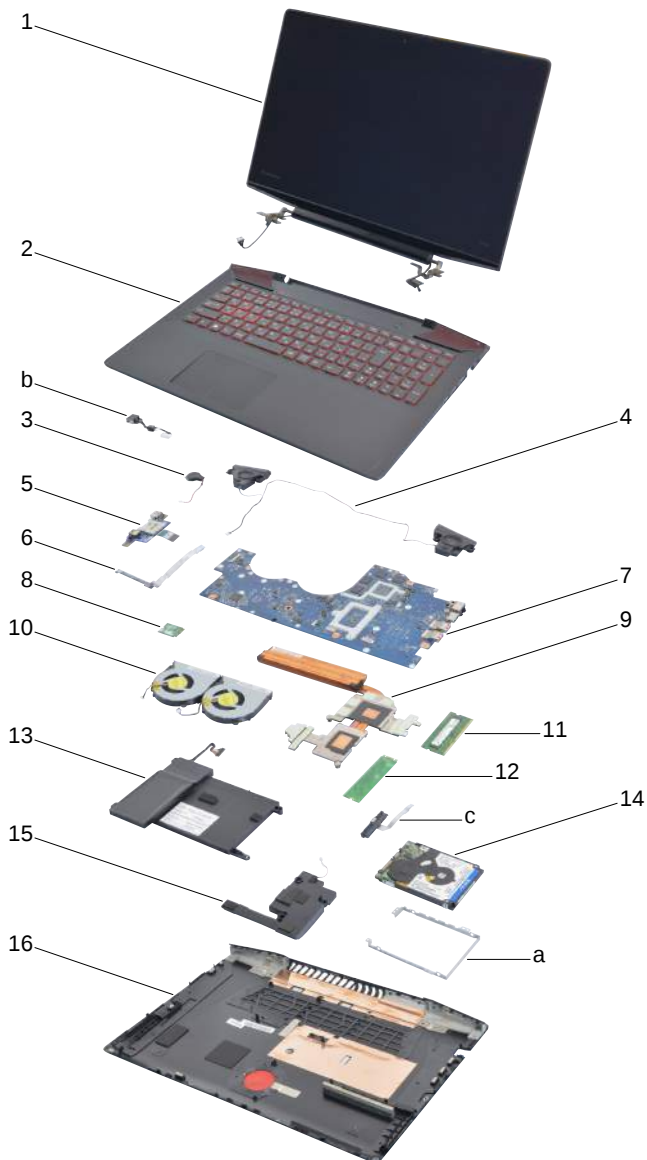

ideapad Y700-17ISK

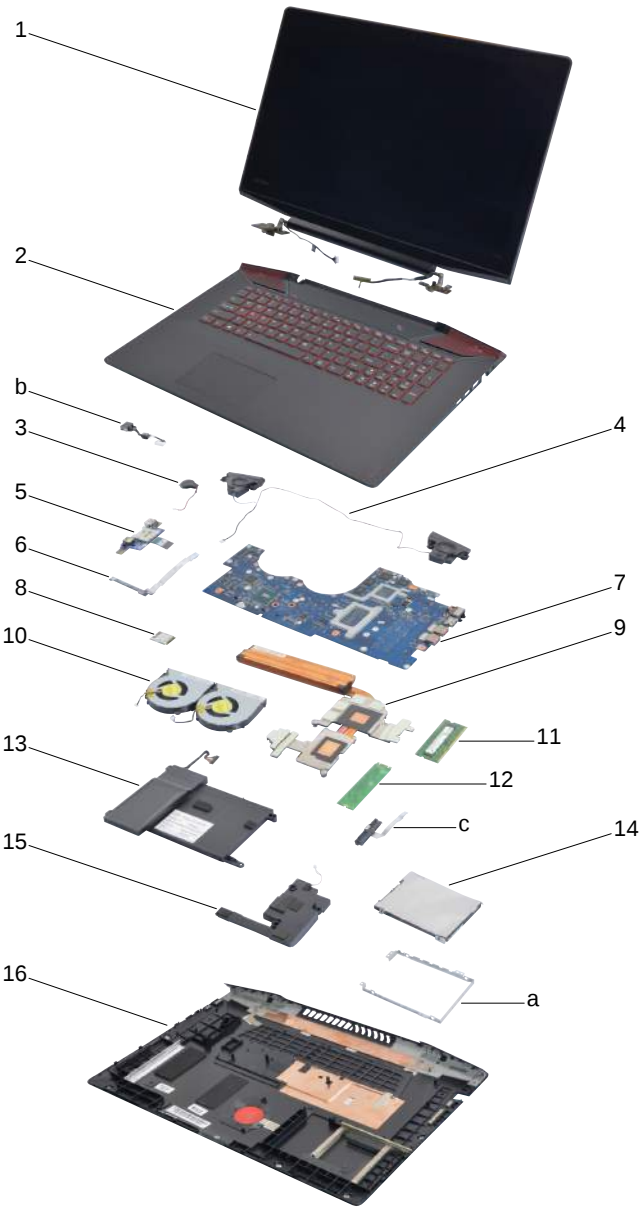

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

Table 4. Parts list—Overall

No.	FRU	FRU no.	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
a-c	See "Miscellaneous parts" on page 84.						
1	LCD unit (see "LCD FRUs" on page 80.)						
2	Upper Case L Y700-15ACZ W/KB JP	5CB0K25530	N	•	•	•	
2	Upper Case L Y700-15ACZ W/KB FR-AR	5CB0K25516		•	•	•	
2	Upper Case L Y700-15ACZ W/KB BZ	5CB0K25548		•	•	•	
2	Upper Case L Y700-15ACZ W/KB FR	5CB0K25531		•	•	•	
2	Upper Case L Y700-15ACZ W/KB HB	5CB0K25515		•	•	•	
2	Upper Case L Y700-15ACZ W/KB BE	5CB0K25545		•	•	•	
2	Upper Case L Y700-15ACZ W/KB USA	5CB0K25555		•	•	•	
2	Upper Case L Y700-15ACZ W/KB TH	5CB0K25536		•	•	•	
2	Upper Case L Y700-15ACZ W/KB PO	5CB0K25521		•	•	•	
2	Upper Case L Y700-15ACZ W/KB TC	5CB0K25553		•	•	•	
2	Upper Case L Y700-15ACZ W/KB HG	5CB0K25535		•	•	•	
2	Upper Case L Y700-15ACZ W/KB ND	5CB0K25520		•	•	•	
2	Upper Case L Y700-15ACZ W/KB ICE	5CB0K25554		•	•	•	
2	Upper Case L Y700-15ACZ W/KB DUTH	5CB0K25539		•	•	•	
2	Upper Case L Y700-15ACZ W/KB LA	5CB0K25522		•	•	•	
2	Upper Case L Y700-15ACZ W/KB RU	5CB0K25556		•	•	•	
2	Upper Case L Y700-15ACZ W/KB SL	5CB0K25540		•	•	•	
2	Upper Case L Y700-15ACZ W/KB GR	5CB0K25523		•	•	•	
2	Upper Case L Y700-15ACZ W/KB CZ-SK	5CB0K25551		•	•	•	
2	Upper Case L Y700-15ACZ W/KB SP	5CB0K25547		•	•	•	
2	Upper Case L Y700-15ACZ W/KB US INT	5CB0K25532		•	•	•	
2	Upper Case L Y700-15ACZ W/KB UK	5CB0K25517		•	•	•	
2	Upper Case L Y700-15ACZ W/KB AR-E	5CB0K25552		•	•	•	
2	Upper Case L Y700-15ACZ W/KB IT	5CB0K25534		•	•	•	
2	Upper Case L Y700-15ACZ W/KB INDIA	5CB0K25524		•	•	•	
2	Upper Case L Y700-15ACZ W/KB US	5CB0K25511		•	•	•	
2	Upper Case L Y700-15ACZ W/KB TR	5CB0K25538		•	•	•	
2	Upper Case L Y700-15ACZ W/KB SW	5CB0K25528		•	•	•	
2	Upper Case L Y700-15ACZ W/KB KO	5CB0K25513		•	•	•	
2	Upper Case L Y700-15ACZ W/KB GK	5CB0K25542		•	•	•	
2	Upper Case L Y700-15ACZ W/KB CF-E	5CB0K25549		•	•	•	
2	Upper Case L Y700-15ACZ W/KB BU	5CB0K25533		•	•	•	
2	Upper Case L Y700-17ISK FR-AR	5CB0K37592					•
2	Upper Case L Y700-17ISK BZ	5CB0K37590					•
2	Upper Case L Y700-17ISK FR	5CB0K37651					•
2	Upper Case L Y700-17ISK HB	5CB0K37638					•
2	Upper Case L Y700-17ISK BE	5CB0K37616					•
2	Upper Case L Y700-17ISK USA	5CB0K37596					•
2	Upper Case L Y700-17ISK TH	5CB0K37655					•
2	Upper Case L Y700-17ISK PO	5CB0K37641					•
2	Upper Case L Y700-17ISK CH	5CB0K37626					•
2	Upper Case L Y700-17ISK HG	5CB0K37603					•
2	Upper Case L Y700-17ISK ND	5CB0K37662					•
2	Upper Case L Y700-17ISK ICE	5CB0K37647					•
2	Upper Case L Y700-17ISK NL	5CB0K37630					•
2	Upper Case L Y700-17ISK LA	5CB0K37648					•
2	Upper Case L Y700-17ISK RU	5CB0K37632					•

Table 4. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
2	Upper Case L Y700-17ISK SA	5CB0K37642	N				•
2	Upper Case L Y700-17ISK GR	5CB0K37623					•
2	Upper Case L Y700-17ISK CZ-SK	5CB0K37604					•
2	Upper Case L Y700-17ISK SP	5CB0K37663					•
2	Upper Case L Y700-17ISK US INT'E	5CB0K37600					•
2	Upper Case L Y700-17ISK UK	5CB0K37658					•
2	Upper Case L Y700-17ISK AR-E	5CB0K37645					•
2	Upper Case L Y700-17ISK IT	5CB0K37629					•
2	Upper Case L Y700-17ISK INDIA	5CB0K37608					•
2	Upper Case L Y700-17ISK US	5CB0K37589					•
2	Upper Case L Y700-17ISK TR	5CB0K37650					•
2	Upper Case L Y700-17ISK SW	5CB0K37635					•
2	Upper Case L Y700-17ISK KO	5CB0K37613					•
2	Upper Case L Y700-17ISK GK	5CB0K37593					•
2	Upper Case L Y700-17ISK CE-F	5CB0K37654					•
2	Upper Case L Y700-17ISK BU	5CB0K37640					•
3	RTC Battery L Y700-15ACZ	5B10K26870		•	•	•	•
4	Y51 JBL Blade N Speaker	5SB0H54343		•	•	•	
4	Y71 JBL Blade N Speaker	5SB0H54342					•
5	IO Board L Y700-15ACZ W/Cable	5C50K25541		•			
5	USB Board L Y700-15ISK W/Cable	5C50K28152			•	•	
5	USB Board L Y700-17ISK W/Cable	5C50K37661					•
6	LED Board L Y700-15ACZ W/Cable	5C50K25529		•			
6	LED Board L Y700-15ISK W/Cable	5C50K28147			•	•	
6	LED Board L Y700-17ISK W/Cable	5C50K37659					•
7	MB L Y700-15ACZ NOK FX-8800P 2G	5B20K26873		•			
7	MB L Y700-15ACZ WIN FX-8800P 2G	5B20K26869		•			
7	MB L Y700-15ACZ NOK A10-8700 2G	5B20K26866		•			
7	MB L Y700-15ACZ WIN A10-8700 2G	5B20K26862		•			
7	MB L Y700-15ACZ NOK FX-8800P 4G	5B20K26868		•			
7	MB L Y700-15ACZ WIN FX-8800P 4G	5B20K26865		•			
7	MB L Y700-15ACZ NOK A10-8700 4G	5B20K26859		•			
7	MB L Y700-15ACZ WIN A10-8700 4G	5B20K26871		•			
7	MB L Y700-15ISK NOK I7-6700 2G	5B20K28150			•	•	
7	MB L Y700-15ISK WIN I7-6700 2G	5B20K28179			•	•	
7	MB L Y700-15ISK NOK I7-6700 4G	5B20K28164			•	•	
7	MB L Y700-15ISK WIN I7-6700 4G	5B20K28148			•	•	
7	MB L Y700-15ISK NOK I7-6300 2G	5B20K28176			•	•	
7	MB L Y700-15ISK WIN I7-6300 2G	5B20K28160			•	•	
7	MB L Y700-15ISK NOK I7-6300 4G	5B20K28144			•	•	
7	MB L Y700-15ISK WIN I7-6300 4G	5B20K28172			•	•	
7	MB L Y700-17ISK NOK I7-6700 2G	5B20K37611					•
7	MB L Y700-17ISK WIN I7-6700 2G	5B20K37605					•
7	MB L Y700-17ISK NOK I7-6700 4G	5B20K37597					•
7	MB L Y700-17ISK WIN I7-6700 4G	5B20K37628					•
7	MB L Y700-17ISK NOK I5-6300 2G	5B20K37619					•
7	MB L Y700-17ISK WIN I5-6300 2G	5B20K37607					•
7	MB L Y700-17ISK NOK I5-6300 4G	5B20K37601					•
7	MB L Y700-17ISK WIN I5-6300 4G	5B20K37594					•

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

Table 4. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
8	WLAN, Cbt BCM43162 1x1AC+BT4.0 PCIE M.2 WLAN V2	SW10A11586	N	•	•	•	•
8	WLAN, Cbt RTL8821AE 1x1AC+BT4.0 PCIE M.2 WLAN	SW10A11648		•	•	•	•
8	WLAN, Ltn NFA435 1x1AC+BT4.0 PCIE M.2 WLAN	SW10A11641		•	•	•	•
8	WLAN, Ltn BCM4350 2x2AC+BT4.0 PCIE M.2 WLAN	SW10H24481		•	•	•	•
8	WLAN, Cbt BCM4352 2x2AC+BT4.0 PCIE M.2 WLAN	20200480		•			
8	WLAN, Fxn BCM4350 2x2AC+BT4.0 PCIE M.2 WLAN	SW10H24482			•	•	•
8	WLAN, Intel 3165 1x1AC+BT PCIE M.2 WLAN	SW10H24486			•	•	•
8	WLAN, Intel 8260 2x2AC+BT PCIE M.2 WLAN NV	SW10A11646			•	•	•
9	Heatsink L Y700-15ACZ DIS	5H40K25514		•			
9	Heatsink L Y700-15ISK DIS	5H40K28173			•	•	
9	Heatsink L Y700-17ISK DIS	5H40K37646					•
10	Fan L Y700-15ACZ	5F10K25525		•	•	•	
10	FAN L Y700-17ISK	5F10K37617					•
11	DIMM, M471B5173EB0-YK0 20nm 4GB DDR3L 1600	5M30G18425		•			
11	DIMM, SK HMT451S6BFR8A-PB/RD 4GB DDR3L 1600	11202706		•			
11	DIMM, RMT3170MN68F9F-1600 4GB DDR3L 1600	5M30G75129		•			
11	DIMM, MC MT8KTF51264HZ-1G6E1 4GB DDR3L 160	11202125		•			
11	DIMM, M471B1G73EB0-YK0 20nm 8GB DDR3L 1600	5M30G18424		•			
11	DIMM, SK HMT41GS6BFR8A-PB/RD 8GB DDR3L 1600	11202707		•			
11	DIMM, RMT3160ME68FAF-1600 8GB DDR3L 1600	11202450		•			
11	DIMM, Mic MT16KTF1G64HZ-1G6E1 DDR3L 1600 8GB	11201304		•			
11	DIMM, M471A5143DB0-CPB D/25nm/4Gbx8	5M30H35724			•	•	•
11	DIMM, MTA8ATF51264HZ-2G1A1 Z80A/30nm/4Gbx8	5M30H35725			•	•	
11	DIMM, M471A1G43DB0-CPB D/25nm/4Gbx8	5M30H35727			•	•	•
11	DIMM, HMA451S6AFR8N-TFN0 A/2ynm/4Gbx8	5M30H35732			•	•	•
11	DIMM, HMA41GS6AFR8N-TFN0 A/2ynm/4Gbx8	5M30H35726			•	•	•
12	SSD, Samsung PM871 MZNLN128HCGR M.2 128GB SSD	5SD0H00094		•	•	•	•
12	SSD, Liteon CV1-8B128 128GB M.2 SSD	5SD0J21066		•	•	•	•
12	SSD, Samsung MZNLN256HCHP M.2 256GB SSD	5SD0H00092		•	•	•	•


Table 4. Parts list—Overall (continued)

No.	FRU	FRU no.	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
12	SSD, Liteon CV1-8B256 256GB M.2 SSD	5SD0J21061	N	●	●	●	●
12	SSD, Samsung MZNLN512HCJH M.2 512GB SSD	5SD0H00095		●	●	●	●
12	SSD, Liteon CV1-8B512 512GB M.2 SSD	5SD0J21063		●	●	●	●
12	SSD, Samsung MZVLV128HCGR 128GB M.2 PCIE SSD	5SD0J46480			●	●	●
12	SSD, Samsung MZVLV256HCHP 256GB M.2 PCIE SSD	5SD0J46479				●	●
12	SSD, Samsung MZVLV512HCJH 512GB M.2 PCIE SSD	5SD0J46481			●	●	●
13	Battery, Yx1 SP/A L14M4P23 14.8V60Wh4cell bty	5B10H22084		●	●	●	●
13	Battery, Yx1 SP/C L14M4P23 14.8V60Wh4cell bty	5B10H22085		●	●	●	●
13	Battery, Yx1 SY L14S4P22 14.8V60Wh4cell bty	5B10H22086		●	●	●	●
14	Hard disk drive, ST500LT012 6G 7mm 5.4K 500G HDD	16200383		●	●	●	●
14	Hard disk drive, WD5000LPCX-24VHAT0 7mm 5400rpm 500G HDD	5H20J35762		●	●	●	●
14	Hard disk drive, WD10SPCX-24HWST1 6G 7mm 1T HDD	16200554		●	●	●	●
14	Hard disk drive, TSB MQ02ABF100 6G 1TB	5H20G09709		●	●	●	●
14	Hard disk drive, WD10S21X-24R1BT0 7mm 5400rpm 1TB+8G SSHD	16200681		●	●	●	●
14	Hard disk drive, Jaguar B7 Refresh (6G) HTS545050A7E660 6G 7mm 5.4K 500G HDD	5H20H14223			●	●	
14	Hard disk drive, MQ01ABF050 6G 7mm 5.4K 500G HDD	16200433			●	●	
14	Hard disk drive, HTS541010A7E630 7mm 5400rpm 1T HDD	16200658			●	●	
15	Y51/71 JBL Ody6 Slim Speaker	5SB0H52755		●	●	●	●
16	Lower Case L Y700-15ACZ	5CB0K25546	●	●	●		
16	Lower Case L Y700-17ISK	5CB0K37633				●	
—	AC adapter (see “AC adapters” on page 84).						


LCD FRUs

In ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/Y700-17ISK, there are following types of LCDs.

- “15.6-in. Glass LCD module”

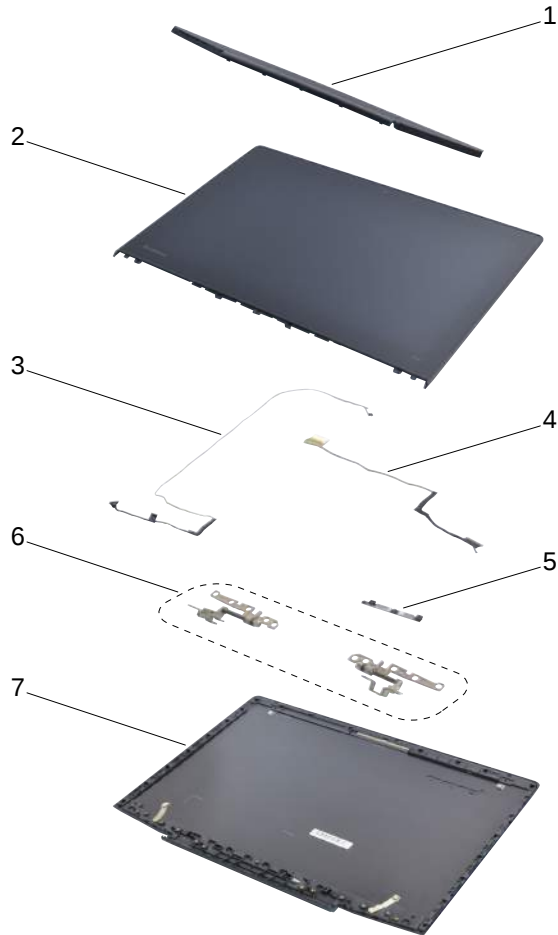

- “15.6-in. Normal LCD module”

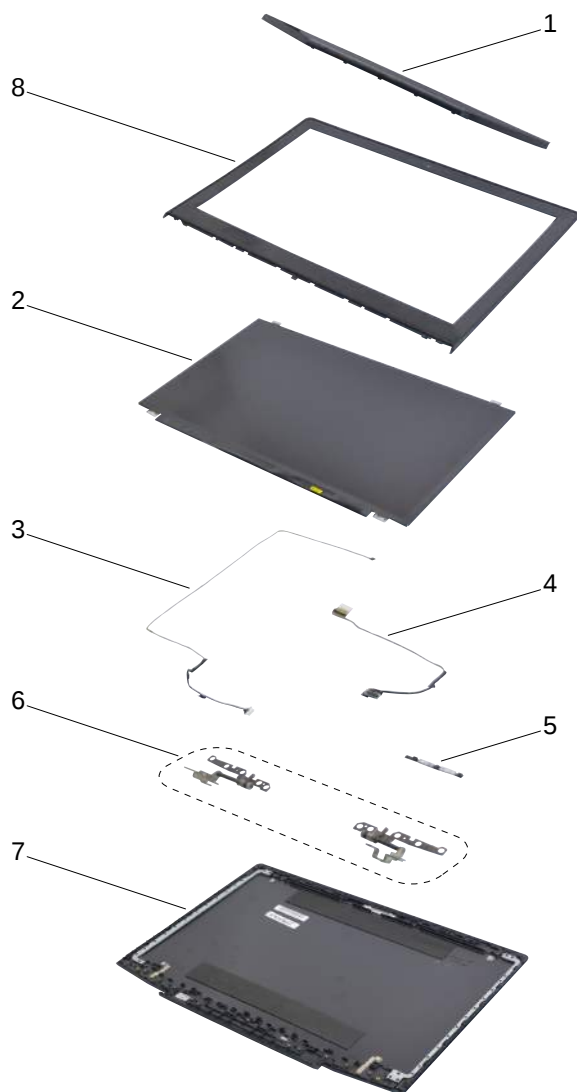

// ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

- “17.3-in. Glass LCD module”

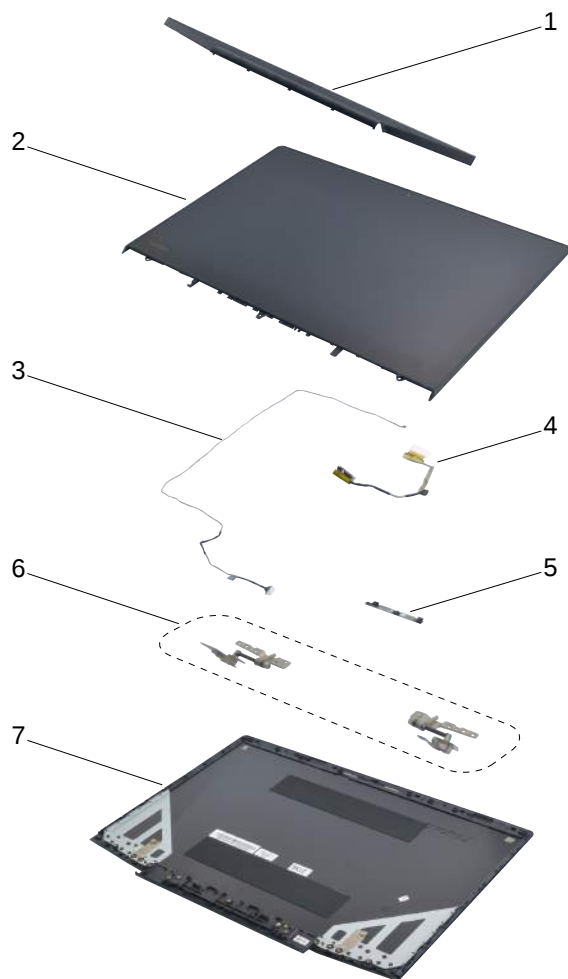


Table 5. Parts list—LCD FRUs

Note: Select models have a 3D camera. LCD cover, 3D camera cable, LCD module and microphone board are different from the common models. Please refer to the actual product.

No.	FRU	FRU no.	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
1	Hinge Cover Y700-15ACZ	5CB0K25526	N	•	•	•	
1	Bezel Cap L Y700-17ISK	5B30K37643					•
2	LCD Module L Y700-15ACZ	5D10K25568		•	•	•	
2	LCD Module L Y700-15ISK UHD	5D10K29634			•	•	
2	LCDModuleL Y700-17ISK AG+FHD	5D10K37624					•
2	LCD Module L 80NV AG+FHD For 3D	5D10K81625			•	•	
3	Camera Cable L Y700-15ACZ	5C10K25527		•			
3	Camera Cable L 80NY For Bezel	5C10K79436		•			
3	Camera Cable Y700-15ISK	5C10K28166			•	•	
3	Camera Cable L Y700-17ISK	5C10K37652					•
3	Camera Cable L 80NV For 3D	5C10K81633			•	•	
4	EDP Cable L Y700-15ACZ	5C10K25543		•			
4	EDP Cable L Y700-15ISK FHD	5C10K28146			•	•	
4	EDP Cable L Y700-15ISK UHD	5C10K28163			•	•	
4	EDP Cable L Y700-17ISK	5C10K37591					•
5	Camera L Y700-15ACZ 2MIC HD	5C20K25550		•	•	•	•
5	Camera L 80NY HD 2MIC For Bezel	5C20K79437		•			
6	Hinge L Y700-15ACZ L+R	5H50K25537		•	•	•	
6	Hinge L 80NY L+R For Bezel	5H50K79439		•			
6	Hinge L Y700-17ISK L+R	5H50K37606					•
7	LCD Cover L Y700-15ACZ	5CB0K25512		•	•	•	
7	LCD Cover L 80NY For Bezel	5CB0K79438		•			
7	LCD Cover L 80NV For 3D	5CB0K81629			•	•	
7	LCD Cover L Y700-17ISK	5CB0K37649					•
8	LCD Bezel L 80NY For Bezel	5B30K79440		•			
*	MIC Board L 80NV For 3D	5C50K81637			•	•	

* For 3D only.

Miscellaneous parts

Table 6. Parts list—Miscellaneous parts

FRU	P/N	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
System miscellaneous parts:						
• (a) HDD Bracket L Y700-15ACZ	5B40K25518	N	•	•	•	•
Cable miscellaneous parts:						
• (b) DC-IN Cable L Y700-15ACZ	5C10K25519		•	•	•	
• (b) DC-IN Cable L Y700-17ISK	5C10K37636					•
• (c) HDD Cable L Y700-15ACZ	5C10K25544		•	•	•	•
Note: Italicized letters in parentheses are references to the exploded view in "Overall" on page 74.						

AC adapters

Table 7. Parts list—3-pin AC adapters

FRU	P/N	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
Delta ADL135NDC3A 20V6.75A adapter	36200605	*	•	•	•	•
Liteon ADL135NLC3A 20V6.75A adapter	36200609		•	•	•	•
Delta ADL135NDC3A 20V6.75A BIS	5A10J46690		•	•	•	•
Liteon ADL135NLC3A 20V6.75A AD BIS	5A10J75112		•	•	•	•

Screws

Table 8. Parts list—Screws

FRU	P/N	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
Screw L Y700-15ACZ FAN/Battery	5S10K26864	N	•	•	•	•
Screw L Y700-15ACZ Hinge base	5S10K26861		•	•	•	
Screw L Y700-15ACZ D Cover 15	5S10K26867		•	•	•	•
Screw L Y700-15ACZ D Cover 4	5S10K26872		•	•	•	•
Screw L Y700-15ACZ Hinge 2.5	5S10K26860		•	•	•	
Screw L Y700-15ACZ Hinge 3	5S10K26863		•	•	•	
Screw L Y700-15ACZ SSD	5S10K81631		•			
VIUU3 SCREW M M2.0D3.0L K 3.5D0.5T	90204421			•	•	
QIQY6 SCREW 2D 3L K 8D ZK NL+	90201998			•	•	•
ACLU1 ScrewPanel-A/MB-D/IO BD-D	90205117			•	•	
AILZA Screw M M 3.0D 3.0L K 4.9D	90203986			•	•	•
Screw L Y700-17ISK 2.5D 4L	5S10K37612					•
QIQY6 SCREW 2.5D 5.0L K 4.6D NI NL+	90202001					•
Screw L Y700-17ISK 1.98D	5S10K37639					•
Screw L Y700-17ISK 2D	5S10K37602					•

Power cords

A Lenovo power cord for a specific country or region is usually available only in that country or region:

Table 9. Parts list—3-pin power cords

Region	P/N	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
UK 3pin • LINETEK LP-61L+ H03VV-F+ LS15 1m	145000593	*	•	•	•	•
UK 3pin • Longwell LP-61L+H03VV-F+LS-18 1m	145000561		•	•	•	•
UK 3pin • VOLEX MP5004+H03VV-F+VAC5S 1m	145000605		•	•	•	•
UK 3pin • lux 0031+H03VV-F 0.75/3C+0011 1m	145500000		•	•	•	•
Europe 3pin • LINETEK LP-34+H03VV-F + LS15 1m	145000585		•	•	•	•
Europe 3pin • Longwell LP-34A+H03VV-F+LS-18 1m	145000553		•	•	•	•
Europe 3pin • VOLEX M2511+HO3VV-F+VAC5S 1m	145000525		•	•	•	•
Europe 3pin • lux 0033+H03VV-F 0.75/3C+0011 1m	145500001		•	•	•	•
US 3pin • LINETEK LP-30B + SPT-2 + LS15 1m	145000594		•	•	•	•
US 3pin • Longwell LP-30B+SPT-2 18AWG+LS-18 1m	145000562		•	•	•	•
US 3pin • Volex US15S3+SPT-2 VAC5S 1m	145000537		•	•	•	•
US 3pin • lux 0014+SPT-2 60°C 18/3C+0016 1m	145500002		•	•	•	•
China 3pin • LINETEK PC323+RVV300/300+LS15 1m	145000600		•	•	•	•
China 3pin • Longwell LSG-31+RVV300/300+LS-18 1m	145000568		•	•	•	•
China 3pin • VOLEX GB10S3+RVV 300/500+VAC5S 1m	145000538		•	•	•	•
China 3pin • lux 0036+RVV 300/300 0.75/3C+0002 1m	145500003		•	•	•	•
India 3pin • LINETEK PE-361+ H05VV-F+ LS15 1m	145000592		•	•	•	•
India 3pin • Longwell LP-67+BIS+LS-18 1m	145000560		•	•	•	•
India 3pin • lux 0046+IS694 0.75/3C+0011 1m code	145500004		•	•	•	•
Japan 3pin • LINETEK LS15+VCTF+LP-54 1m	145000587		•	•	•	•

ideapad Y700-15ACZ/Y700-15ISK/Y700 Touch-15ISK/ Y700-17ISK Hardware Maintenance Manual

Table 9. Parts list—3-pin power cords (continued)

Region	P/N	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
Japan 3pin • Longwell LP-54+VCTF+LS-18 1m	145000555	*	•	•	•	•
Japan 3pin • VOLEX VAC5S+VCTF+M755 1m	145000530		•	•	•	•
Japan 3pin • lux 0018(E)+VCTF 0.75/3C+0021 1m	145500005		•	•	•	•
Australia 3pin • LINETEK LS15+H03VV-F+LP-23A 1m	145000589		•	•	•	•
Australia 3pin • Longwell LP-23A+LFC-3R+LS-18 1m	145000557		•	•	•	•
Australia 3pin • VOLEX AU10S3+H03VV-F+VAC5S 1m	145000532		•	•	•	•
Australia 3pin • lux 0038+H03VV-F 0.75/3C+0011 1m	145500006		•	•	•	•
Taiwan 3pin • LINETEK LS15+VCTF+LP-53 1m	145000588		•	•	•	•
Taiwan 3pin • Longwell LP-71+VCTF+LS-33 1m	145000556		•	•	•	•
Taiwan 3pin • VOLEX TW15CS3+VCTF+VAC5S 1m	145000531		•	•	•	•
Taiwan 3pin • lux 0019+VCTF 0.75/3C+0021 1m	145500007		•	•	•	•
Korea 3pin • LINETEK LS15+H05VV-F+LP-E04A 1m	145000590		•	•	•	•
Korea 3pin • Longwell LP-486+KTLH03VV-F+LS-5 1m	145000558		•	•	•	•
Korea 3pin • VOLEX M2511+KETI IEC+VAC5S 1m	145000533		•	•	•	•
Korea 3pin • lux 0033+H03VV-F 0.75/3C+0011 1m	145500008		•	•	•	•
Italy 3pin • LINETEK LS15+H03VV-F+PE-336 1m	145000591		•	•	•	•
Italy 3pin • Longwell LP-22+H03VV-F+LS-18 1m	145000559		•	•	•	•
Italy 3pin • VOLEX IT10S3+H03VV-F+VAC5S 1m	145000535		•	•	•	•
Italy 3pin • lux 0029+H03VV-F 0.75/3C+0011 1m	145500009		•	•	•	•
South Africa 3pin • LINETEK LS15+H03VV-F+PE-364 1m	145000586		•	•	•	•
South Africa 3pin • Longwell LP-39+H03VV-F+LS-18 1m	145000554		•	•	•	•
South Africa 3pin • lux 0044+H03VV-F 0.75/3C+0011 1m	145500010		•	•	•	•

Table 9. Parts list—3-pin power cords (continued)

Region	P/N	CRU ID.	Y700-15ACZ	Y700-15ISK	Y700 Touch-15ISK	Y700-17ISK
Brazil 3pin • LINETEK LS15 H03VV-F LP26A 1m	145000596	*	•	•	•	•
Brazil 3pin • Longwell LP-46+H03VV-F+LS-18 1m	145000564		•	•	•	•
Brazil 3pin • VOLEX CH10S3+H03VV-F+VAC5S 1m	145000527		•	•	•	•
Brazil 3pin • lux 0034+H03VV-F 0.75/3C+0011 1m	145500011		•	•	•	•
Israel 3pin • LINETEK LS15+H03VV-F+LP-41 1m	145000595		•	•	•	•
Israel 3pin • Longwell LP-41+H03VV-F+LS-18 1m	145000563		•	•	•	•
Israel 3pin • VOLEX SI16S3+H03VV-F+VAC5S 1m	145000526		•	•	•	•
Israel 3pin • lux 0041+H03VV-F 0.75/3C+0011 1m	145500012		•	•	•	•
Switzerland 3pin • LINETEK LS15+H03VV-F+LP-37 1m	145000597		•	•	•	•
Switzerland 3pin • Longwell LP-37+H03VV-F+LS-18 1m	145000565		•	•	•	•
Switzerland 3pin • VOLEX MP232+H03VV-F+VAC5S 1m	145000524		•	•	•	•
Switzerland 3pin • lux 0027+H03VV-F 0.75/3C+0011 1m	145500013		•	•	•	•
Denmark 3pin • LINETEK LS15+H03VV-F+LP-38 1m	145000598		•	•	•	•
Denmark 3pin • Longwell LP-40+H03VV-F+LS-18 1m	145000566		•	•	•	•
Denmark 3pin • VOLEX MP233D+H03VV-F+VAC5S 1m	145000534		•	•	•	•
Denmark 3pin • lux 0048+H03VV-F 0.75/3C+0011 1m	145500014		•	•	•	•
Argentina 3pin • LINETEK LS15+H03VV-F+LP39 1m	145000599		•	•	•	•
Argentina 3pin • Longwell LP-24+H03VV-F+LS-18 1m	145000567		•	•	•	•
Argentina 3pin • VOLEX VA2073+H03VV-F+VAC5S 1m	145000528		•	•	•	•
Argentina 3pin • lux 0040+H03VV-F 0.75/3C+0011 1m	145500015		•	•	•	•
Thailand 3pin • lux 0014+H03VV-F 0.75/3C+0011 1m	5L60J33143		•	•	•	•

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents.

LENOVO GROUP LTD. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Trademarks

The following terms are trademarks or registered trademarks of Lenovo in the United States, other countries, or both.

Lenovo

OneKey

ideapad

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Other company, products, or service names may be trademarks or service marks of others.