



Contact SAMSUNG WORLDWIDE

If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care centre.

Country	Customer Care Centre ☎	Web Site
NIGERIA	0800-726-7864	www.samsung.com/afrika_en/
GHANA	0800-10077 0302-200077	www.samsung.com/afrika_en/
COTE D'IVOIRE	8000 0077	www.samsung.com/afrika_fr/
SENEGAL	800-00-0077	www.samsung.com/afrika_fr/
CAMEROON	7095- 0077	www.samsung.com/afrika_fr/
KENYA	0800 545 545	www.samsung.com
UGANDA	0800 300 300	www.samsung.com
TANZANIA	0685 88 99 00	www.samsung.com
RWANDA	9999	www.samsung.com
BURUNDI	200	www.samsung.com
DRC	4999999	www.samsung.com
SUDAN	1969	www.samsung.com
SOUTH AFRICA	0860-SAMSUNG (726-7864)	www.samsung.com
BOTSWANA	8007260000	www.samsung.com
NAMIBIA	08 197 267 864	www.samsung.com
ZAMBIA	0211 350370	www.samsung.com
MOZAMBIQUE	847267864 / 827267864	www.samsung.com
ALGERIA	0800 100 100	www.samsung.com/n_afrika
TUNISIA	80-1000-12	www.samsung.com/n_afrika



Plasma TV

user manual



Thank you for purchasing this Samsung product. To receive more complete service, please register your product at www.samsung.com/register

Model _____ Serial No. _____



BN68-05788A-00

Please read the safety instructions below before installing and using the product.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO QUALIFIED PERSONNEL.



This symbol indicates that high voltage is present inside. It is dangerous to make any kind of contact with any internal part of this product.



This symbol indicates that important literature concerning operation and maintenance has been included with this product.

- The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of this apparatus, and to protect it from overheating, these slots and openings must never be blocked or covered.
 - Do not cover the slots and openings with a cloth or other materials.
 - Do not block the slots and openings by placing this apparatus on a bed, sofa, rug or other similar surface.
 - Do not place this apparatus in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.
- Do not place this apparatus near or over a radiator or heat register, or where it is exposed to direct sunlight.
- Do not place a vessel containing water (vases etc.) on this apparatus, as this can result in a risk of fire or electric shock.
- Do not expose this apparatus to rain or place it near water (near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool etc.). If this apparatus accidentally gets wet, unplug it and contact an authorized dealer immediately.
- Make sure to pull out the power cord from the outlet before cleaning.
- This apparatus use batteries. In your community, there might be regulations that require you to dispose of these batteries properly to protect the environment. Please contact your local authorities for disposal or recycling information.
- Do not overload wall outlets, extension cords, or adaptors beyond their capacity, since this can result in fire or electric shock.
- Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at the plug end, where connected to adaptors, and at the point where they exit from the apparatus.
- To protect this apparatus from a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the set due to lightning and power line surges.
- Before connecting the AC power cord to the DC adaptor outlet, make sure the voltage designation of the DC adaptor corresponds to the local electrical supply. (depending on the model)
- Never insert anything metallic into the open parts of this apparatus. Doing so may create a danger of electric shock.
- To avoid electric shock, never touch the inside of this apparatus. Only a qualified technician should open this apparatus.
- Make sure to plug the power cord in until it is firmly inserted. Pull on the plug, not the cord, when removing the power cord from the outlet. Do not touch the power cord with wet hands.
- If this apparatus does not operate normally - in particular, if there are any unusual sounds or smells coming from it - unplug it immediately and contact an authorized dealer or service center.
- Be sure to pull the power plug out of the outlet if the TV is to remain unused or if you are to leave the house for an extended period of time (especially when children, elderly or disabled people will be left alone in the house).
 - Accumulated dust can cause an electric shock, an electric leakage, or a fire by causing the power cord to generate sparks and heat, or cause the insulation to deteriorate.
- Be sure to contact an authorized service center, when installing your set in a location with heavy dust, high or low temperatures, high humidity, chemical substances or where it will operate for 24 hours a day such as in an airport, a train station, etc. Failure to do so may cause serious damage to your set.
- Use only a properly grounded plug and receptacle.
 - An improper ground may cause electric shock or equipment damage. (Class I Equipment only.)
- To turn off the apparatus completely, you must pull the power plug out of the wall socket. Consequently, the power plug should be readily accessible at all times.
- Do not allow children to hang onto the product.
- Store the accessories (batteries, etc.) in a location safely out of the reach of children.
- Do not install the product in an unstable location such as a shaky self, a slanted floor, or a location exposed to vibration.
- Do not drop or impart a shock to the product. If the product is damaged, disconnect the power cord and contact a service center.
- To clean the product, unplug the power cord from the power outlet and wipe the product using a soft cloth dipped in a small amount of water. Do not use any chemicals such as wax, benzene, alcohol, thinners, insecticide, air freshener, lubricant or detergent. This may damage the appearance or erase the printing on the product.
- Do not expose the apparatus to dripping or splashing.
- Do not dispose of batteries in a fire.
- Do not short circuit, disassemble, or overheat the batteries.
- There is a danger of explosion if you replace the batteries with the wrong type of battery. Replace only with the same or equivalent type.
- **WARNING - TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.**



Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance. Product design and specifications may be changed without notice.

Digital TV notice

1. Functionalities related to Digital TV (DVB) are only available in countries/areas where DVB-T (MPEG2 and MPEG4 AVC) digital terrestrial signals are broadcasted or where you are able to access to a compatible DVB-C (MPEG2 and MPEG4 AAC) cable-TV service. Please check with your local dealer the possibility to receive DVB-T or DVB-C signal.
2. DVB-T is the DVB European consortium standard for the broadcast transmission of digital terrestrial television and DVB-C is that for the broadcast transmission of digital TV over cable. However, some differentiated features like EPG (Electric Programme Guide), VOD (Video On Demand) and so on, are not included in this specification. So, they cannot be workable at this moment.
3. Although this TV set meets the latest DVB-T and DVB-C standards, as of [August, 2008], the compatibility with future DVB-T digital terrestrial and DVB-C digital cable broadcasts cannot be guaranteed.
4. Depending on the countries/areas where this TV set is used some cable-TV providers may charge an additional fee for such a service and you may be required to agree to terms and conditions of their business.
5. Some Digital TV functions might be unavailable in some countries or regions and DVB-C might not work correctly with some cable service providers.
6. For more information, please contact your local Samsung customer care centre.
 - ✉ The reception quality of TV may be affected due to differences in broadcasting method between the countries. Please check the TV performance in the local SAMSUNG Authorized Dealer, or the Samsung Call Centre whether it can be improved by reconfiguring TV setting or not.

User Instructions

• Screen Image retention

Do not display a still image (such as on a video game) on the plasma display panel for more than several minutes as it can cause screen image retention. This image retention is also known as "screen burn". To avoid such image retention, reduce the degree of brightness and contrast of the screen when displaying a still image.

• Heat on the top of the Plasma TV

The top side of the product may be hot after long periods of use as heat dissipates from the panel through the vent hole in the upper part of the product.

This is normal and does not indicate any defect or operation failure of the product.

However, children should be prevented from touching the upper part of the product.

• The product is making a "cracking" noise.

A "cracking" noise may occur when the product contracts or expands due to a change in the surrounding environment such as temperature or humidity. This is normal and not a defect of the unit.

• Cell Defects

The PDP uses a panel consisting of 2,360,000(HD-level) to 6,221,000(FHD-level) pixels which require sophisticated technology to produce. However, there may be a few bright or dark pixels on the screen. These pixels will have no impact on the performance of the product.

• Avoid operating the TV at temperatures below 41°F (5°C)

• A still image displayed too long may cause permanent damage to the PDP Panel.



Watching the Plasma TV in 4:3 format for a long period of time may leave traces of borders displayed on the left, right and centre of the screen caused by the difference of light emission on the screen. Playing a DVD or a game console may cause similar effects to the screen.

Damages caused by the above effect are not covered by the Warranty.

• After-images on the Screen.

Displaying still images from Video games for longer than a certain period of time may produce partial after-images.

To prevent this effect, reduce the "brightness" and "contrast" when displaying still images for a long time.

• Warranty

Warranty does not cover any damage caused by image retention.

Burn-in is not covered by the warranty.

Contents

Getting Started 5	5 Accessories 5 Securing the Installation Space 6 Using the TV's Controller (Panel Key) 7 Viewing the Remote Control 8 Connecting to a COMMON INTERFACE slot (Your TV viewing Card Slot) 9 Initial Setup 9 Changing the Input Source 9 Source
Basic Features 10	10 Channel Menu 10 Using the INFO button (Now & Next guide) 10 Memorizing channels 11 Using the Channel menu 14 Locking Programme 14 Other Features 16 Picture Menu 16 Changing the Preset Picture Mode 16 Adjusting Picture Settings 18 Changing the Picture Options 19 Sound Menu 19 Changing the Preset Sound Mode 19 Adjusting Sound Settings
Preference Features 21	21 System Menu 21 Executing initial setup 21 Setting the Time 21 Using the Sleep Timer 21 Setting the On / Off Timer 23 Economical Solutions 23 Other Features
Advanced Features 25	25 Applications Menu 25 Using the Source List 25 Connecting a USB Device 26 Using the Media Contents 27 Playing the Photos / Videos / Music
Other Features 31	31 Support Menu 31 Using the Self Diagnosis 31 Updating the Software 32 Changing the Use Mode 32 Viewing the Contact Samsung 32 Using the Soccer Mode 33 Using the Screen&Sound Capture function 35 Teletext Feature 36 Installing the Wall Mount 37 Securing the TV to the Wall 38 Anti-theft Kensington Lock 39 Troubleshooting 42 Licence 42 Storage and Maintenance 43 Specifications 44 Index

Check the Symbol!



This function can be used by pressing the TOOLS button on the remote control.



NOTE




One-Touch Button

Accessories

- ✎ Please make sure the following items are included with your TV. If any items are missing, contact your dealer.
- ✎ The items' colours and shapes may vary depending on the models.
- ✎ Cables not included in the package contents can be purchased separately.

- | | |
|--|--|
| <ul style="list-style-type: none"> • Remote Control & Batteries (AAA x 2) • Regulatory Guide | <ul style="list-style-type: none"> • Power Cord • Owner's Instructions |
|--|--|

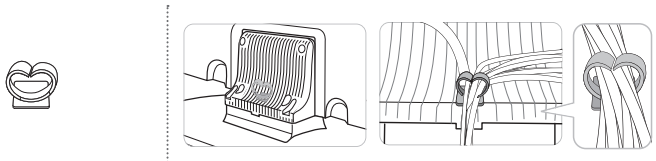


- | | |
|--|--|
| <ul style="list-style-type: none"> • Cable Holder | <p style="text-align: center;">Assembling the Cable Holder</p> |
|--|--|

Securing the Installation Space


Keep the required distances between the product and other objects (e.g. walls) to ensure proper ventilation. Failing to do so may result in fire or a problem with the product due to an increase in the internal temperature of the product.

- ✎ When using a stand or wall-mount, use parts provided by Samsung Electronics only.
 - If you use parts provided by another manufacturer, it may result in a problem with the product or an injury due to the product falling.
- ✎ The appearance may differ depending on the product.
- ✎ Be careful when you contact the TV because some parts can be somewhat hot.

Installation with a stand.

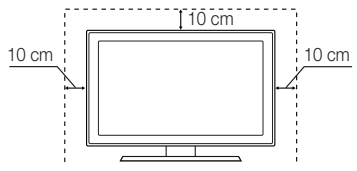

Installation with a wall-mount.

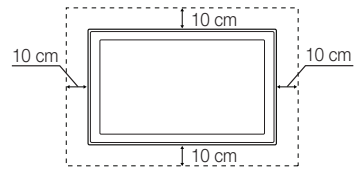


Getting Started

Using the TV's Controller (Panel Key)


The TV's Controller, a small joy stick like button on the rear left side of the TV, lets you control the TV without the remote control.

- Some functions which require a PIN code may not be available.
- The product colour and shape may vary depending on the model.
- Exits the menu when pressing the controller more than 1 second.
- When using the controller in the up/down/left/right directions, make sure you do not push the controller in first. If you push the controller in first it will not move in the up/down/left right directions.

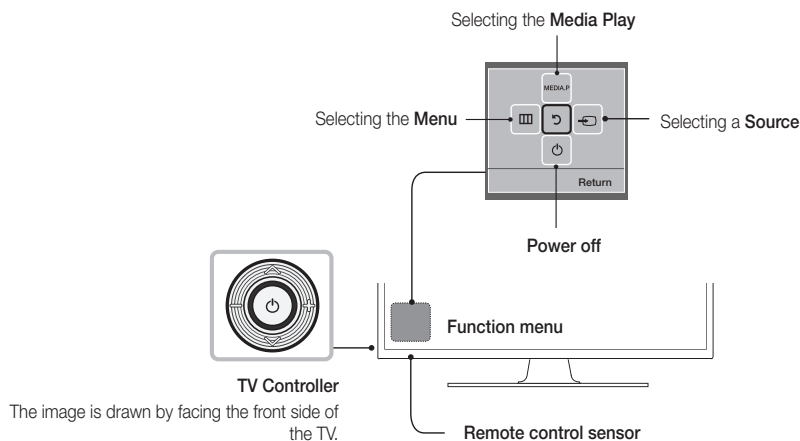

Standby mode


Do not leave your TV in standby mode for long periods of time (when you are away on a holiday, for example). A small amount of electric power is still consumed even when the power button is turned off. It is best to unplug the power cord.

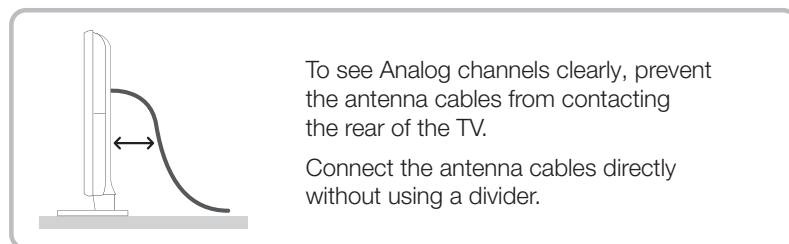


- The PDP device may interfere with an amateur radio or AM radio.
- When using two-way radio mobile and portable units or amateur radio or AM radio near by your TV, this may cause the TV to malfunction.

Viewing the Remote Control

This is a special remote control for the visually impaired persons and has Braille points on the Power, Channel, and Volume buttons.

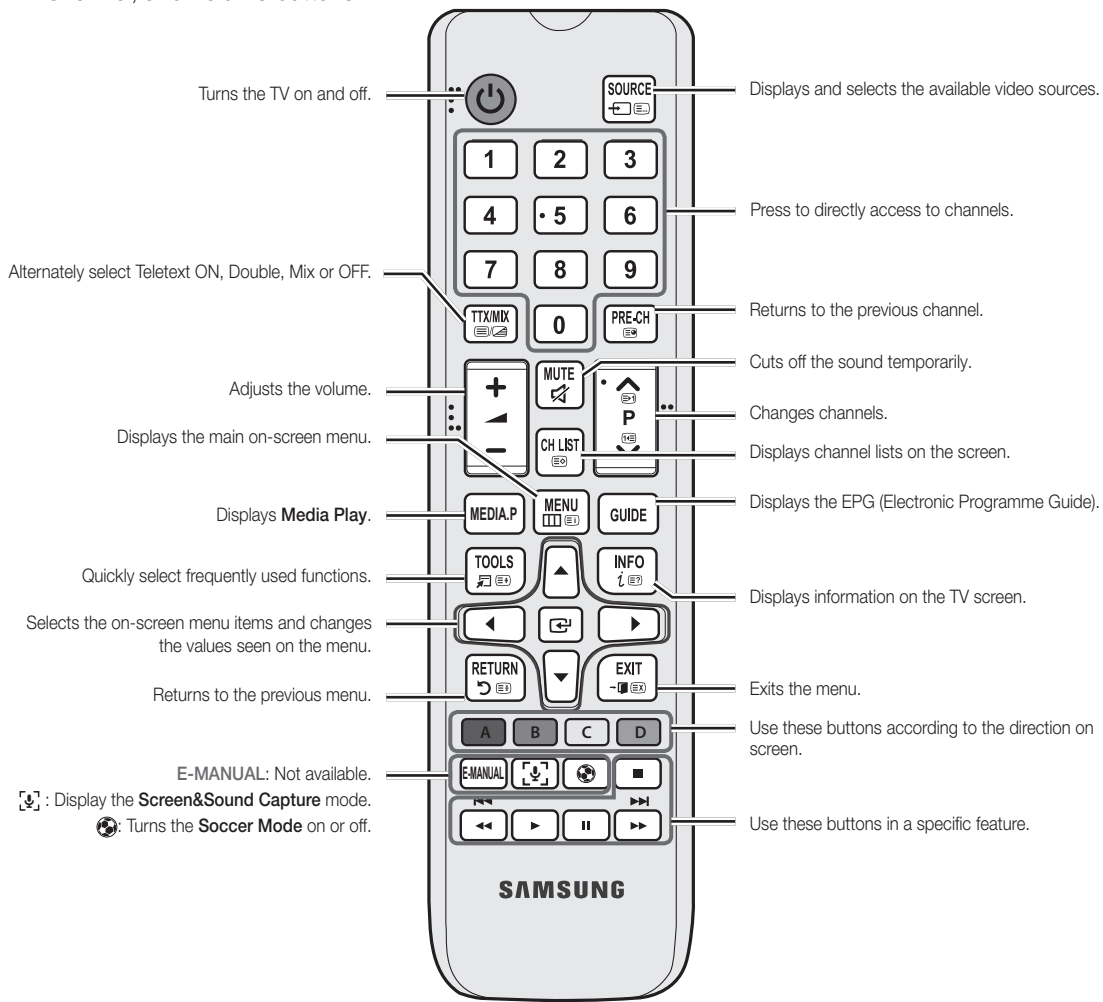

Installing batteries (Battery size: AAA)

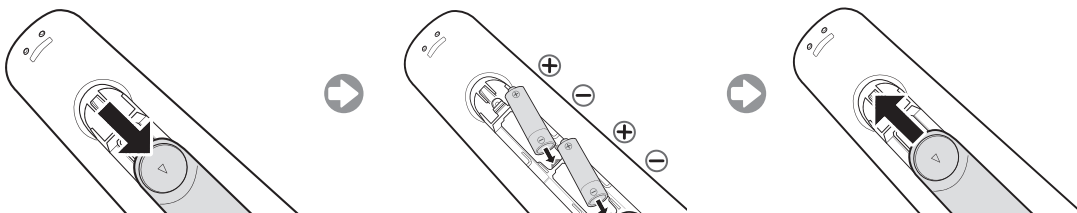


Getting Started

Connecting to a COMMON INTERFACE slot (Your TV viewing Card Slot)

To watch paid channels, the “CI or CI+ CARD” must be inserted.

- If you do not insert the “CI or CI+ CARD”, some channels will display the message “Scrambled Signal”.
- The pairing information containing a telephone number, the “CI or CI+ CARD” ID the Host ID and other information will be displayed in about 2~3 minutes. If an error message is displayed, please contact your service provider.
- When the configuration of channel information has finished, the message “Updating Completed” is displayed, indicating the channel list is updated.

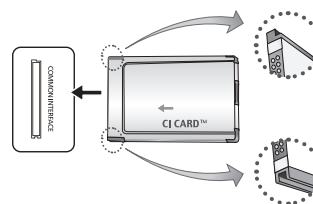

The image may differ depending on the model.

NOTE

- You must obtain a “CI or CI+ CARD” from a local cable service provider.
- When removing the “CI or CI+ CARD”, carefully pull it out with your hands since dropping the “CI or CI+ CARD” may cause damage to it.
- Insert the “CI or CI+ CARD” in the direction marked on the card.
- The location of the COMMON INTERFACE slot may be different depending on the model.
- “CI or CI+ CARD” is not supported in some countries and regions; check with your authorized dealer.
- If you have any problems, please contact a service provider.
- Insert the “CI or CI+ CARD” that supports the current aerial settings. The screen will be distorted or will not be seen.

Initial Setup

When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings. Press the **POWER** button. **Setup** is available only when the source is set to TV.

- If you connect any device to **HDMI IN 1(STB)** before starting the installation, **Channel Source** will be changed to **Set-top box** automatically. If you do not want to select **Set-top box**, please select **Aerial**.

If You Want to Reset This Feature...

Select **System - Setup** (Initial Setup). Enter your 4 digit PIN number. The default PIN number is "0-0-0-0". If you want to change the PIN number, use the **Change PIN** function.

You should do **Setup (MENU → System)** again at home even though you did in shop already.

- If you forget the PIN code, press the remote control buttons in the following sequence in Standby mode, which resets the PIN to "0-0-0-0": **MUTE → 8 → 2 → 4 → POWER (on)**

Changing the Input Source

Source

TV / HDMI1 / HDMI2 / AV / Component

Use to select TV or other external input sources such as DVD / Blu-ray players / cable box / STB satellite receiver connected to the TV.

- Press the **SOURCE** button. In the displayed **Source** list, connected inputs will be highlighted.
- Press the **TOOLS** button.
 - Edit Name**
You can set an external input source name you want.
 - Information**
You can see detailed information about the connected external device.
- The TV model is not allowed for PC connection (distortion or incorrect picture displaying can appear).

Basic Features

Channel Menu

Using the INFO button (Now & Next guide)

The display identifies the current channel and the status of certain audio-video settings.

The Now & Next guide shows daily TV programme information for each channel according to the broadcasting time.

- When you press the **INFO** button, a channel information banner will appear on the top of the screen. And then press the **ENTER** button, you can see the details of the programme.
- Scroll **◀**, **▶** to view information for a desired programme while watching the current channel.
- Scroll **▲**, **▼** to view information for other channels.

Memorizing channels

Aerial

MENU → **Broadcasting** → **Aerial** → **ENTER**

Before your television can begin memorising the available channels, you must specify the type of signal source that is connected to the TV.

Auto Tuning

(depending on the country)

MENU → **Broadcasting** → **Auto Tuning** → **ENTER**

- Automatically allocated programme numbers may not correspond to actual or desired programme numbers. If a channel is locked, the PIN input window appears.

Auto Tuning

Aerial (Air / Cable): Select the aerial source to memorise.

- When selecting **Air**, scans for a channel automatically and stores in the TV.

Channel Type (Digital & Analogue / Digital / Analogue): Select the channel source to memorise.

When selecting **Cable** → **Digital & Analogue**, **Digital** or **Analogue**

- Operator Selection** (depending on the country): Selects a provider of cable services.
- Search Mode**: Scans for all channels with active broadcast stations and stores them in the TV.
 - If you select **Quick**, you can set up the **Network**, **Network ID**, **Frequency**, **Modulation** and **Symbol Rate** manually by pressing the button on the remote control.
- Network**: Selects the **Network ID** setting mode among **Auto** or **Manual**.
 - Network ID**: When **Network** is **Manual**, you can set up **Network ID** using the numeric buttons.
 - Frequency**: Displays the frequency for the channel (differs in each country).
 - Modulation**: Displays available modulation values.
 - Symbol Rate**: Displays available symbol rates.

Cable Search Option

(depending on the country & cable channels only)

Sets additional search options such as the frequency and symbol rate for a cable network search.

Start Frequency / Stop Frequency: Set the start or stop frequency (differs in each country).

Symbol Rate: Displays available symbol rates.

Modulation: Displays available modulation values.

Using the Channel menu

MENU → Broadcasting → Channel List → ENTER

Channel List

The **Channel List** contains the channels your TV displays when you press the channel button. You can view channel information, **All**, **TV**, **Radio**, **Data/Other**, **Analogue** or **Favourites 1-5**.

Press **▶ (Mode)** button to change the channel mode, or press **◀ (Sorting)** button to change the channel order according to channel number or name on the list.

When you press the **CH LIST** button on the remote control, **Channel List** screen will be displayed at once.

Channel Sorting

- **Number / Name:** Arranges the channel order according to channel number or name on the list.

Channel Mode

- **Air / Cable:** Switches to **Air** or **Cable**.
- **Edit Favourites:** Set channels you watch frequently as favourites.
 - For detailed information about using **Edit Favourites**, refer to “**Edit Favourites**”.
- **Favourites 1-5:** Shows all favourite channels, arranged in up to five groups. Each group has a separate screen.
 - The TV displays **Favourites 1-5** only if you have added favourites using **Edit Favourites**.
- **All:** Shows all currently available channels.
- **TV:** Shows all currently available TV channels.
- **Radio:** Shows all currently radio channels.
- **Data/Other:** Shows all currently available MHP or other channels.
- **Analogue:** Shows all currently available analogue channels.

Guide

MENU → Broadcasting → Guide → ENTER

The EPG (Electronic Programme Guide) information is provided by broadcasters. Using programme schedules provided by broadcasters, you can specify programmes you want to watch in advance so that the channel automatically changes to the selected programme channel at the specified time. Programme entries may appear blank or out of date depending on a channel status.

- **A Red (Quick Nav):** Viewing the TV programmes on the list quickly using **▲/▼/◀/▶** buttons.
- **B Green (Channel Category):** Select the type of channels you want to display.
- **C Yellow (Schedule Manager):** Moves to the reserved programmes in **Schedule Manager**.

Schedule Manager

MENU → Broadcasting → Schedule Manager → ENTER

You can set a desired channel to be displayed automatically at the intended time. In addition, you can view, modify or delete a channel you have reserved to watch.

You must set the current time first using the **Time → Clock** function in the **System** menu to use this function.

1. Press the **Schedule** on the **Schedule Manager** screen. The **Schedule Viewing** menu appears.
2. Press the **▲/▼/◀/▶** buttons to set each option menu.
 - **Aerial:** Select the desired broadcasting signal.
 - **Channel:** Select the desired channel.
 - **Repeat:** Select **Once**, **Manual**, **Sat~Sun**, **Mon~Fri** or **Everyday** to set at your convenience. If you select **Manual**, you can set the day you want.
 - The (✓) mark indicates the day you've selected.

Basic Features

- **Date:** You can set the desired date.
 - ✎ It is available when you select **Once** in **Repeat**.
- **Start Time:** You can set the start time you want.

✎ If you want to edit or cancel a reserved schedule, select the reserved schedule on **Schedule Manager**. Then press the **ENTER** button and select the **Edit** or **Delete**.

Edit Channel


 

MENU → Broadcasting → Edit Channel → ENTER

You can edit or delete channels.




1. Go to **Edit Channel** screen.
 2. Press the ▲/▼ buttons to select the desired channel, then press the **ENTER** button. The (✓) mark indicates the channel you've selected.
 - ✎ You can select more than one channel.
 - ✎ Press the **ENTER** again to deselect the channel.
- ✎ Using the coloured and function buttons with the **Edit Channel**.
- **Red (Change Number):** Changes channel order on the channel list.
 - **Done:** Completes changing the channel order.
 - **Green (Delete):** Deletes a channel from the channel list.
 - **Yellow (Lock / Unlock):** Lock a channel so that the channel cannot be selected and viewed. / Unlock the channel that you locked.
 - ✎ This function is available only when the **Channel Lock** is set to **On**.
 - ✎ The PIN input screen appears. Enter your 4-digit PIN. Change the PIN using the **Change PIN** option.
 - **Blue (Select All / Deselect All):** Selects or deselects all channels at once.


- **0~9 (Go To):** Goes to channel directly by pressing numbers (0~9).
- **◀ (Page):** Move to previous or next page.
- **☰ (Tools):** Displays the option menu. The option menu items that appear may differ depending on the channel status and type.
 - **Sorting** (digital channels only): Changes the list ordered by channel number or channel name.
 - **Aerial:** Select the desired broadcasting signal.
 - **Category:** Change the channel mode to **All, TV, Radio, Data/Other, Analogue, Recently Viewed, Most Viewed**. The selected channel mode is displayed.
 - **Edit Favourites:** Go to **Edit Favourites** screen directly.
 - **Rename channel** (analogue channels only): Assign a name of up to five characters to a channel. For example, Food, Golf, etc. This makes it easier to find and select the channel.
 - **Channel Info:** Display details of the selected channel.
 - **Information:** Display details of the selected programme.


Edit Favourites

 MENU  → Broadcasting → Edit Favourites → ENTER 


You can add, edit or delete favourite channels.


1. Go to **Edit Favourites** screen.
2. Press the ▲/▼ buttons to select the desired channel, and then press ENTER  button.
3. Choose a specific favourite list among **Favourites 1-5** using  (**Change Fav.**) button, and then press the  (**Add**) button. The selected channel has been added in **Favourites 1-5**.

 One favourite channel can be added in several of favourites among **Favourites 1-5**.

 Using the coloured and function buttons with the **Edit Favourites**.

-  Red (**Category / Change order**)

 


- **Category:** Changes the channel mode to **All, TV, Radio, Analogue, Data/Other, Recently Viewed, Most Viewed**. The selected channel mode is displayed.
- **Change order:** Changes the favourite channel order.
-  (**Done**): Completes changing the channel order.

 Green (**Change Fav.**): Changes favourite list among **Favourites 1-5**.

 Yellow (**Select All / Deselect All**): Selects or deselects all channels at once.

 Blue (**Add / Delete**)

- **Add:** Adds selected channels to **Favourites 1-5**.
- **Delete:** Deletes the favourite channel from **Favourites 1-5**.




-  (**Go To**): Goes to channel directly by pressing numbers (0~9).
-  (**Page**): Move to previous or next page.
-  (**Tools**): Displays the option menu. The option menu items that appear may differ depending on the channel status and type.
 - **Copy to Favourites:** Edit the selected favourite channel in **Favourites 1-5**.
 - **Rename Favourites:** Assign your own favourite channel name.
 - **Aerial:** Select the desired broadcasting signal.
 - **Edit Channel:** Go to **Edit Channel** screen directly.
 - **Information:** Display details of the selected programme.


Basic Features


Locking Programme

Programme Rating Lock

(depending on the country)

 MENU  Broadcasting → Programme Rating Lock → ENTER 

Prevent unauthorized users, such as children, from watching unsuitable programme with a user-defined 4-digit PIN code. If the selected channel is locked, the “” symbol will be displayed.

 The items of **Programme Rating Lock** differs depending on the country.

Channel Lock




 MENU  Broadcasting → Channel Lock → ENTER 

Lock channels in Channel menu to prevent unauthorized users, such as children, from watching unsuitable programme.

 Available only when the **Source** is set to **TV**.

Other Features

Channel Settings

 MENU  Broadcasting → Channel Settings → ENTER 

- **Country (Area)**

(depending on the country)


The PIN input screen appears. Enter your 4 digit PIN number.


Digital Channel: Change the country for digital channels.

Analogue Channel: Change the country for analogue channels.

- **Manual Tuning**

Scans for a channel manually and stores in the TV.

 If a channel is locked, the PIN input window appears.

 According to the channel source, **Manual Tuning** may be supported.

- **Digital Channel Tuning:** Scans for a digital channel manually and stores in the TV. Press the **New** button to search the digital channels. When scanning has finished, a channel is updated in the channel list.

- When selecting **Aerial** → **Air: Channel, Frequency, Bandwidth**
- When selecting **Aerial** → **Cable: Frequency, Modulation, Symbol Rate**

- **Analogue Channel Tuning:** Scans for an analogue channel. Press the **New** button to search the channels by adjusting the **Programme, Colour System, Sound System, Channel, Search**.


 Channel mode

- **P** (programme mode): When tuning is complete, the broadcasting stations in your area have been assigned to the position numbers from P0 to P99. You can select a channel by entering the position number in this mode.
- **C** (aerial channel mode) / **S** (cable channel mode): These two modes allow you to select a channel by entering the assigned number for each aerial broadcasting station or cable channel.

- **Fine Tune**

(analogue channels only)

If the signal is weak or distorted, fine tune the channel manually.

 Fine tuned channels are marked with an asterisk “*”.

 To reset the fine-tuning, select **Reset**.

- **Transfer Channel List**

(depending on the country)

Imports or exports the channel map. You should connect a USB storage to use this function.

 The PIN number input screen appears. Enter your 4 digit PIN number.



 Supported file systems are FAT and exFAT.

- **Delete CAM Operator Profile:** Selects the CAM operator to delete.

Subtitle




 MENU  → **Broadcasting** → **Subtitle** → ENTER 

Use this menu to set the **Subtitle** mode.

- **Subtitle:** Switches subtitles on or off.
- **Subtitle Mode:** Sets the subtitle mode.
- **Subtitle Language:** Sets the subtitle language.
 -  If the programme you are watching does not support the **Hearing Impaired** function, **Normal** automatically activates even if the **Hearing Impaired** mode is selected.
 -  English is the default in cases where the selected language is unavailable in the broadcast.
- **Primary Subtitle:** Sets the primary subtitle.
- **Secondary Subtitle:** Sets the secondary subtitle.

Audio Options


(digital channels only)

 MENU  → **Broadcasting** → **Audio Options** → ENTER 

- **Audio Options** 


Change the default value for audio languages.

Primary audio / Secondary audio: You can set the primary or secondary audio.

 The available language may differ depending on the broadcast.

- **Audio Format**

When sound is emitted from both the main speaker and the audio receiver, a sound echo may occur due to the decoding speed difference between the main speaker and the audio receiver. In this case, use the TV Speaker function.

 **Audio Format** option may differ depending on the broadcast. 5.1ch Dolby digital sound is only available when connecting an external speaker through an optical cable.

- **Audio Description** (not available in all locations)

This function handles the Audio Stream for the AD (Audio Description) which is sent along with the Main audio from the broadcaster.




Audio Description: Turn the audio description function on or off.

Volume: Adjust the audio description volume.


Basic Features

Teletext Language

(depending on the country)

 MENU  → **Broadcasting** → **Teletext Language** → ENTER 



 
• Teletext Language


 English is the default in cases where the selected language is unavailable in the broadcast.

• Primary teletext / Secondary teletext

 **Primary teletext** and **Secondary teletext** may not be supported in some locations.

Common Interface




 MENU  → **Broadcasting** → **Common Interface** → ENTER 

- **CI Menu:** This enables the user to select from the CAM-provided menu. Select the CI Menu based on the menu PC Card.
- **CAM video transcoding:** You can configure the setting to transcode the video codec from the CAM automatically. Turn it **Off** if you do not want to use it.
 -  You must use a CAM that supports transcoding the video codec.
- **Application Info:** View information on the CAM inserted into the CI slot and on the “CI or CI+ CARD” which is inserted into the CAM. You can install the CAM anytime whether the TV is on or off.
 1. Purchase a CI CAM module at your nearest dealer or by phone.
 2. Firmly insert the “CI or CI+ CARD” into the CAM in the direction of the arrow.
 3. Insert the CAM with the “CI or CI+ CARD” into the common interface slot, in the direction of the arrow so that it aligns parallel with the slot.
 4. Check if you can see a picture on a scrambled signal channel.

Picture Menu

Changing the Preset Picture Mode

Picture Mode

 MENU  → **Picture** → **Picture Mode** → ENTER 

Select your preferred picture type.

- **Dynamic:** Suitable for a bright room.
- **Standard:** Suitable for a normal environment.
- **Movie:** Suitable for watching movies in a dark room.

Adjusting Picture Settings




Cell Light / Contrast / Brightness / Sharpness / Colour / Tint (G/R)

Your television has several setting options for picture quality control.



NOTE


- In analogue **TV, Ext., AV** modes of the PAL system, the **Tint (G/R)** function is not available.
- Settings can be adjusted and stored for each external device connected to the TV.
- Lowering picture brightness reduces power consumption.

Picture Size

 MENU  → **Picture** → **Picture Size** → ENTER 

Set the various picture options such as picture size and aspect ratio.

-  The available items may differ depending on the selected mode.
-  Depending on the input source, the picture size options may vary.

- **Picture Size** : Your cable box/satellite receiver may have its own set of screen sizes as well. However, we highly recommend you use 16:9 mode most of the time.


Auto Wide: Automatically adjusts the picture size to the **16:9** aspect ratio.

16:9: Sets the picture to 16:9 wide mode.


Wide Zoom: Magnifies the picture size more than 4:3.

 Adjusts the **Position** by using **▲**, **▼** buttons.

Zoom: Magnifies the 16:9 wide pictures vertically to fit the screen size.

 Adjusts the **Zoom** or **Position** by using **▲**, **▼** button.


4:3: Sets the picture to basic (4:3) mode.

 Do not watch in 4:3 format for a long time. Traces of borders displayed on the left, right and centre of the screen may cause image retention (screen burn) which are not covered by the warranty.

Screen Fit: Displays the full image without any cut-off when HDMI (720p / 1080i / 1080p) or Component (1080i / 1080p) signals are inputted.

- **Zoom/Position:** Adjust the picture size and position. It is only available in **Zoom**.
- **Position:** Adjust the picture position. It is only available in **Screen Fit** or **Wide Zoom**.

NOTE

- After selecting **Screen Fit** in HDMI (1080i / 1080p) or Component (1080i / 1080p) mode, you may need to centre the picture:
 1. Select the **Position**. Press the **ENTER**  button.
 2. Press the **▲**, **▼**, **◀** or **▶** button to move the picture.
- If you want to reset the position you adjusted, select **Reset** in the **Position** screen. The picture will be set to its default position.
- If you use the **Screen Fit** function with HDMI 720p input, 1 line will be cut at the top, bottom, left and right as in the overscan function.
- **4:3 Screen Size:** Available only when picture size is set to **Auto Wide**. You can determine the desired picture size at the 4:3 WSS (Wide Screen Service) size or the original size. Each European country requires different picture size.

PIP

 **MENU**  → **Picture** → **PIP** → **ENTER** 

You can watch the TV tuner and one external video source simultaneously. For example, if you have a cable box connected to the Cable In jack, you can use **PIP** to watch programs from the cable box and watch a movie from a Blu-ray player attached to the HDMI In jack.

NOTE

- If you turn the TV off while watching in **PIP** mode, the PIP window will disappear.
- You may notice that the picture in the PIP window becomes slightly unnatural when you use the main screen to view a game or karaoke.

Basic Features



- PIP settings

Main picture	Sub picture
Component, HDMI	TV

- **PIP:** Activate or deactivate the PIP function.
- **Aerial:** Select either **Air** or **Cable** as the input source for the sub-screen.
- **Channel:** Select the channel for the sub-screen.
- **Size:** Select a size for the sub-picture.
- **Position:** Select a position for the sub-picture.
- **Sound Select:** You can choose the desired sound in **PIP** mode.

Changing the Picture Options

Advanced Settings

MENU  Picture → Advanced Settings → ENTER 

(available in **Standard** / **Movie** mode)

You can adjust the detailed setting for the screen including colour and contrast.

- **Dynamic Contrast:** Adjust the screen contrast.
- **Black Tone:** Select the black level to adjust the screen depth.
- **Flesh Tone:** Adjust the flesh tone colour.
- **RGB Only Mode:** Displays the Red, Green and Blue colour for making fine adjustments to the hue and saturation.
- **Colour Space:** Adjust the range of colours available to create the image.

- **White Balance:** Adjust the colour temperature for a more natural picture.

2 Point: You can adjust each of the 3 colour's luminosity with the offset menu and the brightness with the gain menu.

R-Offset / G-Offset / B-Offset: Adjust each colour's (red, green, blue) darkness.

R-Gain / G-Gain / B-Gain: Adjust each colour's (red, green, blue) brightness.

Reset: Resets the **White Balance** to its default settings.

- **Gamma:** Adjust the primary colour intensity.
- **Motion Lighting:** Reduce power consumption by brightness control adapted motion.
 - ✎ Only available in **Standard** mode.
 - ✎ When changing a setting value of **Cell Light, Brightness** or **Contrast, Motion Lighting** will be set to **Off**.

Picture Options

MENU  Picture → Picture Options → ENTER 


- **Colour Tone**
 - ✎ **Warm1** or **Warm2** will be deactivated when the picture mode is **Dynamic**.
 - ✎ Settings can be adjusted and stored for each external device connected to an input on the TV.
- **Digital Clean View:** If the broadcast signal received by your TV is weak, you can activate the **Digital Clean View** feature to reduce any static and ghosting that may appear on the screen.
 - ✎ When the signal is weak, try other options until the best picture is displayed.

Auto Visualisation: When changing analogue channels, displays signal strength.

- ✎ Only available for analogue channels.
- ✎ When the **INFO** button is pressed, the signal strength bar is displayed.
- ✎ When bar is green, you are receiving the best possible signal.


- **MPEG Noise Filter:** Reduces MPEG noise to provide improved picture quality.
- **HDMI Black Level:** Selects the black level on the screen to adjust the screen depth.
 - ✎ Available only in **HDMI** mode (RGB signals).
- **Film Mode:** Sets the TV to automatically sense and process film signals from all sources and adjust the picture for optimum quality.
 - ✎ Available in TV mode and external input mode which supports SD (480i / 576i) and HD (1080i).
 - ✎ If the screen does not seem natural, change its option to **Off / Auto1 / Auto2** in **Film Mode**.
- **Analog Clean View** (analogue channels only): Reduces diagonal noise in picture caused by the crosstalk of signals.

Picture Off

 **MENU** → **Picture** → **Picture Off** → **ENTER**

The screen is turned off but the sound remains on. Press any button except volume button to turn on the screen.

Reset Picture


 **MENU** → **Picture** → **Reset Picture** → **ENTER**

Resets your current picture mode to its default settings.

Sound Menu

Changing the Preset Sound Mode

Sound Mode


 **MENU** → **Sound** → **Sound Mode** → **ENTER**

- **Standard:** Selects the normal sound mode.
- **Music:** Emphasizes music over voices.
- **Movie:** Provides the best sound for movies.
- **Clear Voice:** Emphasizes voices over other sounds.
- **Amplify:** Increase the intensity of high-frequency sound to allow a better listening experience for the hearing impaired.

Adjusting Sound Settings

Sound Effect

(standard sound mode only)

 **MENU** → **Sound** → **Sound Effect** → **ENTER**

- **DTS TruSurround**

This function provides a virtual 5.1 channel surround sound experience through a pair of speakers using HRTF (Head Related Transfer Function) technology.

Basic Features

- **DTS TruDialog**

This function allows you to increase the intensity of a voice over background music or sound effects so that dialogue can be heard more clearly.

- **Equaliser**




Use Equaliser to customize sound setting for each speaker.

Balance: Adjusts the balance between the right and left speaker.

100Hz / 300Hz / 1kHz / 3kHz / 10kHz
(Bandwidth Adjustment): Adjusts the level of specific bandwidth frequencies.

Reset: Resets the equaliser to its default settings.


Speaker Settings

 MENU  → Sound → Speaker Settings → ENTER 




- **Auto Volume**

To equalize the volume level on each channel, set to **Normal**.


Night: This mode provides an improved sound experience compared to **Normal** mode, making almost no noise. It is useful at night.


 To use the volume control on the source device connected to the TV, set **Auto Volume** to **Off** on the TV. Otherwise, a change to the volume control of the source device may not be applied.

Additional Settings


 MENU  → Sound → Additional Settings → ENTER 

- **DTV Audio Level** (digital channels only): This function allows you to reduce the disparity of a voice signal (which is one of the signals received during a digital TV broadcast) to a desired level.

 According to the type of broadcast signal, **MPEG / HE-AAC** can be adjusted between -10dB and 0dB.

 To increase or decrease the volume, adjust between the range 0 and -10 respectively.




- **Dolby Digital Comp:** This function minimizes signal disparity between a dolby digital signal and a voice signal (i.e. MPEG Audio, HE-AAC, ATV Sound).

 Select **Line** to obtain dynamic sound, and **RF** to reduce the difference between loud and soft sounds at night time.

Line: Set the output level for signals greater or less than -31dB (reference) to either -20dB or -31dB.

RF: Set the output level for signals greater or less than -20dB (reference) to either -10dB or -20dB.

Reset Sound

 MENU  → Sound → Reset Sound → ENTER 

Reset all sound settings to the factory defaults.

System Menu

Executing initial setup

Setup

MENU → System → Setup → ENTER

Configure the channels and the time when setting up the TV for the first time or when resetting the unit.

- Execute the initial setup following instructions that the TV guides.

Setting the Time

Time

MENU → System → Time → ENTER

The current time will appear every time you press the **INFO** button.

- Clock:** Setting the clock is for using various timer features of the TV.
 - If you disconnect the power cord, you have to set the clock again.

Clock Mode: Set up the current time manually or automatically.

- Auto:** Set the current time automatically using the time from a digital channel.
 - The aerial must be connected in order to set the time automatically.
- Manual:** Set the current time manually.
 - Depending on the broadcast station and signal, the auto time set up may not be correct. In this case, set the time manually.

Clock Set: Set the **Date** and **Time**.

- Available only when **Clock Mode** is set to **Manual**.
- You can set the **Date** and **Time** directly by pressing the number buttons on the remote control.

Time Zone (depending on the country): Select your time zone.

- This function is only available when the **Clock Mode** is set to **Auto**.
- When selecting **Manual** in **Time Zone**, **GMT** and **DST** will be activated.

Using the Sleep Timer

MENU → System → Time → Sleep Timer → ENTER

- Sleep Timer** : Automatically shuts off the TV after a preset period of time. (30, 60, 90, 120, 150 and 180 minutes)
 - Use the **▲/▼** buttons to select a period of time, and then press **ENTER** . To cancel the **Sleep Timer**, select **Off**.

Setting the On / Off Timer

MENU → System → Time → On Timer <or> Off Timer → ENTER

- On Timer:** You can set up three separate **On Timer** configurations. (**On Timer 1**, **On Timer 2**, **On Timer 3**)

Setup: Select **Off**, **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual** to set at your convenience. If you select **Manual**, you can set up the day you want to activate the timer.

- The **✓** mark indicates the day you've selected.


Preference Features

Time: Set the hour and minute.

Volume: Set the desired volume level.


Source: To select the source of the content that will play when the TV turns on. You can:

- Select **TV** and have the TV display a specific air or cable channel.
- Select **USB** and have the TV play back photo or audio files from a USB device.
- Select a source on your TV that you have connected a set-top box to, and have the TV display a channel from the set-top box.

 The USB device must be connected to your TV before you can select **USB**.

 If you select a source other than **TV** or **USB**, you must:

- Have a cable or satellite set-top box attached to that source
- Set the set-top box to the channel you want to watch when the TV goes on
- Leave the set-top box turned on.

 When you select a source other than **TV** or **USB**, the Aerial and Channel options will disappear.

- **Aerial** (when the **Source** is set to **TV**): Select **ATV** or **DTV**.

Channel (when the **Source** is set to **TV**): Select the desired channel.

Music / Photo (when the **Source** is set to **USB**): Select a folder in the USB device containing music or photo files to be played when the TV is turned on automatically.

- If there is no music file on the USB device or the folder containing a music file is not selected, the timer function does not operate correctly.
- When there is only one photo file in the USB device, the slide show will not play.
- If a folder name is too long, the folder cannot be selected.
- Each USB you use is assigned its own folder. When using more than one of the same type of USB, make sure the folders assigned to each USB have different names.
- It is recommended that you use a USB memory stick and a multi card reader when using **On Timer**.
- The **On Timer** function may not work with USB devices with a built-in battery, MP3 players, or PMPs made by some manufacturers because these devices take a long time to be recognized.

- **Off Timer:** You can set up three separate **Off Timer** configurations. (**Off Timer 1**, **Off Timer 2**, **Off Timer 3**)




Setup: Select **Off**, **Once**, **Everyday**, **Mon~Fri**, **Mon~Sat**, **Sat~Sun** or **Manual** to set at your convenience. If you select **Manual**, you can set up the day you want to activate the timer.

 The ✓ mark indicates the day you've selected.


Time: Set the hour and minute.

Economical Solutions

Eco Solution


 
 MENU  → System → Eco Solution → ENTER 

- **Energy Saving:** This adjusts the brightness of the TV in order to reduce power consumption.
- **No Signal Power Off:** To avoid unnecessary energy consumption, set how long you want the TV to remain on if it's not receiving a signal.
- **Auto Power Off:** The TV will be automatically turned off when no user operation is received for 4 hours.

 If the **Auto Power Off** option is set to **Off**, the TV will stay on even if no operations are performed on the TV.


Other Features

Menu Language

 MENU  → System → Menu Language → ENTER 

Set the menu language.


Screen Burn Protection

 MENU  → System → Screen Burn Protection → ENTER 


To reduce the possibility of screen burn, this unit is equipped with Pixel Shift screen burn prevention technology. Pixel Shift moves the picture slightly on the screen. The Time function setting allows you to programme the time between movement of the picture in minutes.


Your TV also has the following additional screen burn protection functions:

- **Pixel Shift**
- **Auto Protection Time**
- **Scrolling**
- **Side Grey**
- **Pixel Shift:** Using this function, you can set the TV to move pixels minutely on the PDP screen in a horizontal or vertical direction to minimize after images on the screen.

 Available Pixel Shift Settings and Optimum Settings

	Item	TV / HDMI
Horizontal	0~4	4
Vertical	0~4	4
Time (minute)	1~4 min	4 min

 The **Pixel Shift** value may differ depending on the monitor size (inches) and mode.

 This function is not available in the **Screen Fit** mode.

Preference Features

- **Auto Protection Time:** If the screen displays a still image for a certain period of time you define, the TV activates the screen saver to prevent the formation of burnt in ghost images on the screen.
- **Scrolling:** This function removes after-images on the screen by illuminating all the pixels on the PDP according to a pattern. Use this function when there are after images or symbols on the screen, especially when you displayed a still image on the screen for a long time.
 - ✎ The after-image removal function has to be executed for a long time (approximately 1 hour) to effectively remove after-images on the screen. If the after-image is not removed after you apply the function, repeat the function again.
 - ✎ Press any key on the remote control to cancel this feature.
- **Side Grey:** When you watch TV with the screen ratio set to 4:3, using the **Side Grey** function can prevent damage to the edges of the screen by adjusting the white balance on the extreme left and right sides.

General

MENU → System → General → ENTER

- **Game Mode:** When connecting to a game console such as PlayStation™ or Xbox™, you can enjoy a more realistic gaming experience by selecting game mode.
 - ✎ NOTE
 - Precautions and limitations for game mode
 - To disconnect the game console and connect another external device, set **Game Mode** to **Off** in the setup menu.
 - If you display the TV menu in **Game Mode**, the screen shakes slightly.

- **Game Mode** is not available in **TV** mode.
- After connecting the game console, set **Game Mode** to **On**. Unfortunately, you may notice reduced picture quality.
- If **Game Mode** is **On**:
 - **Picture Mode** is set to **Standard** and **Sound Mode** is set to **Movie**.
- **Panel Lock:** Lock or unlock all the keys on the panel.
- **Boot Logo:** Display Samsung logo when the TV is turned on.

Change PIN

MENU → System → Change PIN → ENTER

Change your password required to set up the TV.

- ✎ The PIN input screen appears before the setup screen.
- ✎ Enter your 4-digit PIN. Change the PIN using the **Change PIN** option.

DivX® Video On Demand

MENU → System → DivX® Video On Demand → ENTER

Shows the registration code authorized for the TV. If you connect to the DivX web site and register with 10-digit registration code, you can download the VOD activation file.



Once you play it using **Videos**, the registration is completed.

- ✎ For more information on DivX® VOD, visit <http://vod.divx.com>.



Using the Source List

Source List

 MENU  → Applications → Source List → ENTER 

-  When you press the **SOURCE** button, **Source** screen will be displayed at once.
-  You can only choose external devices that are connected to the TV. In **Source**, connected inputs are highlighted.


Connecting a USB Device

1. Turn on your TV.
 2. Connect a USB device containing photo, music and movie files to the USB port on the side of the TV.
 3. When USB is connected to the TV, popup window appears. You can select the **Photos, Videos** or **Music** directly.
-  It might not work properly with unlicensed multimedia files.
 -  Need-to-Know List before using Media Contents
 - MTP (Media Transfer Protocol) is not supported.
 - Supported file systems are FAT and exFAT.
 - Certain types of USB Digital camera and audio devices may not be compatible with this TV.
 - Media Contents only supports sequential jpeg format.
 - Media Contents only supports USB Mass Storage Class (MSC) devices. MSC is a Mass Storage Class Bulk-Only Transport device. Examples of MSC are Thumb drives, Flash Card Readers (USB HUB are not supported). Devices should be connected directly to the TV's USB port.
 - Before connecting your device to the TV, please back up your files to prevent them from damage or loss of data. SAMSUNG is not responsible for any data file damage or data loss.
 - The HDD (Hard Disk Drive) connected to USB is not supported.
 - Do not disconnect the USB device while it is loading.
 - The higher the resolution of the image, the longer it takes to display on the screen.
 - The maximum supported JPEG resolution is 15360 x 8640 pixels.
 - For unsupported or corrupted files, the "Not Supported File Format" message is displayed.
 - The scene search and thumbnail functions are not supported in the **Videos**.

Advanced Features

- MP3 files with DRM that have been downloaded from a non-free site cannot be played. Digital Rights Management (DRM) is a technology that supports the creation, distribution and management of the content in an integrated and comprehensive way, including the protection of the rights and interests of the content providers, the prevention of the illegal copying of contents, as well as managing billings and settlements.
- PTP connection mode is fully available only with digital cameras. When connecting a smartphone or tablet to the TV using PTP mode, it may not be recognized.
- A USB device that requires high power (more than 500mA or 5V) may not be supported.
- If the TV has been no input during time set in **Auto Protection Time**, the screen saver will run.
- The power-saving mode of some external hard disk drives may be released automatically when connected to the TV.
- If a USB extension cable is used, the USB device may not be recognized or the files on the device may not be read.
- If a USB device connected to the TV is not recognized, the list of files on the device is corrupted or a file in the list is not played, connect the USB device to the PC, format the device and check the connection.
- If a file deleted from the PC is still found when Media Contents is run, use the “Empty the Recycle Bin” function on the PC to permanently delete the file.
- If the number of files and folders saved on a USB storage device is approximately over 4000, the files and folders may not appear and some folders may not be opened.




Disconnecting a USB Device

1. Press the **SOURCE** button.
 2. Select a desired USB device, and then press the **TOOLS** button. The **Tools** menu appears.
 3. Select **Disconnect USB Device**, and then wait until the selected USB device is disconnected. You can remove a USB device from the TV.
-  To remove a USB device from the TV, we recommend use **Disconnect USB Device** function.


Using the Media Contents

 MENU  → **Applications** → **Media Play** → ENTER 

Enjoy photos, music and movie files saved on a USB Mass Storage Class (MSC) device.


1. Press the **MEDIA.P** button.
2. Press **◀/▶** button to select desired menu (**Photos, Videos, Music**), then press the **ENTER**  button.
3. Press **◀/▶** button to select desired device, then press the **ENTER**  button again.
4. Press the **▲/▼/◀/▶** button to select the desired file in the list, then press the **ENTER**  button or **▶** (Play) button.

Playing the selected files









1. Press the **▲** button to select **Options** at the top of each main screen and select **Play Selected**.
2. Select the desired files.
 - ✎ The check box appears to the left of the selected files.
 - ✎ Press **ENTER**  button again to deselect the file.
3. Press the **▲** button to select **Play**.
 - ✎ You can select or deselect all files pressing the **Select All / Deselect All**.

Playing the Photos / Videos / Music

During playing a file, press the **▲/▼/◀/▶** button to select the desired menu.

- ✎ When the option menu is not displayed, press the **TOOLS** button or **ENTER**  button.
- ✎ You can also use **▶/⏸/■/◀◀/▶▶** buttons on the remote control during playback.
- ✎ If you press the **INFO** button during playback, you can view the playback information.

Playback menu






Button	Operation	Photos	Videos	Music
 / 	Previous / Next	•		
 / 	Start Slide Show / Stop Slide Show	•		
	Play / Pause	Mini Player*	•	•
 / 	Previous / Next	Mini Player*	•	•
 / 	Rewind / Fast forward		•	•

* When setting the **Background Music** to **Mini Player** in **Photos**, these buttons appear.

Advanced Features

Setting menu

- Photos

Button	Operation	
	Slideshow Settings	You can set the Speed and Effects during the slide show.
	Zoom	You can zoom into images in full screen mode.
	Rotate	You can rotate images in full screen mode.
	Background Music / Mini Player	You can set background music when watching a slide show.
	Settings	Picture Mode / Sound Mode: You can adjust the picture or sound setting. Information: You can see detailed information about the played file.






- During the slide show, all files in the file list will be displayed in order.
- When you press the ► (Play) button (or ▲ button → **Options** → **Slide Show**) in the file list, slide show will be started immediately.
- During the slide show, you can adjust the slide show speed using ◀◀ (REW) or ▶▶ (FF) button.

Supported Photo Formats

File Extension	Type	Resolution
*.jpg	JPEG	15360 X 8640
*.jpeg		
*.bmp	BMP	4096 X 4096
*.mpo	MPO	15360 X 8640

- The MPO type file does not support Zoom, Rotate and Slide Show Effect functions.

• Videos

Button	Operation	
	Search	<p>Search Titles: You can move the other file directly.</p> <p>Search Time Bar: You can search the video using ◀ and ▶ button at one minute interval or entering the number directly.</p> <p> It may not be supported depending on the input source.</p>
	Repeat Mode	You can play movie files repeatedly.
	Picture Size	You can adjust the picture size to your preference.
	Settings	<p>Subtitle Settings: You can play the video with subtitles. This function only works if the subtitles are the same file name as the video.</p> <p>Picture Mode / Sound Mode: You can adjust the picture or sound setting.</p> <p>Audio Language: You can change the audio language if the video has more than one language.</p> <p>Information: You can see detailed information about the played file.</p>

 If video time information is unknown, play time and progress bar are not displayed.

 In this mode, you can enjoy movie clips contained on a Game, but you cannot play the Game itself.

Supported Video Formats

File Extension	Container	Video Codec	Resolution	Frame rate (fps)	Bit rate (Mbps)	Audio Codec
*.avi	AVI	Divx 3.11 / 4 / 5 / 6	1920 x 1080	6~30	30	AC3 LPCM ADPCM (IMA, MS) AAC HE-AAC WMA DD+ MPEG (MP3) DTS (Core) G.711(A-Law, μ-Law)
*.mkv		MPEG4 SP/ASP				
*.asf		H.264 BP/MP/HP				
*.wmv		Motion JPEG	640 x 480		8	
*.mp4	MKV	Window Media Video v9	1920 x 1080	6~30	30	
*.3gp	ASF	MPEG2				
*.vro	MP4	MPEG1				
*.mpg	3GP					
*.mpeg	MOV					
*.ts	FLV					
*.tp	VRO					
*.trp	VOB					
*.mov	PS					
*.flv	TS					
*.vob						
*.svi						
*.divx						

Other Restrictions

- Video content will not play, or not play correctly, if there is an error in the content or the container.
- Sound or video may not work if the contents have a standard bit rate/frame rate above the compatible Frame/sec listed in the table.
- If the Index Table is in error, the Seek (Jump) function is not supported.
- Some USB/digital camera devices may not be compatible with the player.
- The menu can be displayed late if the video is over 10Mbps(bit rate).

Video decoder	Audio decoder
<ul style="list-style-type: none"> • Supports up to H.264, Level 4.1 (FMO/ASO/RS are not supported.) • frame rate: <ul style="list-style-type: none"> – Below 1280 x 720: 60 frame max – Above 1280 x 720: 30 frame max • VC1 AP L4 is not supported. • GMC 2 or higher is not supported. 	<ul style="list-style-type: none"> • WMA 10 Pro supports up to 5.1 channel and M2 profile. • WMA lossless audio is not supported. • Vorbis supports up to 2ch. • DD+ supports up to 5.1 channel.

Advanced Features

Supported Subtitle Formats




External

Name	File extension
MPEG-4 timed text	.txt
SAMI	.smi
SubRip	.srt
SubViewer	.sub
Micro DVD	.sub or .txt
SubStation Alpha	.ssa
Advanced SubStation Alpha	.ass
Powerdivx	.psb

Internal

Name	Container	Format
Xsub	AVI	Picture Format
SubStation Alpha	MKV	Text Format
Advanced SubStation Alpha	MKV	Text Format
SubRip	MKV	Text Format
MPEG-4 Timed text	MP4	Text Format

Music

Button	Operation	
	Repeat	You can play music files repeatedly.
	Shuffle	You can play the music randomly.
	Sound Mode	You can adjust the sound setting.

Only displays the files with supported music file extension. Other file extensions are not displayed, even if they are saved on the same USB device.

If the sound is abnormal when playing music files, adjust the **Equaliser** in the **Sound** menu. (An over-modulated music file may cause a sound problem.)

Supported Music Formats

File Extension	Type	Codec	Remark
*.mp3	MPEG	MPEG1 Audio Layer 3	
*.m4a *.mpa *.aac	MPEG4	AAC	
*.flac	FLAC	FLAC	Supports up to 2ch.
*.ogg	OGG	Vorbis	Supports up to 2ch.
*.wma	WMA	WMA	WMA 10 Pro supports up to 5.1 channel and M2 profile. (WMA lossless audio is not supported.)
*.wav	wav	wav	
*.mid *.midi	midi	midi	type 0 and type 1




Setting the Encoding language


Set the encoding language if the text is not supported.



1. Press the **▲** button to select **Options** at the top of music main screen and select **Encoding**.
2. Select the desired encoding language.

Using the Self Diagnosis

Self Diagnosis

 MENU  → Support → Self Diagnosis → ENTER 

 **Self Diagnosis** might take few seconds, this is part of the normal operation of the TV.

- **Picture Test:** Use to check for picture problems.
- **Sound Test:** Use the built-in melody sound to check for sound problems.
- **Signal Information** (digital channels only): HDTV channel's reception quality is either perfect or the channels are unavailable. Adjust your aerial to increase signal strength.
- **Reset:** Reset all settings to the factory defaults except network settings.
 -  The PIN input screen appears before the setup screen.
 -  Enter your 4-digit PIN. Change the PIN using the **Change PIN** option.





Updating the Software

Software Update

 MENU  → Support → Software Update → ENTER 

The **Software Update** menu lets you upgrade your TV's software to the latest version.




Current Version: This is the software version already installed in the TV.

-  When software is upgraded, video and audio settings you have made will return to their default settings. We advise you to write down your settings so that you can easily reset them after the upgrade.
- **Update now**
 - By USB: Insert a USB drive containing the firmware upgrade file, downloaded from “www.samsung.com” into the TV.
 -  Please be careful not to disconnect the power or remove the USB drive until upgrades are complete. The TV will be turned off and on automatically after completing the firmware upgrade.
 - By Channel: Upgrade the software using the broadcasting signal.
 -  If the function is selected during the software transmission period, software will be automatically searched and downloaded.
 -  The time required to download the software is determined by the signal status.
- **Auto update:** A manual upgrade will be automatically performed at selected time. Since the power of the unit is turned on internally, the screen may be turned on slightly for the product. This phenomenon may continue for more than 1 hour until the software upgrade is complete.

Other Features

Changing the Use Mode

Use Mode

 MENU  → Support → Use Mode → ENTER 

Select the **Use Mode** suitable for your place. We strongly recommend you select **Home Use**.

- **Home Use:** **Home Use** is the default setting.
- **Store Demo:** **Store Demo** is for retail environments only. If you select **Store Demo**, some functions will not work, and the picture settings will be reset every 30 minutes.

Viewing the Contact Samsung




Contact Samsung

 MENU  → Support → Contact Samsung → ENTER 




View this information when your TV does not work properly or when you want to upgrade the software. You can find information regarding our call centres, and how to download products and software.

Using the Soccer Mode

Soccer Mode

 MENU  → Applications → Soccer Mode → ENTER 

This mode provides optimized condition for watching sports games.




- **[A] (Zoom):** Pause playback and divide the picture into 9 parts. Select a part to zoom it in. Press this button again to resume.
-  When the **Soccer Mode** is on, the picture and sound modes are set to **Stadium** automatically.
-  If you turn the TV off while watching **Soccer Mode**, the **Soccer Mode** will be disabled.
-  When the **Data Service** is running, the **Zoom** is not available.

Using the Screen&Sound Capture function

Screen&Sound Capture

 MENU  → Applications → Screen&Sound Capture → ENTER 

This function provides capture screen or record an audio from the TV screen being viewing. Additionally, you can save the capture image and record audio on the USB device connected the TV. This function provides the TV screen you watched capture image and record audio.



-  Screen&Sound Capture are for personal use only, not for commercial purpose and/or communication to the public.
-  The user may not use these features for commercial purposes without prior approval from the copyright owners and/or to use it unlawfully.
-  Samsung does not accept responsibility for any misuse of the service.

- **Screen&Sound Capture**



Turn the **Screen&Sound Capture** function on or off.

- **Default Capture Device**

You can set the default device for saving captured image files and recorded audio files.

-  This function is only available when the USB device is connected the TV.
-  If the **Screen&Sound Capture** function is running, this function is not available.

Capturing the Screen

1. To capture the screen while watching TV, press . This captures the screen. It may take 2 to 3 seconds to capture the screen.
2. Once captured, the image is saved as a .jpeg file to the USB device connected to the TV. Thumbnails of captured images are then displayed on the screen.
 -  Select the thumbnail screen to view the saved images on Media Play.

Other Features

Recording Audio

1. Press **D** or **●**. This records audio in real-time.
 - ✎ A popup window will appear on the screen while recording is in progress. The popup window displays the duration of the recording.
2. To stop recording, press **■**. The recording is stored as a .wmv file on the USB device connected to the TV. Thumbnails of the audio recordings are then shown on the screen.
 - ✎ Select the thumbnail screen to play the saved audio files on Media Play.
 - ✎ You cannot change the channel or source to an external device. To change the channel or the source to an external device, first stop recording audio.


Restrictions









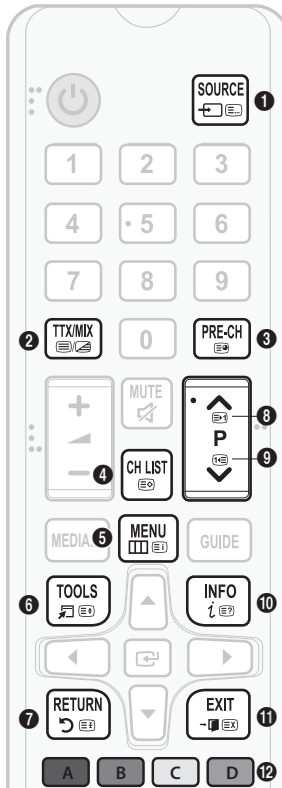



- ✎ A USB device must be connected to the TV in order to use it.
- ✎ Screen&Sound Capture can only be used if there is more than 5MB free space available on the USB device connected to the TV.
- ✎ Do not turn off the TV or disconnect the USB device while using **Screen&Sound Capture**. The file might not be saved or play if you do so.
- ✎ If the strength of the broadcast signal decreases or the signal is dropped altogether while using **Screen&Sound Capture**, the concerned file might not be saved or play.
- ✎ Images captured while watching the TV in 3D are stored as 2D images.
- ✎ **Screen&Sound Capture** cannot be used under the following circumstances:
 - While **Media Play** is running
 - While using **PIP**
 - While using an external device that is connected via a SCART connection
 - No signal
 - Data Service channels
 - Scrambled channels
 - Service Not Available channels
 - Parental Lock channels

Teletext Feature

The index page of the Teletext service gives you information on how to use the service. For Teletext information to be displayed correctly, channel reception must be stable. Otherwise, information may be missing or some pages may not be displayed.


 You can change Teletext pages by pressing the numeric buttons on the remote control.



- 1  (mode): Selects the Teletext mode (LIST/FLOF). If pressed during LIST mode, switches the mode to List save mode. In List save mode, you can save a Teletext page into a list using the  (store) button.
- 2  (Full TTX/Double TTX/Mix/Off): Activates the Teletext mode for the current channel. Press the button twice to overlap the Teletext mode with the current broadcasting screen. Press it one more time to exit teletext.
- 3  (sub-page): Displays the available sub-page.
- 4  (store): Stores the Teletext pages.
- 5  (index): Displays the index (contents) page at any time while you are viewing Teletext.
- 6  (size): Displays the teletext on the upper half of the screen in double-size. To move the text to the lower half of the screen, press it again. For normal display, press it once again.
- 7  (hold): Holds the display at the current page, in the case that there are several secondary pages that follow automatically. To undo, press it again.
- 8  (page up): Displays the next Teletext page.
- 9  (page down): Displays the previous Teletext page.
- 10  (reveal): Displays the hidden text (answers to quiz games, for example). To display the normal screen, press it again.
- 11  (cancel): Shrinks the Teletext display to overlap with the current broadcast.
- 12 Colour buttons (red, green, yellow, blue): If the FASTEXT system is used by the broadcasting company, the different topics on a Teletext page are colour-coded and can be selected by pressing the coloured buttons. Press the colour corresponding to the topic of your choice. A new colour coded page is displayed. Items can be selected in the same way. To display the previous or next page, press the corresponding coloured button.

The Teletext pages are organized according to six categories

Part	Contents
A	Selected page number.
B	Broadcasting channel identity.
C	Current page number or search indications.
D	Date and time.
E	Text.
F	Status information. FASTEXT information.

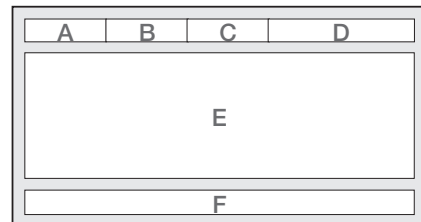



Other Features

Installing the Wall Mount

The wall mount kit (sold separately) allows you to mount the TV on the wall. For detailed information on installing the wall mount, see the instructions provided with the wall mount. Contact a technician for assistance when installing the wall mount bracket. We do not advise you to do it yourself.

Samsung Electronics is not responsible for any damage to the product or injury to yourself or others if you select to install the TV on your own.


Wall Mount Kit Specifications (VESA)

-  Wall mount kit is not supplied but sold separately.
-  Install your wall mount on a solid wall perpendicular to the floor. When attaching to other building materials, please contact your nearest dealer. If installed on a ceiling or slanted wall, it may fall and result in severe personal injury.

NOTE

- Standard dimensions for wall mount kits are shown in the table below.
- When purchasing our wall mount kit, a detailed installation manual and all parts necessary for assembly are provided.
- Do not use screws that do not comply with the VESA standard screw specifications.
- Do not use screws longer than the standard dimension, as they may cause damage to the inside of the TV set.
- For wall mounts that do not comply with the VESA standard screw specifications, the length of the screws may differ depending on their specifications.
- Do not fasten the screws too strongly, this may damage the product or cause the product to fall, leading to personal injury. Samsung is not liable for these kinds of accidents.
- Samsung is not liable for product damage or personal injury when a non-VESA or non-specified wall mount is used or the consumer fails to follow the product installation instructions.
- Do not exceed 15 degrees tilt when mounting this TV.

inches	VESA Spec. (A * B)	Standard Screw	Quantity
43~51	400 X 400	M8	4
60~64	600 X 400		

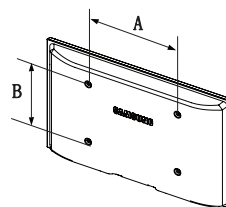

Do not install your Wall Mount Kit while your TV is turned on. It may result in personal injury due to electric shock.

Securing the TV to the Wall




Caution: Pulling, pushing, or climbing onto the TV may cause the TV to fall. In particular, ensure that your children do not hang over or destabilize the TV; doing so may cause the TV to tip over, resulting in serious injuries or death. Follow all safety precautions provided on the included Safety Flyer. For added stability, install the anti-fall device for safety purposes, as follows.

To avoid the TV from falling

1. Put the screws into the clamps and firmly fasten them onto the wall. Confirm that the screws have been firmly installed onto the wall.
 - ✎ You may need additional material such as an anchor depending on the type of wall.
 - ✎ Since the necessary clamps, screws, and string are not supplied, please purchase these additionally.
2. Remove the screws from the centre back of the TV, put the screws into the clamps, and then fasten the screws onto the TV again.
3. Connect the clamps fixed onto the TV and the clamps fixed onto the wall with a strong string and then tie the string tightly.

✎ NOTE

- Install the TV near to the wall so that it does not fall backwards.
 - It is safe to connect the string so that the clamps fixed on the wall are equal to or lower than the clamps fixed on the TV.
 - Untie the string before moving the TV.
4. Verify all connections are properly secured. Periodically check connections for any sign of fatigue for failure. If you have any doubt about the security of your connections, contact a professional installer.

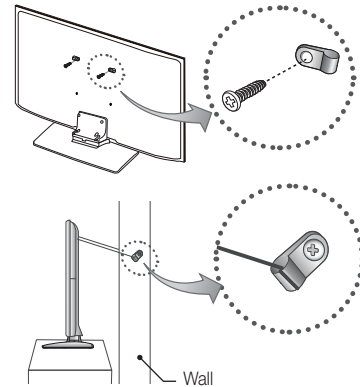

Other Features

Anti-theft Kensington Lock


The Kensington Lock is not supplied by Samsung. It is a device used to physically fix the system when using it in a public place. The appearance and locking method may differ from the illustration depending on the manufacturer. Refer to the manual provided with the Kensington Lock for additional information on proper use.

- ✎ Please find a “” icon on the rear of the TV. A kensington slot is beside the “” icon.
- ✎ The position and colour may differ depending on the model.

To lock the product, follow these steps:

1. Wrap the Kensington lock cable around a large, stationary object such as desk or chair.
2. Slide the end of the cable with the lock attached through the looped end of the Kensington lock cable.
3. Insert the locking device into the Kensington slot on the product.
4. Lock the lock.

- ✎ These are general instructions. For exact instructions, see the User manual supplied with the locking device.
- ✎ The locking device has to be purchased separately.

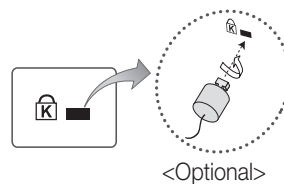

Troubleshooting

If the TV seems to have a problem, first try this list of possible problems and solutions. If none of these troubleshooting tips apply, visit “www.samsung.com”, then click on Support, or call Samsung customer service centre.

Issues	Solutions and Explanations
Picture Quality	First of all, please perform the Picture Test and confirm that your TV is properly displaying test image. (go to MENU - Support - Self Diagnosis - Picture Test) If the test image is properly displayed, the poor picture may be caused by the source or signal.
The TV image does not look as good as it did in the store.	<ul style="list-style-type: none"> • If you have an analogue cable/set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver SD (Standard definition) picture quality. • Cable/Satellite subscribers: Try digital stations from the channel line up. • Aerial connection: Try digital stations after performing Auto tuning. • Adjust the Cable/Set top box video output resolution to 480p. • Make sure you are watching the TV at the minimum recommended distance based on the size and definition of the signal.
The picture is distorted: macroblock error, small block, dots, pixelization	<ul style="list-style-type: none"> • Compression of video contents may cause picture distortion especially in fast moving pictures such as sports and action movies. • Low signal level or bad quality can cause picture distortion. This is not a TV issue. • Mobile phones used close to the TV (cca up to 1m) may cause noise in picture on analogue and digital TV.
Colour is wrong or missing.	<ul style="list-style-type: none"> • If you're using a component connection, make sure the component cables are connected to the correct jacks. Incorrect or loose connections may cause colour problems or a blank screen.
There is poor colour or brightness.	<ul style="list-style-type: none"> • Adjust the Picture options in the TV menu. (go to Picture Mode / Colour / Brightness / Sharpness) • Adjust Energy Saving option in the TV menu. (go to MENU - System - Eco Solution - Energy Saving) • Try resetting the picture to view the default picture settings. (go to MENU - Picture - Reset Picture)
There is a dotted line on the edge of the screen.	<ul style="list-style-type: none"> • If the picture size is set to Screen Fit, change it to 16:9. • Change cable/satellite box resolution.
The picture is black and white.	<ul style="list-style-type: none"> • If you are using an AV composite input, connect the video cable (yellow) to the Green jack of component input 1 on the TV.
When changing channels, the picture freezes or is distorted or delayed.	<ul style="list-style-type: none"> • If connected with a cable box, please try to reset the cable box. Reconnect the AC cord and wait until the cable box reboots. It may take up to 20 minutes. • Set the output resolution of the cable box to 480p.
Sound Quality	First of all, please perform the Sound Test to confirm that your TV audio is properly operating. (go to MENU - Support - Self Diagnosis - Sound Test) If the audio is ok, the sound problem may be caused by the source or signal.
There is no sound or the sound is too low at maximum volume.	<ul style="list-style-type: none"> • Please check the volume of the device (Cable/Sat Box, DVD, Blu-ray etc) connected to your TV.
The picture is good but there is no sound.	<ul style="list-style-type: none"> • If you are using an external device, make sure the audio cables are connected to the correct audio input jacks on the TV. • If you are using an external device, check the device's audio output option (ex. you may need to change your cable box's audio option to HDMI when you have a HDMI connected to your TV). • Reboot the connected device by reconnecting the device's power cable.
The speakers are making an inappropriate noise.	<ul style="list-style-type: none"> • Check the cable connections. Make sure a video cable is not connected to an audio input. • For aerial or cable connections, check the signal strength. Low signal level may cause sound distortion.

Other Features

Issues	Solutions and Explanations
No Picture, No Video	
The TV will not turn on.	<ul style="list-style-type: none"> • Make sure the AC power cord is securely plugged in to the wall outlet and the TV. • Make sure the wall outlet is working. • Try pressing the POWER button on the TV to make sure the problem is not the remote. If the TV turns on, refer to "The remote control does not work" below.
The TV turns off automatically.	<ul style="list-style-type: none"> • Ensure the Sleep Timer is set to Off in the Time menu. • Make sure the AC power cord is plugged in securely to the wall outlet and the TV. • When watching TV from an aerial or cable connection, the TV will turn off after 10 ~ 15 minutes if there is no signal.
There is no picture/video.	<ul style="list-style-type: none"> • Check cable connections (remove and reconnect all cables connected to the TV and external devices). • Set your external device's (Cable/Set top Box, DVD, Blu-ray etc) video outputs to match the connections to the TV input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV. • Make sure your connected devices are powered on. • Be sure to select the TV's correct source by pressing the SOURCE button on the remote control. • Reboot the connected device by reconnecting the device's power cable.
Aerial (Air/Cable) Connection	
The TV is not receiving all channels.	<ul style="list-style-type: none"> • Make sure the Aerial cable is connected securely. • Please try Setup (Initial setup) to add available channels to the channel list. Go to MENU - System - Setup (Initial setup) and wait for all available channels to be stored. • Verify the Aerial is positioned correctly.
The picture is distorted: macro block error small block, dots, pixelization	<ul style="list-style-type: none"> • Compression of video contents may cause picture distortion, especially on fast moving pictures such as sports and action movies. • A low signal can cause picture distortion. This is not a TV issue.
Others	
The picture will not display in full screen.	<ul style="list-style-type: none"> • HD channels will have black bars on either side of the screen when displaying up scaled SD (4:3) contents. • Black bars on the top and bottom will appear during movies that have aspect ratios different from your TV. • Adjust the picture size options on your external device or TV to full screen.
Plasma TV is making humming noise.	<ul style="list-style-type: none"> • Plasma TVs typically make a soft humming sound. This is normal. It's caused by the electrical charges that are used to create the images on the screen. • If the humming sound is loud, you may have set the brightness on the TV too high. Try setting the brightness lower. • You can also have loud humming if the back of your Plasma TV is too close to a wall or other hard surface. Also try rerouting your connection cables. • Improper installation of wall mount can create excessive noise.
Image Retention (Burn In) Issue.	<ul style="list-style-type: none"> • To minimize the possibility of screen burn, this unit is equipped with Pixel Shift screen burn reduction technology. Pixel Shift lets you set the picture so it moves slightly up and down (Vertical Line) and side to side (Horizontal Dot). The regular, slight movement of the picture reduces screen burn in.
The remote control does not work.	<ul style="list-style-type: none"> • Replace the remote control batteries with the poles (+/-) in the right direction. • Clean the sensor's transmission window on the remote. • Try pointing the remote directly at the TV from 5~6 feet away.

Issues	Solutions and Explanations
The cable/set top box remote control doesn't turn the TV on or off, or adjust the volume.	<ul style="list-style-type: none"> Programme the Cable/Set top box remote control to operate the TV. Refer to the Cable/Set top box user manual for the SAMSUNG TV code.
A "Mode Not Supported" message appears.	<ul style="list-style-type: none"> Check the supported resolution of the TV, and adjust the external device's output resolution accordingly.
There is a plastic smell from the TV.	<ul style="list-style-type: none"> This smell is normal and will dissipate over time.
The TV Signal Information is unavailable in the Self Diagnosis Test menu.	<ul style="list-style-type: none"> This function is only available with digital channels from an Aerial / RF / Coax connection.
TV is tilted to the right or left side.	<ul style="list-style-type: none"> Remove the stand base from the TV and reassemble it.
There are difficulties assembling the stand base.	<ul style="list-style-type: none"> Make sure the TV is placed on a flat surface. If you can not remove the screws from the TV, please use a magnetized screw driver.
The Broadcasting menu is grey out (unavailable).	<ul style="list-style-type: none"> The Broadcasting menu is only available when the TV source is selected.
Your settings are lost after 30 minutes or every time the TV is turned off.	<ul style="list-style-type: none"> If the TV is in the Store Demo mode, it will reset audio and picture settings every 30 minutes. If you want to change the settings from Store Demo mode to Home Use, press the SOURCE button to select TV mode, and go to MENU - Support - Use Mode.
You have intermittent loss of audio or video.	<ul style="list-style-type: none"> Check the cable connections and reconnect them. Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If mounting the TV to the wall, we recommend using cables with 90 degree connectors.
You see small particles when you look closely at the edge of the frame of the TV.	<ul style="list-style-type: none"> This is part of the product's design and is not a defect.
The PIP menu is not available.	<ul style="list-style-type: none"> PIP functionality is only available when you are using a HDMI or components source.
You turned the TV off 45 minutes ago, and it turned on again.	<ul style="list-style-type: none"> It is normal. The TV operates the OTA (Over The Aerial) function itself to upgrade firmware downloaded whilst your watching TV.
The message " Scrambled Signal " or " Weak or No Signal " appears.	<ul style="list-style-type: none"> If you are using a CAM CARD (CI/CI+), check that it is installed into the common interface slot. If there is still a problem, pull the CAM CARD out of the TV and insert it into the slot again.
There are recurrent picture/sound issues.	<ul style="list-style-type: none"> Check and change the signal/source.
A reaction may occur between the rubber cushion pads on the base stand and the top finish of some furniture.	<ul style="list-style-type: none"> To prevent this, use felt pads on any surface of the TV that comes in direct contact with furniture.
The message " This file may not be playable properly. " appears.	<ul style="list-style-type: none"> This may appear because of high bit rate of content. Content generally will play but could experience some playability issue.

 You can keep your TV in optimum operating condition by upgrading to the latest firmware (www.samsung.com → support) by USB.

Other Features

Licence



Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



Manufactured under a licence from U.S. Patent No's: 5,956,674, 5,974,380, 5,978,762, 6,487,535, 6,226,616, 7,212,872, 7,003,467, 7,272,567, 7,668,723, 7,392,195, 7,930,184, 7,333,929 and 7,548,853. DTS, the Symbol, and DTS and the Symbol together are registered trademarks & DTS Premium Sound | 5.1 is a trademark of DTS, Inc. ©2012 DTS, Inc. All Rights Reserved.



Manufactured under a license from U.S. Patent No's: 6,285,767, 8,027,477, 5,319,713, 5,333,201, 5,638,452, 5,771,295, 5,970,152, 5,912,976, 7,200,236, 7,492,907, 8,050,434, 7,720,240, 7,031,474, 7,907,736 and 7,764,802. DTS, the Symbol, and DTS and the Symbol together are registered trademarks & DTS Studio Sound is a trademark of DTS, Inc. ©2012 DTS, Inc. All Rights Reserved.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



DivX Certified® to play DivX® video up to HD 1080p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274

Open source licence notice

In the case of using open source software, Open Source Licences are available on the product menu.

Open Source Licence Notice is written only English.

Storage and Maintenance

- ✎ If you remove the attached sticker on the TV screen, clean the residues and then watch TV.
- ✎ The exterior and screen of the product can get scratched during cleaning. Be sure to wipe the exterior and screen carefully using a soft cloth to prevent scratches.



Do not spray water directly onto the product. Any liquid that goes into the product may cause a failure, fire, or electric shock.



Clean the product with a soft cloth dapped in a small amount of water. Do not use a flammable liquid (e.g. benzene, thinners) or a cleaning agent.

Specifications

Environmental Considerations	
Operating Temperature	10°C to 40°C (50°F to 104°F)
Operating Humidity	10% to 80%, non-condensing
Storage Temperature	-20°C to 45°C (-4°F to 113°F)
Storage Humidity	5% to 95%, non-condensing
Sound (Output)	10W x 2
Model Name	PA43H4000
Display Resolution	852 x 480
Screen Size	43 inches
Dimensions (W x H x D)	
Body	1007.4 x 616.2 x 55.7 mm
With stand	1007.4 x 670.5 x 261.9 mm
Weight	
Without Stand	13.6 kg
With Stand	14.8 kg

- 🔗 Design and specifications are subject to change without prior notice.
- 🔗 For information about power supply, and more about power consumption, refer to the label attached to the product.

Other Features

Index

A	Additional Settings	20	G	General	24	S	Sound Effect	19
	Advanced Settings	18		Guide	11		Sound Mode	19
	Aerial	10	M	Media Play	26		Source List	25
	Audio Options	15		Menu Language	23		Speaker Settings	20
	Auto Tuning	10		Music	30		Subtitle	15
B	Brightness	16	P	Photos	28	T	Teletext Language	16
C	Cell Light	16		Picture Mode	16		Time	21
	Change PIN	24		Picture Off	19		Tint (G/R)	16
	Channel List	11		Picture Options	18	U	Use Mode	32
	Channel Lock	14		Picture Size	16		V	Videos
	Channel Settings	14		PIP	17			
	Colour	16		Programme Rating Lock	14			
	Common Interface	16		R	Reset Picture	19		
	Contact Samsung	32			Reset Sound	20		
Contrast	16	S		Schedule Manager	11			
D	DivX® Video On Demand		24	Screen Burn Protection	23			
	E		Eco Solution	23	Self Diagnosis	31		
			Edit Channel	12	Setup	21		
Edit Favourites			13	Sharpness	16			
				Software Update	31			