

Samsung Care**Samsung Premium Care**

Get more than just protection for your device. Pick the time and place, and a team member will meet you to setup, troubleshoot, repair or replace your product.

Enroll, at samsung.com/us/support/premium-care

GET TO KNOW YOUR PRODUCT:

- Access user manuals, tips and more at samsung.com/us/support.

ASK THE COMMUNITY:

- Ask questions and get solutions from Samsung customers, at us.community.samsung.com.

CONTACT US FOR SUPPORT:

- For hardware or software support, visit samsung.com/us/support/contact or call us at 1.800.SAMSUNG.
- Find a service location near you, at support-us.samsung.com/cyber/locator/asc_locator.jsp.

About your device

©2018 Samsung Electronics America, Inc. Samsung and Galaxy Tab are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of tablet may vary.



Printed in Vietnam
GH68-49479A

Device features

EXPANDABLE STORAGE Expand storage with a microSD™ card.

FLEXIBLE SECURITY Biometric security features.

S PEN Enables accurate, and precise input while providing a natural writing experience.

BIXBY HOME See upcoming appointments, photos, tomorrow's weather and more.

MULTIUSER Allows multiple users for one device.

 
Quick Reference Manual**Customize your device**

From a home screen swipe up, and tap **Settings** to customize, connect or turn on options to personalize your device.

WALLPAPER Change the look of the Home and Lock screens.

CLOUD AND ACCOUNTS Tap Users to add multiple user for the device.

BIOMETRICS AND SECURITY Set biometric security options.

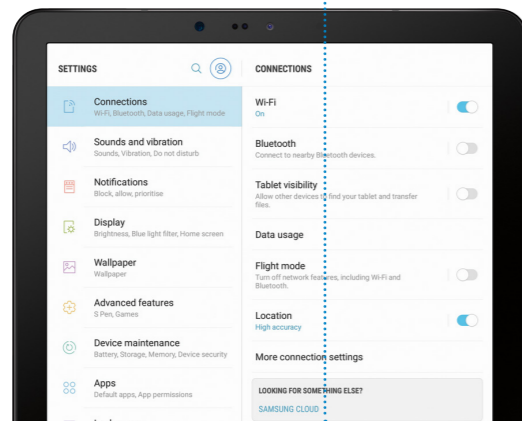

CONNECTIONS Connect to Wi-fi network, Bluetooth device and other connection options. and other options.

LOCKSCREEN Select a screen lock type and set security options.

Display Customize the home screen and display brightness.


SOUND AND VIBRATIONS Set device volume and sounds.

S Pen

The S Pen™ enables fast, accurate, and precise input while providing a natural writing experience. Write and draw directly into emails or the calendar, as well as Word, Excel, PowerPoint, and PDF documents.



 
AIR COMMAND

To launch Air Command, tap the screen with the tip of the S Pen and then tap .

- **CREATE NOTE** Create short notes.
- **VIEW ALL NOTES** Displays notes.
- **SMART SELECT** Instantly outline and crop anything on the screen and freely edit or share with others.
- **SCREEN WRITE** Capture a screen image and write or draw on it.
- **TRANSLATE** Hover the S Pen over a word to view its definition and pronunciation.
- **PENUP** Draw, color, edit, and share live drawings.
- **ADD SHORTCUTS** Select an app or function to open or turn on using Air command.

Set up your device

Note: Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

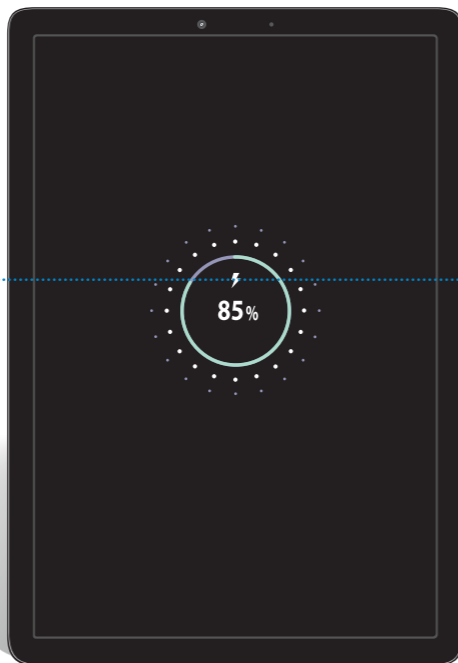


INSTALL AN OPTIONAL microSD CARD

1. Use the tray removal tool to open the microSD™ card tray.
2. Insert the microSD card into the tray with the gold contacts facing down, as shown.

CHARGE THE BATTERY

 Before turning on your device charge it fully with the provided charger.

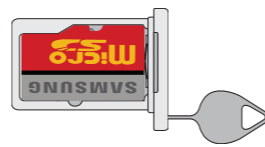


Note: microSD card sold separately.

Bixby

Set reminders, see upcoming appointments, photos, tomorrow's weather and more.



 To launch **Bixby**, from the home screen swipe right and follow the prompts to set up.

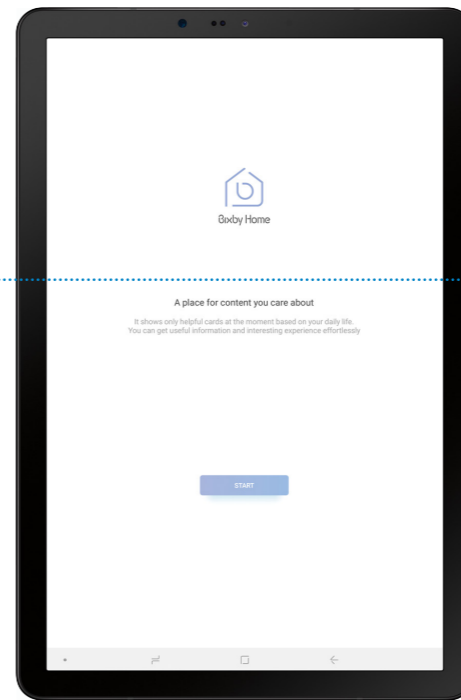Note: For more information about Bixby, visit samsung.com/us/support/owners/app/Bixby.



Learn more

The Help feature will give you access to the user manual and information on how to use your device.

To open the Help feature, from the Home screen, swipe up and tap Settings  > Help .



Playstore



Contacts



Samsung Apps



Personalized device support



Transfer content



Accessibility settings

