



Share your success!







Audio Enhancement

Microphone

Quick Start Guide

Teacher Microphone

Indicates which audio source is controlled by the volume buttons

> Own = teacher mic Other = student mic

Line = auxiliary input

3.5 mm Auxiliary input to play audio from media sources



Choose audio source

Adjust volume

External mic input

> **Alert Notification Button** (for schools with SAFE System)

Turn on mic (press & hold) Mute (briefly press)



Align the arrows on the mic port and charger connector to charge

Student Microphone

Microphone is on while button is pushed

> Flip switch to keep microphone on



3.5 mm Auxiliary input to play audio from media sources





Microphone LEDs Key

BATT LED

Green, solid

Green, blinking
Microphone is muted

Red, solid
Depleted battery



CHG LED

LED on Charge is complete

Blinking (2 sec)
Battery is charging

Receiver





3 Red LED lights SAFE System Alert has been sent



2 Green and 1 Red LED lights
First responders have seen the alert

Microphone Tips & Tricks

- Wear the mic 4-6 inches below your chin
- Charge your microphone nightly
- · Speak in a normal conversational tone
- Don't turn up the volume too high. If you can hear your voice through the speakers, it's too loud. Invite another person to help you set the volume
- Use microphone daily for best results

Find more Tips & Tricks at

AudioEnhancement.com/MicTips