

SAMSUNG Galaxy Book S

About your device

Quick Reference Guide



Touch screen

Headset jack

USB-C charging port

Speakers



SIM/microSD™ card tray

Power/Fingerprint scanner

USB-C charging port

Speakers



Set up your device

Your device SIM card is already installed.

Remove SIM/microSD tray

Slide open the SIM/microSD™ card tray.

Insert microSD card

Slide the optional microSD card (microSD card sold separately) into the tray with the gold contacts facing down.

Charge your device

Before turning on your device, charge it.

Activate your device

Activate your device to use the Internet on Verizon's 4G LTE network.

Turn on your device. Then follow the on-screen instructions in the Setup Wizard.

Subject to specific terms of use. For coverage details, visit verizonwireless.com/CoverageLocator.



Learn more



The Get started app gives you tips, and other information on how to use your device, including:



Getting apps



Taking photos



Accessibility settings



Visit verizonwireless.com/Support



Download a User Guide from verizonwireless.com/Support or call 888.987.HELP (4357) to order a copy.

Manage your account



My Verizon

Manage your account, track your usage, edit account information, pay your bill and more.

Visit verizonwireless.com/my-verizon



International travel

For features and rates when outside the US visit: verizonwireless.com/International.



Customer service

Call 800.922.0204

Twitter @VZWSupport

Samsung Care



How can we help you?

Get to know your product:

- Access user manuals, tips and more at samsung.com/us/support

Ask the community:

- Ask questions and get solutions from Samsung customers, at us.community.samsung.com

Contact us for support:

- For hardware or software support, visit samsung.com/us/support/contact or call us at 1.800.SAMSUNG.
- Find a service location near you, at samsung.com/us/support/service/locations

Notes

Additional information

Your wireless device and third-party services

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this device are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this device or any non-Verizon Wireless applications, services and products, including any personal information you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use and privacy policies apply. Please review carefully all applicable terms, conditions and policies prior to using this wireless device and any associated application, product or service.

© 2019 Verizon Wireless. All Rights Reserved. Samsung and Galaxy Book are both trademarks of Samsung Electronics Co., Ltd. Excel and PowerPoint are both registered trademarks of the Microsoft Corporation. Other company and product names mentioned herein may be trademarks of their respective owners. Appearance of device may vary. Screens simulated, subject to change; Apps sold separately, availability may vary.

Not all features, apps or services may be available with your plan, device operating system and software version. Please contact your wireless service provider for more information.

Device and screen images simulated. Appearance of device may vary.