

 
EN Start Here

TC 安裝說明



413942100

© 2020 Seiko Epson Corporation
Printed in XXXXXX




Contents may vary by location.
內裝物品隨地區而不同。



Do not open the ink cartridge package until you are ready to install it in the printer. The cartridge is vacuum packed to maintain its reliability.

準備好將墨水匣裝入印表機之前，切勿開啟墨水匣。墨水匣採用真空包裝來保持其可靠性。

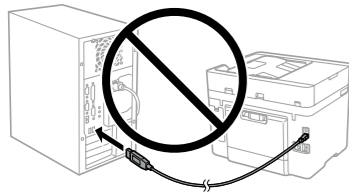

Do not connect a USB cable unless instructed to do so.

除非有指示要求，否則請勿連接 USB 連接線。






Setting up the Printer

See this guide or Epson video guides for printer setup instructions. For information on using the printer, see the *User's Guide* on our Web site. Select **Support** to access the manuals.

請參閱本指南或 Epson 影片以瞭解印表機設定指引。關於使用印表機的資訊，請參閱我們網站上的進階使用說明。選取支援以存取該手冊。



<http://epson.sn>

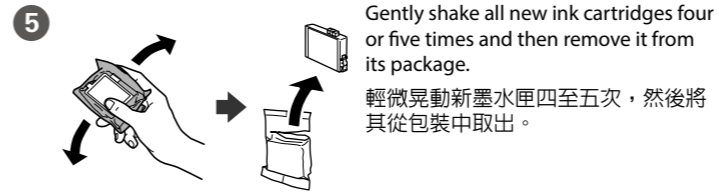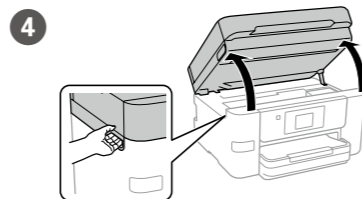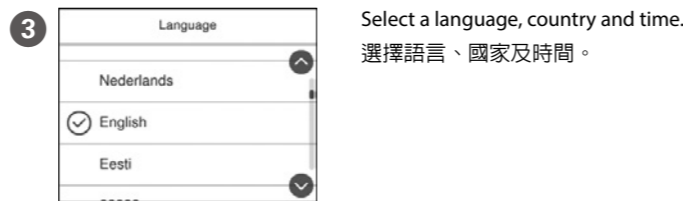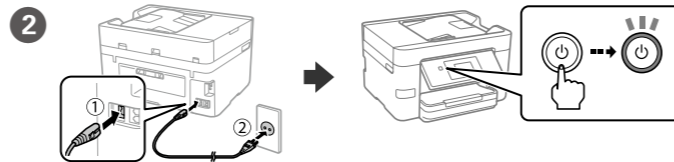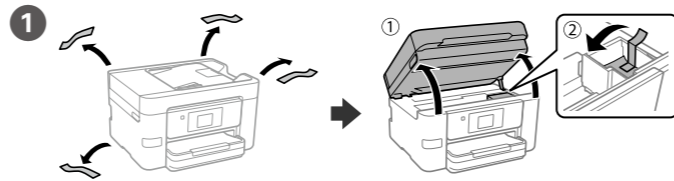


Gently shake all new ink cartridges four or five times and then remove it from its package.

輕微晃動新墨水匣四至五次，然後將其從包裝中取出。



Do not touch the sections shown in the illustration of the cartridge.

請勿觸碰墨水匣圖示所示的部分。

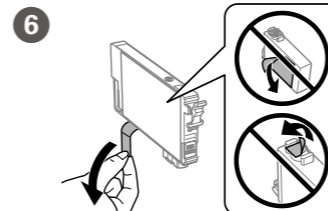


Remove only the yellow tape.

僅取下黃色膠帶。


For the initial setup, make sure you use the ink cartridges that came with this printer. These cartridges cannot be saved for later use. The initial ink cartridges will be partly used to charge the print head. These cartridges may print fewer pages compared to subsequent ink cartridges.

對於初始設定，請確認使用本印表機附帶的墨水匣。這些墨水匣不可儲存以供將來使用。初始墨水匣會有一部分被用於填充印字頭。這些墨水匣可能比隨後的墨水匣列印的頁數更少。

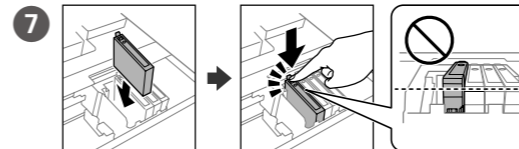





Insert all four cartridges. Press each unit until it clicks.

插入所有四個墨水匣。按下每個裝置，直至發出喀嗒聲。

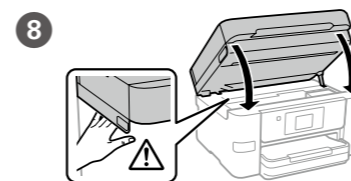


Tap **Installed** to start ink charging. Wait until ink charging is finished.

 點選**已安裝**以開始填充墨水。等待至墨水填充完成。

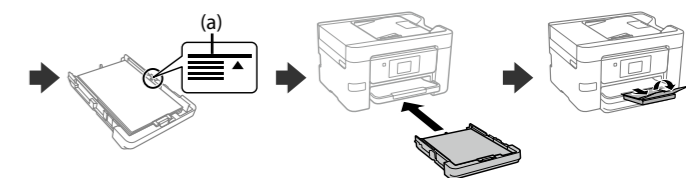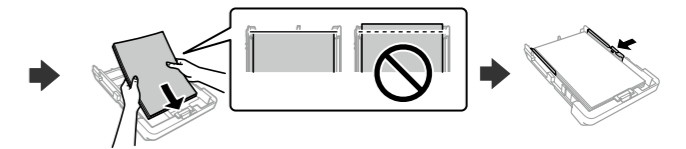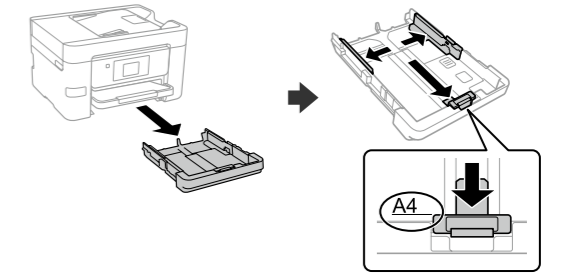

(a) Do not load paper above the ▲ arrow mark inside the edge guide.

 (a) 放入的紙張厚度請勿超出紙張邊緣定位器內側的 ▲ 箭頭標記。




Set the paper size and paper type for the paper cassette. You can change these settings later.

設定紙匣的紙張大小及紙張種類。您可於稍後變更這些設定。



Make the fax settings. You can change these settings later. If you do not want to make settings now, close the fax settings screen.

進行傳真設定。您可於稍後變更這些設定。如果不想現在進行設定，請關閉傳真設定畫面。

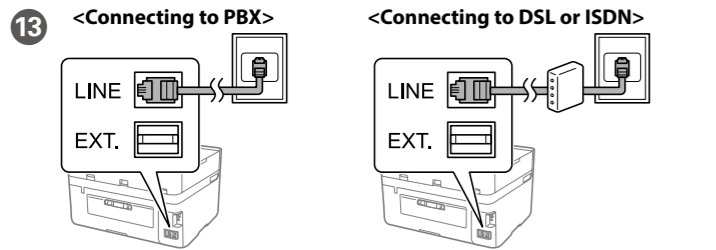


Available phone cable 可用的電話線	RJ-11 Phone Line / RJ-11 Telephone set connection RJ-11 電話線 / RJ-11 電話機連接
---------------------------------	--

Connect a phone cable.
連接電話線。

Depending on the area, a phone cable may be included with the printer, if so, use the cable.

視所在地區而定，印表機可能附有電話線；如果附有電話線，請使用這條纜線。

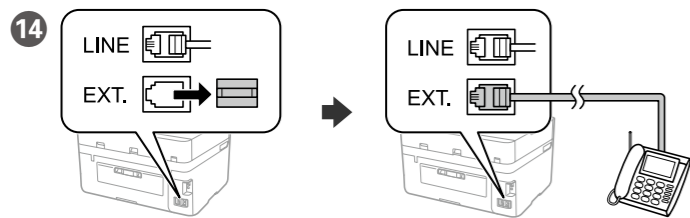

If you want to share the same phone line as your telephone, remove the cap and then connect the telephone to the EXT. port.

如果想要與電話共用同一條電話線，請拆下護蓋並將電話連接到EXT. 埠。

15 Connect your computer or smart device with the printer. Visit the website to install software and configure the network. Windows users can also install software and configure the network using the CD supplied.


連接您的電腦或智慧型裝置與印表機。請瀏覽網站以安裝軟體和設定網路。Windows 使用者還可以使用提供的光碟安裝軟體和設定網路。




Troubleshooting

For troubleshooting, press for assistance. This feature provides step by step and animation instructions for most issues such as adjusting print quality and loading paper.


若要進行故障排除，請按下 以獲取協助。該功能提供針對大多數問題的逐步和動畫操作指引，例如調整列印品質和裝入紙張。

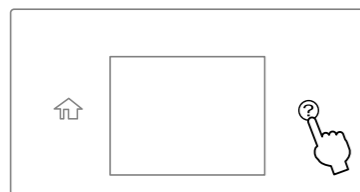

Copying

 

Place the original.
放置原稿。

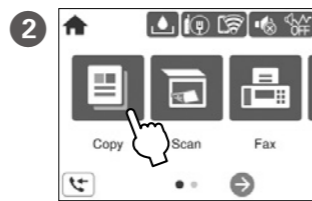

3 Tap the section shown in the illustration to enter the number of copies.

點選插圖內所示的區域以輸入副本數量。



4 Make other settings as necessary.
進行其他必要的設定。

5 Tap to start copying.
點選 鍵開始複印。

Ink Cartridge Codes

For users in Australia and New Zealand

BK	C	M	Y
Black	Cyan	Magenta	Yellow
812XL 812	812XL 812	812XL 812	812XL 812

"XL" indicate large cartridges.

對於台灣使用者

BK	C	M	Y
黑色	藍色	紅色	黃色
05Y	05Y	05Y	05Y

Important Safety Instructions

Use only the power cord that comes with the printer. Use of another cord may cause fire or shock. Do not use the cord with any other equipment.
請只使用印表機所附的電源線，使用其他電源線可能會造成走火或觸電。請勿使用其他設備所附的電源線。

Be sure your AC power cord meets the relevant local safety standard.
確定 AC 電源線符合當地的安全標準。

Except as specifically explained in your documentation, do not attempt to service the printer yourself.
除非文件中有特別說明，否則請勿嘗試自行維修本印表機。

Do not let the power cord become damaged or frayed.
請勿使用損壞或磨損的電源線。

Place the printer near a wall outlet where the power cord can be easily unplugged.
請將印表機放置在容易拔出電源線的電源插座附近。

Do not place or store the product outdoors, near excessive dirt or dust, water, heat sources, or in locations subject to shocks, vibrations, high temperature or humidity.
請勿將印表機放置或儲存在室外、靠近灰塵粉未過多處、水源、熱源，以及易震動、搖晃或高溫潮濕的地方。

Take care not to spill liquid on the product and not to handle the product with wet hands.
請小心避免讓任何液體發灑在印表機上，且勿在雙手潮濕時操作印表機。

Keep this product at least 22 cm away from cardiac pacemakers. Radio waves from this product may adversely affect the operation of cardiac pacemakers.
請將本印表機與心臟節律器保持至少 22 公分的距離，以免本印表機所釋放的無線電波影響心臟節律器的運作。

If the LCD screen is damaged, contact your dealer. If the liquid crystal solution gets on your hands, wash them thoroughly with soap and water. If the liquid crystal solution gets into your eyes, flush them immediately with water. If discomfort or vision problems remain after a thorough flushing, see a doctor immediately.
若液晶螢幕損壞，請聯絡您的經銷商。若液晶溶液碰到手，請以肥皂及清水徹底洗淨雙手。若液晶溶液噴到眼睛，請立刻以清水沖洗。若完全沖洗後仍感到不適或視覺有問題，請馬上就醫。

Keep Ink Cartridges out of the reach of children.
請將墨水匣放在孩童無法取得之處。

Be careful when you handle used Ink Cartridges, as there may be some ink around the ink supply port.
If ink gets on your skin, wash the area thoroughly with soap and water.
If ink gets into your eyes, flush them immediately with water.
If discomfort or vision problems continue after a thorough flushing, see a doctor right away.
If ink gets into your mouth, spit it out immediately and see a doctor right away.
處理用過的墨水匣時應特別小心，出墨孔周圍可能殘留部分墨水。
若墨水沾到皮膚，請以肥皂及清水徹底洗淨。
若墨水噴入眼睛，請立刻以清水沖洗。
若完全沖洗後仍感到不適或視覺有問題，請立即就醫。
若誤飲墨水，請立即將墨水吐出並立即送醫治療。

For fax supported models only:
Avoid using a telephone during an electrical storm.
There may be a remote risk of electric shock from lightning.
僅限支援傳真的機型：
請避免在雷雨天使用電話，否則可能會因閃電而發生遠距離觸電的危險。

For fax supported models only:
Do not use a telephone to report a gas leak in the vicinity of the leak.
僅限支援傳真的機型：
當附近有瓦斯洩漏時，請勿使用電話回報洩漏情形。

Always keep this guide handy.
請妥善保管本使用說明。

To prevent injuries, the product should be lifted and carried by two or more people if this is specified in the manual.
為避免造成傷害，應依手冊規定，由至少兩人合力抬起及搬動本產品。

Information for Users in Taiwan Only / 此資訊僅適用於台灣地區

- 產品名稱：多功能印表機
- 額定電壓：AC 100-240 V
- 額定頻率：50-60 Hz
- 耗電量：
 - 單機複印時：約 17 W
 - 就緒模式：約 6.2 W
 - 省電模式：約 1.2 W
 - 關機模式：約 0.2 W
- 額定電流：0.5 A-0.3 A
- 製造年份、製造號碼和生產國別：見機體標示

警語
檢修本產品之前，請先拔掉本產品的電源線。

- 功能規格**
- 列印方式：微針點壓電噴墨技術
 - 解析度：最大可達 4800 × 2400 dpi
 - 適用系統：
 - Windows Vista®, Windows® 7, Windows 8/8.1, Windows 10以上版本(32-bit, 64-bit)
 - Windows XP SP3(32-bit)
 - Windows XP Professional x64 Edition SP2
 - Windows Server® 2003(SP2)以上版本*
 - (* 僅限印表機驅動程式與掃描器驅動程式。)
 - Mac OS X 10.6.8以上版本

使用方法
見內附相關說明文件

緊急處理方法
發生下列狀況時，請先拔下印表機的電源線並洽詢Epson授權服務中心：

- 電源線或插頭損壞
- 有液體噴灑到印表機
- 印表機摔落或機殼損壞
- 印表機無法正常操作或是列印品質與原來有明顯落差

製造商：SEIKO EPSON CORPORATION
地址：3-5, Owa 3-chome, Suwa-shi, Nagano-ken 392-8502 Japan
電話：81-266-52-3131

進口商：台灣愛普生科技股份有限公司
地址：台北市信義區松仁路 100 號 15 樓
電話：(02) 8786-6688 (代表號)

注意事項

- 只能使用印表機標籤上所註明的電源規格。
- 請保持工作場所的通風良好。

「限用物質含有情況」標示內容，請至下列網址查詢。
URL：http://www.epson.com.tw/TW_RoHS

NCC警語
低功率電波輻射性電機管理辦法
第十二條
經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。
第十四條
低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

應避免影響附近雷達系統之操作。
高增益指向性天線只得應用於固定式點對點系統。

Windows® is a registered trademark of the Microsoft Corporation.
Mac is a trademark of Apple Inc., registered in the U.S. and other countries.
Android™ is a trademark of Google Inc.

Maschinenlärminformations-Verordnung 3. GPSGV: Der höchste Schalldruckpegel beträgt 70 dB(A) oder weniger gemäß EN ISO 7779.
Das Gerät ist nicht für die Benutzung im unmittelbaren Gesichtsfeld am Bildschirmarbeitsplatz vorgesehen. Um störende Reflexionen am Bildschirmarbeitsplatz zu vermeiden, darf dieses Produkt nicht im unmittelbaren Gesichtsfeld platziert werden.

Обладнання відповідає вимогам Технічного регламенту обмеження використання деяких небезпечних речовин в електричному та електронному обладнанні.
Для пользователей из России срок службы: 5 лет.

AEEE Yönetmeliğine Uygundur.
Ürünün Sanayi ve Ticaret Bakanlığına tespit ve ilan edilen kullanma ömrü 5 yıldır.

Tüketicilerin şikayet ve itirazları konusundaki başvuruları tüketici mahkemelerine ve tüketiciler hakem heyetlerine yapılabilir.

Üretici: SEIKO EPSON CORPORATION
Adres: 3-5, Owa 3-chome, Suwa-shi, Nagano-ken 392-8502 Japan
Tel: 81-266-52-3131
Web: http://www.epson.com/

The contents of this manual and the specifications of this product are subject to change without notice.

