
SAMSUNG **Galaxy S10**e

Quick Reference Guide

Image: Constraint of the second state

<td

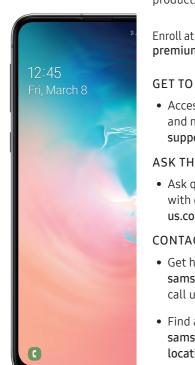

Samsung Care

Samsung Premium Care

Get more than just protection for your device. Pick the time and place, and a team member will meet you to set up, troubleshoot, repair or replace your product.

Enroll at samsung.com/us/support/ premium-care

GET TO KNOW YOUR PRODUCT:

 Access user manuals, troubleshooting, and more at samsung.com/us/ support

ASK THE COMMUNITY:

 Ask questions and share solutions with other Samsung customers at us.community.samsung.com

CONTACT US FOR SUPPORT:

- Get hardware or software support, at samsung.com/us/support/contact or call us at 1.800.SAMSUNG
- Find a service location near you at samsung.com/us/support/service/ locations

About your phone





SAMSUNG

warranty and may cause damage

Set up your phone

Your SIM card may be pre-installed.

REMOVE SIM/microSD TRAY Use the tool to open the SIM/microSD card tray.

CHARGE YOUR DEVICE Before turning on your phone, charge it fully.



BACKUP AND RESTORE Get help transferring contacts, photos and other content from your old phone

at samsung.com/smartswitch

Note: Use only Samsung-approved charging devices and accessories. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your

Search

From the Home screen swipe up and search for apps, settings, contacts, and more.



•

Customize your phone

From the Home screen, swipe up, and then tap **Settings** 💿 to customize, connect and personalize your phone:

CONNECTIONS Connect to a Wi-Fi[™] network, Bluetooth device and other connection options.

SOUNDS AND VIBRATION Set device volume and sounds.

DISPLAY Customize the Home screen. navigation gestures, and display brightness.

WALLPAPERS AND THEMES Make the device your own with fun and unique wallpapers and themes.

- DIGITAL WELLBEING Configure usage limits on your device.
- LOCK SCREEN Select a screen lock type and set security options.

BIOMETRICS AND SECURITY Set facial or fingerprint security options.

Learn more

The Help feature gives access to the user manual and useful information on how to use your device.

To open, from Settings 📀 tap Help ?.



Send and receive texts



Explore health & fitness

Ť

Utilize accessibility settings

Performance

Bixby Routines

Create custom routines that change your phone settings based on your location or activity. For example, while driving you can create a routine to automatically read notifications aloud.

- 1. Drag the Status bar down to display the Notification panel.
- 2. Touch and drag to access all Quick Settings options.
- 3. Tap Bixby Routines ⊘. Then touch and hold to set up.

Wireless PowerShare

Wirelessly charge compatible devices right from your phone.

- 1. Drag the Status bar down to display the Notification panel.
- 2. Touch and drag to access all Quick Settings options.
- 3. Tap Wireless PowerShare 🚯.
- 4. With the phone face down, place the device on the back of the phone to charge.

Wireless PowerShare works with most Qi-Certified devices. Requires minimum 30% battery to share. Speed and power efficiency of charge varies by device. May not work with some accessories, covers or other manufacturer's devices. If you have trouble connecting or charging is slow, remove any cover from each device. May affect call reception or data services, depending on your network environment.





Camera

Features

- Dual Pixel: Focus in a blink.
- Dual Aperture: Adapt to bright light and super low light automatically.
- Ultra wide: Capture more of the scene.

•

- High Dynamic Range (HDR) 10+ recording: Ensure bright colors are bright, while keeping dark colors dark.
- Scene optimizer: Recognize and optimize scenes and colors for brilliant photos.
- Artistic Live Focus: Blur the background of a photo to make the subject stand out.
- Zoom: Get a closer view of faraway subjects.
- Hyperlapse: Create a motion shot while recording a time-lapse video.
- Super slow-mo: Capture motion at 960 frames per second.
- Slow motion: Capture motion at 245 frames per second.

CAMERA MODES

BIXBY VISION

TOOLS PANEL

Identify objects and locations.

Swipe left or right to select effects.

Swipe left or right to select a mode.

GALLERY

View photos.

CAPTURE

Capture images.

TOGGLE CAMERAS

Switch between the back and front cameras.



Create an AR Emoji

Turn your selfie into an emoji.

- 1. From the Home screen, tap Camera AR Emoji > Create My Emoji.
- 2. Tap () to capture your photo and customize and save your emoji.



Personalize messages with an emoji

- 1. Tap Messages 💬 > New message 💬 > Enter message field.
- 2. Tap Stickers 😲 to add a GIF or your very own emoji or sticker, and then tap **Send** 🕢.




Recent apps

Enjoy the new full-screen view of recent apps.

Tap **Recents** || to view a list of recently opened apps.

- Tap an app icon to view options.
- Swipe up to close.
- Swipe down to open.

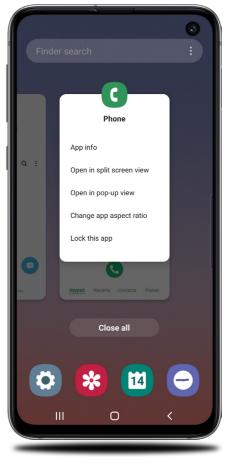

Gestures

Customize the Home. Back and Recents keys or remove them and use gestures instead to increase screen space.

- 1. From Settings 😳, tap Display 🔶 > Navigation bar.
- 2. Tap one of the following Navigation types:
- Navigation buttons (default)
- Full screen gestures
- Button order
- Gesture hints (Displays only when full screen gestures is selected)

U.S. Cellular Customer Care 1 888 944 9400

©2019 Samsung Electronics America, Inc. Samsung and Galaxy S are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of phone may vary.