

SAMSUNG Galaxy Tab S4

Samsung Care

How can we help you?

GET TO KNOW YOUR PRODUCT:

- Access user manuals, tips and more at samsung.com/us/support.

ASK THE COMMUNITY:

- Ask questions and get solutions from Samsung customers, at us.community.samsung.com.

CONTACT US FOR SUPPORT:

- For hardware or software support, visit samsung.com/us/support/contact or call us at 1.800.SAMSUNG.
- Find a service location near you, at support-us.samsung.com/cyber/locator/asc_locator.jsp.



1 About your device



2 Set up your device

Your SIM card may be pre-installed.

REMOVE SIM/microSD TRAY

Use the tool to open the SIM/microSD™ card tray.

 


INSERT SIM/microSD CARD

Slide the SIM card and the optional microSD card (microSD card sold separately) into the tray with the gold contacts facing down.

CHARGE YOUR DEVICE

Before turning on your device, charge it.

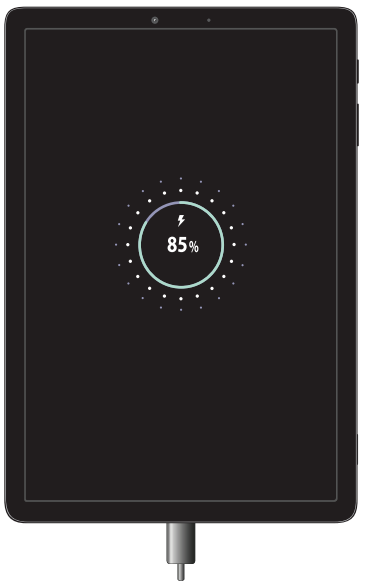

Note: Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

3 Customize your device

From a home screen swipe up, and then tap **Settings** to customize, connect or turn on options to personalize your device:



LOCK SCREEN

Select a screen lock type and set security options.



WALLPAPER

Select preloaded wallpaper or images from the gallery.



CLOUD AND ACCOUNTS

Set up email account, multiple users, and backup and restore content.



BIOMETRICS AND SECURITY

Set biometric security options.



CONNECTIONS

Connect to a Wi-Fi network, Bluetooth device and other connection options.



 
SOUNDS AND VIBRATION

Set device volume and sounds.



DISPLAY

Customize the home screen and display brightness.

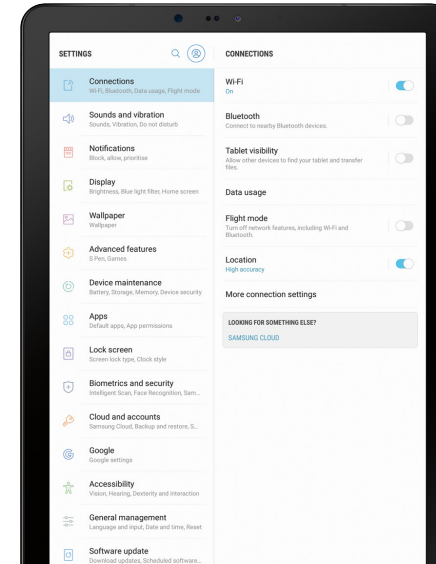

Learn more

Need help?

The Help setting displays the device user manual. The user manual provides information about the following and more.

To open, from the Home screen, swipe up and tap **Settings** > **Help**.



Contacts



Calendar



Personalized device support



Accessibility settings

Search

From the home screen swipe up, and search for anything on the device. For example enter an app or settings name.



S Pen

 
The S Pen™ enables fast, accurate, and precise input while providing a natural writing experience. Write and draw directly into emails, calendar events, Word, Excel, PowerPoint, and PDF documents.

AIR COMMAND

To launch Air Command, tap the screen with the tip of the S Pen and then tap  or press the S Pen button.


- **CREATE NOTE** Create short notes.
- **VIEW ALL NOTES** Displays notes.
- **SMART SELECT** Instantly outline and crop anything on the screen and freely edit or share with others.
- **SCREEN WRITE** Capture a screen image and write or draw on it.
- **LIVE MESSAGE** Create live messages, and GIFs.
- **TRANSLATE** Hover the S Pen over a word to view its definition and pronunciation.
- **PENUP** Draw, color, edit, and share live drawings.
- **ADD SHORTCUTS** Select an app or function to open or turn on using Air command.

S Pen button

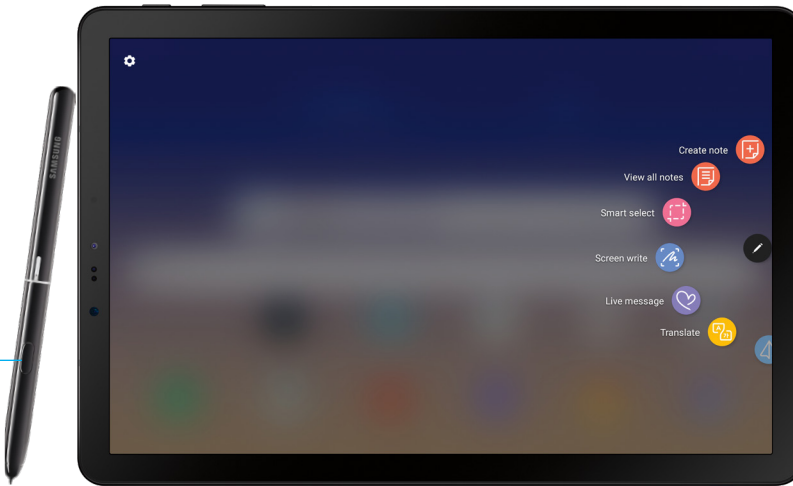

Bixby

 Set reminders, see upcoming appointments, photos, tomorrow's weather and more. To launch **Bixby**, from the home screen swipe right and follow the prompts to set up.

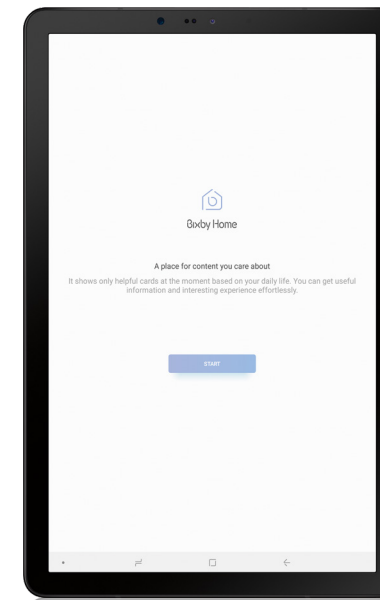

For more information about Bixby, visit samsung.com/us/support/owners/app/Bixby.

U.S. Cellular® Customer Care 1-888-944-9400

©2018 Samsung Electronics America, Inc. Samsung and Galaxy Tab S4 are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of device may vary.