

Federal Communications Commission (FCC) Statement

This product has been tested and found to comply with the limits for a Class B device, pursuant to part 15 of the FCC Rules. It is intended for use in residential setting, but may also be used in commercial or industrial setting.

CE Compliance

This device has been tested and found to comply with the following European Union directives: Electromagnetic Capability (89/336/EMC), Low Voltage (73/23/EEC) and R&TTEd (1999/5/EC).

Limited Warranty

WE'RE HERE TO HELP YOU! NEED ASSISTANCE SETTING UP THIS PRODUCT?

Make sure you:

1. Use the live chat at www.iogear.com to try and solve any issues you may be having with the product
2. Visit the Tech Info Library/FAQ on www.iogear.com (under the Support tab)
3. Call the tech support line at 1-866-946-4327 (U.S. only) or 949-453-8782

Warranty Information

This product carries a 3 Year Limited Warranty.

For the terms and conditions of this warranty, please go to <http://www.iogear.com/support/warranty> or call 1-866-946-4327

Contact

Toll Free 866-946-4327 (USA)
Phone: 949-453-8782
19641 Da Vinci, Foothill Ranch, CA 92610

www.iogear.com
support@iogear.com

IOGEAR

About Us



FUN

IOGEAR offers connectivity solutions that are innovative, fun, and stylish, helping people enjoy daily life using our high technology products.



GREEN

IOGEAR is an environmentally conscious company that emphasizes the importance of conserving natural resources. The use of our technology solutions helps reduce electronic waste.

Quick Start Guide

USB Smart Card Access Reader

© 2011 IOGEAR®

GSR202
PART NO. Q1176


Package Contents

Start Here!

- 1 x USB Smart Card Reader
- 1 x Quick Start Guide
- 1 x Warranty Card

Overview

1. USB Type A Connector
2. Power status LED
3. Smart Card reading status LED
4. Smart Card slot

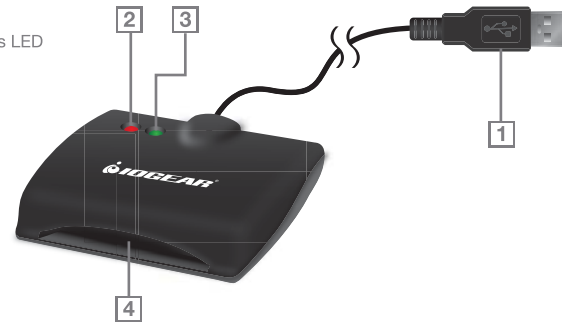

Installation

Installing the Driver

Generally speaking, this product is plug and play for most of the fully installed Windows OS, or Mac OS 10.4 or later. Just plug the unit to a USB port on the computer, it will be detected by the computer and the driver will be installed automatically.

In the cases that Windows OS was not fully installed, a driver installation may be required. Please go to the IOGEAR website to download the driver, and follow the steps below:

1. Un-zip the file first;
2. Double click the Setup file;
3. Follow the installation guide and click "Finish" ;
4. Plug the USB Smart Card Reader into the computer. The Windows OS will install the device automatically.
5. Once the Power LED is on, the device is ready to use.

For Linux OS users:

Please download the driver from the IOGEAR website. Once the user has downloaded the driver, please un-zip the file first. Users can find the installation method in the un-zip package.

Hardware Installation

1. Plug USB Smart Card Reader into the computer. The Windows OS will auto install the device.
2. Once the Power LED is on, the device is ready to use.

Important:

In order to protect your smart card, please remove smart card from smart card reader and keep in a safe place after finish using IOGEAR USB Smart Card Reader.

