

Quick Start Guide



Packard Bell dot s series

TABLE OF CONTENTS

Starting your computer	3	Right view	9
Wireless connection	3	Base view	10
Registration	3	Recovery	11
Software installation	4	Packard Bell Recovery Management	11
Recovery	4	Creating recovery discs	11
Having trouble?	4	Recovering your system	13
Getting to know your computer	5	Types of recovery	13
Top view - display	5	Regulatory information	18
Top view - keyboard	6	Environment	21
Special keys	7	Software license	22
Rear view	8		
Left view	8		

Work Great with Microsoft® Office 2010 - Express your ideas, solve problems and simplify everyday projects with Office 2010.

Photo editing - Easily edit and print your photos with Windows Live Photo Gallery. Then share them on Facebook, YouTube™ or Windows Live.

Search & Decide with Bing™ - Find and organize the answers you need using Bing™, so you can make faster, more informed decisions.

Please use this space to write down important information about your computer.

Product name:

Serial Number:

Date of purchase:

Place of purchase:

Visit registration.packardbell.com and discover the benefits of being a customer of Packard Bell.

Remark: All images are for reference purposes only. Actual configuration may vary.

STARTING YOUR COMPUTER


Thank you for purchasing this Packard Bell computer!

This guide has been designed to introduce you to the features of your computer and assist in your computing experience.

After setting up and starting your computer, as shown in the setup instructions, it will ask you questions that will help you connect to the Internet. Your computer will then configure installed software.

WIRELESS CONNECTION

To connect to a wireless network, first check the wireless features of your computer are on, and that the router or modem you want to connect to is also correctly configured.

- If wireless is not on, press the communication key (()>) to open the Launch Manager and make sure Wi-Fi is On.
- Your computer will detect and display any available networks, select your network and enter the password, if required.
- After a short delay, your computer should connect to the Internet.

If your network is not detected, or your computer does not connect to the Internet, please refer to your ISP or router's documentation. After your computer starts and you can use it, open Internet Explorer and follow the instructions.

Alternatively, use a network cable to connect directly to a network port on your router. Please refer to your ISP or router's guide.

REGISTRATION

When using your computer for the first time, it is recommended that you register it. This gives you access to some useful benefits, such as:

- Faster service from our trained representatives.
- Membership in the Packard Bell community: receive promotions and participate in customer surveys.
- The latest news from Packard Bell.

How to register

During the initial startup of your computer, a window will invite you to register. Please fill in the information and click Next. The second window you'll see contains optional fields that will help us to provide you with a more personable customer service experience.

Another option

Another way to register your Packard Bell product is to visit our website at registration.packardbell.com. Choose your country and follow the simple instructions.

After registering, you will be sent a confirmation email with important information that you should keep in a safe place.

SOFTWARE INSTALLATION

Your computer will automatically install software and prepare your computer for use. This may take some time, please do not turn off your computer; wait until the installation has finished.

RECOVERY

You should create recovery discs as soon as you are able. The Packard Bell Recovery Management program allow you to create recovery discs and then to restore or reinstall applications and drivers provided by Packard Bell. You will need a pack of writable DVDs.

See page 82 for more information about recovery.

HAVING TROUBLE?

Packard Bell provides several options to support your purchase.

Packard Bell support

Make sure you write down your computer serial number, date and place of purchase and model name on the area provided in this guide; save your proof of purchase. Before you call us, please write down any error message that accompanies the problem, and have the computer in front of you and switched on if possible. Having these items to hand when contacting us will ensure better and quicker service.

Packard Bell website

Remember to visit www.packardbell.com - Check out the support section for up-to-date information, help, drivers and downloads.

Warranty and contact information

You can find information about the warranty for your computer and how to contact technical support in your computer's Warranty.

GETTING TO KNOW YOUR COMPUTER

After setting up your computer as illustrated in the setup instructions, let us show you around your new Packard Bell computer.



TOP VIEW - DISPLAY







#	Icon	Item	Description
1		Webcam	Web camera for video communication.

#	Icon	Item	Description
2		Display screen	Also called Liquid-Crystal Display (LCD), displays computer output.
3		Microphone	Internal microphone for sound recording.

TOP VIEW - KEYBOARD















#	Icon	Item	Description
1		Power button / indicator	Turns the computer on and off. Indicates the computer's power status.
2		Keyboard	For entering data into your computer. – <i>Special keys are described on page 7.</i>
3		Touchpad	Touch-sensitive pointing device which functions like a computer mouse.
		Power indicator	Indicates the computer's power status.
			Indicates the computer's battery status.
4		Battery indicator	– <i>Charging: The light shows amber when the battery is charging.</i> – <i>Fully charged: The light shows blue when in AC mode.</i>
		Communication indicator	Indicates the computer's wireless connectivity device status.
5		Click buttons (left and right)	The left and right side of the button function as left and right selection buttons.

– **Note:** The front panel indicators are visible even when the computer cover is closed.

Special keys

Your computer's keyboard includes keys that activate special functions. The function of each key is clearly marked with an icon.

<i>Icon</i>	<i>Function</i>	<i>Description</i>
	Hotkey for second function	Activates a second function on certain keys. <i>E.g. press the Fn key to activate the F1 to F12 keys.</i>
	Social Networking	Opens the Social Networks application. <i>– If this application is not installed, the key will start your instant messaging application.</i>
	Help	Opens the User's Guide for your computer.
	Communication	Enables/disables the computer's communication devices.
	Display toggle	Switches display output between the display screen, external monitor (if connected) and both.
	Screen blank	Turns the display screen backlight off to save power. Press any key to return.
	Touchpad toggle	Turns the internal touchpad on and off.
	Speaker toggle	Turns the speakers on and off.
	Volume down	Decreases the sound volume.
	Volume up	Increases the sound volume.
	Brightness down	Decreases the screen brightness.
	Brightness up	Increases the screen brightness.

Hotkeys

The computer uses hotkeys (key combinations) to access Num Lock, function keys and navigation commands.

 
To activate hotkeys, press and hold the **Fn** key (bottom left) before pressing the other key in the hotkey combination.

<i>Hotkey</i>	<i>Function</i>	<i>Description</i>
Fn + Special keys <i>(see page 7)</i>	Function keys	Activates the F1 to F12 keys.
Fn + Page Up	Home	Scrolls to the beginning of a document.
Fn + Page Down	End	Scrolls to the end of a document.

– Note: It is not necessary to press the Fn key to use the F1 to F12 function keys when starting your computer or when using the BIOS.


To swap the hotkey and special function of the F1 to F12 keys, change the function key setting in the BIOS (to open the BIOS press F2 when starting your computer, then select the Main menu and change Function key behavior to Function keys).



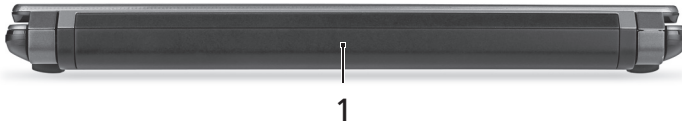

REAR VIEW

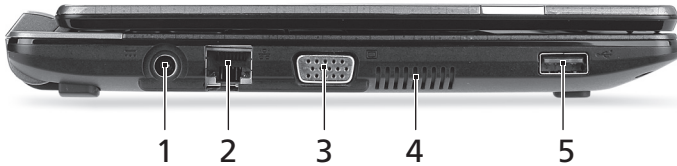 


#	Icon	Item	Description
1		Battery bay	Houses the computer's battery pack.

LEFT VIEW



 
#	Icon	Item	Description
1		DC-in jack	Connects to your computer's AC adapter.
2		Ethernet (RJ-45) port	Connects to an Ethernet 10/100/1000-based network.
3		External display (VGA) port	Connects to a display device (e.g., external monitor, LCD projector).
4		Ventilation and cooling fan	Allows the computer to stay cool. – Do not cover or obstruct the openings.
5		USB 2.0 port	Connect to USB devices (e.g., USB mouse, USB camera).



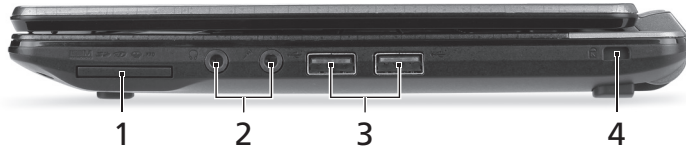

RIGHT VIEW

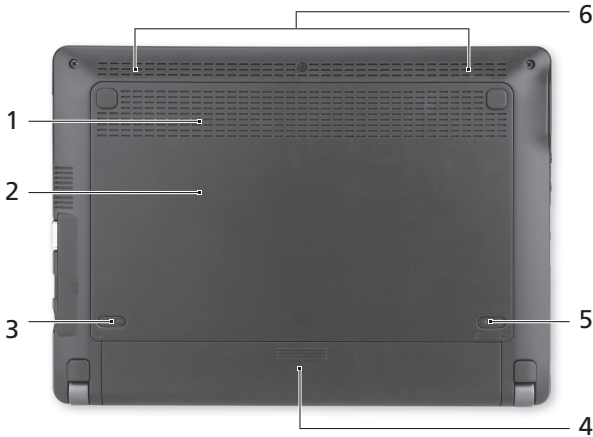 

#	Icon	Item	Description
1		Multi-in-1 card reader	<p>Accepts Secure Digital (SD), MultiMediaCard (MMC), Memory Stick PRO (MS PRO), xD-Picture Card (xD).</p> <ul style="list-style-type: none"> – Push to remove/install the card. Only one card can operate at any given time.
		Microphone jack	Accepts inputs from external microphones.
2		Headphones / speaker jack	<p>Connects to audio line-out devices (e.g., speakers, headphones).</p> <ul style="list-style-type: none"> – Supports compatible 3.5 mm headsets with built-in microphone (e.g. Acer smart handheld headsets).
3		USB 2.0 port	Connect to USB devices (e.g., USB mouse, USB camera).
4		Kensington lock slot	<p>Connects to a Kensington-compatible computer security lock.</p> <ul style="list-style-type: none"> – Wrap the computer security lock cable around an immovable object such as a table or handle of a locked drawer. Insert the lock into the notch and turn the key to secure the lock. Some keyless models are also available.

BASE VIEW



#	Icon	Item	Description
1		Ventilation and cooling fan	Allows the computer to stay cool. – Do not cover or obstruct the openings.
2		Memory compartment	Houses the computer's main memory.
		Hard disk bay	Houses the computer's hard disk (secured with screws).
3		Battery release latch	Releases the battery for removal. Insert a suitable tool and slide to release.
4		Battery bay	Houses the computer's battery pack.
5		Battery lock	Locks the battery in position.
6		Speakers	Deliver stereo audio output.

RECOVERY


PACKARD BELL RECOVERY MANAGEMENT

 
If your computer experiences problems that are not recoverable by other methods, you may need to reinstall the Windows operating system and factory-loaded software and drivers. To ensure you can recover your computer when needed, you should create a recovery backup as soon as possible.

Creating recovery discs

To reinstall using discs, you must create a set of recovery discs beforehand. Throughout the process, you will be guided by on-screen instructions. Please read them carefully!

Caution: If you are using a USB flash drive, ensure it is at least 12 GB and does not contain any previous data.

1. Click on Start  > All Programs > Packard Bell, then click on Packard Bell Recovery Management.

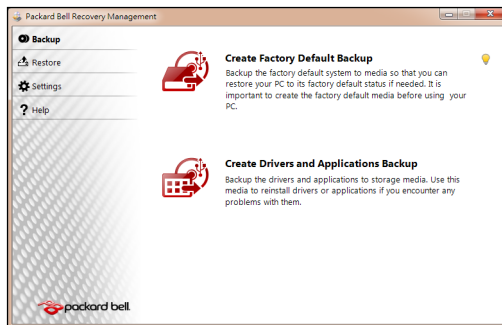

2. To create recovery backup for the hard drive's entire original contents, including Windows and all factory-loaded software and drivers, click Create Factory Default Disc, or if your computer has no optical drive, Create Factory Default Backup.

 
- OR -

To create recovery discs for only the factory-loaded software and drivers, click Create Drivers and Applications Backup.




Important: We recommend that you create each type of recovery disc as soon as possible.

The Create Factory Default Backup dialog box opens.

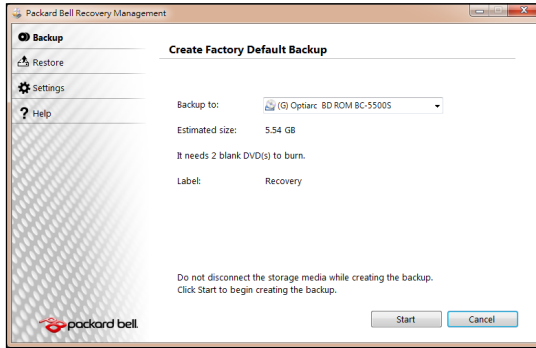

This dialog box tells you the estimated size of the backup file.

 - If you are using optical discs, it will also show the number of blank, recordable discs you will need to complete the recovery discs. Make sure that you have the required number of identical, blank discs.
 - If you are using a USB disk, make sure it has enough capacity before continuing.
3. Plug in the USB disk or insert a blank disc into the drive indicated in the Backup to list, then click Next. You will be shown the backup progress on the screen.

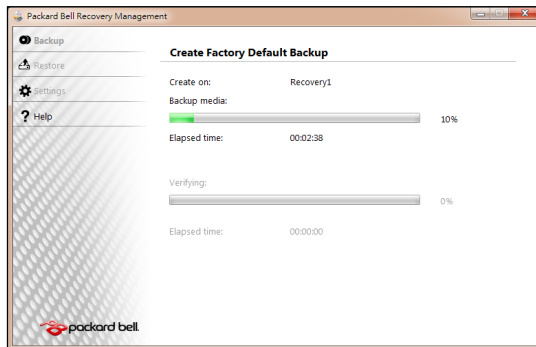

4. Follow the process until it completes:

- If you are using optical discs, the drive ejects each disc as it completes burning it. Remove the disc from the drive and mark it with a permanent marker. If multiple discs are required, insert a new disc when prompted, then click OK. Continue until the process is complete.
 - If you are using a USB disk, unplug the USB drive and mark it with a permanent marker.
- ! Important: Write a unique, descriptive label on each backup, such as 'Windows Recovery Backup' or 'Apps/Drivers Recovery Backup'.

Make sure you keep the backup in a safe place that you will remember.

RECOVERING YOUR SYSTEM

If Packard Bell support did not help fix your problem, you can use the Packard Bell Recovery Management program. This will restore your computer to the same state as when you purchased it, while giving you an option to retain all settings and personal data for later retrieval.

To recover your system:

1. Perform minor fixes.

If only one or two items of software or hardware have stopped working correctly, the problem may be solved by reinstalling the software or the device drivers.

To recover software and drivers that were pre-installed at the factory, see "Recovering pre-installed software and drivers" on page 14.

For instructions on reinstalling software and drivers that were not pre-installed, see that product's documentation or technical support Web site.

2. Revert to a previous system condition.

If reinstalling software or drivers does not help, then the problem may be solved by returning your system to a previous state when everything was working correctly.

For instructions, see "Returning to a previous system condition" on page 13.

3. Reset your system to its factory condition.

If nothing else has solved the problem and you want to reset your system to factory condition, see "Returning your system to its factory condition" on page 15.

Types of recovery

Returning to a previous system condition


Microsoft System Restore periodically takes 'snapshots' of your system settings and saves them as restore points. In most cases of hard-to-resolve software problems, you can return to one of these restore points to get your system running again.

Windows automatically creates an additional restore point each day, and also each time you install software or device drivers.



Help: For more information about using Microsoft System Restore, click Start, then click Help and Support. Type windows system restore in the Search Help box, then press Enter.

To return to a restore point:

1. Click on Start  > Control Panel > System and Security > Action Center, then click on Recovery.
2. Click on Open System Restore, then Next.
3. Click on the restore point you want, click on Next, then Finish. A confirmation message box appears.
4. Click on Yes. Your system is restored using the restore point you specified. This process may take several minutes, and may restart your computer.


Recovering pre-installed software and drivers

As a troubleshooting step, you may need to reinstall the software and device drivers that came pre-installed on your computer from the factory. You can recover using either your hard drive or the backup you have created.

- New software - If you need to recover software that did not come pre-installed on your computer, you need to follow that software's installation instructions.
- New device drivers - If you need to recover device drivers that did not come pre-installed on your computer, follow the instructions provided with the device.

Opening the recovery tool

If you are recovering using Windows and the recovery information stored on your computer:

- Click on Start  > All Programs > Packard Bell, then click on Packard Bell Recovery Management. Packard Bell Recovery Management opens.
- Click on the Restore tab, then click Reinstall Drivers or Applications. The Packard Bell Application Recovery main menu opens.



If you are recovering from a driver and application recovery backup on optical discs:

- Insert the driver and application recovery backup disc ('Apps/ Drivers Recovery Backup') into the disc drive.
- Restart your computer and wait for the program to start, then go to "Reinstalling drivers or applications" on page 15.

If you are recovering from the driver and application recovery backup on a USB drive:

- Insert the USB drive into a USB port. Open the USB drive in Windows Explorer and double-click Recovery.
- Click Reinstall Drivers or Application from a USB device, then go to "Reinstalling drivers or applications" on page 15.

Reinstalling drivers or applications

1. Click on Contents. A list of software and device drivers opens.
2. Click on the install icon for the item you want to install, then follow the on-screen prompts to complete the installation. Repeat this step for each item you want to reinstall.

Returning your system to its factory condition

If your computer experiences problems that are not recoverable by other methods, you may need to reinstall everything to return your system to its factory condition. You can reinstall using either your hard drive or the recovery discs you have created.




Caution: This complete recovery deletes everything on your hard drive, then reinstalls Windows and all software and drivers that were pre-installed on your system. If you can access important files on your hard drive, back them up now.

- If you can still run Windows, see "Recovering from within Windows" below.
- If you cannot run Windows and your original hard drive is still working, see "Recovering from the hard drive during startup" on page 16.
- If you cannot run Windows and your original hard drive has been completely re-formatted or you have installed a replacement hard drive, see "Recovering from your recovery backup" on page 16.

Recovering from within Windows

To reinstall Windows and all pre-installed software and drivers:

1. Click on Start  > All Programs > Packard Bell, then click on Packard Bell Recovery Management. Packard Bell Recovery Management opens.
2. Click on the Restore tab, then Restore system to factory default. The Confirm Restoration dialog box opens.

3. Click on Yes, then Start. A dialog box displays information about the hard drive that the operating system will be recovered to.



Caution: Continuing the process will erase all files on your hard drive.

4. Click on OK. The recovery process begins by restarting your computer, then continues by copying files to your hard drive. This process may take a while, but a Packard Bell Recovery Management screen shows you its progress.

When the recovery has finished, a dialog box prompts you to restart your computer.

5. Click on OK. Your computer restarts.
6. Follow the on-screen prompts for first-time system setup.

Recovering from the hard drive during startup

To reinstall Windows and all pre-installed software and drivers:

1. Turn on your computer, then press Alt+F10 during startup. Packard Bell Recovery Management opens.
2. Click on Restore system from factory default.



Caution: Continuing the process will erase all files on your hard drive.

3. Click on Next. Your hard drive's original, factory-loaded contents are recovered. This process will take several minutes.

Recovering from your recovery backup

To reinstall Windows and all pre-installed software and drivers:

1. Find your recovery backup:
 - If you are using optical discs, turn on your computer, insert the first system recovery disc ('Windows Recovery Backup') into your optical disc drive, then restart your computer.
 - If you are using a USB disk, plug in the USB drive and turn on your computer.



Caution: Continuing the process will erase all files on your hard drive.

2. If it is not already enabled, you must enable the F12 Boot Menu:
 1. Press F2 when starting your computer.
 2. Use the left or right arrow keys to select the Main menu.
 3. Press the down key until F12 Boot Menu is selected, press F5 to change this setting to Enabled.
 4. Use the left or right arrow keys to select the Exit menu.
 5. Select Save Changes and Exit and press Enter. Select OK to confirm.
 6. Your computer will restart.

3. During startup, press F12 to open the boot menu. The boot menu allows you to select which device to start from, such as the hard drive or an optical disc.
4. Use your arrow keys to select the line CDROM/DVD or USB HDD, then press Enter. Windows installs from the recovery backup instead of the normal startup process.
5. Follow the on-screen prompts to complete the recovery.

REGULATORY INFORMATION

CE COMPLIANCE REQUIREMENT

Products with the CE marking comply with both the Electromagnetic Compatibility Directive (2004/108/EC) and the Low Voltage Directive (2006/95/EC) issued by the Council of the European Communities.



Compliance with these directives implies conformity to the following European Standards:

EN55022: Radio disturbance characteristics

EN55024: Immunity characteristics

EN61000-3-2: Limitation of harmonic current emissions

EN61000-3-3: Limitation of voltage fluctuation and flicker in low-voltage supply system

EN60950-1: Product Safety. If your computer includes a telecommunication network board, the input/output socket is classified as Telecommunication Network Voltage (TNV-3).

Note for computers equipped with wireless controllers and wired modems:

Hereby, Packard Bell, declares that the wireless devices provided with this computer include a low power radio transmitter in full compliance with the essential requirements and other relevant provisions of Directive 1999/05/EC for Low Voltage, EMC and RF of the R&TTE.



EN300328 - Electromagnetic compatibility and Radio spectrum Matters (ERM).

EN301489-1/-7/-17/-24 - EMC standard for radio equipment and services, common technical requirements.

EN301893 - Broadband Radio Access Network, 5GHz high performance RLAN, harmonized EN covering essential requirements of article 3.2 of R&TTE directive.

EN62311 - Generic standard to demonstrate the compliance of low power electronic and electrical apparatus with the basic restrictions related to human exposure to electromagnetic fields.

List of applicable countries

This product must be used in strict accordance with the regulations and constraints in the country of use. For further information, contact the local office in the country of use. Please see <http://ec.europa.eu/enterprise/rte/imlem.htm> for the latest country list.

MODIFICATIONS TO THE PRODUCT

CE Marking

Packard Bell cannot be held responsible for unauthorized modifications made by the user and the consequences thereof, which may alter the conformity of the product with the CE Marking.

Radio frequency interference

The manufacturer is not responsible for any radio or TV interference caused by unauthorised modifications to this equipment.

CONNECTIONS AND REMOTE EARTHS

PELV (Protected Extra Low Voltage)

To ensure the extra-low voltage integrity of the equipment, only connect equipment with mains-protected electrically-compatible circuits to the external ports.

SELV (Safety Extra Low Voltage)

Every input and output of this product is classified as Safety Extra Low Voltage.

Remote earths

To prevent electrical shock, connect all local (individual office) computers and computer support equipment to the same electrical circuit of the building wiring. If you are unsure, check the building wiring to avoid remote earth conditions.

Building supply

Only connect the equipment to a building supply that is in accordance with current wiring regulations in your country. In the U.K., these are the IEE regulations.

POWER SUPPLY AND CABLES

Power supply

The power supply socket-inlet and socket-outlet (if equipped) are classified as Hazardous Voltage.

You must unplug the power supply cord and remove the battery to disconnect the equipment from the power supply. In that aim, the socket-outlet should be installed near to the equipment and should be easily accessible.

Input rating: Refer to the rating label on the bottom of the computer and ensure that your power adapter complies with the specified rating.

Under no circumstances should the user attempt to disassemble the power supply. The power supply has no user-replaceable parts. Inside the power supply are hazardous voltages that can cause serious personal injury.

A defective power supply must be returned to your dealer.

Power cables and plug

This Product requires a three-wire grounded power cord and plug. The plug only fits in a grounded power outlet. Make sure the power outlet is properly grounded before inserting the plug. Do not insert the plug into a non-grounded power outlet. Contact your electrician for details.

The cord length must not exceed 2.5 metres. To prevent electrical hazards, do not remove or disable the ground contact on the power cord. Replace the power cord if it gets damaged. Contact your dealer for an exact replacement. In Europe, the plug must be rated for 250 VAC, 10 amp minimum. The plug must display an international agency approval marking. The cord must be suitable for use in the end-user country. Consult your dealer or the local electrical authorities if you are unsure of the type of power cord to use in your country.

Cables

For cables which are not delivered with the Product in the computer's packaging:

The EMC performance of the system is guaranteed only if the cable and interface use efficient shielding.

The use of shielded interface cable is required for USB, IEEE1394, serial, printer, game, analog or digital audio/ video, PS2, TV or FM antennas, and generally all high-speed cable interfaces.

Use only UL Listed No. 26AWG or larger telecommunication cords.

Only Ethernet LAN or RTC modem cable can have length exceeding 3 metres.

Packard Bell recommends that you add a ferrite core round clip to each cable connecting your computer to a hardware device that was not included with your computer.

- Ferrite reference: 28A-2029 from Steward (two loops)

During product certification, Packard Bell used the following cable quality:

- USB2.0 Certified Cables from Hama 46778
- IEEE1394 shielded FireWire from Hama 50011
- RCA-RCA shielded Audio/Video Cables from Thomson KHC001M, KHC012M, KHC028M
- Stereo Jack shielded Audio cables from Hama 43330H, 42714H

Heat Build-up and Portable Computers

The AC adapter and the underside of the computer can become hot after prolonged use. Sustained physical contact with either should be avoided.

CHASSIS COVER REMOVAL AND REPLACEMENT

Before removing the chassis cover to service or modify the equipment, you must disconnect all power and modem cords, and remove the battery.

Caution: Some components inside the computer can become hot after prolonged use.

You then must close the chassis before you plug in and switch on the equipment.

LASER COMPLIANCE STATEMENT

The optical devices are tested and certified to be compliant with International Electrotechnical Commission IEC60825-1 and European EN60825-1 standards for Class 1 laser products.

Class 1 laser products are not considered hazardous. The optical devices are designed such that there is never human access to laser radiation above a Class 1 level during normal operation or prescribed maintenance conditions.

The optical devices installed in your computer are designed for use solely as components of such electronic product and therefore do not comply with the appropriate requirements of Code of Federal Regulation Sec. 1040.10 and Sec. 1040.11 for COMPLETE laser products.

Because exposure to laser radiation is extremely hazardous, under no circumstances should the user attempt to disassemble the laser device.

PACKAGING

The packaging of this product is compliant with the European Environmental Directive 94/62/EC from December 20 th 1994 and its equivalent in the French Legislation by the Decree 98-638 from July 20 th 1998.

COMPLIANT WITH RUSSIAN REGULATORY CERTIFICATION



ME61

ENVIRONMENT

OUR COMMITMENT TO ENVIRONMENTAL PROTECTION

Environment has been at the heart of our products.

Packard Bell is committed to limit the environmental impact of its products during product lifecycle.

Starting at design phase, with a very strict procurement policy, maximum attention is given to electronic components in order to limit their weight in heavy metals such as lead, cadmium, chromium, mercury, etc. Suppliers are asked, for each part of any product, to respect all regulations.

As far as end-of-life products are concerned, measures have been taken to anticipate and facilitate the recycling of all our products. Thus, all plastic parts heavier than 25 grams used in Packard Bell products are labelled ISO 11469. This label allows a quick recognition of the material and eases its valorisation. Likewise, desktop computers are designed to be easily dismantled, with screws being replaced by clips.

PRODUCT DISPOSAL

The 2002/96/EC Directive, known as Waste Electrical and Electronic Equipment (WEEE) Directive, requires that used electrical and electronic products must be disposed of separately from normal household waste in order to promote reuse, recycling and other forms of recovery and to reduce the quantity of waste to be eliminated with a view to reducing landfill and incineration. The crossed-out dustbin logo is there to remind you that these products must be sorted separately for disposal. These rules concern all Packard Bell products and also all accessories, such as keyboard, mouse, speakers, remote control, etc. When you have to dispose of such products, make sure that they are correctly recycled by checking with your local authority, or by returning your old equipment to your retailer if you are replacing it. For information, visit www.packardbell.com/recycling.



Battery disposal (when applicable)

Before disposing of your equipment ensure that you have removed any batteries that may be fitted in the equipment. European law states that batteries must be collected for disposal separately from household waste. Do not throw your used batteries in the dustbin. Dispose of your used batteries via a battery collection scheme where available, or ask your distributor or local authority what infrastructures you can use. Your efforts will enable the safe collection, recycling and destruction of used batteries and will help protect the environment and reduce health hazards.



Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Mercury advisory

For electronic products containing a non-LED-backlit LCD/CRT monitor or display: Lamp(s) inside this product contain mercury and must be recycled or disposed of according to local, state or federal laws. For more information, contact the Electronic Industries Alliance at www.eiae.org. For lamp-specific disposal information, check www.lamprecycle.org.



SOFTWARE LICENSE



Note: Most of the software applications are already preinstalled on your Packard Bell computer. They are ready to use or to set up. However, some titles require a CD or DVD to run. You will find these discs in your computer's packaging.

Packard Bell License Agreement (CD and/or DVD Products). This copy of the original is your proof of license. Please treat it as valuable property.

Important!

Read carefully before installing the software.

The following License Agreement applies to you. This is a legal agreement between you (either individual or an entity) and Packard Bell. By installing the software you are agreeing to be bound by the terms of this Agreement. If you do not agree to the terms of this Agreement, promptly return your entire computer system, the unopened software packet(s), if any, as well as the accompanying terms (including written materials or other container(s)) in the place you obtained them for a full refund.

PACKARD BELL SOFTWARE LICENSE

1. Grant of License

This Packard Bell License Agreement ("License") permits you to use one copy of the specified version of the Packard Bell SOFTWARE identified above (which may include at least one CD or DVD disc) on any single computer, provided the SOFTWARE is in use on only one computer at any time. If you have multiple Licenses for the SOFTWARE, then at any time you may have as many copies of the SOFTWARE in use as you have Licenses. The SOFTWARE is "in use" on a computer when it is loaded into the temporary memory (i.e. RAM) or installed in the permanent memory (e.g. hard disk, CD and/or DVD, or other storage device of that computer, except that a copy installed on a network server for the sole purpose of distribution of other computer is not "in use." If the anticipated number of users of the SOFTWARE will exceed the number of applicable Licenses, then you must have a reasonable mechanism or process in place to assure that the number of persons using the SOFTWARE concurrently does not exceed the number of Licenses. If the SOFTWARE is permanently installed on the hard disk or the storage device of a computer (other than a network server) and one person uses that computer more than 80% of the time it is in use, then that person may also use the SOFTWARE on a portable or home computer.

2. Copyright

The SOFTWARE is owned by Packard Bell or its suppliers and is protected by United States copyright laws and international treaty provision. Therefore, you must treat the SOFTWARE like any other copyrighted material (e.g. a book or musical recording) except that you may transfer the CD and/or DVD disc portion of the SOFTWARE, if any, to a single hard disk provided you keep the original solely for backup or archival purposes. You may not copy the CD and/or DVD disc portion of the SOFTWARE or the written materials accompanying the SOFTWARE.

3. Other restrictions

You may not rent or lease the SOFTWARE, but you may transfer the SOFTWARE and accompanying written materials on a permanent basis provided you retain no copies and the recipient agrees to the terms of this Agreement. You may not reverse engineer, decompile or disassemble the SOFTWARE. Any transfer of the SOFTWARE must include the most recent update and all prior versions.

THIRD PARTY SOFTWARE OR FREE SOFTWARE LICENSE INFORMATION

Software pre-loaded, embedded or otherwise distributed with the products provided by Packard Bell does contain free or third party software programs (the "Free Software"), which are licensed under the terms GNU General Public License (the "GPL"). The Free Software is marked as such. Your copying, distribution and/or modification of the Free Software shall be subject to the terms of the GPL.

The Free Software is distributed in the hope that, but it will be useful WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. The provisions of the GNU General Public License shall always apply. You may access <http://www.gnu.org> directly to obtain a copy of the GPL or write to the free Software Foundation, Inc. and request a copy. The address of the Free Software Foundation, Inc is: 59 Temple Place - Suite 330, Boston, MA, 02111-1307, USA.

For a period of three (3) years as commencing from your receipt of this software, you may obtain a complete machine-readable copy of the source code for the Free Software under the terms of the GPL without charge except for the cost of media, shipping, and handling, upon a written request to us.

Contact us if you have any further questions. Our mailing address is 8F, 88, Sec. 1, Hsin Tai Wu Rd., Hsichih, Taipei Hsien 221, Taiwan.