


## GETTING STARTED:

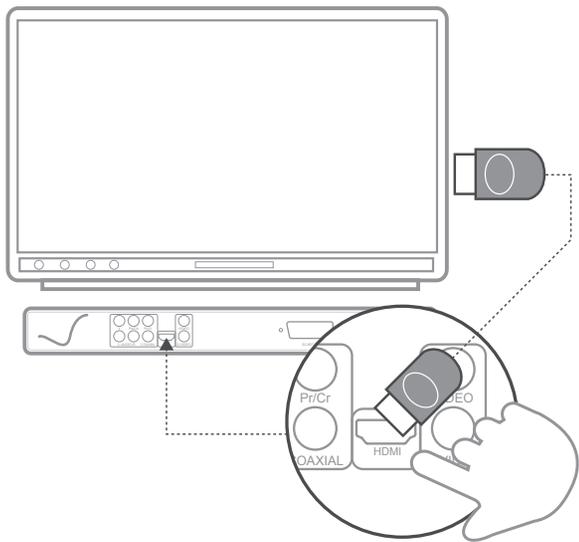

**a** Ensure the DVD player and TV you wish to connect it to are switched off.

**b** Insert one end of a HDMI cable (not supplied) into the HDMI socket on the rear of the DVD player. The other end connects to a HDMI socket on your TV.

## WANT TO KNOW MORE?

The full User Manual is available online at:



[www.goodmans.co.uk/support](http://www.goodmans.co.uk/support)

# Goodmans DVD PLAYER




DVD Player

Model number: GDVD3607HDMI QSG-AUGUST14-GDVD3607HDMI




## TURNING THE DVD PLAYER ON:

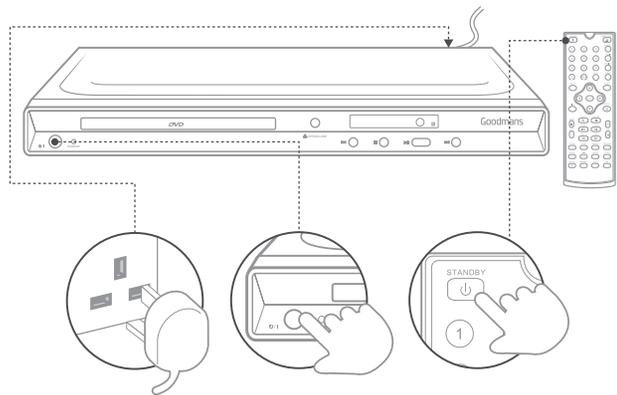

- a** Insert the plug into a power socket and switch the power on.
- b** Press the STANDBY button on either the DVD player or the remote control to wake from standby mode.

## LOADING AND PLAYING A DVD:

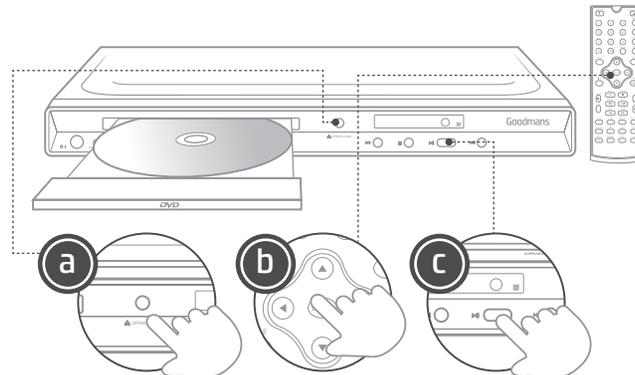

- a** Press the OPEN/CLOSE button and insert a DVD (label side up). Press it again to shut the drawer and wait for the DVD player to read the disc.
- b** Use the navigation buttons on the remote control to locate the play option on the DVD menu displayed.
- c** Press the ►/|| button to begin playback.

## DID YOU KNOW?

You can play a slide show of images from a DVD.



- a** Insert a DVD containing images (JPG format) into the DVD player. A file browser menu will be displayed.
- b** Use the navigation buttons to scroll through the list of images. Press the ►, ►/|| or ENTER button to begin a slide show of the entire contents of the disc from the selected image.