


F70 Series

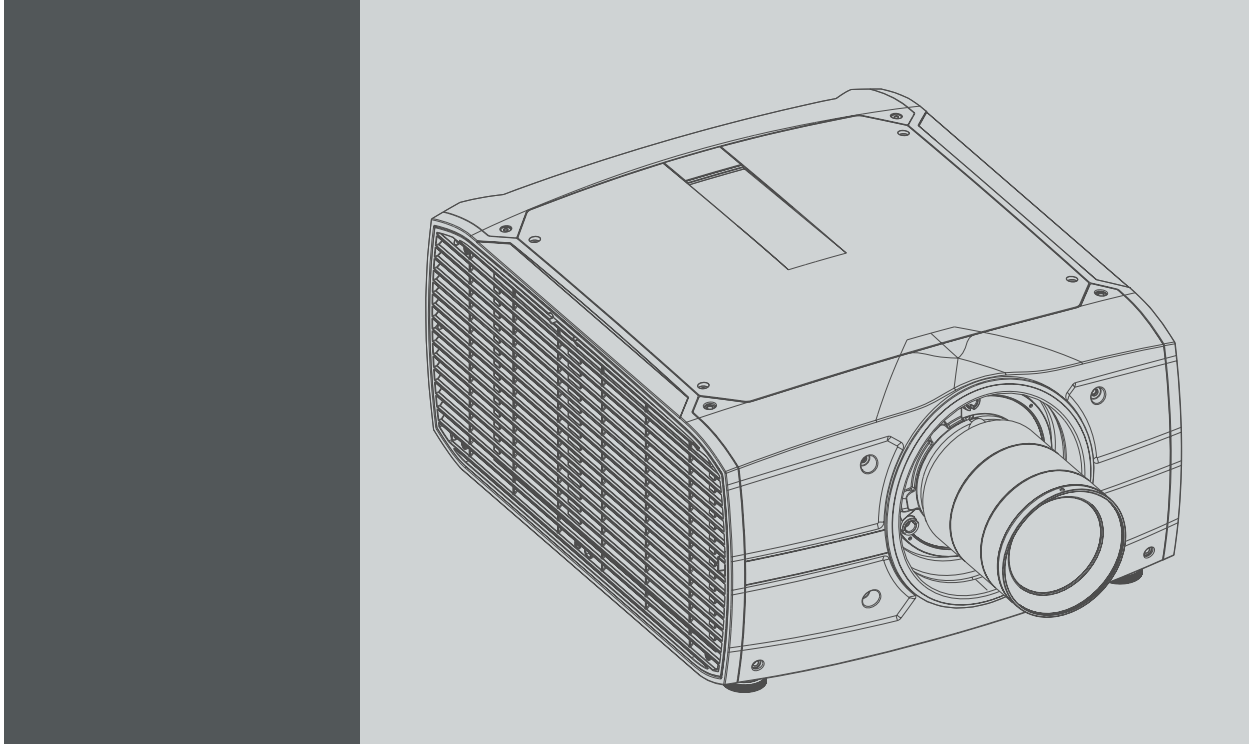

User Manual

Barco Fredrikstad AS

Habornveien 53, N-1630 Gamle Fredrikstad, Norway

Phone: +47 6930 4550

Fax: +47 6930 4580

Support: Support.fre@barco.com

Visit us at the web: www.barco.com

Changes

Barco provides this manual 'as is' without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

The latest edition of Barco manuals can be downloaded from the Barco web site www.barco.com or from the secured Barco web site <https://www.barco.com/en/signin>.

Federal Communications Commission (FCC Statement)

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference at his own expense.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Trademarks

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.

Turkey RoHS compliance



■ Türkiye Cumhuriyeti: AEEE Yönetmeliğine Uygundur.

[Republic of Turkey: In conformity with the WEEE Regulation]

Disposal Information

Waste Electrical and Electronic Equipment



■ This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service.

For details, please visit the Barco website at: <http://www.barco.com/en/AboutBarco/weee>

Disposal of batteries in the product



■ This product contains batteries covered by the Directive 2006/66/EC which must be collected and disposed of separately from municipal waste.

If the battery contains more than the specified values of lead (Pb), mercury (Hg) or cadmium (Cd), these chemical symbols will appear below the crossed-out wheeled bin symbol.

By participating in separate collection of batteries, you will help to ensure proper disposal and to prevent potential negative effects on the environment and human health.

Guarantee and Compensation

Barco provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. On receipt, the purchaser must immediately inspect all delivered goods for damage incurred during transport, as well as for material and manufacturing faults Barco must be informed immediately in writing of any complaints.

The period of guarantee begins on the date of transfer of risks, in the case of special systems and software on the date of commissioning, at latest 30 days after the transfer of risks. In the event of justified notice of complaint, Barco can repair the fault or provide a replacement at its own discretion within an appropriate period. If this measure proves to be impossible or unsuccessful, the purchaser can demand a reduction in the purchase price or cancellation of the contract. All other claims, in particular those relating to compensation for direct or indirect damage, and also damage attributed to the operation of software as well as to other services provided by Barco, being a component of the system or independent service, will be deemed invalid provided the damage is not proven to be attributed to the absence of properties guaranteed in writing or due to the intent or gross negligence or part of Barco.

If the purchaser or a third party carries out modifications or repairs on goods delivered by Barco, or if the goods are handled incorrectly, in particular if the systems are operated incorrectly or if, after the transfer of risks, the goods are subject to influences not agreed upon in the contract, all guarantee claims of the purchaser will be rendered invalid. Not included in the guarantee coverage are system failures which are attributed to programs or special electronic circuitry provided by the purchaser, e.g. interfaces. Normal wear as well as normal maintenance are not subject to the guarantee provided by Barco either.

The environmental conditions as well as the servicing and maintenance regulations specified in this manual must be complied with by the customer.

Copyright ©

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of Barco.

Software License Agreement

You should carefully read the following terms and conditions before using this software. Your use of this software indicates your acceptance of this license agreement and warranty.

Terms and Conditions:

1. No redistribution of the software is allowed.
2. Reverse-Engineering. You may not reverse engineer, decompile, disassemble or alter this software product.

Disclaimer of Warranty:

This software and the accompanying files are sold "as is" and without warranties as to performance or merchantability or any other warranties whether expressed or implied. In no event shall Barco be liable for damage of any kind, loss of data, loss of profits, business interruption or other pecuniary loss arising directly or indirectly. Any liability of the seller will be exclusively limited to replacement of the product or refund of purchase price.

TABLE OF CONTENTS

1. Safety	3
1.1 General considerations	3
1.2 Important safety instructions	5
1.3 Projector Hazard Distances	7
1.4 High Brightness Precautions	7
1.5 Hazard Distance for fully closed projection system	9
1.6 HD in function of the lens Throw Ratio (TR)	10
1.7 Safety symbols	11
1.8 Contact addresses	13
1.9 Product Info	13
1.10 Statement	13
2. Getting to know the projector	15
2.1 Main Components	15
2.2 Service and Maintenance	16
2.3 LED Status Light	16
2.4 Power on / Standby button backlight indications	16
2.5 LCD panel	17
2.6 Local keypad	17
2.7 Remote Control	18
2.7.1 Remote control, Battery installation	18
2.7.2 Remote control, protocol setup	19
2.7.3 Functionality overview	20
2.7.4 Remote control, on/off button	20
2.7.5 Enable / Disable Remote Control	21
2.7.6 Wired RC connection	21
2.8 Projector Address	21
2.8.1 Controlling the projector	21
2.8.2 Displaying and Programming addresses into the RCU	22
2.9 Connector panel	22
2.10 Color Wheels	23
2.11 Optional Accessories	23
3. Lenses	25
3.1 Approved Lenses	25
3.2 Lens range	25
3.3 Replace a lens	27
3.4 Lens shift	29
3.5 Adjust zoom and focus	29
3.6 Adjust Iris	29
4. Physical Installation	31
4.1 Installation Process	31
4.2 Installation conditions	31
4.3 Initial inspection	32
4.4 Positioning the projector	33
4.5 Mounting the projector, general considerations	33
4.6 Projector safe attachment points	35
4.7 Throw distance	36
4.8 Scheimpflug (Boresight) adjustment	38
4.9 Scheimpflug adjustment procedure	39
5. Getting started	41
5.1 Projector source and control connections	41
5.1.1 Making connections	41
5.1.2 Connector specifications	41
5.1.2.1 DVI-I	41
5.1.2.2 Display Port 1.2	42
5.1.2.3 HDMI 2.0	42
5.1.2.4 3G-SDI	43
5.1.2.5 HDBase T	43
5.1.3 Control interfaces	43
5.1.3.1 RS-232	44
5.1.3.2 LAN/Ethernet	44
5.1.3.3 USB-A port	44
5.2 Power up the projector	44
5.3 Power down the projector	44
5.4 Power mode transitions	45
5.4.1 General	45
5.4.2 Power on projector	45
5.4.3 Going from READY to ON	45
5.4.4 Going from ON to READY	46
5.4.5 Going from READY to ECO standby	46

5.4.6	Going from ECO to ON	46
5.5	Power modes	46
5.6	Customize projector settings	46
5.7	User interface	46
5.7.1	On Screen Display (OSD)	46
6.	Source menu	49
6.1	Connector selection	49
6.2	Connector Settings	49
6.3	Using Dual inputs	51
7.	Image menu	53
7.1	Contrast	53
7.2	Brightness	54
7.3	Saturation	54
7.4	Sharpness	54
7.5	Gamma Adjustment	55
7.6	Advanced image adjustments	56
7.6.1	P7 Realcolor	56
7.6.2	Output Resolution 4K	58
7.6.3	Smear Reduction	58
7.6.4	Brilliantcolor	59
7.6.5	HDR – Perceptual Quantizer (PQ)	60
8.	Installation menu	63
8.1	IR / Night vision functionality	63
8.2	Lens	65
8.3	Orientation	65
8.4	Warping	66
8.4.1	About Warping	66
8.4.2	Warping – On/Off	67
8.4.3	Warping – Screen Size	68
8.4.4	Warp – 4 Corners adjustment	69
8.4.5	Warping – Bow	70
8.4.6	Warping – Warp files	74
8.5	Blending	75
8.5.1	Basic Blend	75
8.5.2	Set up the system	76
8.5.3	Adjustment Procedure	76
8.5.4	Black Level Adjustment	77
8.5.5	Black Level Files	78
8.5.6	Blend Files	79
8.6	Illumination	80
8.7	Display Setup	81
9.	System settings menu	83
9.1	Communication	83
9.2	Apply a menu theme	83
9.3	Standby ECO	84
9.4	Service	84
9.5	Reset	84
9.6	Lens Features	86
10.	Status menu	87
10.1	Status menu overview	87
11.	3D	89
11.1	Setup 3D mode	89
12.	User Maintenance	91
12.1	Update Projector Firmware	91
13.	Cleaning the projector	93
13.1	Projector lenses	93
13.2	Projector cabinet	93
13.3	Filters	93
14.	Technical Specifications	95
14.1	F70 — 4K6C	95
14.2	F70 — W6	96
14.3	FS70 — 4K6	97
14.4	FS70 — W6	98

1. SAFETY

About this chapter

Read this chapter thoroughly before attempting to install or operate the projector.

To prevent personal injury to users or physical damage to the projector while installing and using your projector, ensure that you understand and follow all safety guidelines, instructions and warnings included in this chapter and this manual.

Clarification of the term F70 / F90 series used in this document

Use in this document of the term, F70 / F90 series, means that the content is applicable for the following products:

- F90–W13WUXGA
- F90–4K13 4KUHD/WQXGA
- F70 — 4K6
- F70 — W6

Defining the GP6 platform

The F90 series products in general, are all products within the Barco GP6 Platform.

Defining the GP7 platform

The F70 series products in general, are all products within the Barco GP7 Platform

Overview

- General considerations
- Important safety instructions
- Projector Hazard Distances
- High Brightness Precautions
- Hazard Distance for fully closed projection system
- HD in function of the lens Throw Ratio (TR)
- Safety symbols
- Contact addresses
- Product Info
- Statement

1.1 General considerations

Notice on optical radiation F90 Series

- The projector is Class 1 laser product that conforms with IEC EN 60825-1:2014. For Northern America, the projector is class 3R laser product up to throw ratio 2.33. The projector conforms with IEC 60825-1:2007, and with performance standards for laser products under 21 CFR 1040, except with respect to those characteristics authorized by Variance Number 2016–V-0144 effective March 6, 2017
Do not stare into Beam.
- This projector is Risk Group 2 (RG2) according to IEC EN 62471-5.
This projector may become Risk Group 3 (RG3) when an interchangeable lens with throw ratio greater than 3.15 is installed. For Northern America, installation requirements according to Risk group 3 (RG3) must be followed when interchangeable lens with throw ratio greater than 2.33 is installed.
Refer to the manual for the lens list and throw ratio before operation.
Such combination of projector and lens are intended for **professional use only**, and are not intended for consumer use.
- For RG3, no direct exposure to the beam shall be permitted.
For RG3, operators shall control access to the beam within the hazard distance or install the product at a height that will prevent eye exposure within the hazard distance.
- This projector has two (2) built-in Class 4 laser clusters. Disassembly or modification is very dangerous and should never be attempted.
- Any operation or adjustment not specifically instructed by the user's guide creates the risk of hazardous laser radiation exposure.
- Do not open or disassemble the projector as this may cause damage by the exposure of laser radiation.

Notice on optical radiation F70 Series

- The projector is Class 1 laser product that conforms with IEC EN 60825-1:2014. For Northern America, the projector is class 3R laser product up to throw ratio 2.5. The projector conforms with IEC 60825-1:2007, and with performance standards for laser products under 21 CFR 1040, except with respect to those characteristics authorized by Variance Number 2016-V-0144 effective March 6, 2017
Do not stare into Beam.
- This projector is Risk Group 2 (RG2) according to IEC EN 62471-5.
This projector may become Risk Group 3 (RG3) when an interchangeable lens with throw ratio greater than 4.7 is installed. For Northern America, installation requirements according to Risk group 3 (RG3) must be followed when interchangeable lens with throw ratio greater than 2.5 is installed.
Refer to the manual for the lens list and throw ratio before operation.
Such combination of projector and lens are intended for **professional use only**, and are not intended for consumer use.
- For RG3, no direct exposure to the beam shall be permitted.
For RG3, operators shall control access to the beam within the hazard distance or install the product at a height that will prevent eye exposure within the hazard distance.
- This projector has one (1) built-in Class 4 laser clusters. Disassembly or modification is very dangerous and should never be attempted.
- Any operation or adjustment not specifically instructed by the user's guide creates the risk of hazardous laser radiation exposure.
- Do not open or disassemble the projector as this may cause damage by the exposure of laser radiation.

General safety instructions

- This product contains no user serviceable parts except the Color Wheel. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.
Do not remove/replace any other parts than the Color Wheel. Other parts, service personnel only – Warranty void if Removed.
Follow the instructions in the User Guide to replace the Color Wheel.
- Do not stare into beam when the projector is on. The bright light may result in permanent eye damage.
- Not following the prescribed control, adjustment or operation procedure may cause damage by the exposure of laser radiation.
- Before operating this equipment please read this manual thoroughly and retain it for future reference.
- Installation and preliminary adjustments should be performed by properly trained and qualified personnel.
- All warnings on the projector and in the documentation manuals must be adhered to.
- All instructions for operating and use of this equipment must be followed precisely.
- All local installation codes should be adhered to.

Notice on safety

This equipment is built in accordance with the requirements of the international safety standards IEC60950-1, as basis for National safety regulation world wide. The safety standard covers information technology equipment including electrical business equipment intended to operate in "normal" environments (offices and homes). This safety standard imposes important requirements on the use of safety critical components, materials and insulation, in order to protect the user or operator against risk of electric shock and energy hazard and having access to live parts. Safety standards also impose limits to the internal and external temperature rises, radiation levels, mechanical stability and strength, enclosure construction and protection against the risk of fire. Simulated single fault condition testing reduce the risk of hazards and contribute to ensure the safety of the equipment to the user even when the equipment's normal operation fails.

Users definition

Throughout this manual, the term SERVICE PERSONNEL refers to Barco authorized persons having appropriate technical training and experience necessary to be knowledgeable of potential hazards to which they are exposed (including, but not limited to HIGH VOLTAGE ELECTRIC and ELECTRONIC CIRCUITRY and HIGH BRIGHTNESS PROJECTORS) in performing a task, and of measures to minimize the potential risk to themselves or other persons. Only Barco authorized SERVICE PERSONNEL, knowledgeable of such risks, are allowed to perform service functions inside the product enclosure. The term USER and OPERATOR refers to any person other than SERVICE PERSONNEL. When an interchangeable lens with throw ratio 3.15 or more is installed, the F70 / F90 series projector becomes RG3. Refer to the manual for the lens list and hazard distance before operation. Such combination of projector and lens are intended for professional use only, and are not intended for consumer use.

FOR PROFESSIONAL USE ONLY means installation can only be carried out by Barco AUTHORIZED PERSONNEL familiar with potential hazards associated with high intensity light beams.

1.2 Important safety instructions

To prevent the risk of electrical shock

- This product should be operated from a mono phase AC power source.
- This apparatus must be grounded (earthed) via the supplied 3 conductor AC power cable. If none of the supplied power cables are the correct one, consult your dealer.
If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.
Never use 2-prong power cords, as this is dangerous and could lead to electrical shock.
- Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord. To disconnect the cord, pull it out by the plug. Never pull the cord itself.
- Use only the power cord supplied with your device or original replacement cords. While appearing to be similar, other power cords have not been safety tested at the factory and may not be used to power the device. For a replacement power cord, contact your dealer.
- Do not operate the projector with a damaged cord. Replace the cord.
Do not operate the projector if the projector has been dropped or damaged - until it has been examined and approved for operation by a qualified service technician.
- Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
- If an extension cord is necessary, a cord with a current rating at least equal to that of the projector should be used. A cord rated for less amperage than the projector may overheat.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
- Make sure that no objects enter into the vents and openings of the set.
- Do not expose this projector to rain or moisture.
- The projector is designed for indoor use only. Never operate the unit outdoors.
- Do not immerse or expose this projector in water or other liquids.
- Do not spill liquid of any kind on this projector.
- Should any liquid or solid object fall into the cabinet, unplug the set and have it checked by qualified service personnel before resuming operations.
- Do not disassemble this projector, always take it to an authorized trained service person when service or repair work is required.
- Do not use an accessory attachment which is not recommended by the manufacturer.
- Lightning - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the device due to lightning and AC power-line surges.

To prevent personal injury

- To prevent injury and physical damage, always read this manual and all labels on the system before connecting to the wall outlet or adjusting the projector.
- To prevent injury, take note of the weight of the projector.
- To prevent injury, ensure that the lens and all covers are correctly installed. See installation procedures.
- Warning: high intensity light beam. NEVER look into the lens! High luminance could result in damage to the eye.
- Warning: extremely high brightness laser: This projector uses extremely high brightness laser. Never attempt to look directly into the lens or at the laser.
- Always switch off the projector and disconnect from the mains power supply before attempting to remove any of the projector covers or access parts inside the projector.
- This product contains no user serviceable parts except the Color Wheel. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.
- Do not remove/replace any other parts than the Color Wheel. Other parts, service personnel only Warranty void if removed
- Do not place this equipment on an unstable cart, stand, or table. The product may fall, causing serious damage to it and possible injury to the user.
- Only place the projector on a stable surface, or mount it securely using an approved ceiling-mount.
- It is hazardous to operate without lens or lens cap. Lenses or shields shall be changed if they have become visibly damaged, for example with cracks or deep scratches, to such an extent that their effectiveness is impaired.

To prevent fire hazard

- Barco projection products are designed and manufactured to meet the most stringent safety regulations. This projector radiates heat on its external surfaces and from ventilation ducts during normal operation, which is both normal and safe. Exposing flammable or combustible materials into close proximity of this projector could result in the spontaneous ignition of that material, resulting in a fire. For this reason, it is absolutely necessary to leave an "exclusion zone" around all external surfaces of the projector whereby no flammable or combustible materials are present. The exclusion zone in the exhaust area must be not less than 100 cm (40"). The exclusion zone on the intake area must not be less than 50 cm (20").
- Do not place flammable or combustible materials near the projector!
- For the F90 projector, the exclusion zone on the lens side within the light beam must be at least 1,5m.
- For the F70 projector the exclusion zone on the lens side within the light beam must be at least 1,0m.
- Caution! Hot air is exhausted from the rear vent. Do not place objects that are sensitive to heat nearer than 100 cm (40") to the exhaust vent.
- Slots and openings in this equipment are provided for ventilation. To ensure reliable operation of the projector and to protect it from overheating, these openings must not be blocked or covered.
- The openings should never be blocked by placing the projector too close to walls, or other similar surface. Allow for sufficient distance to walls and ceilings to avoid overheating. Minimum safety distance to the exhaust area of the unit must not be less than 100 cm (40") and to the intake area, not less than 50 cm (20").
- This projector should never be placed near or over a radiator or heat register.
- This projector should not be placed in a built-in installation or enclosure unless proper ventilation is provided.
- Do not cover the projector or the lens with any material while the projector is in operation. Keep flammable and combustible materials away from the projector at all times.
- Mount the projector in a well-ventilated area away from sources of ignition and out of direct sun light. Always allow ample airflow through the projector.
- Never expose the projector to rain or moisture. In the event of fire, use sand, CO2 or dry powder fire extinguishers.
- Never use water on an electrical fire.
- Always have service performed on this projector by authorized Barco service personnel. Always insist on genuine Barco replacement parts. Never use non-Barco replacement parts as they may degrade the safety of this projector.
- Projection rooms must be well ventilated or cooled in order to avoid heat buildup.
- Let the projector cool down completely before storing. Remove cord from the projector when storing.

To prevent projector damage

- To ensure correct airflow is maintained the projector should only be operated when all of its covers in place.
- Always remove lens cap before switching on the projector. If the lens cap is not removed, it may melt due to the high energy light emitted through the lens. Melting the lens cap may permanently damage the surface of the projection lens
- Only connect the projector to signal sources and voltages as described in the technical specification. Connecting to unspecified signal sources or voltages may lead to malfunction and permanent damage of the unit.
- To ensure correct airflow is maintained, it should only be operated when all of its covers are in place.
- The projector must always be installed in a manner which ensures free flow of air into its air inlets and unimpeded evacuation of the hot air from its cooling system.
- Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. The device should not be placed in a built-in installation or enclosure unless proper ventilation is provided. Ensure that nothing can be spilled on, or dropped inside the projector. If this does happen, switch off and unplug the mains supply immediately. Do not operate the projector again until it has been checked by Barco authorized service personnel.
- Do not block the projector cooling fans or free air movement around the projector. Minimum safety distance to the exhaust area of the unit must not be less than 100 cm (40") and to the intake area, not less than 50 cm (20").
- Do not use this equipment near water.
- Do not operate the projector outside its temperature and humidity specifications as this may result in overheating and malfunction.
- Never place the projector in direct sun light. Sun light on the lens can severely damage the Digital Mirror Devices™ in which case there is a loss of warranty.
- Save the original shipping carton and packing material. They will come in handy if you ever have to ship your equipment. For maximum protection, repack your set as it was originally packed at the factory.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Never use strong solvents, such as thinner or benzine, or abrasive cleaners, since these will damage the cabinet. Stubborn stains may be removed with a cloth lightly dampened with mild detergent solution.
- To ensure the highest optical performance and resolution, the projection lenses are specially treated with an anti-reflective coating, therefore, avoid touching the lens. To remove dust on the lens, use a soft dry cloth. Do not use a damp cloth, detergent solution, or thinner.

On servicing

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage potentials and risk of electric shock.
- Refer all servicing to Barco authorized repair centers.
- Attempts to alter the factory-set internal controls or to change other control settings not specially discussed in this manual can lead to permanent damage to the projector and cancellation of the warranty.
- Unplug this product from the wall outlet and refer servicing to Barco authorized service personnel or technicians under the following conditions:
 - If liquid has been spilled into the equipment.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of the other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance, indicating a need for service.
 - When the power cord or plug is damaged or frayed.
- Replacement parts: When replacement parts are required, be sure the service technician has used original Barco replacement parts. Unauthorized substitutions may result in degraded performance and reliability, fire, electric shock or other hazards. Unauthorized substitutions may void warranty.
- Safety check: Upon completion of any service or repairs to this projector, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

1.3 Projector Hazard Distances

For F90 series: **WARNING. This may be a RG3 laser Product, dependent on which lens used.**

This projector may become Risk Group 3 (RG3) when an interchangeable lens with throw ratio greater than 3.15 is installed. For Northern America, installation requirements according to Risk group 3 (RG3) must be followed when interchangeable lens with throw ratio greater than 2.33 is installed

Refer to the product manual for the lens list and throw ratio before operation.

Do not look directly in to the beam from the projector lens.

No direct eye exposure to the beam is permitted.

Operators shall control access to the beam within the hazard distance or install the product at a height that will prevent eye exposure within the hazard distance.

See table below for a definition of hazardous distances versus the throw ratio of the lens.

For F70 Series: **WARNING. This may be a RG3 laser Product, dependent on which lens used.**

This projector may become Risk Group 3 (RG3) when an interchangeable lens with throw ratio greater than 4.7 is installed. For Northern America, installation requirements according to Risk group 3 (RG3) must be followed when interchangeable lens with throw ratio greater than 2.5 is installed

Refer to the product manual for the lens list and throw ratio before operation.

Do not look directly in to the beam from the projector lens.

No direct eye exposure to the beam is permitted.

Operators shall control access to the beam within the hazard distance or install the product at a height that will prevent eye exposure within the hazard distance.

See table below for a definition of hazardous distances versus the throw ratio of the lens.

1.4 High Brightness Precautions

Restriction Zone (RZ) based on the HD (Hazard Distance).

The HD depends on the amount of lumens produced by the projector and the type of lens installed. See next chapter "HD in function of the lens Throw Ratio (TR)", page 8 .

To protect untrained end users (as cinema visitors) the installation shall comply with the following installation requirements: Operators shall control access to the beam within the hazard distance or install the product at the height that will prevent spectators' eyes from being in the hazard distance. Radiation levels in excess of the limits will not be permitted at any point less than 2.0 meter (SH) above any surface upon which persons other than operators, performers, or employees are permitted to stand or less than 1.0 meter (SH) lateral separation from any place where such persons are permitted to be. In non-cinema environments where unrestrained

1. Safety

behavior is reasonably foreseeable, the minimum separation height should be greater than or equal to 3.0 meter to prevent potential exposure, for example by an individual sitting on another individual's shoulders, within the HD.

These values are minimum values and are based on the guidance provided in IEC 62471-5:2015 section 6.6.5.

The end user must understand the risk and apply protective measures based upon the hazard distance as indicated on the label and in the user information. Installation method, barriers, detection system or other applicable control measure shall prevent hazardous eye access to the radiation within the hazard distance.

For example, projectors that have a HD greater than 1 m and emit light into an uncontrolled area where persons may be present should be positioned in accordance with "the fixed projector installation" parameters, resulting in a HD that does not extend into the audience area unless the beam is at least 2.0 meter above the floor level. In non-cinema environments where unrestrained behavior is reasonably foreseeable, the minimum separation height should be greater than or equal to 3.0 meter to prevent potential exposure, for example by an individual sitting on another individual's shoulders, within the HD. For example, a sufficiently large separation height may be achieved by mounting the image projector on the ceiling or through the use of physical barriers.

For applications installed in the USA market the above limits for cinema like environments do not apply. The relevant minimum separation height is 2.5m (8,2 ft) by the FDA CDRH. Non cinema like environments require 2.5 meter (8.2 ft) separation height and 1.0 meter (3.3 ft) separation width for areas where restrained behavior is to be expected. All other areas require 3.0 (9.9 ft) separation height.

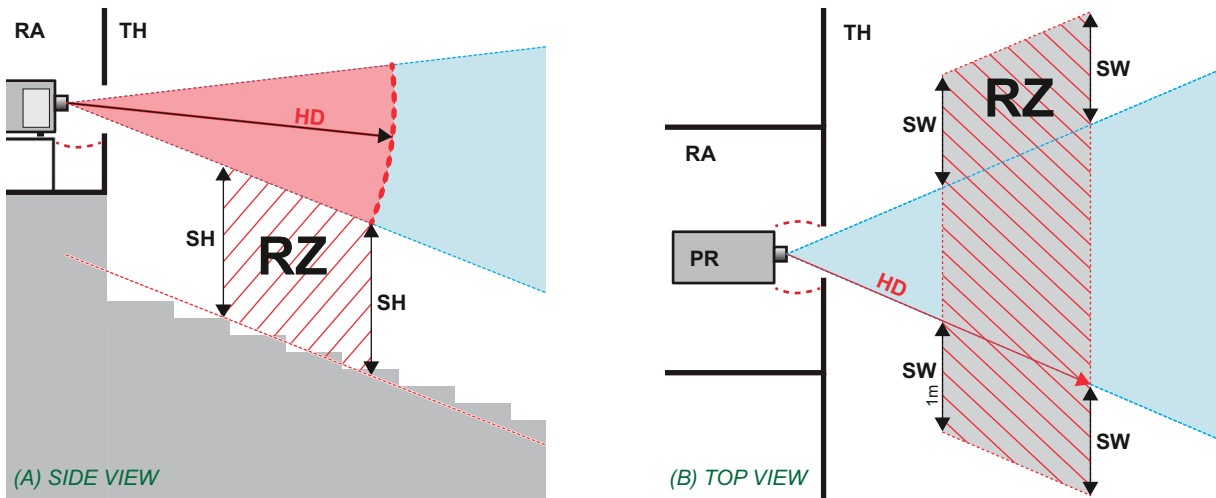



Image 1-1
 A Side View
 B Top View
 RA Restricted Area
 PR Projector
 TH Theater
 RZ Restriction Zone in the theater
 SH Separation Height
 SW Separation Width

 **Regarding the SH Distance: For Cinema applications, the distance must be >2m. For Concert applications, the distance must be >3m.**

Based on national requirements, no person is allowed to enter the projected beam within the zone between the projection lens and the related hazard distance (HD). This shall be physically impossible by creating sufficient separation height or by placing barriers. The minimum separation height takes into account the surface upon which persons other than operator, performers or employees are permitted to stand.

On image 1-2 a typical setup is displayed. It must be verified if these minimum requirements are met. If required a restricted zone (RZ) in the theater must be established. This can be done by using physical barrier, like a red rope as illustrated in image 1-2.

The restricted area sticker can be replaced by a sticker with only the symbol.

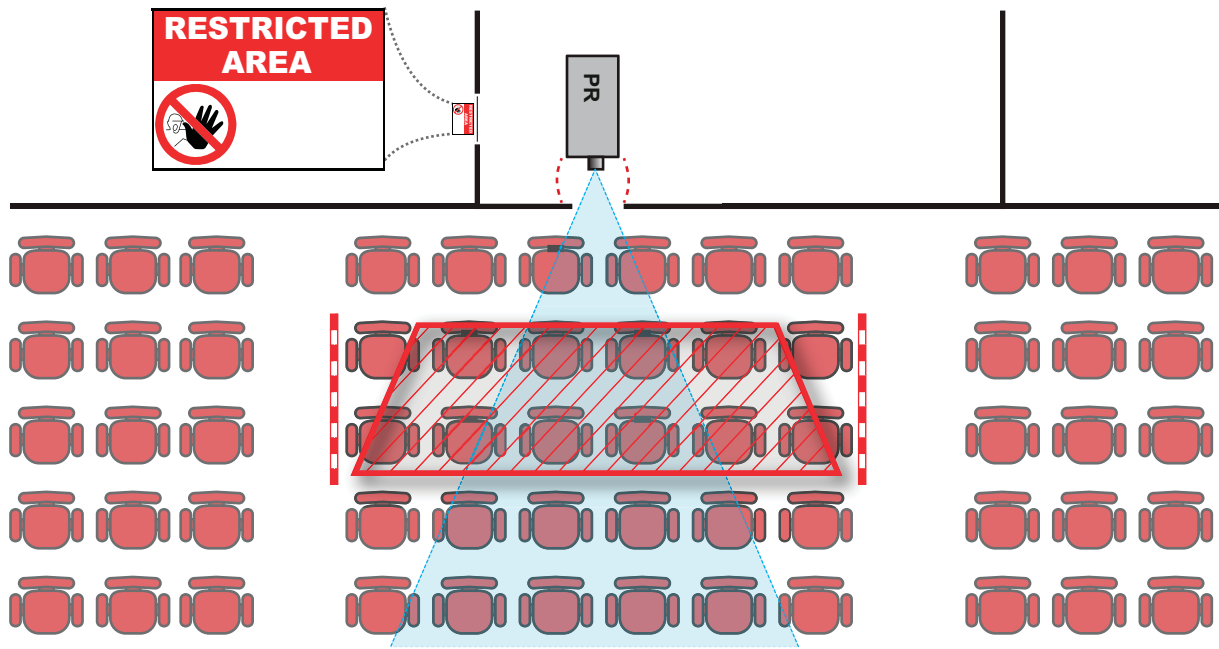


Image 1-2

1.5 Hazard Distance for fully closed projection system



HD

Hazard Distance (HD) is the distance measured from the projection lens at which the intensity or the energy per surface unit becomes lower than the applicable exposure limit on the cornea or on the skin. The light beam is considered (to be) unsafe for exposure if the distance from a person to the light source is less than the HD.

Restriction Zone RZ Based on the HD

The projector is also suitable for rear projection applications; projecting a beam onto a diffuse coated projection screen. As displayed in image 1-3 two areas should be considered: the restricted enclosed projection area (RA) and the observation area (TH).

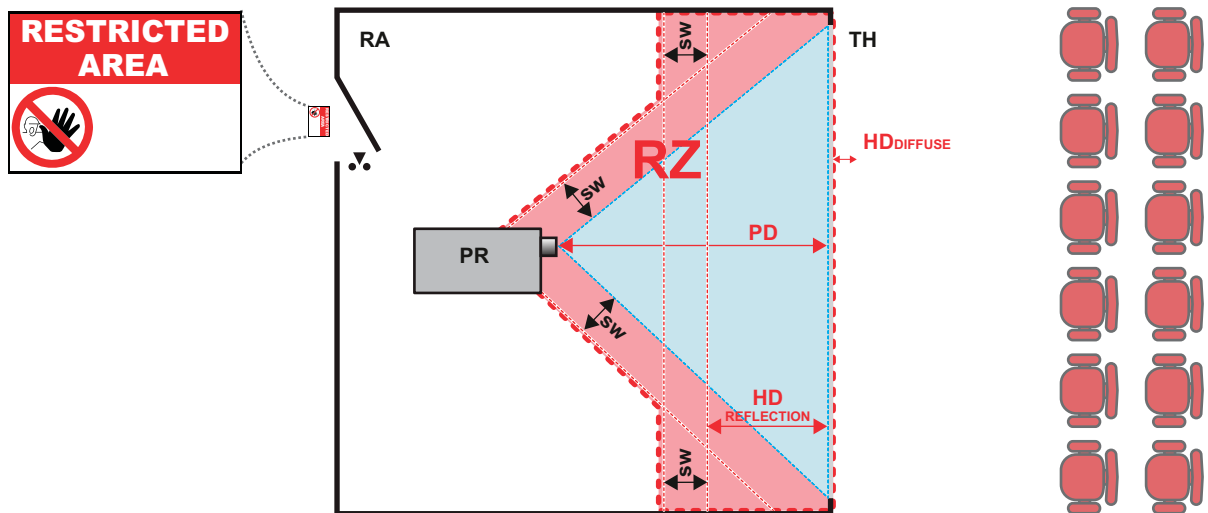


Image 1-3

- RA Restricted Access location (Enclosed projection area)
- PR Projector.
- TH Theater (observation area).
- RZ Restriction Zone
- PD Projection Distan
- SW Separation Width. Must be minimum 1 meter.

Restriction zone (RZ) based on the HD continued.

For this type of setup 3 different HD shall be considered:

1. Safety

- HD as discussed in "High Brightness precautions: Hazard Distance (HD)", page 6 , relevant for intrabeam exposure.
- HDreflection : the distance that has to be kept restrictive related to the reflected light from the rear projection screen.
- HDdiffuse : the relevant distance to be considered while observing the defuse surface of the rear projection screen.

As described in "High Brightness precautions: Hazard Distance (HD)", page 6 , it is mandatory to create a restricted zone within the beam areas closer than any NOHD. In the enclosed projection area the combination of two restricted zones are relevant: The restricted zone of the projected beam toward the screen; taking into account 1 meter Separation Width (SW) from the beam onward. Combined with the restricted zone related to the rear reflection from the screen (HDreflection); also taking into account a 1 meter lateral separation.

The HDreflection distance equals 25% of the difference between the determined HD distance and the projection distance to the rear projection screen. To determine the HD distance for the used lens and projector model see graphs in chapter "HD in function of the lens Throw Ratio (TR)", page 8 .

$$\text{HDreflection} = 25\% (\text{HD} - \text{PD})$$

The light emitted from the screen within the observation shall never exceed the RG2 exposure limit, determined at 10 cm. The HDdiffuse can be neglected if the measured light at the screen surface is below 5000 cd/m² or 15000 LUX.

1.6 HD in function of the lens Throw Ratio (TR)



TR (Throw Ratio)

The ratio of the distance to the screen (throw) to the screen width.

HD versus Throw Ratio

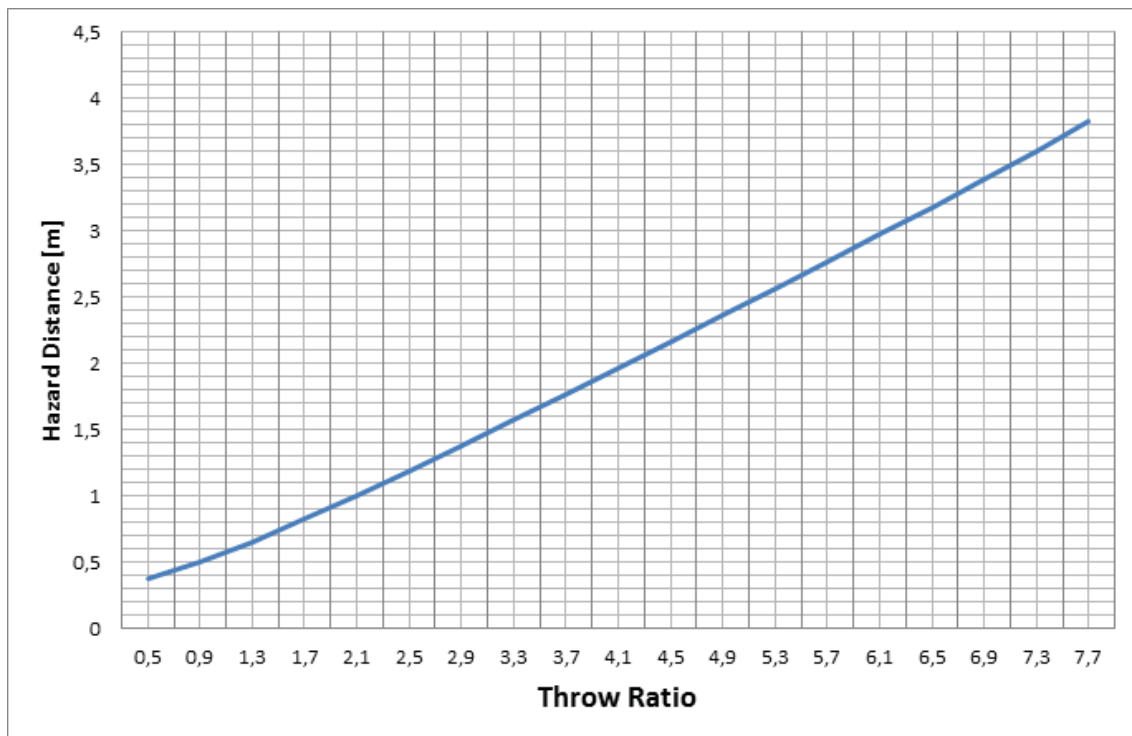


Image 1-4
Hazard Distance in meters versus Throw ratio of the lens for the F90 projectors

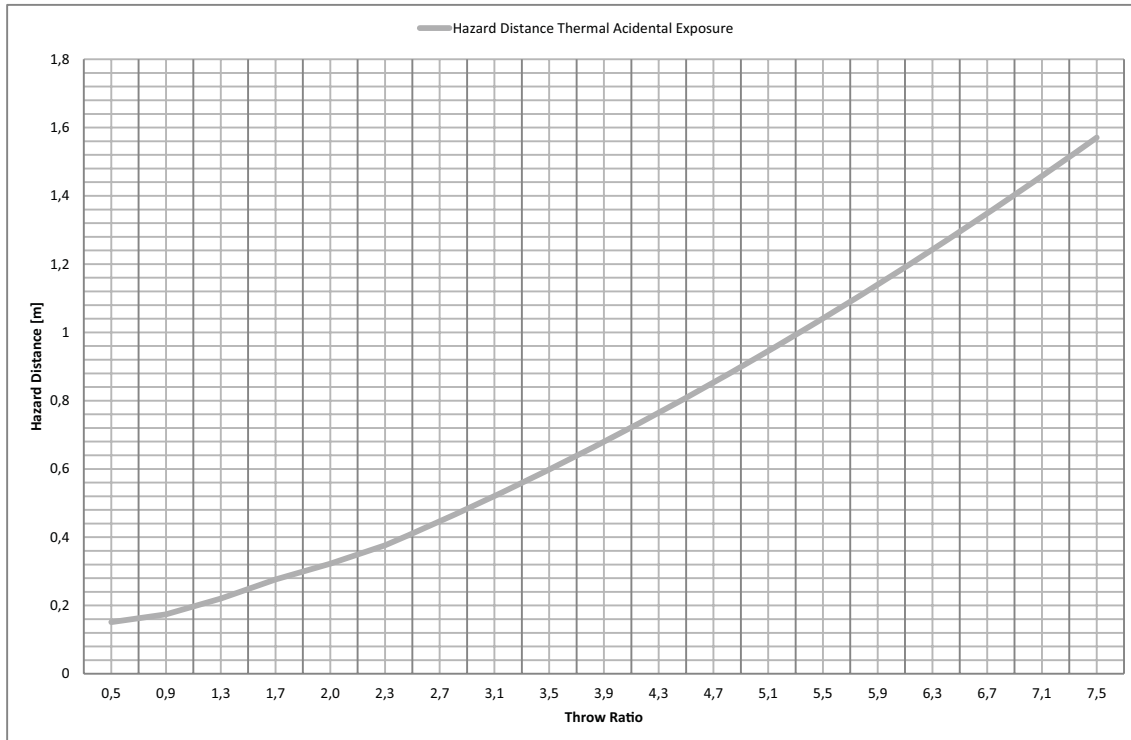


Image 1-5
Hazard Distance in meters versus Throw ratio of the lens for the F70 projectors




Graphs shows Hazard Distance in meters versus Throw ratio of the lens

1.7 Safety symbols

Description of safety symbols used in product documentation or on product.

Image	Description
	Refer to user manual for further information!
	Caution! Do not stare into beam, RG2 product.
	No telephone! Do not connect to telephone lines.
For F90 series: Warning Label 	Caution! For North America: With interchangeable lens with throw ratio greater than 2.33, consider hazard distance and installation requirements for RG3 product. Refer User Manual. Caution! With Interchangeable lens with throw ratio greater then 3.15, consider hazard distance and installation requirements for RG3 product. Refer User manual.

1. Safety

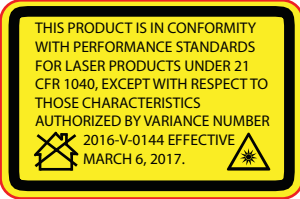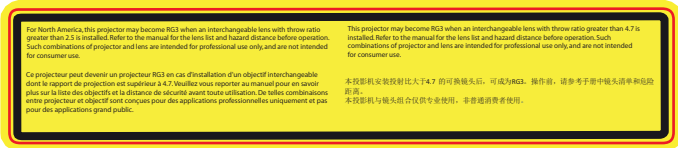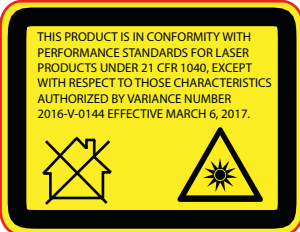Image	Description
<p>For F90 series: FDA Label</p>  <p>THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR LASER PRODUCTS UNDER 21 CFR 1040, EXCEPT WITH RESPECT TO THOSE CHARACTERISTICS AUTHORIZED BY VARIANCE NUMBER 2016-V-0144 EFFECTIVE MARCH 6, 2017.</p>	
<p>For F70 Series: Warning label</p>  <p>For North America, this projector may become RG3 when an interchangeable lens with throw ratio greater than 2.5 is installed. Refer to the manual for the lens list and hazard distance before operation. Such combinations of projector and lens are intended for professional use only, and are not intended for consumer use.</p> <p>Ce projecteur peut devenir un projecteur RG3 en cas d'installation d'un objectif interchangeable dont le rapport de projection est supérieur à 2.5. Veuillez vous reporter au manuel pour en savoir plus sur la liste des objectifs et la distance de sécurité avant toute utilisation. De telles combinaisons entre projecteur et objectif sont conçues pour des applications professionnelles uniquement et pas pour des applications grand public.</p> <p>This projector may become RG3 when an interchangeable lens with throw ratio greater than 4.7 is installed. Refer to the manual for the lens list and hazard distance before operation. Such combinations of projector and lens are intended for professional use only, and are not intended for consumer use.</p> <p>本投影机安装投射比大于4.7的可换镜头后，可成为RG3。操作前，请参考手册中镜头清单和危险距离。</p> <p>本投影机与镜头组合仅供专业使用，非普通消费者使用。</p>	<p>Caution! For North America: With interchangeable lens with throw ratio greater than 2.5, consider hazard distance and installation requirements for RG3 product. Refer User Manual</p> <p>Caution! With Interchangeable lens with throw ratio greater than 4.7, consider hazard distance and installation requirements for RG3 product. Refer User manual.</p>
<p>For F70 Series: FDA Label</p>  <p>THIS PRODUCT IS IN CONFORMITY WITH PERFORMANCE STANDARDS FOR LASER PRODUCTS UNDER 21 CFR 1040, EXCEPT WITH RESPECT TO THOSE CHARACTERISTICS AUTHORIZED BY VARIANCE NUMBER 2016-V-0144 EFFECTIVE MARCH 6, 2017.</p>	

Location of Safety Label

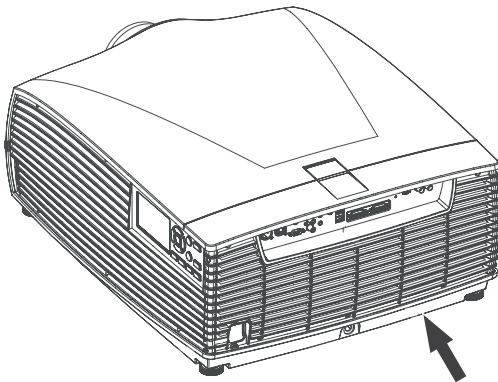


Image 1-6
F90 Projector

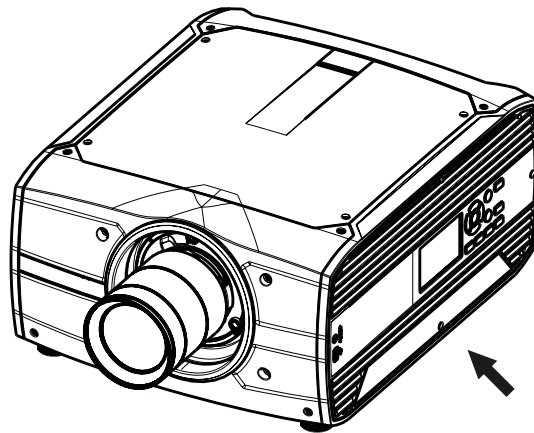


Image 1-7
F70 Projector

Disposal Information

Waste Electrical and Electronic Equipment



This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service.

For details, please visit the Barco website at: <http://www.barco.com/en/AboutBarco/weee>

WEEE Information

This product conforms to all requirements of the EU Directive on waste electrical and electronic equipment (WEEE). This product shall be recycled properly. It can be disassembled to facilitate proper recycling of its individual parts.

Consult your dealer or relevant public authority regarding drop-off points for collection of WEEE. For details, please visit the Barco website at: <http://www.barco.com/en/AboutBarco/weee>.



CAUTION: This product contains chemicals, including lead, known to the State of California to cause birth defects or other reproductive harm. Recycle properly, do not dispose of in ordinary waste!

Turkey RoHS compliance



■ Türkiye Cumhuriyeti: AEEE Yönetmeliğine Uygundur.

[Republic of Turkey: In conformity with the WEEE Regulation]

1.8 Contact addresses

For Taiwan:

Barco Ltd., 33F., No. 16. Xinzhan Rd., Banqiao Dist., New Taipei City 220, Taiwan

Tel: +886-2-7715-0099, Fax: +886-2-7715-0097

E-mail: service.taiwan@barco.com

1.9 Product Info

Product info

BARCO

Image 1-8

product name 產品名稱:

projector 投影機

model 型號: GP6 / GP7

1.10 Statement

EN55032/CISPR32 Class A MME (MultiMedia Equipment)

Warning : This equipment is compliant with Class A of CISPR 32. In a residential environment this equipment may cause radio interference.

Class A ITE (Information Technology Equipment)

Warning : This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

2. GETTING TO KNOW THE PROJECTOR.

Overview

- Main Components
- Service and Maintenance
- LED Status Light
- Power on / Standby button backlight indications
- LCD panel
- Local keypad
- Remote Control
- Projector Address
- Connector panel
- Color Wheels
- Optional Accessories

2.1 Main Components

Naming Conventions

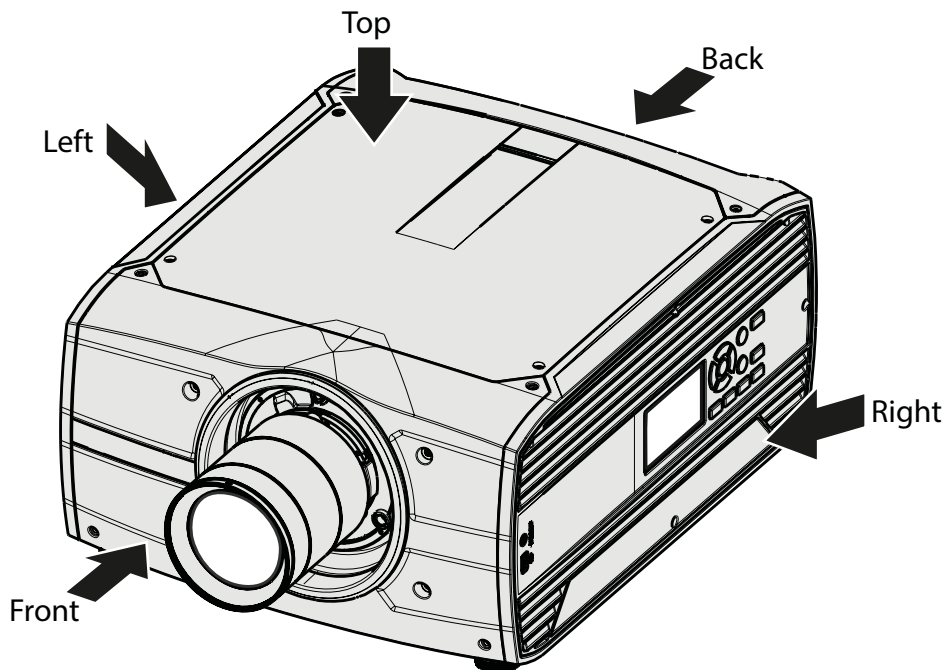


Image 2-1

Projector Items Overview

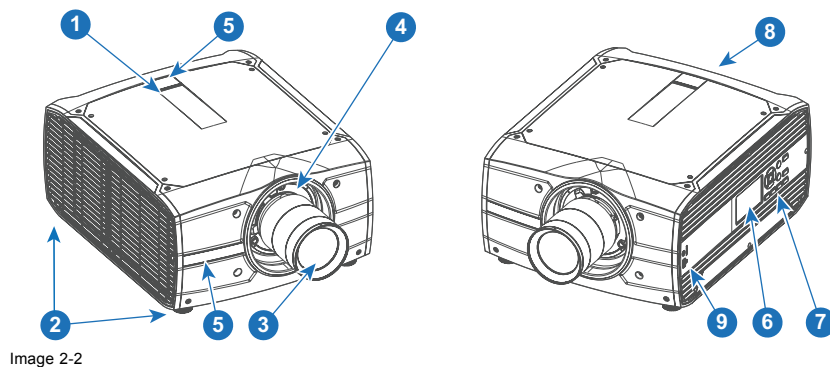


Image 2-2

2. Getting to know the projector.

1	LED Warning Indicator
2	Adjustable Feet
3	Lens
4	Lens Holder
5	IR Receiver. For receiving remote control signals
6	LCD Display
7	Keypad Panel. Used for local operation of the projector.
8	Connector Panel. Control and communication interfaces for the projector
9	Front USB and Triggerboard.

2.2 Service and Maintenance

General

The F70 series does not have any user serviceable parts.

All service tasks must only be carried out by the manufacturer, or a Barco authorized service personnel or Barco technicians.

2.3 LED Status Light

About

The F70 Status Led is located on the rear top of the Projector

During normal operation, the LED is not illuminated. In the event of a critical error or high temperature, the LED will illuminate red.

By critical error, the projector cannot be restarted until the projector is disconnected from the power supply and then reconnected again. If the reason for the error persist, the projector will again go to critical error status.

By high temperature, the projector can be restarted when it has cooled down, and the temperature is back within the normal operating limitations

2.4 Power on / Standby button backlight indications

Indicator

In addition to the LED indicator, the projector also displays status indications in the backlight of the Power / Standby button.

The table below shows the details regarding this indications.

Operating Status	Indication Color / Behavior
On (active)	Blue
Wait on	Blue flashing
Standby (off)	White
Wait	White short flashing
Overheating	Red flashing
Configure/upgrade	White fast flashing
Standby ECO	White heartbeat

2.5 LCD panel

About

The LCD panel (reference 1, image 2-3) is located on the right side of the projector, and has two main functions:

1. Showing the menus and adjustment information. and also a mirror of the OSD, (On Screen Display) described in *User Interface* when this is enabled.
2. Information regarding the status of the projector showing this data:
 - Projector status
 - Network address
 - Active source
 - Current firmware version
 - Operation Data
 - Active functions (Enabled Functions).

Toggle between the two indications by using the Menu button on the keypad, or on the remote control

The LCD Display will fade out 15 seconds after the last key operation.

2.6 Local keypad

About

The Keypad gives direct access to several functions, in addition to access to the menu system. The keypad and remote control functions are equal.

The keypad has a back light that can be switched on and off manually. The light turns off automatically after a preset time.

The Standby key is equipped with white, blue and red backlight depending on the status of the projector. See table in "Power on / Standby button backlight indications", page 16 for info regarding this.



Image 2-3

Item No.	Name	Description
1	LCD Display	Shows Projector status and navigation menu.
2	Navigation keys	Navigation arrows (up, down, left, right), confirm selection (✓)
3	OSD Display	Enables the Home Menu on the LCD screen and the OSD.
4	Standby	Power on / standby
5	Back	Undo action / back to previous screen.
6	OSD ON/OFF	Deactivate the On Screen Display (OSD). Only critical warnings will be displayed.
7	Input	Shortcut to input source menu on LCD. Use navigation keys to select and enable input.

2. Getting to know the projector.

Item No.	Name	Description
8	Shutter	Enable and disable the lens shutter function. This is not a mechanical shutter, but it toggles the laser source on and off. Backlight is red when the shutter are enabled.
9	Test Patterns	Shortcut to test pattern menu on LCD. Use navigation keys to select the desired pattern.
10	Lens	Shortcut to lens function. A test pattern displays on the OSD. LCD screen displays the navigation keys to manage and confirm actions.

2.7 Remote Control

2.7.1 Remote control, Battery installation

Where to find the batteries for the remote control ?

The batteries are not placed in the remote control unit to avoid control operation in its package, resulting in a shorter battery life time. At delivery the batteries can be found in a separated bag attached to the remote control unit. Before using your remote control, install the batteries first.

How to install

1. Push the battery cover tab with the fingernail a little backwards (1) and pull, at the same time, the cover upwards (2).

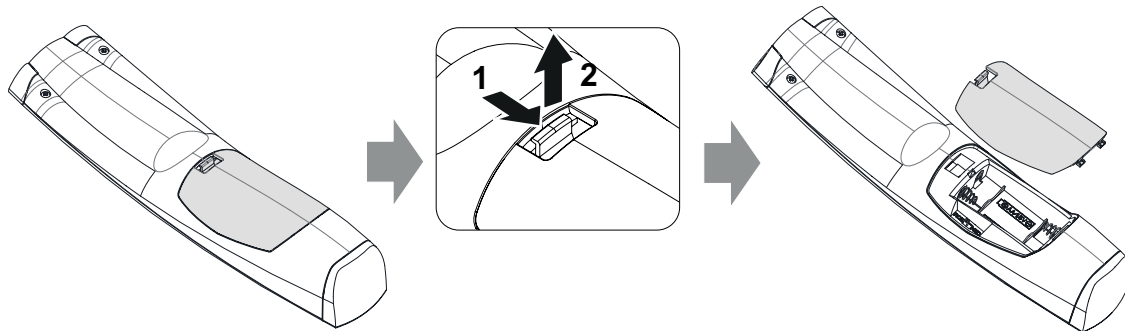


Image 2-4

2. Insert the two AA size batteries, making sure the polarities match the + and - marks inside the battery compartment.
Tip: Use alkaline batteries for optimum range and life time.

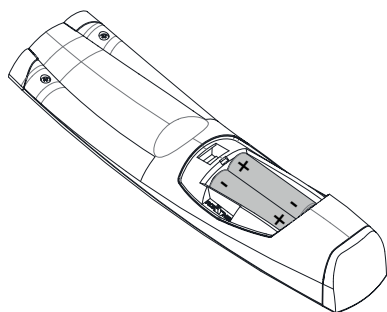


Image 2-5

3. Insert (1) both lower tabs of the battery cover in the gaps at the bottom of the remote control, and press (2) the cover until it clicks in place.

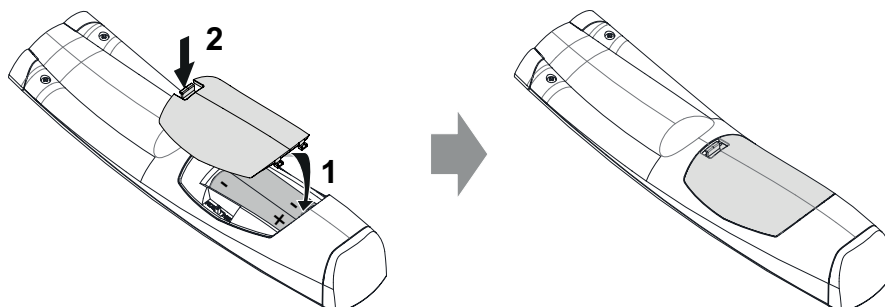


Image 2-6



When replacing batteries, the broadcast address of the RCU will be reset to its default value '0'.



CAUTION: Replace with the correct battery type. Use two AA size batteries. There is a risk of explosion if the battery is replaced with an incorrect type.



CAUTION: Replace the battery as explained above. There is a risk of explosion if the battery is incorrectly installed.

2.7.2 Remote control, protocol setup

About the used protocol

The protocol is the code send out by the remote control when a button is pressed. Depending on this code, the projector can decode the signals. The remote control can be used with two different protocols, RC5 and NEC. Depending on the projector to control the remote control can be switched between these protocols.

Which protocol to use

- The **NEC** protocol have to be used for Barco projectors based on the Pulse platform: Loki, Balder, F70, F80, F90, HDX 4K, UDX, ...
- The **RC5** protocol have to be use all other Barco projectors: HDX W, HDF W, HDQ 2K, ...

How to set

1. Remove the cover. For more info on how to remove, see "Remote control, Battery installation", page 18.
2. Place the switch in the NEC position.

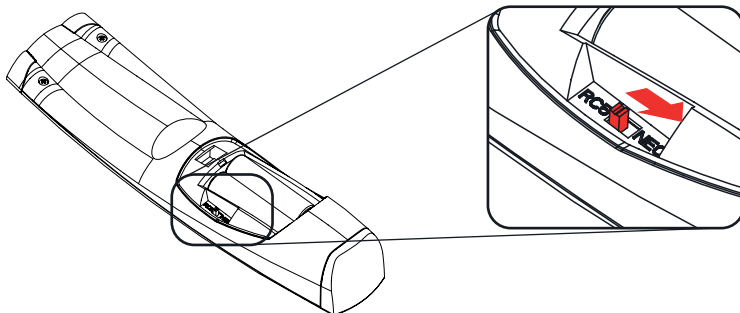




Image 2-7

Remark with RC5 protocol

Not all buttons of the Pulse RCU are one-to-one compatible with the legacy Barco RCU. Button pairs SHUTTER open/close and POWER on/off emit the same code (per pair) when in RC5 mode, because the legacy RCU's only had 1 button for Shutter and 1 button for Standby.

2.7.3 Functionality overview

Remote Control Unit buttons

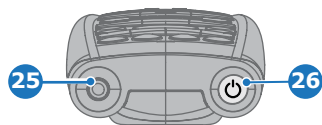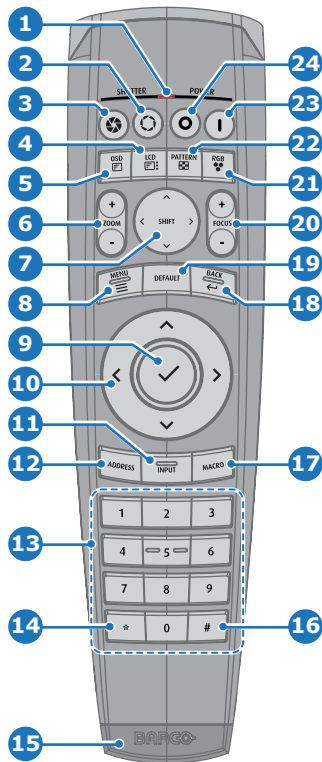

- 1 Button pressed indicator.
- 2 Shutter Open.
- 3 Shutter Close.
- 4 Touch Panel On/Off. (Not in use).
- 5 OSD On/Off.
- 6 Lens Zoom.
- 7 Lens Shift.
- 8 Menu Activation.
- 9 Menu Selection, OK button.
- 10 Menu Navigation.
- 11 Input Selection.
- 12 Address button.
- 13 Numeric buttons.
- 14 Backspace (while entering values)
- 15 XLR connector.
- 16 Decimal mark (while entering values)
- 17 Macro button. (Not in use)
- 18 Menu Back.
- 19 Default button. (Not in use).
- 20 Lens Focus.
- 21 Real Color menu..
- 22 Test Patterns.
- 23 Power On.
- 24 Power Off.
- 25 Stereo Jack.
- 26 RCU On/Off.

The projector remote control is a full feature wireless remote control, powered by two (2) standard AA batteries. The battery compartment is on the back side of the remote control.

The remote control is backlit for use in dark environments. It also has an Jack connector for wired connection to the projector. When the wire is connected, the IR beam is switched off.

2.7.4 Remote control, on/off button

Purpose of the remote control on/off button

The Pulse remote control unit has at the front side an on/off switch (reference 1 image 2-8). Switching off the remote control prevents that unwanted commands are send due to an accidental key press. Furthermore, switching the RCU off will extend the battery life time of the remote control.

To activate the remote control press the on/off button.

To deactivate the remote control press the on/off button again.

Default when (re)placing batteries, is "ON".

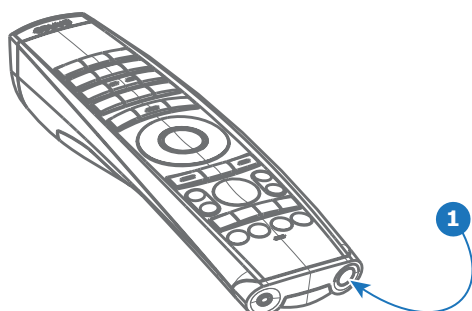


Image 2-8

2.7.5 Enable / Disable Remote Control

About

This function are for disabling the IR sensors for the remote control. Either front or rear, or both.

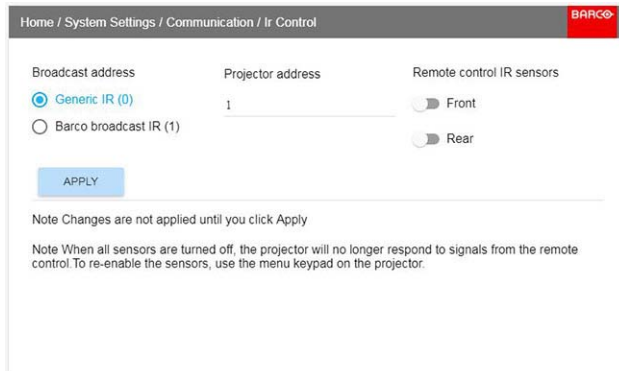


Image 2-9

- Select the menu path *Home/System Settings/Communication/IR control*
- Select which sensors to be disabled.
- Enter the Apply button to confirm the action



When all sensors are turned off, the projector will not receive any signals from the remote control. To enable the sensors again, use the keypad on the projector.

2.7.6 Wired RC connection

About

The remote control can also be directly wired to the projector from the stereo jack connector on the remote, (See "Functionality overview", page 20), to the RC connector on the back panel of the projector.(See section "Connector Panel")

In this mode, the projector will not be affected by signals from other non-wired remote controls.

When using wired remote control, the broadcast address must be set to "Generic ID (0)". See the menu in "Enable / Disable Remote Control", page 21.

It is not possible to program the remote control in wired mode. (Directly connected, no sense in programming).

2.8 Projector Address



Projector address

Address installed in the projector to be individually controlled.



Broadcast address

Projector will always execute the command coming from a RCU programmed with that broadcast address.

2.8.1 Controlling the projector

Why a projector address?

As more than one projector can be installed in a room, each projector should be separately addressable with an RCU or computer. Therefore each projector has its own address.

Set up an individual Projector Address

The set up of a projector address can be done via the software.

2. Getting to know the projector.

Projector controlling

When the address is set, the projector can be controlled now:

- with the RCU: only for addresses between 1 and 31.

Broadcast Address

Every projector has a broadcast (common) address '0' or '1'. The default address is '0'.

The choice between '0' and '1' can be selected in the GUI: "System Settings" → "Communication" → "IR Control".



Placing new batteries in the remote control or plugging the remote to a projector via a cable will automatically reset the address back to its default value '0'.

2.8.2 Displaying and Programming addresses into the RCU

Displaying the Projector Address on the Screen.

1. If the projector is on, press the menu key and navigate to the Status page. The projector address and the broadcast address can be seen under the Communication heading.

The projector's address is displayed on the LCD status screen and / or the OSD.

How to Program an Address into the RCU?

1. Press the **Address** button until the *Button pressed indicator* lights up continuously (proximately 5 seconds).
2. Enter the address with the digit buttons within the time the indicator lights up (also proximately 5 seconds).

Note: That address can be any value between 0 and 31.

Tip: A few examples:

To enter address 3, press "3" digit button on the RCU to set the RCU's address to 3 and wait until the button pressed indicator is out. Alternatively, you can also press "0" and "3". This way, the button pressed indicator goes out immediately.

To enter address 31, then press "3" and "1" on the digit button on the RCU and the button pressed indicator goes out immediately.

2.9 Connector panel

General

The source input panel is located at the back of the projector. For source specifications, see table below.

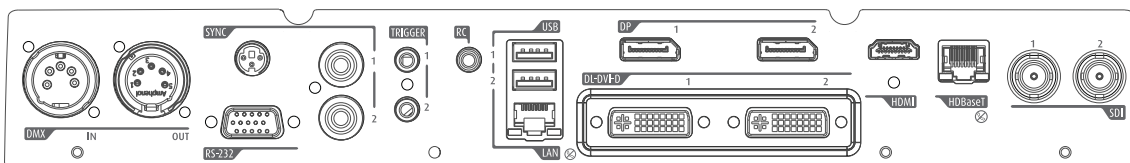


Image 2-10

Name	Pcs	Description	Purpose
DMX IN	1	DMX 512 input	For Projector Control
DMX OUT	1	DMX 512 output	For Projector Control
RS-232	1	9-pin DB9 connector	For Projector Control. Allows for wired remote control and monitoring of many projector functions used in installation environments
Sync	3	BNC Sync Port IN/OUT; Bidirectional mini-DIN (1x 3D sync Out, and 2x Sync In/Out)	For Projector Control This is mainly used in multiple projector installations with requirement of synchronization between the units
Trigger	3 (one in front, two on rear panel)	12VDC - 0,5A (6W)	For Controlling Peripherals, like motorized screens, curtains etc. Give 12V output when projector are switched on
RC	1	Jack connector for wired remote	For Projector Control
USB	3	USB 2.0 type A, 4 pin(2x Rear and 1x Front)	For Software upgrade

Name	Pcs	Description	Purpose
LAN	1	Standard RJ45 connector	For Projector Control
DP	2	Standard display port	For Projector Input
DL-DVI-D	2	Dual DVI-I 1.0 (DVI_D Functionality).	For Projector Input. These connectors can also be used to form one uniform image by feeding half of the image into each connector. HDCP compliant for sources up 165 Mhz
HDMI	1	Standard HDMI 2.0	For Projector Input
HDBaseT	1	Standard RJ45 8P8C Connector	For Projector Control
SDI	2	SDI1 is Input, SDI 2 is pass through. (out)	For Projector Input

Connectors

2.10 Color Wheels

About

The F70 Projector is delivered with a standard Color wheel, that is suitable for most applications.

Other colorwheels are available upon request.

Consult Barco sales office or a service partner in order to find the most suitable colorwheel for the specific application.

2.11 Optional Accessories

Rigging Frame

Item Number	Item Description
R9802224	F70/F90 Multifunctional Frame.

The F70 Rigging frame is a rugged, easy to install frame, designed to streamline the process of installing one or more projectors.

When installed in the frame, the projector:

- can be rotated around the x, y and z axis, in order to obtain a seamless adjustment in applications using multiple projectors.
- Can be installed from a truss or a pedestal.
- Can be easily stacked one on top of another, for instance a dual or multichannel installations.

Flight Case

F70 use the same Flight case as the F90 series projectors.

Item Number	Item Description
R9801195	F90 flight case.

2. Getting to know the projector.



Image 2-11

The F70 Flight Case is a custom designed container, that is suitable for shipping the projector, including flight frame, signal and power cords and up to two lenses.

The case is fully-lined to protect the projector and lenses during transit and storage.

3. LENSES

About

Overview

- Approved Lenses
- Lens range
- Replace a lens
- Lens shift
- Adjust zoom and focus
- Adjust Iris

3.1 Approved Lenses

Approved Lenses

Partnumber	Description	For North America	Outside North America
R9801214	FLD 1.6 - 2.32 : 1 (EN11)	approved	approved
R9801218	FLD 0.74 : 1 (EN12)	approved	approved
R9801228	FLD 1.24 - 1.6 : 1 (EN13)	approved	approved
R9801209	FLD 2.37 - 3.79 : 1 (EN14)	approved – professional use only	approved – professional use only
R9801225	FLD 1:16 : 1 (EN15)	approved	approved
R9801249	FLD 3.8 - 6.5 : 1 (EN16)	approved – professional use only	approved – professional use only
R9801216	FLD+ 1.7 - 2.5 : 1 (EN41)	approved	approved
R9801226	FLD+ 0.8 : 1 (EN42)	approved	approved
R9801230	FLD+ 1.2 - 1.7 : 1 (EN43)	approved	approved
R9801211	FLD+ 2.5 - 4.6 : 1 (EN44)	approved – professional use only	approved – professional use only
R9801220	FLD+ Long Focus 0.8 - 1.21 : 1 (EN45)	approved	approved
R9801221	FLD+ Short Focus 0.8 - 1.21 : 1 (EN46)	approved	approved
R9801295	FLD+ 0.65 : 1 (EN47)	approved	approved
PN_EN58	FLD+ 0.28 : 1 (EN58)	approved	approved

This projector may become Risk Group 3 (RG3) when an interchangeable lens with throw ratio greater than 4.7 is installed. For Northern America, installation requirements according to Risk group 3 (RG3) must be followed when interchangeable lens with throw ratio greater than 2.5 is installed.

Refer to the manual chapter 1.7 for the throw ratio versus hazard distance before operation.

3.2 Lens range



CAUTION: Always remove the lens from the lens holder before moving or transporting the projector. Failure to do this may cause damage to the lens holder and prism.

Available lenses — WUXGA

The FLD lens range is custom-engineered for WUXGA and 1080 projectors.

The electrical connection to the lens motors is via a spring probe contact (pogo) pin array on the bayonet mount.

The projector will automatically detect and identify the lens when it is installed. Automatic detection is not available for 3rd party lenses.

3. Lenses

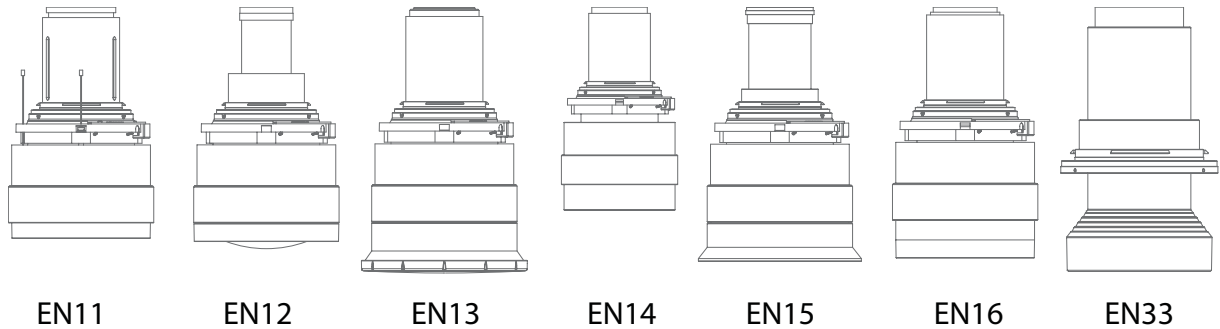


Image 3-1

Name	Description	Part number	Weight
FLD Lens 1.6 - 2.32 : 1 (EN11)	1.6-2.32 : 1 (WUXGA)	R9801214	2.2 kg
FLD Lens 0.74 : 1 (EN12)	0.74:1 (WUXGA)	R9801218	1.9 kg
FLD Lens 1.24 - 1.6 : 1 (EN13)	1.24 - 1.6 : 1 (WUXGA)	R9801228	2.6 kg
FLD Lens 2.37 - 3.79 : 1 (EN14)	2.37 - 3.79 : 1 (WUXGA)	R9801209	2.5 kg
FLD Lens 1.16:1 (EN15)	1.16 : 1 (WUXGA)	R9801225	2.4 kg
FLD Lens 3.80 - 6.50 : 1 (EN16)	3.8 - 6.5 : 1 (WUXGA)	R9801249	2.5 kg

Name	Working F#	Iris / Iris F#	Zoom Ratio	Focal Length (mm)	Focus Range (m)
FLD Lens 1.6 - 2.32 : 1 (EN11)	2.1-2.52	Yes 2.1-6.5	1.45	33.2-48.1	2.0-15
FLD Lens 0.74 : 1 (EN12)	2.1	Yes 2.1-6.5	-	16.35	0.5-5
FLD Lens 1.24 - 1.6 : 1 (EN13)	2.1-2.22	Yes 2.1-6.5	1.3	25.59-33.24	1.0-15
FLD Lens 2.37 - 3.79 : 1 (EN14)	2.1-2.72	Yes 2.1-6.5	1.6	49.1-78.6	3.0-30
FLD Lens 1.16:1 (EN15)	2.1	Yes 2.1-6.5	-	23.98	1.5-15
FLD Lens 3.80 - 6.50 : 1 (EN16)	2.1-2.66	Yes 2.1-6.5	1.74	78.3-136.2	4.0-40

Available lenses — 4K, WUXGA, WQXGA

The FLD+ (EN4X) lens range is custom-engineered for WQXGA projectors.

The electrical connection to the lens motors is via a spring probe contact (pogo) pin array on the bayonet mount. The projector will automatically detect and identify the lens when it is installed. Automatic detection is not available for 3rd party lenses.

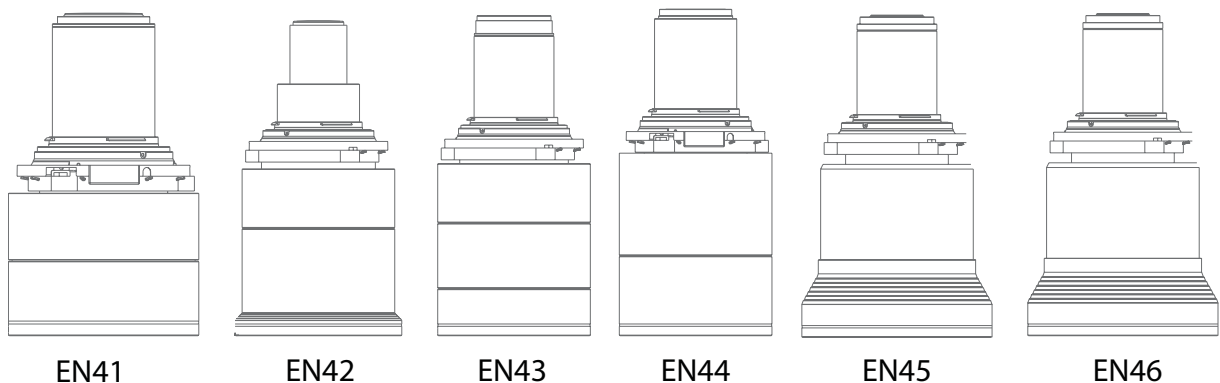


Image 3-2

Name	Description	Part number	Weight
FLD+ Lens 1.7 - 2.5 : 1 (EN41)	1.58 - 2.33 : 1 (WUXGA) / 1.7 - 2.5 : 1 (WQXGA)	R9801216	2.54 kg
FLD+ NV Lens 1.7 - 2.5 : 1 (NV41)	IR Optimized, 1.58 - 2.33 : 1 (WUXGA) / 1.7 - 2.5 : 1 (WQXGA)	R9801216	2.54 kg
FLD+ Lens 0.8 : 1 (EN42)	0.75 : 1 (WUXGA) / 0.8 : 1 (WQXGA)	R9801226	2.7 kg
FLD+ Lens 1.2 - 1.7 : 1 (EN43)	1.12 - 1.58 : 1 (WUXGA) / 1.2 - 1.7 : 1 (WQXGA)	R9801230	2.84 kg
FLD+ NV Lens 1.2 - 1.7 : 1 (NV43)	IR Optimized, 1.12 - 1.58 : 1 (WUXGA) / 1.2 - 1.7 : 1 (WQXGA)	R9801286	2.84 kg
FLD+ Lens 2.5 - 4.6 : 1 (EN44)	2.33 - 4.3 : 1 (WUXGA) / 2.5 - 4.6 : 1 (WQXGA)	R9801211	3.08 kg
FLD+ Lens 0.75 - 1.13 : 1 (EN45)	0.75 - 1.13 : 1 (WUXGA) / 0.8 - 1.21 : 1 (WQXGA)	R9801220	3.04 kg
FLD+ Lens 0.75 - 1.13 : 1 (EN46)	0.75 - 1.13 : 1 (WUXGA) / 0.8 - 1.21 : 1 (WQXGA)	R9801221	3.14 kg
FLD+ NV Lens 0.8 - 1.21 : 1 (NV46)	IR Optimized, 0.75 - 1.13 : 1 (WUXGA) / 0.8 - 1.21 : 1 (WQXGA)	R9801287	3.14 kg
FLD+ Lens 0.65 : 1 (EN47)	0.61 : 1 (WUXGA) / 0.65 : 1 (WQXGA)	R9801295	5.4 kg

Name	Working F#	Iris / Iris F#	Zoom Ratio	Focal Length (mm)	Focus Range (m)
FLD+ Lens 1.7 - 2.5 : 1 (EN41)	2.1-2.5	Yes 2.1-6.5	1.47	33.70-49.54	1.5 - 15
FLD+ NV Lens 1.7 - 2.5 : 1 (NV41)	2.1-2.5	Yes 2.1-6.5	1.47	33.70-49.54	1.5 - 15
FLD+ Lens 0.8 : 1 (EN42)	2.1	Yes 2.1-6.5	-	16.12	0.7 - 7
FLD+ Lens 1.2 - 1.7 : 1 (EN43)	2.4-2.7	Yes 2.4-6.5	1.42	23.95-34.02	1.5 - 15
FLD+ NV Lens 1.2 - 1.7 : 1 (NV43)	2.4-2.7	Yes 2.4-6.5	1.42	23.95-34.02	1.5 - 15
FLD+ Lens 2.5 - 4.6 : 1 (EN44)	2.1-2.93	Yes 2.1-6.5	1.85	49.52-91.60	2.5-25
FLD+ Lens 0.75 - 1.13 : 1 (EN45)	2.4-3.29	Yes 2.4-6.5	1.51	15.85-23.93	5.0 - 30
FLD+ Lens 0.75 - 1.13 : 1 (EN46)	2.4-3.29	Yes 2.4-6.5	1.51	15.98-23.99	0.7 - 7
FLD+ NV Lens 0.8 - 1.21 : 1 (NV46)	2.4-3.29	Yes 2.4-6.5	1.51	15.98-23.99	0.7 - 7
FLD+ Lens 0.65 : 1 (EN47)	2.1	Yes 2.1-6.0	-	12.6	0.5 - 4.0

3.3 Replace a lens

Lens lever

The F70 lens mount and lens lever is designed to prevent damage to the lens board while providing an easy and stable lens change procedure.

The lens lever, located at the bottom of the lens mount, slides between two positions, far left (default position — unlocked) and far right (locked).



Always activate the projector shutter before attempting to remove or install a lens.

To do this, press the shutter button on the keypad, or shutter Close on the remote, to activate the shutter. The keypad button will illuminate red when the shutter is activated.

Press the shutter button again, or shutter Open on the remote, to deactivate the shutter and resume normal operation. The keypad button will illuminate white when the shutter is deactivated.

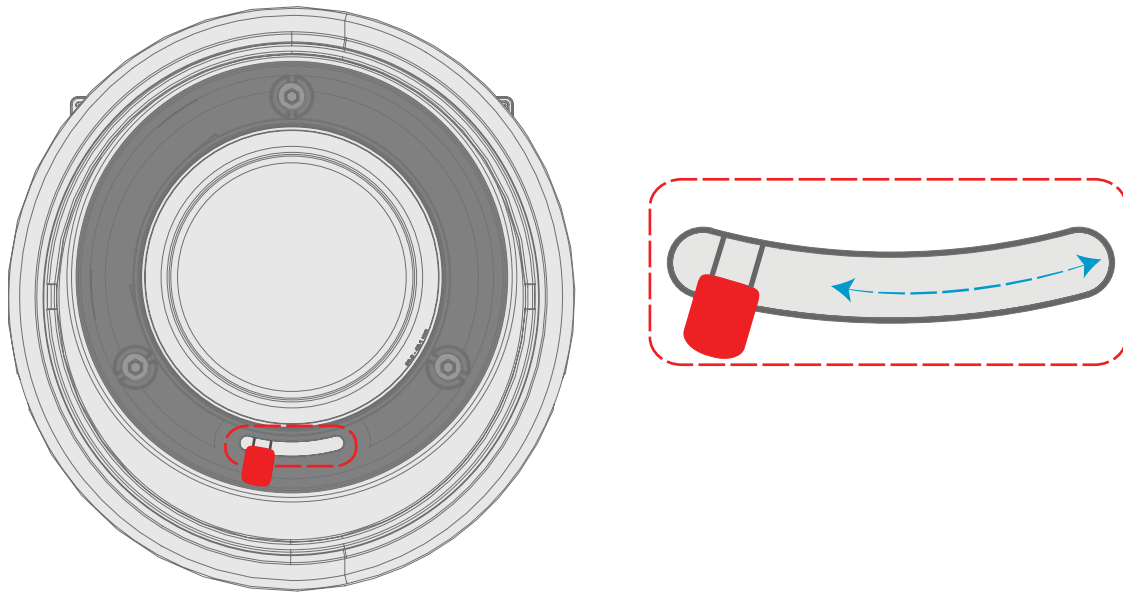


Image 3-3

Install a lens

1. Verify that the projector shutter is activated (shutter is activated when the shutter icon on the projector keypad is red).
2. Verify that the lens release lever is in its default position at the far left of the slide, as illustrated.
3. Remove the protective cap at the lens bayonet end
4. Align the lens so that the red marking on the bayonet is facing upwards.
5. Position the lens bayonet into the projector lens mount and support in place with one hand.
6. Slide the lens lever to the far right.
7. Verify that the lens is firmly in place before removing your hand from the lens.

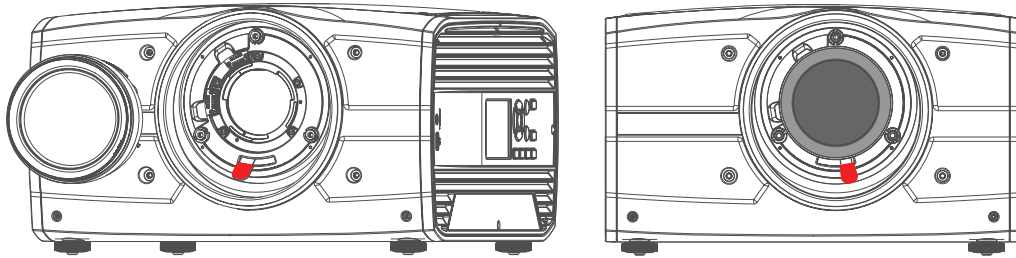


Image 3-4

Remove a lens

1. Support the lens with one hand.
2. Use the other hand to slide the lens release lever to the far left position.
3. Pull the lens straight out of the projector lens mount.
4. Replace with another lens, or install the projector lens cap.

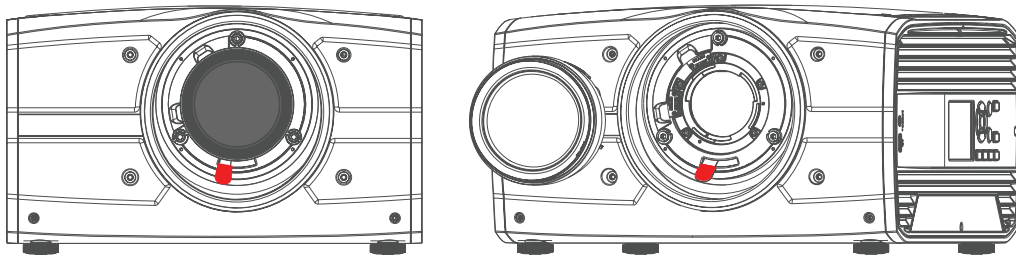


Image 3-5

3.4 Lens shift

General

Use the Remote control or the keypad on the Projector to adjust the lens shift mechanism.

The lenses can be shifted vertically and horizontally to facilitate precise image positioning in single and multiple projector systems. The projector allows for horizontal and vertical shift in both directions. Always place the projector perpendicular to the screen, and use the lens shift to align the picture.

If not possible to align the projector perpendicular to the screen, due to environment of other, see chapter "Warp – 4 Corners adjustment", page 69

3.5 Adjust zoom and focus

General

Zoom controls the size of the projected image.

Focus controls the sharpness of the projected image.

Lens zoom and focus adjustments are motorized. You can use the remote control, local keypad, OSD and/or RS-232 commands to adjust the lens zoom and focus positions.



Not all lenses have zoom or iris control. The matrix below shows what controls are available per lens.

	EN11	EN12	EN13	EN14	EN15	EN16	EN33	EN41	EN42	EN43	EN44	EN45	EN46	EN47
Iris	✓	✓	✓	✓	✓	✓	✗	✓	✓	✓	✓	✓	✓	✓
Zoom	✓	✗	✓	✓	✗	✓	✗	✓	✗	✓	✓	✓	✓	✗
Focus	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

For best results, lens adjustments should be done in the following order: zoom, focus and then iris (where applicable).

3.6 Adjust Iris

General

Iris controls the contrast and focus depth of the image. Decreasing the iris will increase contrast and image depth, at the same time as it decreases brightness.

Iris control is, as for the zoom and focus control, motorized, and is operated by the remote control or local keypad.



Iris is only available for units with COLOR type colorwheel.

To enter Iris control, enter the menu *Home/Installation/Lens /Iris*



Image 3-6

Use the arrow keys to adjust Iris until preferred rendering is obtained.

4. PHYSICAL INSTALLATION

About

This chapter describes the physical conditions and procedures required when installing the F70 projector. It also describes the outlines and some of the considerations that should be taken in to account when designing and setting up the installation.

Each projector installation is unique, and as such the information in this chapter is only provided as a guideline. Likewise, any images or graphical representations shown here are for illustrative purposes only.

If you require further information and assistance during the installation process, contact a qualified projection technician or your local support office for advice.

Overview

- Installation Process
- Installation conditions
- Initial inspection
- Positioning the projector
- Mounting the projector, general considerations
- Projector safe attachment points
- Throw distance
- Scheimpflug (Boresight) adjustment
- Scheimpflug adjustment procedure

4.1 Installation Process

Recommended Installation sequence

Item	Procedure	Read more in chapter
1	Confirm that the installation area meets all technical and environmental requirements	See "Installation conditions", page 31
2	Decide where the projector will be mounted	See "Positioning the projector", page 33
3	Unpack the projector and confirm that all equipment is present and in good working order	See "Initial inspection", page 32
4	Mount the projector	See "Mounting the projector, general considerations", page 33
5	Install the projector lens	See "Replace a lens", page 27
6	Connect the source	See "Projector source and control connections", page 41
7	Power up the projector	See "Power up the projector", page 44
8	Set up the image	See "Image menu", page 53

4.2 Installation conditions

Environmental Conditions



Barco projectors are manufactured according to specific design standards, which also include environmental conditions. Failing to follow the terms and conditions outlined in this chapter can result in loss of product warranty

The table below summarize the physical environments in which the projector may be safely operated or stored.

Environment	Ambient operating temperature	Relative Humidity	Storage condition
0 -500m	+10 to +45 °C	10 -80% RH	-20 to +60 °C, 10 - 90 % RH
500 -1500m	+10 to +40 °C	10 -80% RH	-20 to +60 °C, 10 - 90 % RH

4. Physical Installation

Environment	Ambient operating temperature	Relative Humidity	Storage condition
1500 - 3000m	+10 to +35°C	10 –80% RH	–20 to +60 °C, 10 – 90 % RH
Maximum Air Flow	900m ³ /hour	10 –80% RH	Not Applicable

Mains power requirement

Projector	Power Requirement
F70	100 –240V. 50 –60 Hz.

To protect operating personnel, the National Electrical Manufacturers Association (NEMA) recommends that the instrument panel and cabinet be grounded.

In no event shall this projector be operated without an adequate cabinet ground connection.

The AC supply must be installed by a qualified electrician in conformance to local codes. Hardware, wire sizes and conduit types must comply with local codes.

Ventilation

The free space necessary between the air intake and exhaust are shown below.

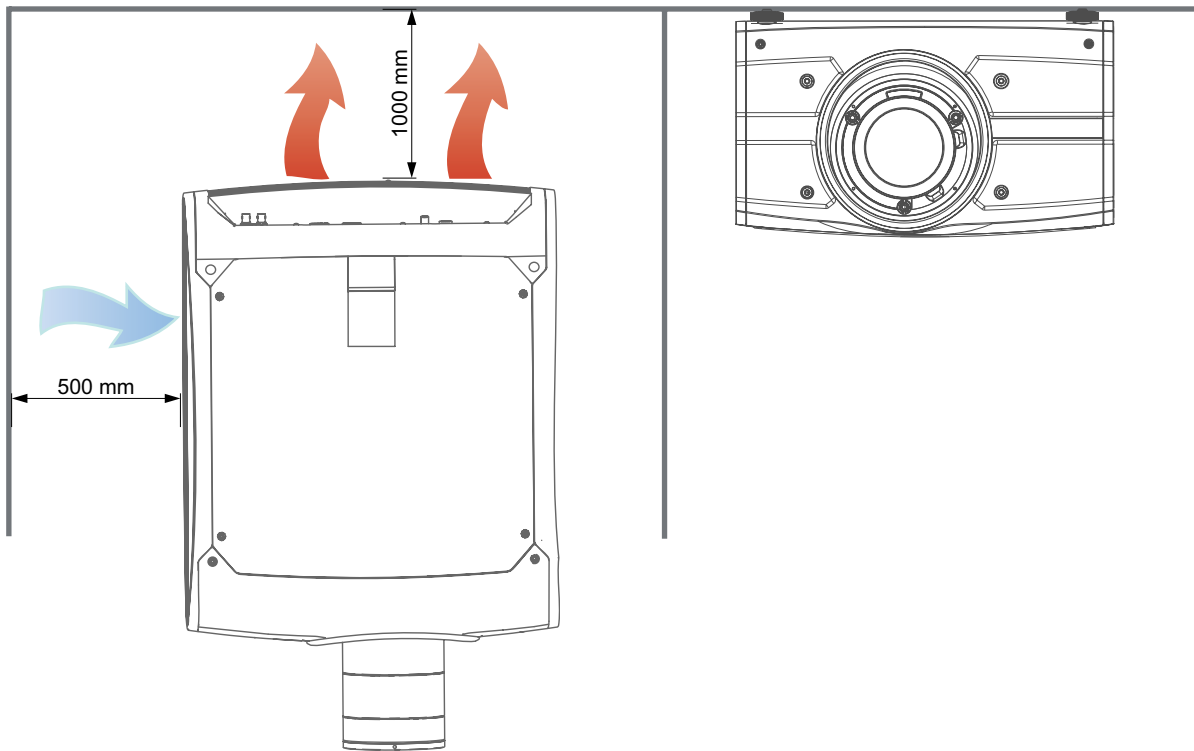


Image 4-1

4.3 Initial inspection

General

Each projector is inspected and rigorously tested at our production facility to ensure that it is free from any mechanical or electrical defects.

Upon receipt of the projector, we recommend that customers inspect the projector for any signs of damage that may have occurred in transit. If damage is found, file a claim with the shipping carrier immediately. Notify the Barco Sales and Service office, or your preferred Barco agent, of the damage as soon as possible.

Box Contents

Your projector box should contain the following:

- Projector unit
- Power cord (suitable for region)
- Quick start guide
- Safety manual
- Remote Control



The projector lens is delivered in a separate box.

4.4 Positioning the projector



CAUTION: The position and physical securing of the projector must be sufficient to prevent it from accidental or involuntary movement. Proper securing of the projector is the responsibility of the installer and user. The Projector are heavy, and can cause severe damage and injuries if falling.

General guidelines

Proper positioning of the projector lessens the overall picture setup time, and ensures a better image with fewer artifacts.



Focus and sharpness of the image can be adversely affected if the lens axis is not fully perpendicular to the projection surface.



Using extended cable lengths may result in reduced image quality as well as loss of control information such as EDID (Extended Display Information Data).

The following guidelines can help you determine the best physical location for the projector.

- Only install the projector on a sturdy flat surface, or in an approved rigging frame.
- Do not install the projector in a thoroughfare or another area where it is at risk of being pushed or jostled.
- Allow sufficient free space around the projector for ventilation and exhaust, as described in section 4.2
- Use the throw ratio of the installed lens as a guideline for the projector's physical distance from the screen.
- Wherever possible, the projector lens surface should be positioned so that it is perfectly perpendicular to the center of the screen.
Use the projector offset (lens shift), rather than physical angling, to correct any off-center positioning.
- Minimize the source cable length as much as possible.
In general HDBaseT and 3G-SDI are long-haul interfaces and suitable for bespoke installations using relatively long cables. DP, HDMI and DVI are short-haul interfaces using pre-assembled cables with limited cable lengths.
- Limit the use of power cable extensions wherever possible. Where physical limitations necessitate their use, make sure that the extension cord has adequate surge protection and meets all electrical requirements of the connection.
- Keep the projector away from equipment that emits electromagnetic energy for example, motors, transformers and elevators.

4.5 Mounting the projector, general considerations

Mounting safety

When mounting a projector in a rig, always use an interface plate (between the projector and the mount) that has provision for a safety wire or another safety mechanism, to ensure that the projector does not fall down should the interface plate come loose from the mount.

Always screw the interface plate securely to the projector body while the projector is on the ground (i.e. cannot fall down). Then attach proper safety wire between the interface plate and the rig before mounting the projector in the rig

Using 3rd party mounting equipment

The projector has features for mounting into various system environments using 3rd party mounts.

4. Physical Installation

Four mounting inserts are located on the bottom of projector. The ceiling mount inserts have a pull-strength of more than 4x the weight of the projector.

The feet can be removed and threads can be used for additional mounting points. See table below for dimensions.

Parameter	Value
Thread size	M12
Length 18mm max	18mm max



Where possible, the projector lens must be positioned exactly perpendicular to the center of the screen. Use the projector offset (lens shift), rather than physical angling, to correct any off-center positioning.



CAUTION: The position and physical securing of the projector must be sufficient to prevent it from accidental or involuntary movement. Proper securing of the projector is the responsibility of the installer and user.



CAUTION: Always use a Rigging Frame when the projector shall be mounted in other ways than on the feet, on a flat surface.



The threaded hole in the lower back end of the projector is NOT suitable for lifting or other heavy operations. Only for adjustment purposes.



Installation and use of the Rigging Frame are described in document R5906768 Multifunctional Frame — Installation Manual.

Mounting on a flat surface

1. Position the projector at the desired location.
2. Power up the projector.
3. Go to *Main Menu / Test Patterns* and select an internal hatch pattern to display on the screen.
4. Adjust the projector legs until the projected hatch pattern is a level and perfect rectangle.

Adjustable feet

Twisting the adjustable feet in either direction, left or right, allows you to fine-adjust the projector position for precise vertical mechanical alignment.

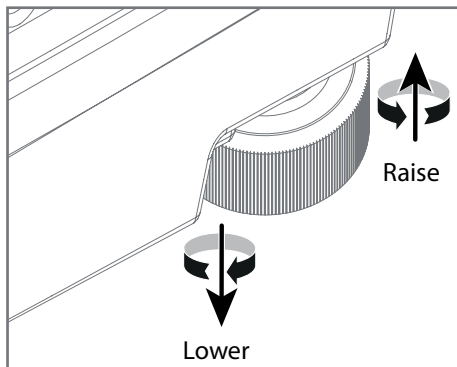


Image 4-2

Mounting to a ceiling

1. Install the projector in to an approved rigging frame.
2. Install the rigging frame to the desired location.
3. Power up the projector.

4. Go to *Main Menu / Installation / Orientation* and select the correct orientation for your setup.
5. Go to *Main Menu / Test Patterns* and select an internal hatch pattern to display on the screen.
6. Adjust the position (height and angle) of the rigging frame until the projected hatch pattern is a level and perfect rectangle.




If applied in a motion rig, care must be taken to stay within the environmental specifications for vibration and shock. It may also be necessary to use additional, custom means to stabilize the projection lens to make sure that the projected image remains in position and properly focused.

4.6 Projector safe attachment points

About

Due to use of a Rigging Frame or other equipment, the projector has some defines anchor points that shall be used. See the illustration below.

Note that there is only this 4 selected attachment points that is approved as anchor points for the unit.

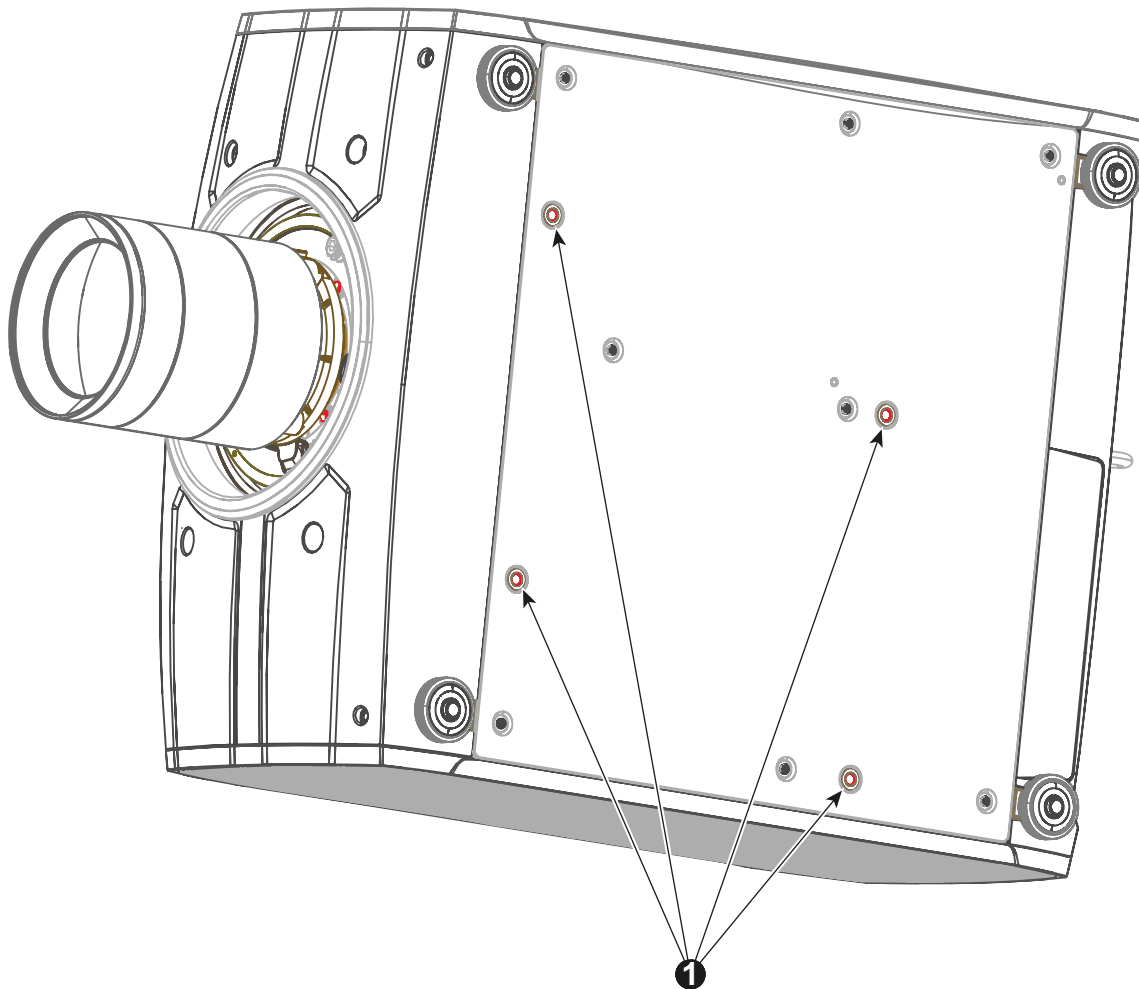

**Anchorpoints.
For attaching to rigging frame or similar.**

Image 4-3

Item	Thread Dimension	Max Hole Depth	Application
1	M6	15mm	Anchorpoint / Ceiling / Rig Mount

4.7 Throw distance

Calculate the installation throw distance

Throw is the distance (D) measured from your projector lens to the screen. To calculate the throw distance for an installation, you will need two pieces of data: the selected lens throw ratio (L) and the horizontal width (W) of the screen. For example, if the screen width (W) is 2.4 meters and the projector lens has a throw ratio (L) of 0.99:1, then the throw distance (D) will be 2.38 meters.

Calculation: $2.4 \times 0.99 = 2.38$

The following graphs illustrate the image size (W) and projection distance (D) for each of the projector lenses.



Tolerances are typically +/- 5% due to optical (lens) variation.

Throw distance, FLD WUXGA

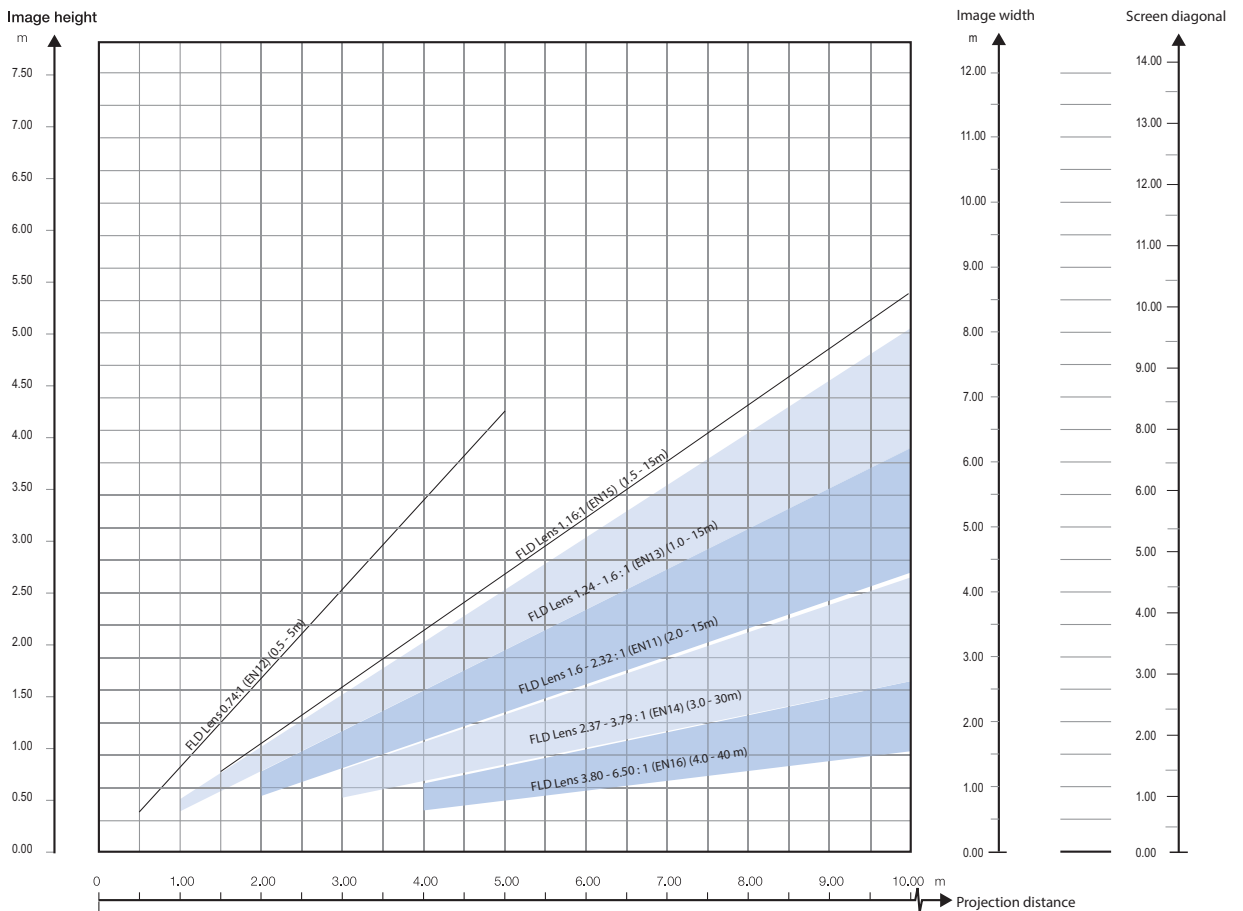


Image 4-4

Throw distance, FLD+ WQXGA / 4K UHD

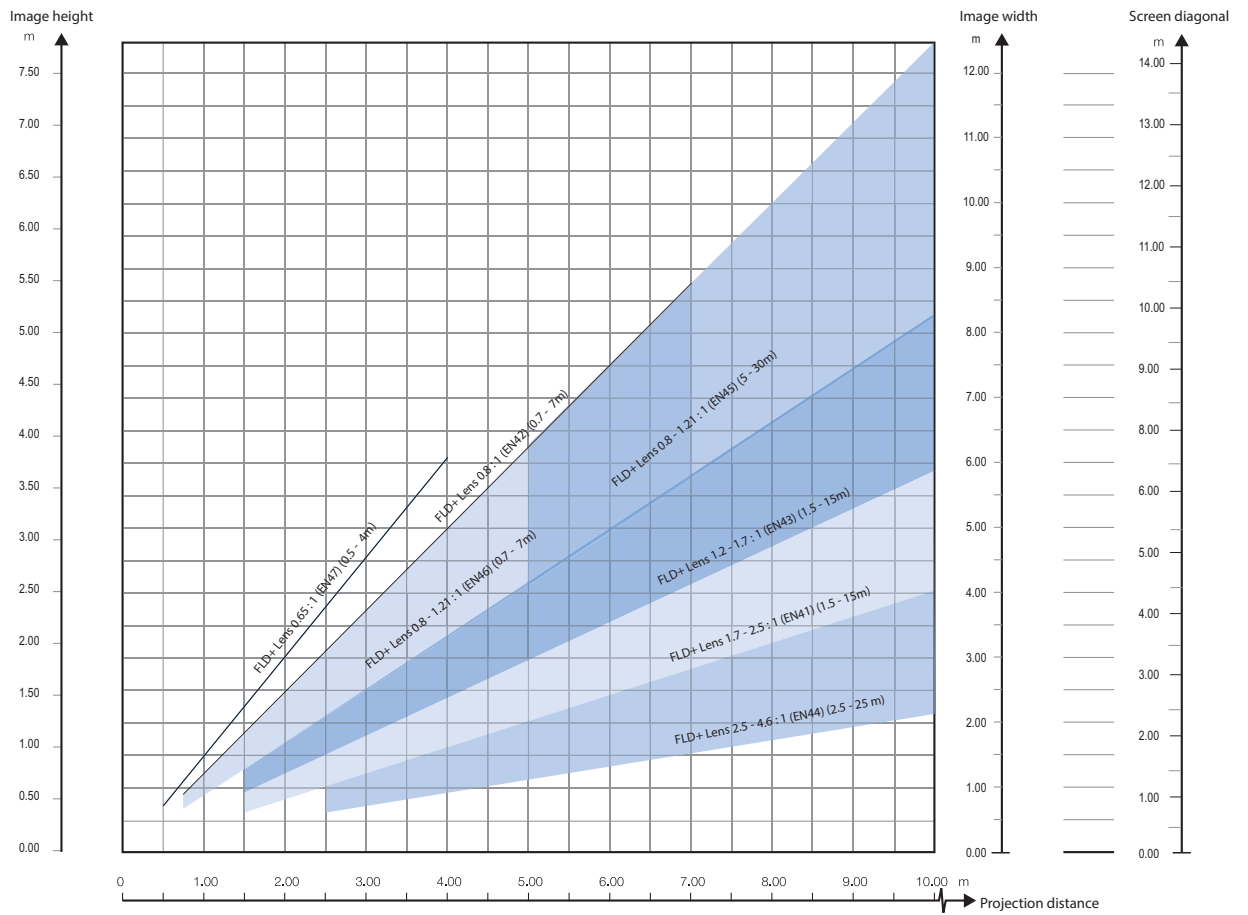


Image 4-5

Throw distance, FLD+ WUXGA

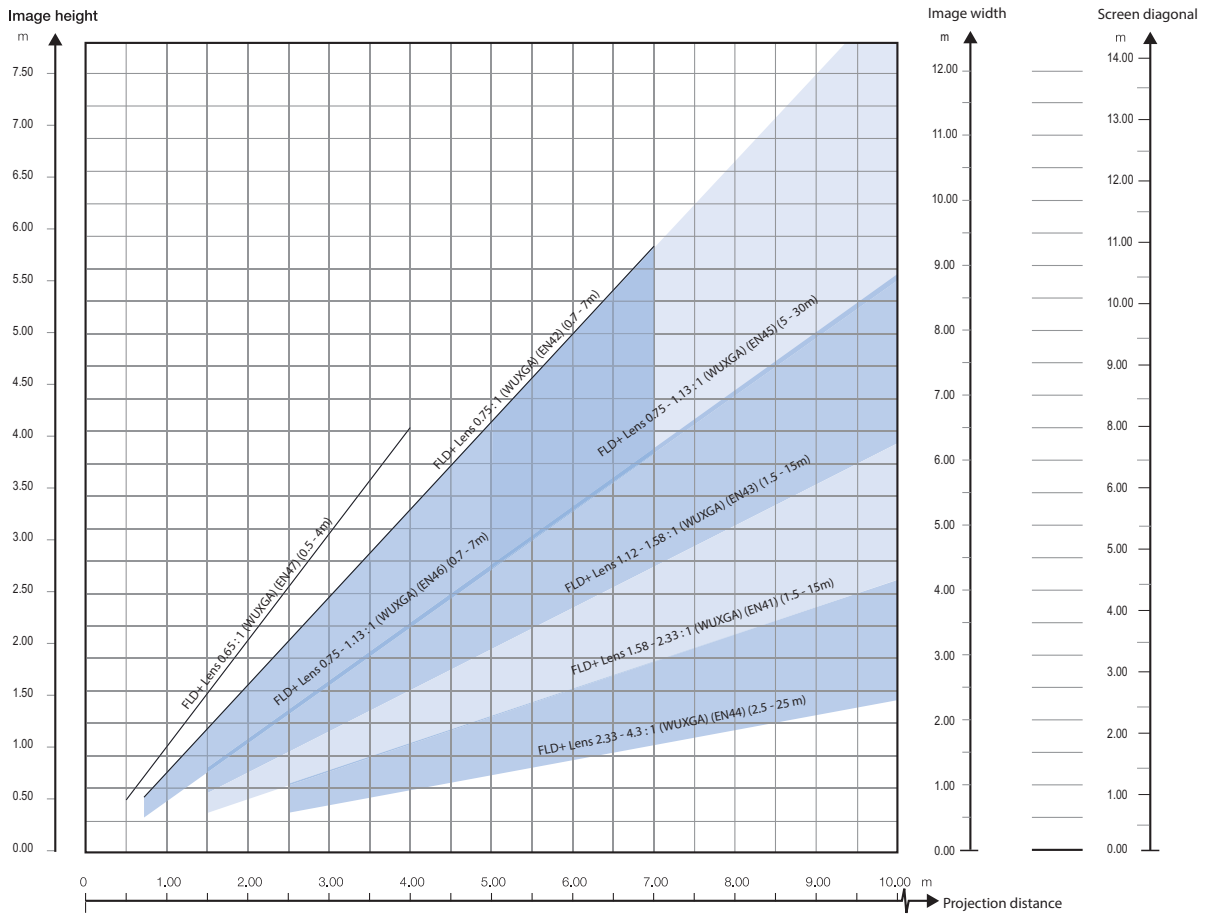


Image 4-6

4.8 Scheimpflug (Boresight) adjustment

What is Scheimpflug?

The lens holder has to be adjusted so that the “sharp focus plane” of the projected image falls together with the plane of the screen (Fp1→Fp2). This is achieved by changing the distance between the DMD plane and the lens plane (Lp1→Lp2). The closer the lens plane comes to the DMD plane the further the sharp focus plane will be. It can occur that you won't be able to get a complete focused image on the screen due to a tilt (or swing) of the lens plane with respect to the DMD plane. This is also known as Scheimpflug's law. To solve this the lens plane must be placed parallel with the DMD plane. This can be achieved by turning the lens holder to remove the tilt (or swing) between lens plane and DMD plane (Lp3→Lp4).

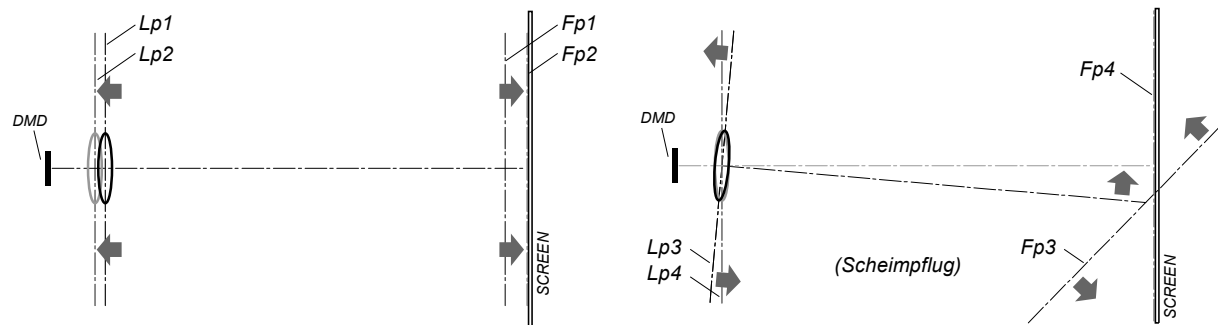


Image 4-7
Scheimpflug principle



Scheimpflug principle

The "plane of sharp focus" can be changed so that any plane can be brought into sharp focus. When the DMD plane and lens plane are parallel, the plane of sharp focus will also be parallel to these two planes. If, however, the lens plane is tilted with respect to the DMD plane, the plane of sharp focus will also be tilted according to geometrical and optical properties. The DMD plane, the principal lens plane and the sharp focus plane will intersect in a line below the projector for downward lens tilt.

Scheimpflug adjustment points

Scheimpflug adjustment points are located on the lens mount. The F70 has three (3) set screws and three (3) adjustment screws.

When to apply Scheimpflug?



Scheimpflug correction procedures may only be carried out by suitably trained and experienced technicians.

A Scheimpflug correction should only be applied when the overall focus of the projected image is not equally sharp (for example, if the projector is **NOT in parallel** with the screen or as a result of a previously misaligned Scheimpflug). Be aware that the consequence of applying Scheimpflug correction upon a screen not in parallel with the projector is that the projected image differs from the rectangle shaped image. In other words "distortion" of the projected image occurs. **Masking** will be required to solve the distortion.

The disadvantage of Masking is loss of content. Therefore it is **strongly recommended** to place the projector **in parallel** with the projection screen and use the **SHIFT** functionality of the Lens Holder to match the projected image with the projection screen. If the SHIFT range is not sufficient then the projector can be tilted and Scheimpflug can be applied.

4.9 Scheimpflug adjustment procedure



CAUTION: A Scheimpflug adjustment should only be carried out by properly qualified and experienced projection specialists. A poor Scheimpflug adjustment may result in an extremely degraded image and will require factory—servicing to the projector.

Necessary tools

- Allen key, hex size 4
- Allen key, hex size 6

Preparation

1. Prepare the test area. Barco recommends a projector-screen distance of 2 metres be used for all Scheimpflug adjustments. Verify that the throw ratio of the installed lens matches the requirements of the installation area (projection distance and screen size).
2. Check that the lens is correctly installed, and lens shift is in centre position.
3. If the installed lens has Iris control, open the Iris all the way up.
4. Open the focus ring all the way up.
5. Go to Main Menu / Test Patterns / Full Screen and select to display the Focus test pattern.
6. Zoom the lens to its widest opening (maximum image size on the screen).

Apply a Scheimpflug correction

1. Loosen the three set screws (reference 1b, 2b, 3b). Use a size 6 hex key to do this.

4. Physical Installation

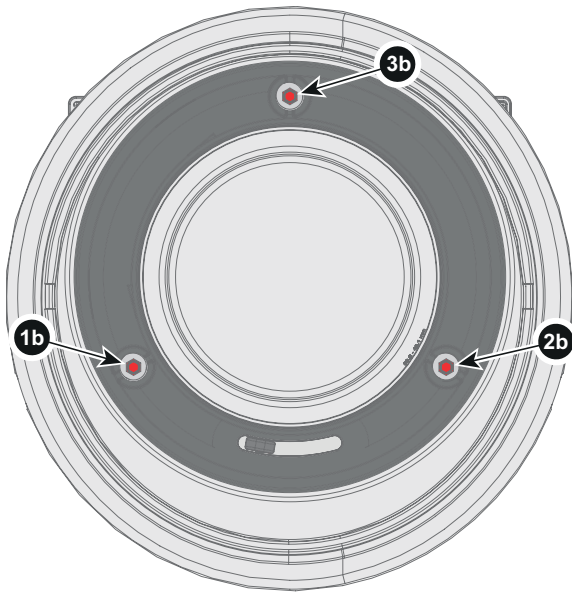


Image 4-8

2. Adjust the left side Scheimpflug adjustment screw (reference 1) until the test image in the top right side of the screen is in focus. Use a size 4 hex key to do this.

Note: This process may cause the other areas of the image to slide out of focus. This is totally normal.

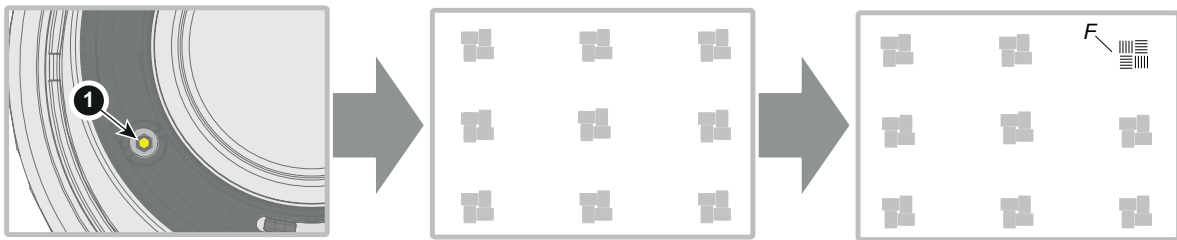


Image 4-9

3. Adjust the right side Scheimpflug adjustment screw (reference 2) until the test image in the top left side of the screen is in focus. Use a size 4 hex key to do this.

Note: This process may cause the other areas of the image to slide out of focus. This is totally normal.

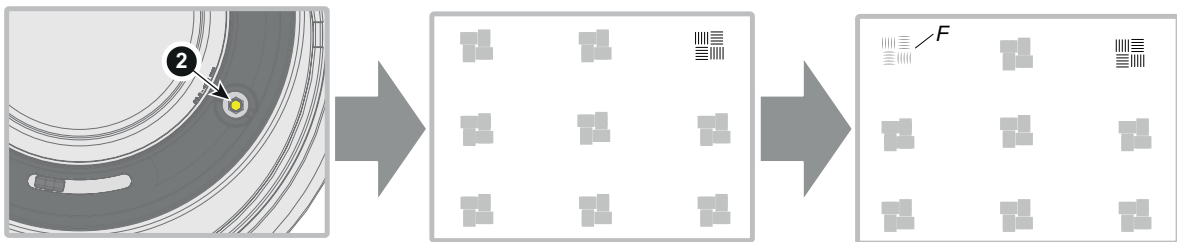


Image 4-10

4. Adjust the top Scheimpflug adjustment screw (reference 3) until the test image in the bottom half of the screen is in focus. Use a size 4 hex key to do this.

Note: This process may cause the other areas of the image to slide out of focus. This is totally normal.

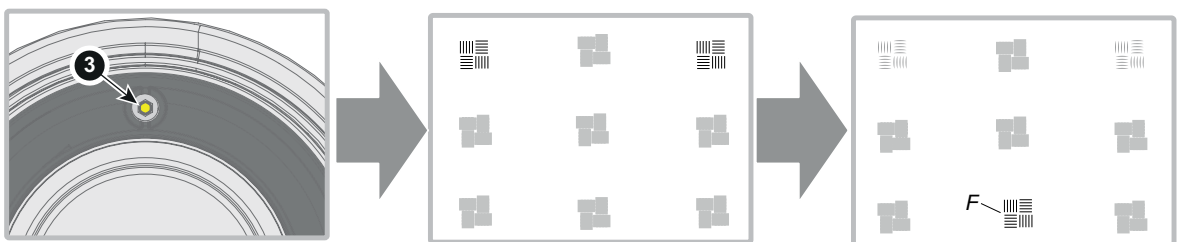


Image 4-11

5. Continue adjusting the screws one at a time until the test image is uniformly sharp across all areas of the display.
6. Test the focus by zooming out (minimum image size on screen) and then zooming in again. Verify the image is still sharp. If there are any deviations to sharpness, repeat steps 2 to 6 until the image is correct.
7. Tighten the three set screws in the following order: left (1b), right (2b) and then top (3b). Use a size 6 hex key to do this.

5. GETTING STARTED

About this chapter

This chapter describes how to set up and optimize your projector setup when the physical installation process is complete.

Overview

- Projector source and control connections
- Power up the projector
- Power down the projector
- Power mode transitions
- Power modes
- Customize projector settings
- User interface

5.1 Projector source and control connections

Overview

- Making connections
- Connector specifications
- Control interfaces

5.1.1 Making connections



The source switching time varies from 0.5 to 5 seconds.

Source signal connectivity

The connector panel at the back of the projector is used for all source connections.

Source signal connectivity on the projector is:

- 2x Dual Link DVI-I (DVI-D functionality)
- 2x DisplayPort 1.2
- 1x HDMI 2.0
- 1x HDBaseT
- 1x 3G SDI

5.1.2 Connector specifications

Overview

- DVI-I
- Display Port 1.2
- HDMI 2.0
- 3G-SDI
- HDBase T

5.1.2.1 DVI-I

Specifications

Parameter	Value
Connector	DVI-I female digital RGB
Signal characteristics	DVI 1.0, Digital, TMDS

5. Getting started

Parameter	Value
Max. cable length	25 m (24 AWG)
Max. pixel rate	330 MHz (dual link), 165 Mhz (single link)
Scan format	Progressive
Max. input data resolution	1920x1200 60Hz (Single link), 2560x1600 60Hz (Dual Link).1920x2400 @60Hz
Bit depth	8 bit
EDID	Supported
HDCP	Supported

5.1.2.2 Display Port 1.2

Specifications

Parameter	Value
Connector	Standard Display port
Signal characteristics	DP 1.2
Functionality	Mandatory
Max. cable length	15 m (24 AWG) - RBR; 2 m (24 AWG) – HBR1, HBR2
Supported Link Rate	RBR, HBR1, HBR2
Scan format	Progressive
Max. input data resolution	2560x1600@120Hz WQXGA / 3840x2400 @60Hz (4K) Max
Bit depth	8, 10, 12 bit
EDID	Supported

5.1.2.3 HDMI 2.0

Specifications



Regarding HDMI 2.0: The decryption protocol HDCP 2.2 are enabled and valid in this unit.

Parameter	Value
Connector	Standard HDMI
Signal characteristics	Digital, TMDS
Max. cable length	15 m (24 AWG)
Max. pixel rate	594MHz
Max. input data resolution	3840x2160 @60Hz
Bit depth	8, 10, 12 bits
EDID	Supported
HDCP	Supported
Ethernet	No
Audio return	No

5.1.2.4 3G-SDI

Specifications

Parameter	Value
Standard	SMPTE 424M-2006 10bit level A
Connectors	1x) BNC 75 ohm type IEC 60169-8, Amendment 2 1997, A
Bandwidth	>3 GHz
Return loss	>10dB at 3GHz
Impedance	75 ohm resistive

5.1.2.5 HDBase T

Specifications

Parameter	Value
Reference specification	HDBaseT 1.0 Specification, June 2010
Connector	Standard RJ-45, 8P8C
Signal characteristics	HDBaseT
Max. cable length (1080p/48b/60Hz)	100 m (Cat5e/6), Pixel Clock <=225MHz, Video Datarate <=5.3Gbps 70 m (Cat5e/6), Pixel Clock >225MHz, Video Datarate >5.3Gbps 100 m (Cat6a/7), Pixel Clock >225MHz, Video Datarate >5.3Gbps
Max TMDS Clock Frequency	270 MHz
Max video resolution supported	1920x1200 @60Hz (WUXGA 60Hz)
HDCP Pass-Through	Yes, from Source to Projector
IR Extension	Not Supported
RS-232 Extension	Not Supported
10/100Mbps Ethernet Pass-Through	Not Supported
Fallback to 100BaseTx, IEEE 802.3u	Not Supported
USB Over Centre Tap	Not Supported
Power Over Ethernet	Not Supported
Audio	Not Supported
LEDs - HD Base Status	Operation: Green, Left Link/Mode: Yellow, Right

5.1.3 Control interfaces

About

The following control interfaces are available on the projector:

- 1x RS-232 (for projector control)
- 1x LAN/Ethernet (for projector control)
- 3x USB-A ports

Overview

- RS-232
- LAN/Ethernet
- USB-A port

5.1.3.1 RS-232

Specifications

Parameter	Value
RS-232 connector	1 female DB9 connector (RS232-in) for projector control and debug

5.1.3.2 LAN/Ethernet

Specifications

Parameter	Value
Ethernet connector	1 RJ45 Connector for projector control (not content)
Protocols	DHCP, TCP/IP, UDP/P
Speed	10/100 Mbit/1000Mbit

5.1.3.3 USB-A port

Specifications

Parameter	Value
USB connector	Type A
Function	Firmware upgrade using USB sticks
Power	Power 5V, max 1,5A (out)
Standard	USB 2.0

5.2 Power up the projector



CAUTION: Sources should always be connected before the projector is powered up



CAUTION: Use only power cords following the unit, designed for your projector model. Do not use unauthorized replacements. Do not use power cords which are damaged.

Power up the projector using the keypad or remote

1. Connect the line cord to the projector.
2. Plug the 3-pronged cord into a grounded AC outlet.
The projector will begin warming up, and the backlight of the Standby /power button are flashing white.
3. When the backlight on the standby button are constant white, the projector are in standby mode, ready to be switched on.
4. Press the standby button on the keypad or the power button on the remote to bring the projector up to on mode.
The power button backlight on the keypad will flash blue while the projector is warming up.
5. When the power button backlight is steady blue, the projector is ready for use.

5.3 Power down the projector

Power down using the keypad or remote

1. Depress and hold the power button on the keypad or remote for four (4) seconds.
The Projector is now in cooling down phase.
2. When the projector panel is no longer illuminated, remove the mains power cord from the projector.

5.4 Power mode transitions

5.4.1 General

Transition Diagram

This diagram shows all modes available on the projector (unplug, ON, READY, ECO), and the actions necessary to change mode.

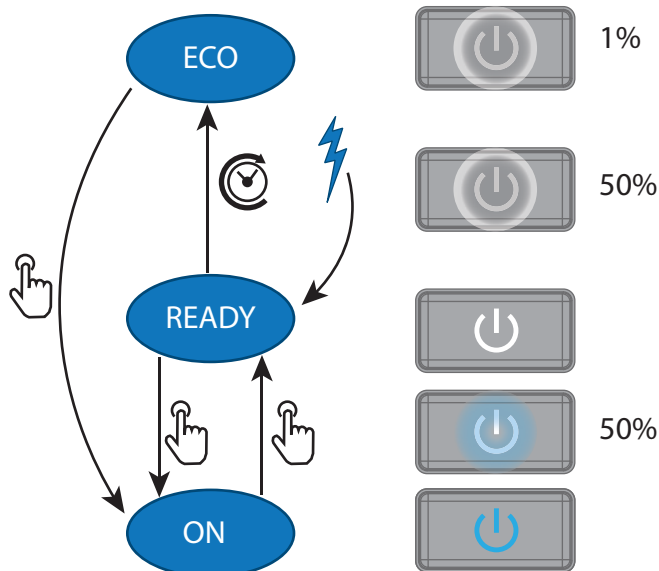





Image 5-1

-  Projector mains powered
-  Auto transition after x minutes if ECO mode enables
-  Press power On/Off button, remote On/Off button

5.4.2 Power on projector



If not already connected, connect the female side of the power cord with the power input socket of the projector. For more details see section dedicated to the power cord installation.



The background image of the startup screen and info screens can be changed with Projector Toolset with an installed F70 / F90 series plug-in.

Description

Plug the 3-prong plug of power cord into a grounded AC outlet. The projector will go to **READY** mode. During this stage the system boots and performs the internal check of the boards. The *Power On/Off button* will BLINKING WHITE until **READY** mode is achieved. Once in **READY** mode, the *Power On/Off button* will be lit WHITE.

5.4.3 Going from READY to ON

Description

Press the *Power On/Off button* on the projector, or the *Power On* button on the remote control. The projector will power **ON**. The *Power On/Off button* will BLINK BLUE during the transition from **READY** to **ON**. Once the projector is on, the *Power On/Off button* will be lit BLUE.

5.4.4 Going from ON to READY

Description

Press and hold the *Power on/off* button on the projector for 3 seconds, or press the *Power Off* button on the remote control. The projector will power down through a cool down phase. The *Power on/off* button will BLINK WHITE during the transition from **ON** to **READY**. Once the projector is in **READY**, the *Power on/off* button will be lit WHITE.

5.4.5 Going from READY to ECO standby

Description

If ECO Standby mode is enabled in the service menu (refer to the section "GUI - system settings/Standby ECO", in User Guide) the projector will automatically go to **ECO** standby mode after a time-out (default 15 minutes). All electronics (including fans, pumps,...) go down except for a very small wake up controller. The *Power on/off* button will FLASH WHITE every second.

5.4.6 Going from ECO to ON

Description

Press the *Power on/off* button on the projector, or the *Power On* button on the remote control. The projector goes from **ECO** directly to **ON**. The projector will go through the same booting phase as on power plugging, then do the transition from **READY** to **ON**. Of course startup-time will be longer then from **READY** to **ON**.

5.5 Power modes

General

The table below details the F70 power modes.

Mode	Description
Normal	Projector is booted up and the light source is on
Ready	Projector is booted up but the light source is off
ECO Standby	Light source is switched off and projector electronics are powered down

5.6 Customize projector settings

About

The projector display, behavior and user interface can be adjusted to meet individual requirements.

Options include: *Home/System Settings/Themes*

- Adjust the OSD menu color

5.7 User interface

Overview

- On Screen Display (OSD)

5.7.1 On Screen Display (OSD)

About

The projector on screen display (OSD) is the primary user interface (UI). From here, you can review and adjust all projector and display settings.

The OSD interface uses tabs to display the main menu. Topics are then further sorted and displayed by function: main (topic) — sub (function) — sub (function).

There are six main menu tabs: Source, Image, Installation, System settings, Test pattern and Status.

The OSD can be disabled by pressing the OSD on/off button.



In order to show the OSD, the OSD On/Off button must be disabled. (White backlight on the button). When the button have blue illumination, the OSD will not appear, and the display information are only visible on the LCD Display. Only Critical warnings will be displayed.

User access levels

The projector's software platform uses access levels to define what each user can do.

There are two user access levels: Standard User and Power User. In addition, there is a Service user access for certified Service personnel.

A standard user has access to all projector functionality and OSD menu items. A power user has, in addition to access to all projector functionality and OSD menu items, access to a number of advanced functions. Access to power user features is password-protected. Contact your projector supplier for more information.

Navigation

You can navigate the OSD using the local keypad or the remote control.

Press the MENU button to display the OSD. (The OSD must be enabled, press OSD button to enable.)

Use the arrow keys to navigate left, right, up and down.

Press the OK button to select a menu topic and get more options.

Use the numeral keys to enter values, or use the arrow keys to move the barscale up or down.

Press MENU again to exit the menu system.

Press the OSD button to deactivate the OSD on the screen. Only critical warnings will be displayed.



Some menu options are reserved for Power or Service Users; these will be grayed out and not available for selection when in standard user mode. To access these features, enter your Power or Service Code in the Service Menu or contact your support representative for more information.

Define values

Menu settings are displayed using checkboxes, barscale sliders, and drop-down lists.

To set a value:

- Press OK to select or deselect a checkbox (turn a function ON or OFF).
- Use the arrow keys to move the barscale slider up or down on the value line. For a barscale 0-9, each step will equal 10% of the total value.
- To enter the value as a direct number, press ENTER, input the digit(s), and then Press ENTER again to execute and exit cursor mode e.g. ENTER 79 ENTER.

Changes to values are implemented dynamically.

Menu memory

The OSD menu remembers the last selected sub-item as long as the projector is running. The menu memory is reset when restarting the projector from standby.

6. SOURCE MENU

About the Source menu

This menu is used to select, review and configure sources into the projector. Enables either via the source menu, or the shortcut key.

By navigate through the Home/Source menu, it will be visible also on the OSD.

By using the shortcut key, the menu occurs only on the LCD display.

Overview

- Connector selection
- Connector Settings
- Using Dual inputs

6.1 Connector selection

About

Home/Source

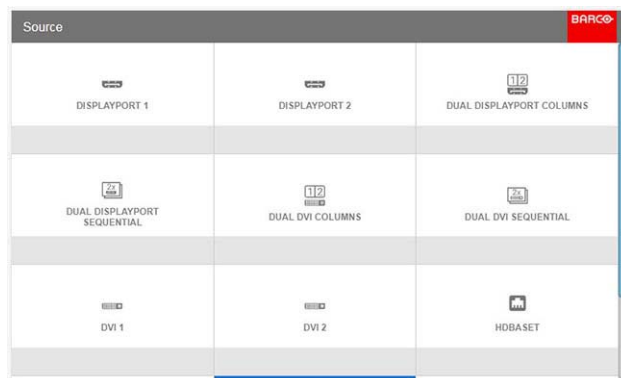


Image 6-1
Source Menu. (Scroll for more choices).

Click on the relevant input connector icon to swap or activate the source.

The icon for the active source is highlighted.

The list of displayed sources can be adjusted to include other connectors.

The default selection of connectors displayed is:

- Display Port 1
- Display Port 2
- Dual Displayport Columns
- Dual Displayport Sequential
- DVI 1
- DVI 2
- Dual DVI Columns
- Dual DVI Sequential
- HDBaseT
- HDMI
- SDI

6.2 Connector Settings

About Connector Settings

The Connector Settings menu allows you to change settings for each input connector of the projector.

By default all options for every connector are set to automatic, together with the native Extended Display Identification Data (EDID).

6. Source menu

When entering the menu for each input connector, you can change the following:

- Color Space
- Signal Range
- EDID

How to configure a connector

1. Press **Menu** to activate the menus and select *Source*.



L1 Displayport

Image 6-2
Select Source

2. Press **OK**.

The *Select Source* menu is displayed with the actual available sources filled out.

3. Scroll down to the bottom of the list of available sources and select *Connector Settings*.



Image 6-3
Source menu, Connector Settings

The available input connectors are displayed.

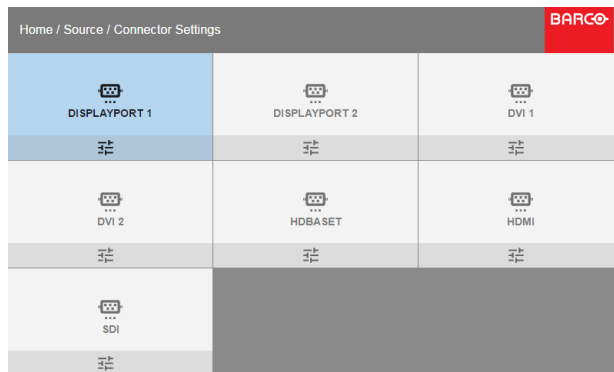


Image 6-4
Select source

4. Select the desired connector.

The **Connector Settings** menu for this connector will be displayed.

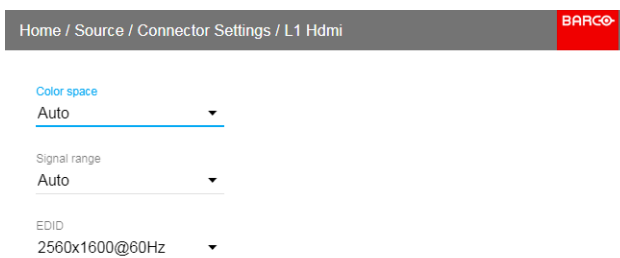


Image 6-5
Example of connector settings for an HDMI connector

5. You can change the following:

- To force a limit on the color space, select one of the available *color spaces*.
- To force a limit on the used signal range, select one of the available *signal ranges*.
- To set a video timing other than the one native for the connector, select one of the options under *EDID*.

Note: You cannot change the *EDID* for *SDI* connectors.

6.3 Using Dual inputs

Dual Input.

For extended flexibility to connect high resolution sources with a pixel clock over 330 MHz, the projector is supporting a dual input mode. In this mode, the left and the right half of the image can be connected to the DVI-1 and DVI-2 respectively, or DP1 and DP2.

To enable this mode, select the source that fits in the menu *Home/Source*

Dual input modes

There are four ways to connect dual input.

- Dual Displayport Columns
- Dual Displayport Sequential
- Dual DVI Columns
- Dual DVI Sequential



For Images to be displayed in this mode, the resolution must be the same on both channels

Signal source setup.

When using dual inputs, it is important that the signal sources are set up correctly, with the correct resolution. Please refer to the manual for the source itself (PC, Graphic driver card..) in order to obtain a correct setup. If the setup is wrong, no picture will be visible in dual mode.

The resolution for each dual column channel can be up to 1920x2400 pixels.

The resolution for each dual sequential channel can be up to 3840x2400 pixels. (4K)



Change the EDID for each channel to the correct value. See "Connector Settings", page 49 for EDID setup.

6. Source menu

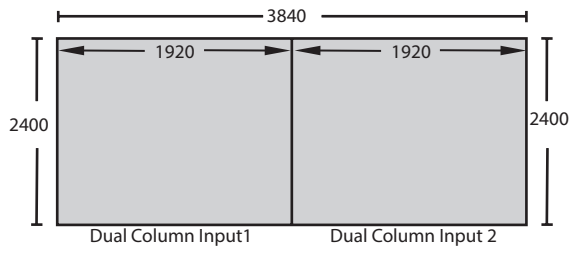


Image 6-6
Dual Column Setup

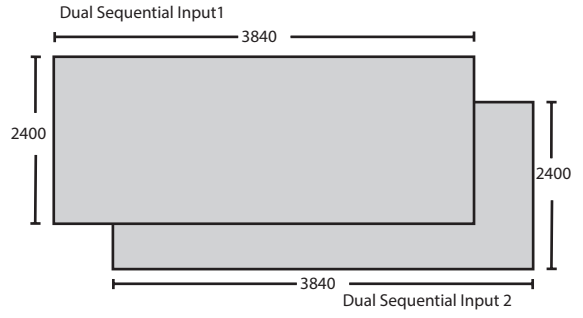


Image 6-7
Dual sequential setup.

7. IMAGE MENU

Overview

- Contrast
- Brightness
- Saturation
- Sharpness
- Gamma Adjustment
- Advanced image adjustments

7.1 Contrast

About

Image / Contrast

Used to adjust the contrast ratio of the displayed image by applying gain to the red, green and blue signals.

Available range: 0.00 to 2.00

Default value: 1.00

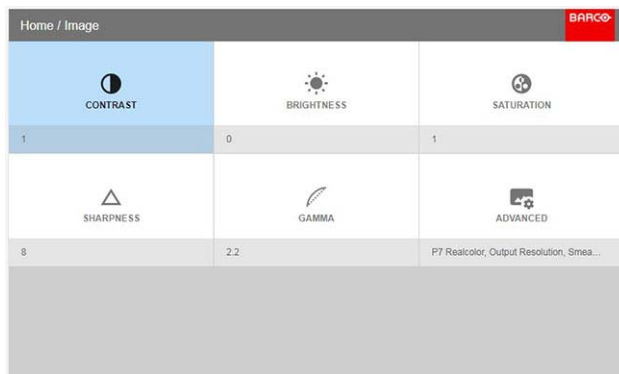


Image 7-1

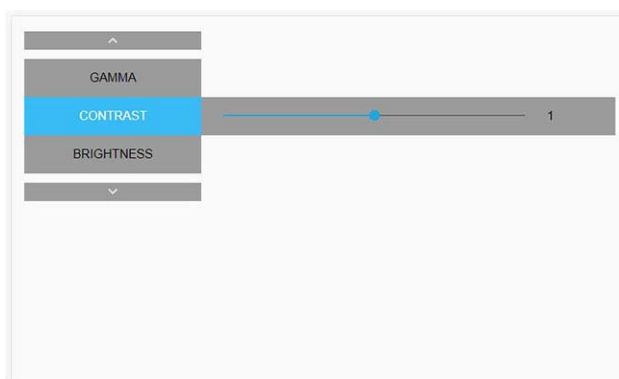


Image 7-2



When inside this menu, it is possible to change to the other image adjustments (Brightness, Saturation, Sharpness and Gamma) by using the up and down arrows on the remote control.

7.2 Brightness

About

Image / Brightness

The brightness function is used to adjust the black level in the input picture. It adds or subtracts an offset, or bias in to the red, green and blue signals.

Available range: -1.00 to 1.00

Default value: 0.00



Image 7-3

7.3 Saturation

About

Image / Saturation

Saturation levels impact on the white levels and the intensity of the color display; the higher the value, the more vivid the color display will be.

Available range: -1.00 to 2.00

Default value: 1.00



Image 7-4

7.4 Sharpness

About

The sharpness adjustment amplifies the high frequency components in the picture, meaning that by increase the sharpness, the picture will be perceived as sharper, and if decreased, the picture will be perceived as more blurry.

Increasing the sharpness will have the best effect in high contrast images, eg a table with text and borders.

In a natural picture, high sharpness can be perceived as noise, as all details in the picture will be amplified.

Available range: -2 to 8.

Default value: 0

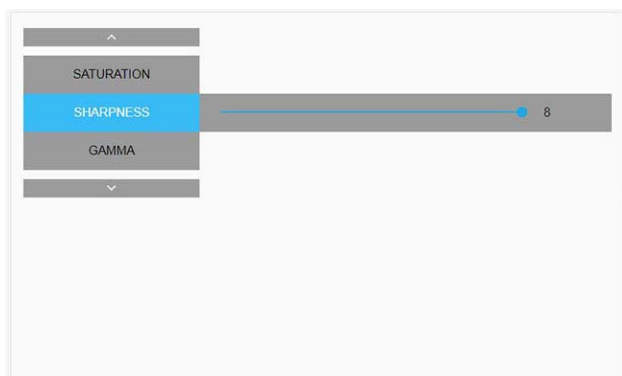


Image 7-5

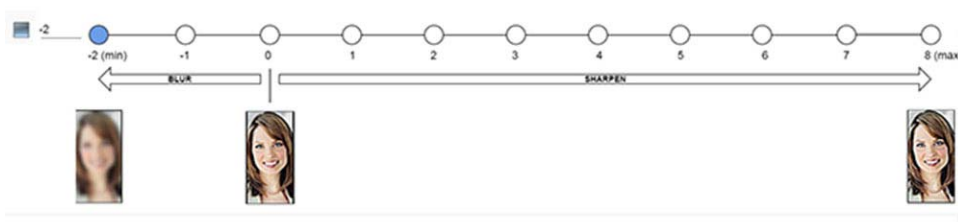


Image 7-6
Effect of sharpness adjust

7.5 Gamma Adjustment

About Gamma correction.

Gamma compensation, or gamma correction, is a way of adjusting the signal input to light output characteristics of a display or projector in order to suit the eye's sensitivity to different light levels and to compensate for non-linearities in displays. Without gamma compensation, images may look too dark or too bright, lack detail or depth. By adjusting the amount of gamma compensation changes, you change only the perceived brightness levels.

Different types of displays have different gamma factors that need to be corrected in order to look and be perceived the same. For example, an MS Windows generated image displayed on a CRT monitor will require a gamma correction value of about 2.5 to avoid color bleaching and burning.

The gamma curve correction formula is based on $\text{output level} \propto \text{input level}^{\wedge} \text{gamma}$.

1. Enter the menu *Home/Image*, and select Gamma.

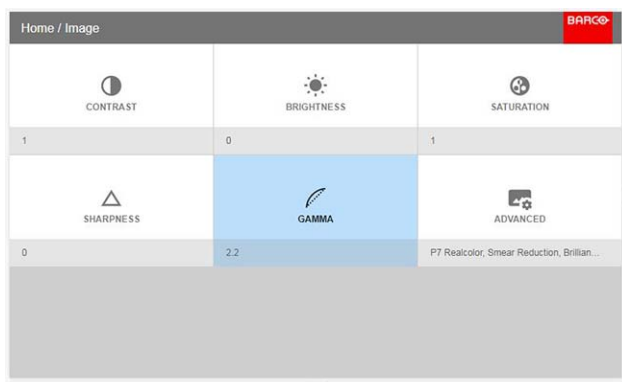


Image 7-7

2. Use the arrow keys to adjust the Gamma value, until the colors seems to be perceived correctly. The default value is 2,2.

7. Image menu



Image 7-8

7.6 Advanced image adjustments

7.6.1 P7 Realcolor

Purpose

When blending images from multiple projectors, the perceived color coordinates of each projector can be altered to a desired common level, so that the projected colors are identical over all projectors used.

Alternatively, if you are unfamiliar with how adjusting the Colors to a specific setting, there are also a certain number of presets available, which forces the color output to specific color standards.

The selection of the presets will vary, depending on the projector type, and the color wheel installed.

How to choose one of the P7 presets

1. In the main menu, select *Image* → *Advanced* → *P7 Realcolor*.

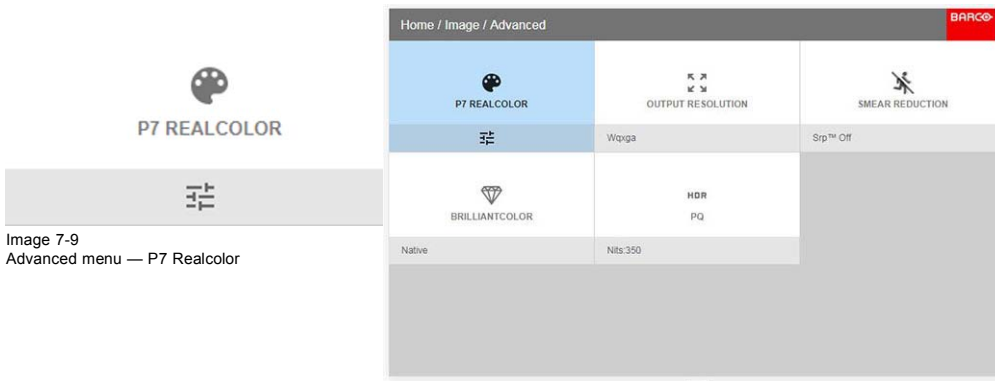


Image 7-9
Advanced menu — P7 Realcolor

Image 7-10

The P7 menu is displayed.

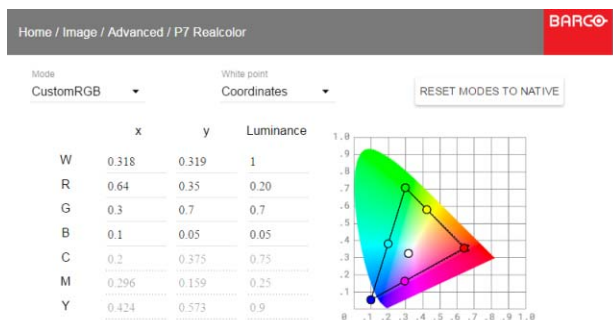


Image 7-11
P7 Realcolor menu

2. Choose one of the pre-defined presets:

- **Native:** Projector native color settings. Default setting
- **EBU:** European color standard for broadcasting
- **SMPTE-C:** American color standard for broadcasting.
- **Rec. 709:** Color standard for high-definition televisions (HDTV).

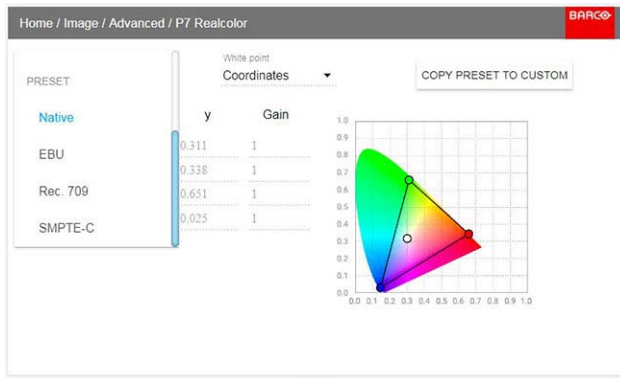


Image 7-12


Note: When choosing one of the presets, All other options in the P7 menu are disabled.

How to set custom P7 values

1. In the main menu, select *Image* → *Advanced* → *P7 Realcolor*.

Image 7-13
Advanced menu — P7 Realcolor

The P7 menu is displayed.

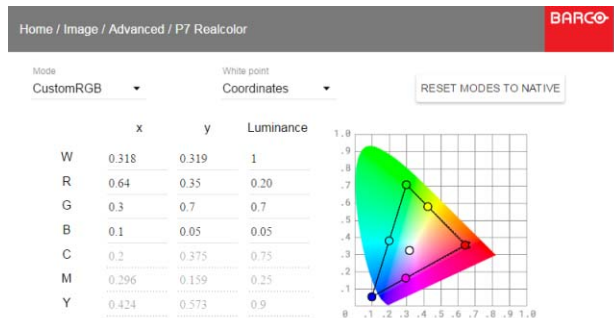Image 7-14
P7 Realcolor menu

2. Select the desired *Mode*. Choose one of the following *custom* options:
 - **Custom RGB:** 3–point color configuration.
In RGB mode, the C, M and Y coordinates will be calculated automatically based on the R, G and B coordinates.
 - **Custom RGBCMY:** 6–point color configuration (both RGB and CMY).
In RGBCMY mode, each color can be given a specific coordinate within the measured color triangle.
 - **Custom WHITE:** Configure only the White temperature.
3. Define the coordinates for each available color.
Click on a coordinate value and select the current value. Enter the desired value with the numeric keys.
Note: You can only pick coordinates within the measured color triangle.
4. For **Custom White**, click on White point and choose one of the following:
 - **Coordinates:** Configure the white point via specific coordinates.
The white point is specified using an x, y coordinate in the CIE 1931 Chart.
 - **Temperature:** Configure the white point via a color temperature slider.
The white point is specified on a Kelvin scale between 3200K and 13000K tracking along the black body curve.



You can reset all coordinates to the default values (to native) by selecting **Reset modes to native**. Press **OK** button to reset.

7.6.2 Output Resolution 4K

About

With this function, the projector output resolution can be changed between 4K UHD resolution and WQXGA resolution.

Refer to "Projector source and control connections", page 41 regarding use of input sources in 4K mode.

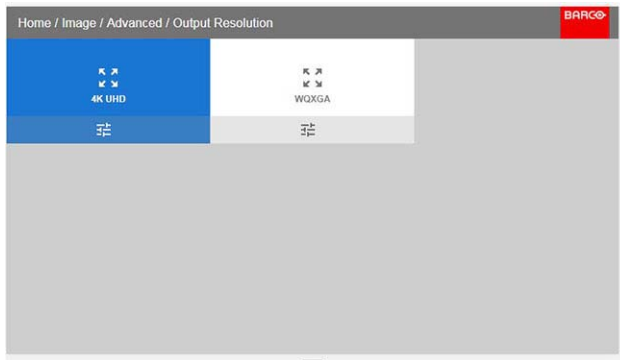


Image 7-15
Output resolution menu

7.6.3 Smear Reduction

About

Smear is a phenomenon that typically occur when objects in the picture moves in high speed over the screen. It appears like there is a "tail" behind the object, or a lag in the moving parts of the picture.

In order to avoid this, there has been developed a Smear Reduction Process (SRP™), that reduces this perceived rendering. Select the option that give the best result.



Image 7-16
SRP Menu for WQXGA

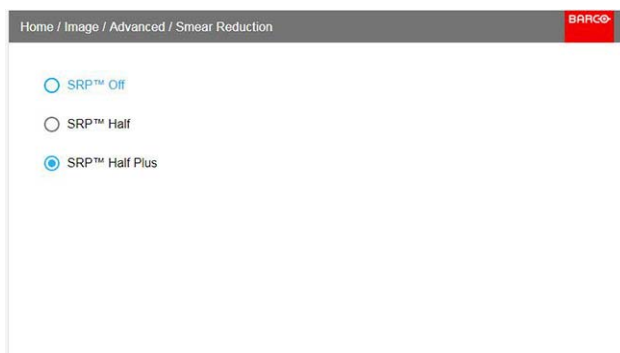


Image 7-17
SRP Menu for 4K and WQXGA@120Hz.

This menu is only valid for projectors with COLOR colorwheel. For BRIGHT colorwheel, there are no menu choices in the SRP menu, only SRP-Off.

(See tables below).

7.6.4 Brilliantcolor

About

Changes the color rendering, by adding secondary colors. This has the effect of increasing the color intensity, and by that also the perceived light intensity.

Enter the menu, and select the option that give the best result

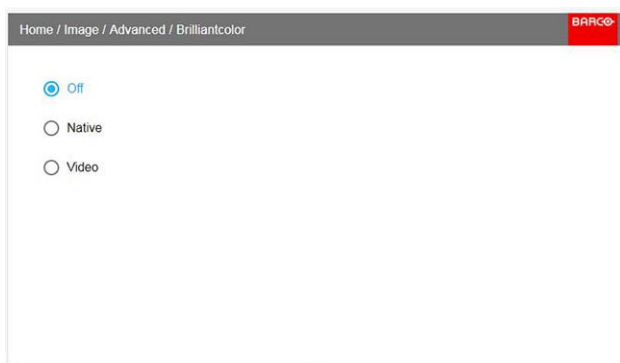


Image 7-18

This menu is only valid for COLOR colorwheel in WQXGA@60Hz mode. For BRIGHT colorwheel, there are only two choices in the menu; Off and Native.

(See table below)

Menu choices of SRP and Brilliant Color matrix with COLOR colorwheel installed.

Valid when COLOR colorwheel is installed.

Mode	SRP	Brilliant Color
WQXGA @60Hz	Off	Off
		Native
		Video
	Half	Off
		Native
	Full	Off
Native		

7. Image menu

Mode	SRP	Brilliant Color
WQXGA@120Hz / 4K mode	Off	Off
		Native
		Video
	Half	Graphics
		Off
		Native
	Half +	Off
		Native
		Video

Menu choices of SRP and Brilliant Color matrix with BRIGHT colorwheel installed.

Mode	SRP	Brilliant Color
WQXGA @60Hz	Off	Off
		Native
WQXGA@120Hz / 4K mode	Off	Off
		Native

7.6.5 HDR – Perceptual Quantizer (PQ)

About PQ

Perceptual Quantizer (PQ) is an electro-optical transfer function (EOTF) that allows for the display of High Dynamic Range (HDR) content with a luminance level of up to 10 000 cd/m² and can be used with the Rec. 2020 color space.

If your provided HDR content has been mastered with PQ (e.g. Dolby Vision or HDR10), you can adapt the luminance on screen to adapt to the provided content.



For optimal display of HDR content, this is just one value that will influence the projected image. When entering the desired screen luminance, take into account the distance of the projector to the screen and the quality of the screen used.

How to set the PQ?

1. In the main menu, select *Image* → *Advanced* → *PQ*.



Image 7-19

The PQ menu is displayed

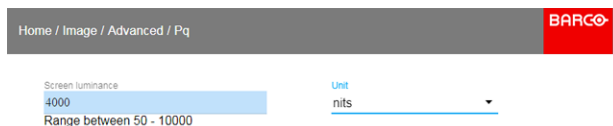


Image 7-20

2. Select the desired Unit (nits or foot-lambert).
3. Enter the Screen luminance (either in nits or foot-lambert).

8. INSTALLATION MENU

Overview

- IR / Night vision functionality
- Lens
- Orientation
- Warping
- Blending
- Illumination
- Display Setup

8.1 IR / Night vision functionality

About

IR / Night Vision functionality is only available for the FS variant of the projector..

In combination with Night Vision Goggles (NVG), this will give a realistic rendering of the environment. This will visualize in a realistic way, night time, dusk and dawn, and limited visibility scenarios.

The IR light source has a wavelength of 740nm

How to enable IR/Night Vision.

Enter the menu *Home / Installation / Display setup* and select NightVision in the scroll down menu.

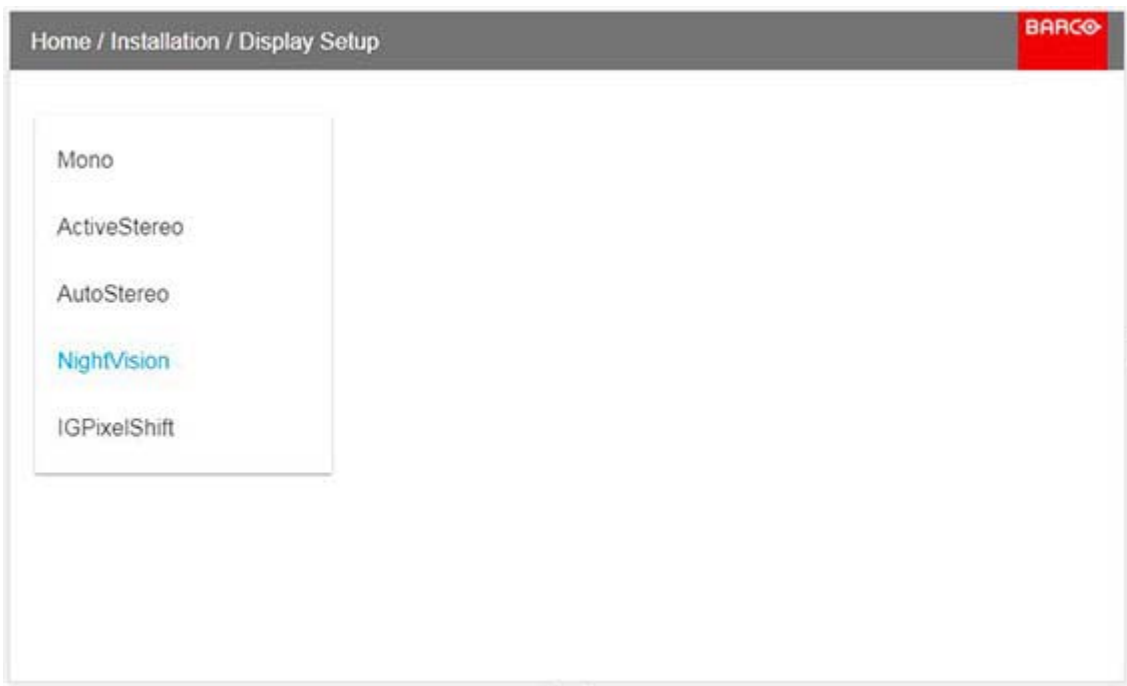


Image 8-1

To set up the IR illumination, enter the menu *Home/Installation/Illumination/Power*. This menu shows two sliders; one for the Laser, and one for the IR LED. The sliders are scaled from zero – 100% power.

8. Installation menu

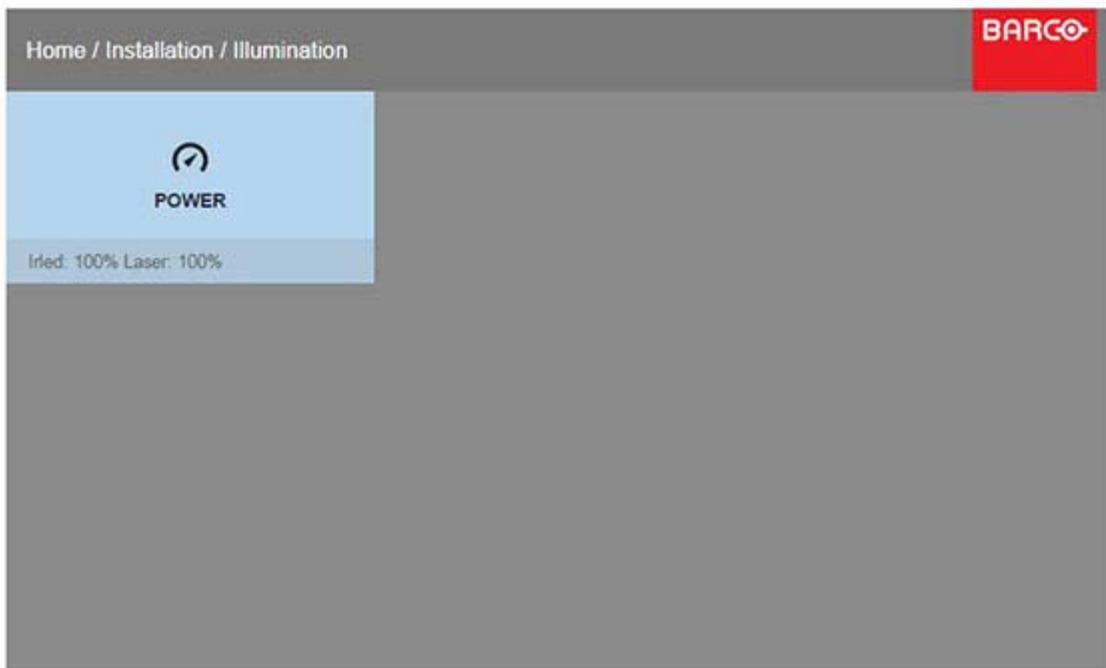


Image 8-2



Image 8-3

Select the Laser slider, and move the slider to the left by the arrow keys to nearly 0% to reduce the laser intensity. (Daylight visibility). By this, the IR LED will be dominant, and the image on the screen will be visible with the Night Vision Goggles. Put on the goggles, and adjust the IRLED slider to obtain an optimal night vision rendering.

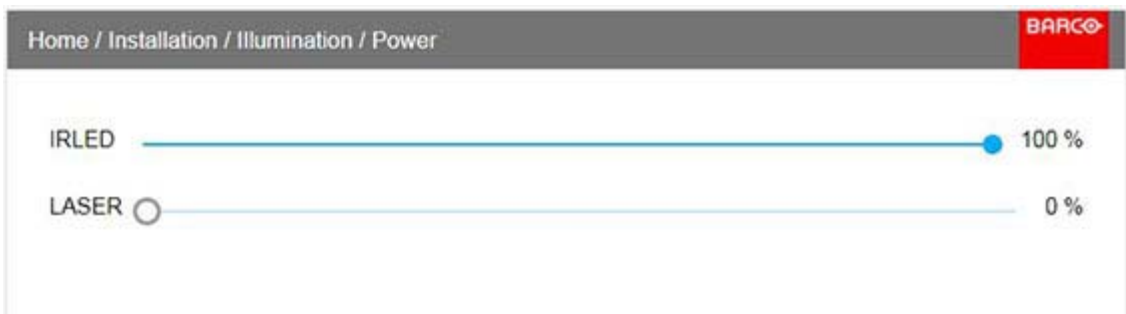


Image 8-4

By mixing the intensity (power) of both the laser and the IR LED, it is also possible to simulate other visibility scenarios, such as evening / early night vision.



Image 8-5

8.2 Lens

About

Installation / Lens

Manage lens functions: focus, zoom, shift, and iris.

All changes occur dynamically.

Focus and zoom

Installation / Lens / Zoom

Use the navigational arrows, up and down, to adjust zoom.

Use the navigational arrows, left and right, to adjust focus.

Shift

Installation / Lens / Shift

Use the left, right, up and down navigational arrows to adjust the lens shift in four directions.

8.3 Orientation

About

Installation / Orientation

Rotate the image on the imaging device depending on the physical installation of the unit.

There are four installation options, as illustrated below:

- front/table
- front/ceiling
- rear/table
- rear/ceiling

Default: Table Front.

8. Installation menu

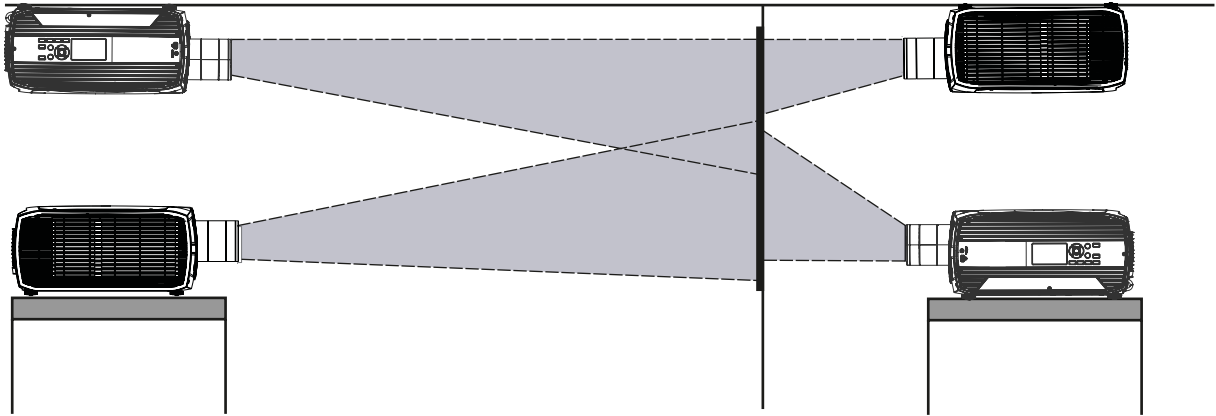


Image 8-6

How to set the correct orientation

Select Orientation from the menu

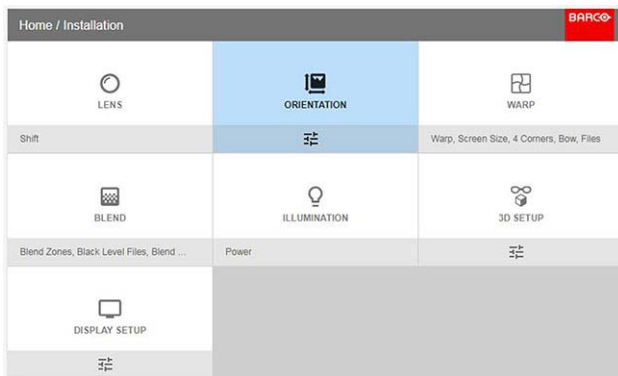


Image 8-7
Orientation menu path.

The orientation menu is displayed

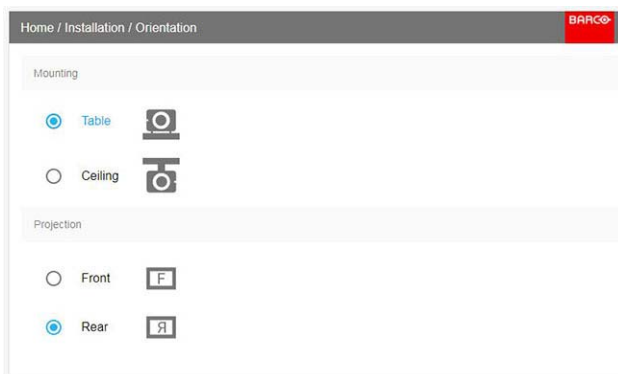


Image 8-8
Orientation Menu

Use the arrow keys to select the Mounting and Projection positions, and press OK button to activate.

8.4 Warping

8.4.1 About Warping

About

Image warping is the process of digitally manipulating an image to compensate for the distortion of the screen, typically by non perpendicular alignment of the projector versus the screen. The image will then typically occur as shown in image 8-9.

While an image can be transformed in various ways, pure warping doesn't affect the colors.

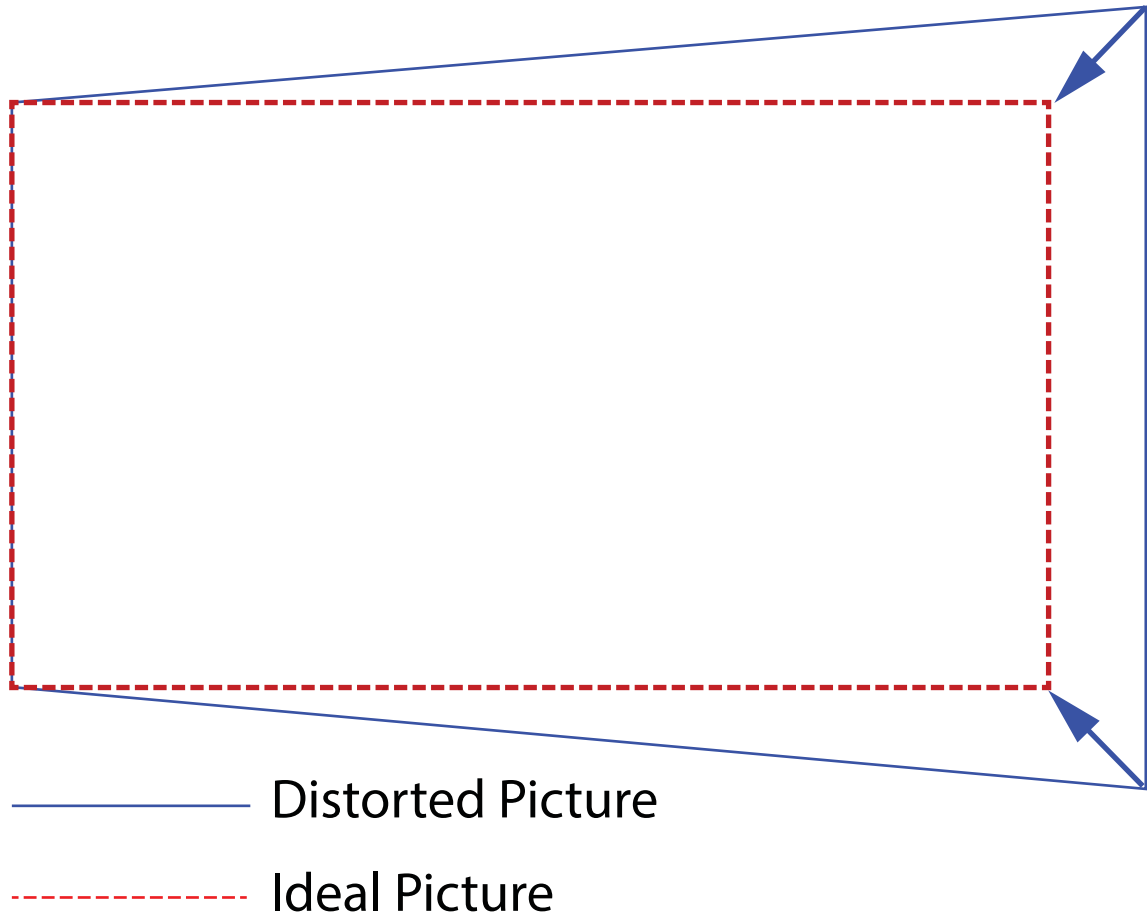


Image 8-9

8.4.2 Warping – On/Off

About warping on/off

By toggling between on and off the warping functionality can be enabled or disabled.

How to toggle

1. In the main menu, select *Installation* → *Warp*.



Warp, Screen Size, 4 Corners, Bow, Files

Image 8-10
Installation menu, Warp

The Warp menu is displayed.

8. Installation menu

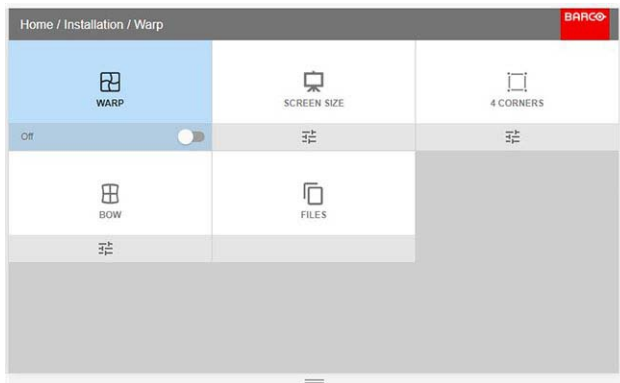


Image 8-11

2. In the Warp menu, click *Warp* to toggle between *On* and *Off*.



Image 8-12



Image 8-13

8.4.3 Warping – Screen Size

About (Warp) Screen Size adjustment

If the used screen aspect ratio is different than the projector aspect ratio, e.g. source is 16:9 and projector is 16:10, then black bars will be projected. In the example case a black bar on top and bottom of the image will be projected. The warp area contains not only the image information but also the black bars. If we want to position e.g. the active left top corner exactly on the screen using 4 corner warp, then it is very hard to do that as we are moving the black left top corner and we do not have control over the exact position of image left top corner. By moving the outline of the warp screen size to the active image information, the corner points of the warp area are now exactly on the corner points of the active image information and makes warping much easier.

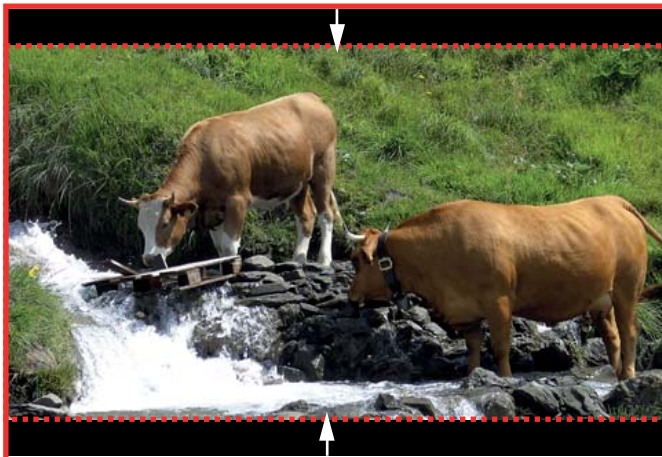


Image 8-14
Warp outline example

How to adjust the image?

1. In the main menu, select *Installation* → *Warp* → *Screen Size*.

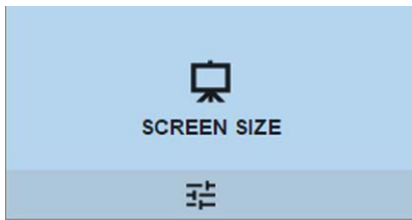


Image 8-15
Warp Menu, Screen Size

The Screen Size menu is displayed.

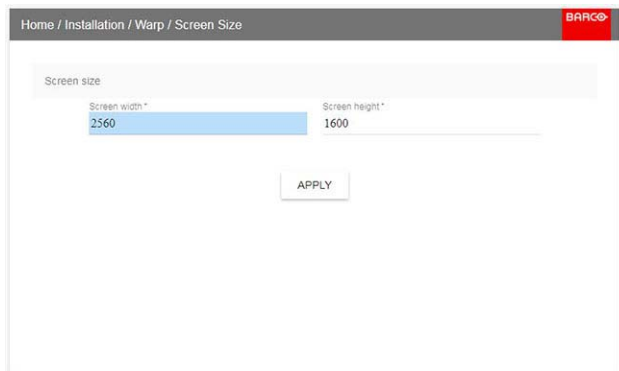


Image 8-16

2. Select either *Screen width* or *Screen height*.
3. Set the screen size width and height to match the measurement of the screen.

Note: *It is only the ratio between the width and height that is used, so the values may be entered as the screen aspect ratio or actual measurement in cm, inches or any other unit.*

Tip: *A red border will be projected along with the current image. The border is a visual tool, showing the result of the adjusted outline.*

Tip: *The value can also be entered by the numeric keys on the remote control. Press * to delete existing numbers, and enter the new value by the numeric keys.*
4. Click **Apply**.

8.4.4 Warp – 4 Corners adjustment

About 4 Corners adjustment

Basically, this type of warping adjusts each of the four image corners in the X and Y direction, if you have a typical trapezoid picture of the screen as shown below.

To have a successful Warp correction, the size of the screen must be entered. See "Warping – Screen Size", page 68

Some examples of pictures when the projector axis is not perpendicular to the screen.:



Image 8-17

How to adjust the image.

1. From the warp menu, select the 4 Corners Menu. A yellow frame will be visible.

8. Installation menu

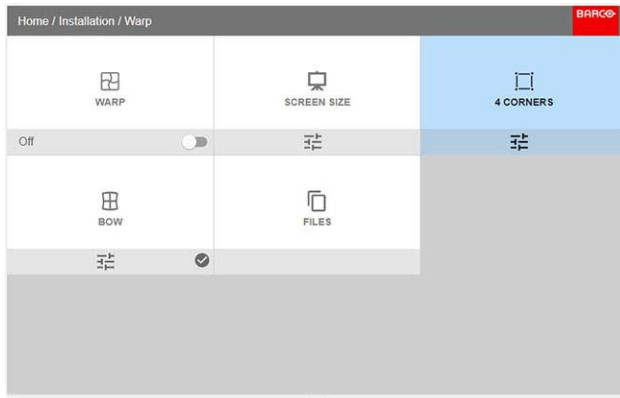


Image 8-18

2. To enable the 4 Corners Warping, Set the Warp slider to the right position. (Select and enter).
3. Select the corner that must be warped. If need for warping several corners, select and adjust the corners one by one. Adjust the value by the arrow keys. The value represent the movement of the X and Y coordinates for each corner. When the warping is complete, exit the menu.

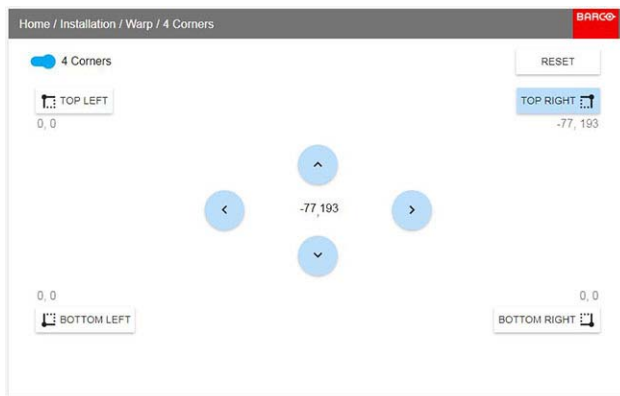


Image 8-19

4. If the picture still has a trapezoid shape, warp is not enabled. Select the *Installation / Warp* menu, and press enter. The slider moves to the right, and the warp status changes to "On".

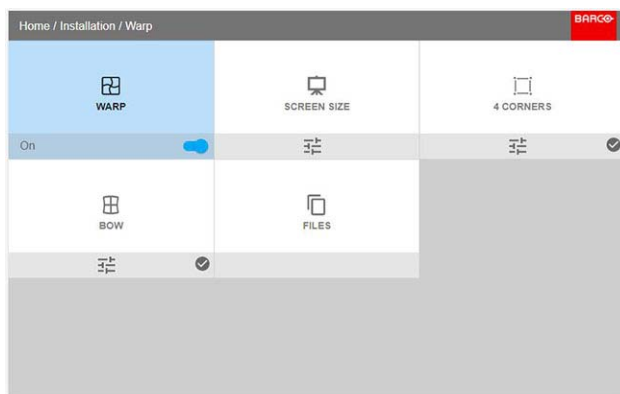


Image 8-20

8.4.5 Warping – Bow

About bow adjustment

A bow distortion can be adjusted so that a normal image is displayed. Positive adjustments angles introduce more outside bow distortion. Negative adjustments introduce more inside bow distortion.

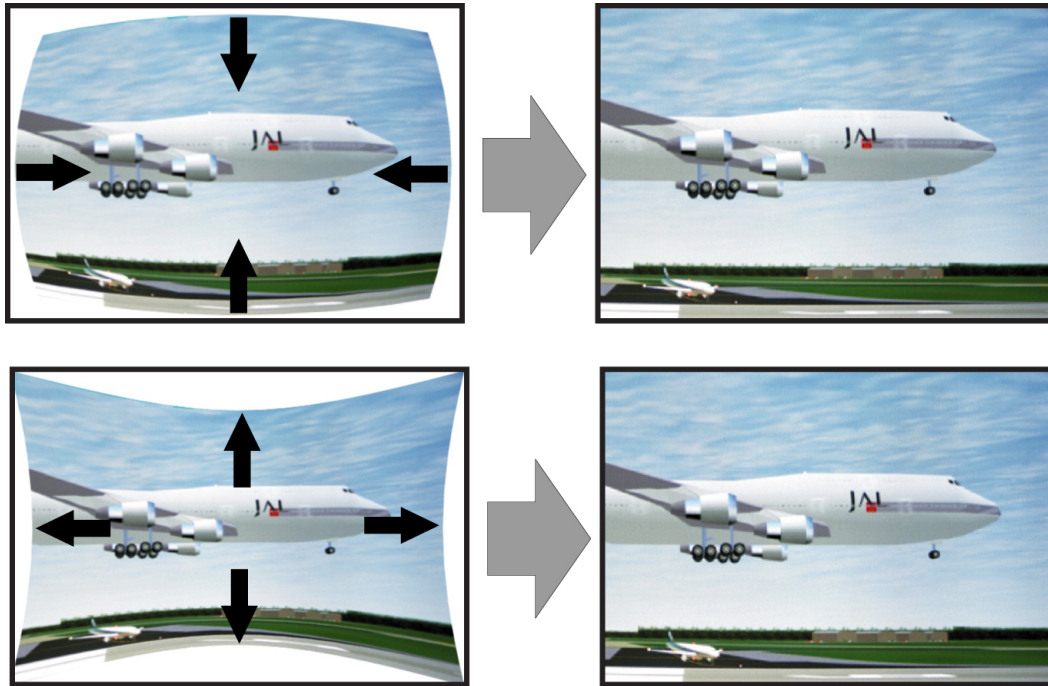


Image 8-21
Bow distortion

Symmetric bow correction

1. In the main menu, select *Installation* → *Warp*.

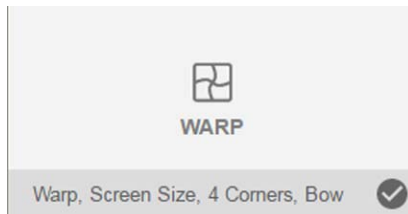


Image 8-22
Installation menu, Warp

2. In the Warp menu, select *Bow*.



Image 8-23
Warp menu, Bow

A check symbol at the bottom right corner indicates that the bow function is activated.

3. To enable Bow correction, make sure the *Bow* slider is set to *On*.
The slider is enabled when set to the right and when it is highlighted blue.

8. Installation menu

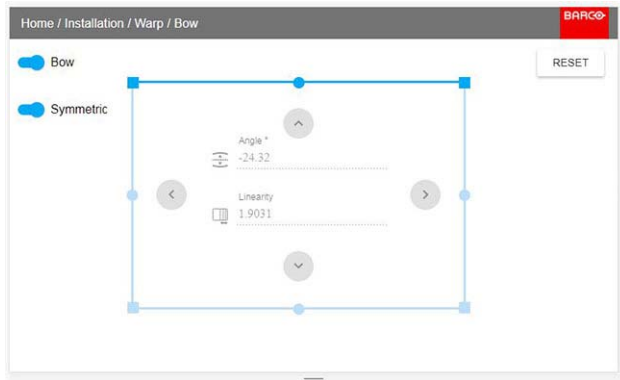


Image 8-24
Symmetric Bow correction.

- To enable a symmetric adjustment, make sure the *Symmetric* slider is set to *On*.
The slider is enabled when set to the right and when it is colored blue.
- Select the side of the picture to be bow corrected, confirm by pressing enter, and use the arrow keys to adjust the angle and linearity (length) of the vectors.
The angle is adjusted by the up and down arrows on the remote control, and the linearity is adjusted by the left and right arrows.
The correction will occur symmetrically on each side of the center of the highlighted side.
When corrected with the values in the image above, the picture will occur as shown below.
Repeat this step for all sides of the picture that has to be corrected.

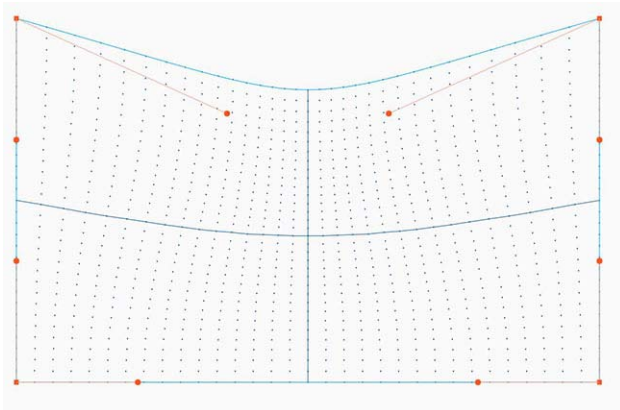


Image 8-25
Symmetric bow correction

Non symmetric bow correction

- Enter the Bow menu, and disable the symmetric slider.
- There are now two vectors on each side of the picture that can be adjusted individually. Select each of them, and adjust angle and linearity (length) individually to obtain the correct correction.
The angle is adjusted by the up and down arrows on the remote control, and the linearity is adjusted by the left and right arrows

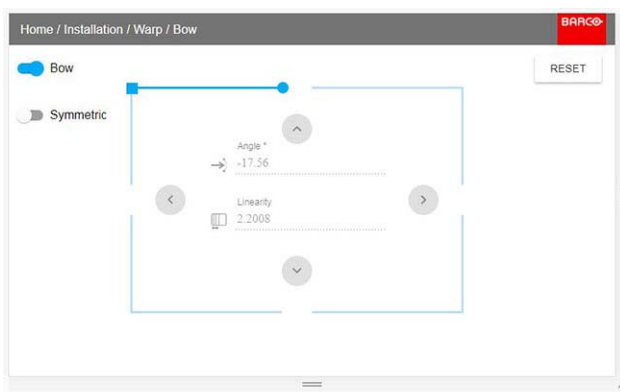


Image 8-26
Left vector of the upper side of the picture.

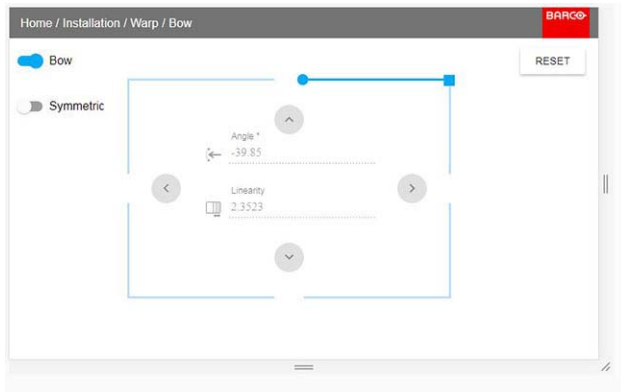


Image 8-27
Right vector of the upper side of the picture.

- When corrected with values in the illustrations above, the picture will occur as shown below. Observe that the upper side of the picture now has an asymmetric correction.

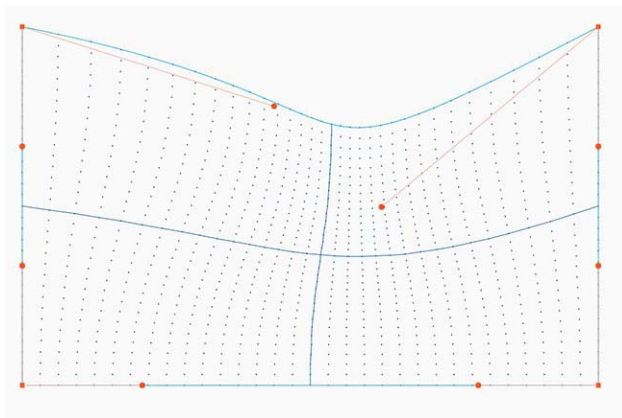


Image 8-28
Asymmetric bow correction

- Repeat the step for each side of the picture that must be corrected.

Definition of angle and linearity (length) in the bow warp procedure

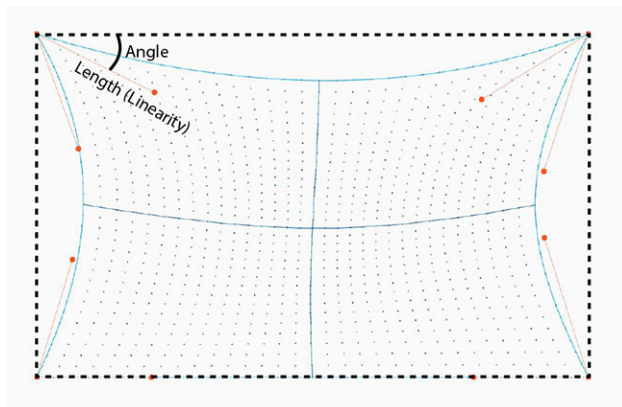


Image 8-29



To reset the bow adjustments, select *Reset* and press the OK button.

8.4.6 Warping – Warp files

About custom Warp Files

Next to setting your specific warp configuration in the GUI, you can also upload or download a custom warp grid in XML format to/from the projector. This is a time-saving option when multiple projectors need an identical Warp configuration.

To upload or download warp files you can use Projector Toolset or Prospector tool to upload/download the warp grid in the format of an XML file. Alternatively, you can contact the “file endpoint” directly via the curl program or some other tool that supports http upload.

For more information on uploading/downloading Warp files using the Projector Toolset, refer to the Projector Toolset user manual.

For more information on uploading/downloading Warp files using curl or other tools that supports HTTP upload, refer to the Pulse API Reference Guide.

How to activate an uploaded Warp grid?

1. In the main menu, select *Installation* → *Warp*.

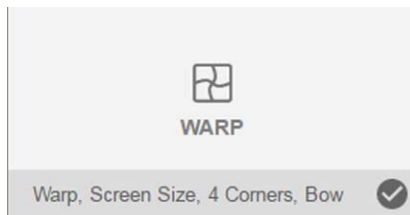


Image 8-30
Installation menu, Warp

2. In the Warp menu, select *Files*.

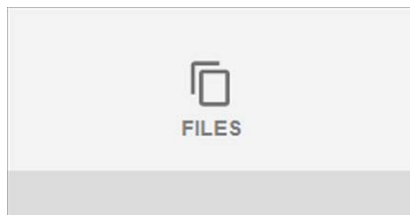


Image 8-31
Warp menu, Files

The Warp Files menu is displayed.

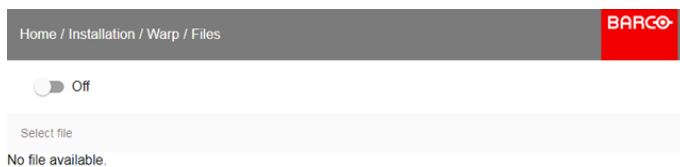


Image 8-32

3. If any custom Warp files are available, select the desired warp file.



Image 8-33

4. Click on the on/off button on top to activate the selected warp file.



Image 8-34

8.5 Blending

8.5.1 Basic Blend

About

When two projectors are used together to make one picture on the screen, the blend function must be activated. This blend function ensures a seamless transition of the images between the two projectors.

The principle is that the light intensity in the blend zone from each projector will be adjusted individually, so that the rendering on the screen are perceived as from one projector.

The blend function can be enabled for both pictures over/under, and pictures side by side.

The blend will not be affected by the projector's warp.

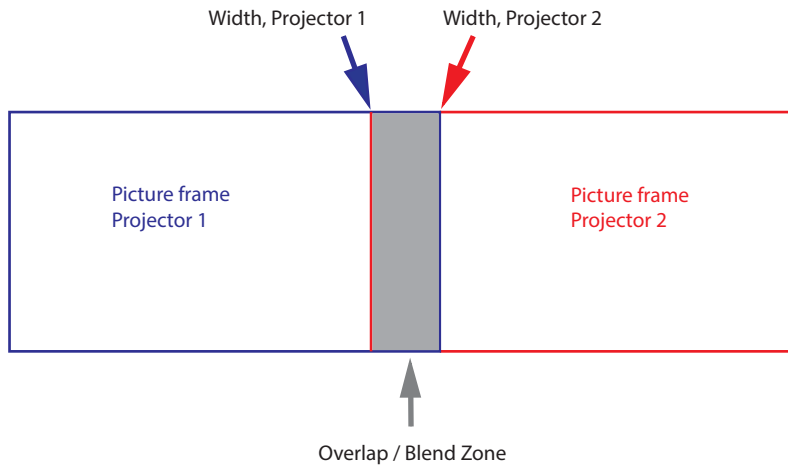


Image 8-35

The Mask adjustments.

The offset adjustments are used to cut the image on each side. Normally used to hide parts of the picture that shall not be shown on the screen. An example can be: If the source is a pc, you may want to hide the menu bar at the bottom of the screen.

8.5.2 Set up the system

How to set up the system

In this chapter, the setup procedure for the projectors is explained, but a setup procedure must also be performed for the picture source.



In order to obtain a satisfying result for the Blend function, the overlap / Blend zone are recommended to be at least 10% of the picture width.

The basic principle is that the overlap setup in the source shall correspond with the blend width setup for the projector. That means that if the overlap zone for the source is set to 500 pixels, the width of the blend zone for the projector also must be set to 500 pixels.

First step is to align the image from the projectors as accurate as possible in a mechanical way, meaning without any optical corrections. At the same time, establish an overlap in the pictures between the two screens.

Then adjust the remaining irregularities by using the shift and warp features in the projectors to obtain the last fine tuning of the alignment.

Setup the source to a blend which corresponds with the preset overlap on the screen. There are different ways to do this, depending on the source. Refer to the source unit's manual for this issue.

Adjust the Blend for the projectors as described below.

8.5.3 Adjustment Procedure

Blend adjustment procedure

Entering the Blend Adjustment from the Home menu, either by the remote control, or the keypad on the projector. *Home/Installation/Blend And Mask/Blend Mask* The menu shown below appears on the OSD.

The "Enable" button enables/disables the blend function. The "Show Lines" enables alignment lines on the screen, in order to visualize the overlap/blend zone.

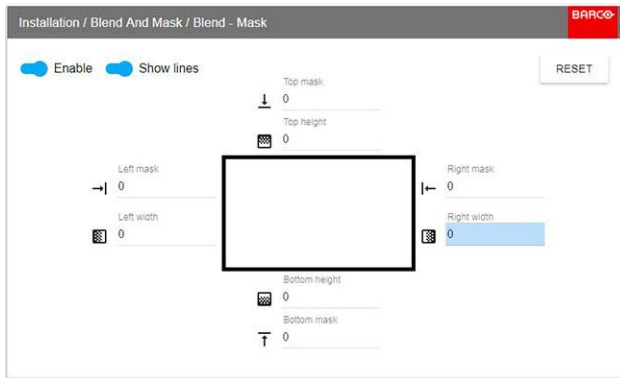


Image 8-36
Blend adjust menu

Use the up/down/left/right arrow key on the remote control or key pad to navigate in the menu.

Blend adjustment procedure. Side by side configuration.

1. By the arrow keys, place the display cursor on respectively the "Enable" zone and the "Show Lines" zone and activate them by pressing enter.
2. Using the arrow keys, place the cursor on the "Right Width" zone, press enter
3. Adjust the width value by using the arrow keys up (or down), one step at a time. By pressing the key arrow constantly, the blend value will increase rapidly. The numeric value of the width is shown on the screen next to the alignment line. (The number entered represent the blend width expressed in number of pixels). Confirm position by pressing enter.
4. For the right picture, repeat the procedure, but adjust the Left Width instead of the right width. The numeric value for the left width shall ideally be the same as for the right width for the left picture in the steps above.
5. Exit the menu by using the exit button on the remote control.

Adjustment procedure in over / under configuration.

For Blend adjustments in over / under configuration, the procedure is the same as for side by side, but use the Top and Bottom height instead, and perform a similar procedure.

Use the numeric keys instead of the arrow key to set the values.

Instead of adjusting the lines by the arrow keys, the value can also be typed directly using the numeric keys on the remote control.

To remove or undo the entered numbers, use the * key on the remote control.

8.5.4 Black Level Adjustment

About adjusting the black level

The Purpose of the black level adjustment is to adjust the black levels in the non overlapped areas with the black level in the overlapped areas (Blend Zone).

This is a necessary function, due to the fact that the black level will be brighter in the blend zones, since multiple projectors will add light in these zones.

The width of the black level area shall ideally be slightly larger than the width of the blend zone in order to also compensate for the "sea of mirrors" phenomenon.

The figure below shows how this occurs in a side by side configuration without any correction of the black level.

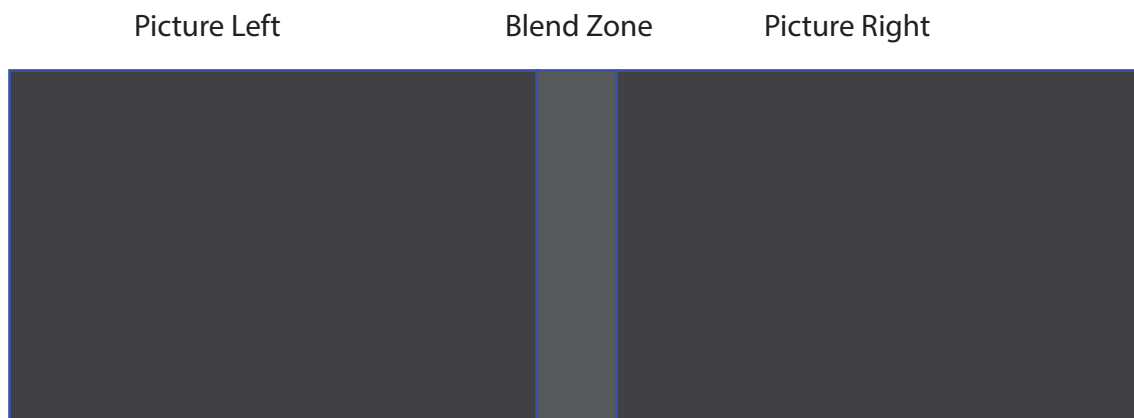


Image 8-37

How to adjust the level manually

1. In the main menu, select the Black level menu

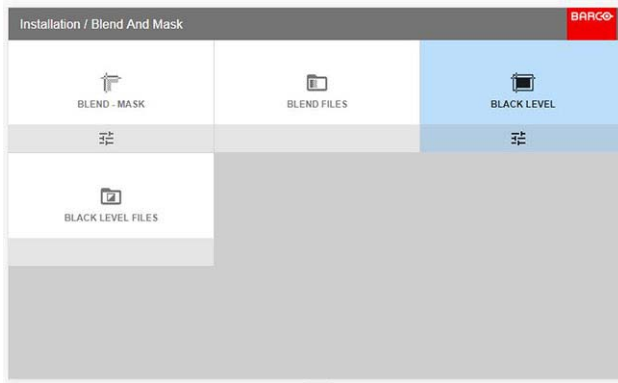


Image 8-38

2. Enable the "Black level" and "Show lines" buttons.

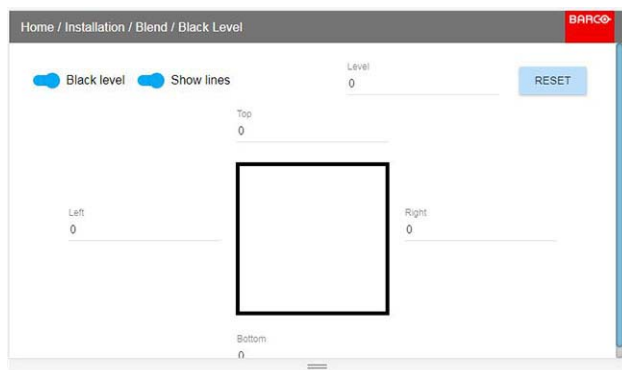


Image 8-39

3. Move the cursor to the side where the overlapped area occurs. (Left/right/top/bottom.) For the left projector, this will be the right side in the menu. Press enter, and adjust the value with the arrow keys. As mentioned earlier, the value shall be slightly larger than the blend zone offset. A line that indicates the zone will also be visible when "Show lines" is enabled. When the black level zone is optimal, press enter. The value can also be entered by the numeric keys in the remote control.
4. Move the cursor to "Level", press enter and adjust this level until the black level equals the level in the blend zone. This value can also be entered by the numeric keys on the remote control.
5. Repeat the same procedure for the other projector,
6. Disable the "Show lines" when the Black level adjustment is completed.

8.5.5 Black Level Files

About custom Black Level Files

Next to setting your specific Black Level Adjustment in the GUI, you can also upload or download a custom Black Level adjustment file in png, jpeg or tiff format to/from the projector.

To upload or download Black Level masks you can use the Prospector tool. Alternatively, you can contact the "file endpoint" directly via the curl program or some other tool that supports http upload.

For more information on uploading/downloading Black Level files using the Prospector, refer to the Prospector user manual.

For more information on uploading/downloading Black Level files using curl or other tools that supports HTTP upload, refer to the Pulse API Reference Guide.

How to activate an uploaded Black Level adjustment file?

1. In the main menu, select *Installation* → *Blend and Mask* → *Black Level Files*.

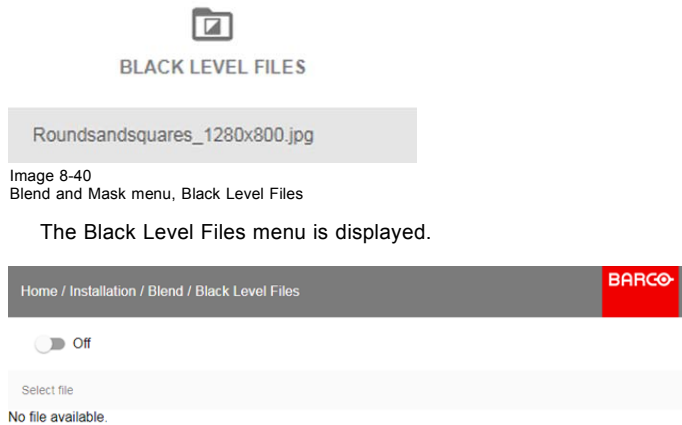


Image 8-41

2. If any custom Black Level adjustment files are available, select the desired file.

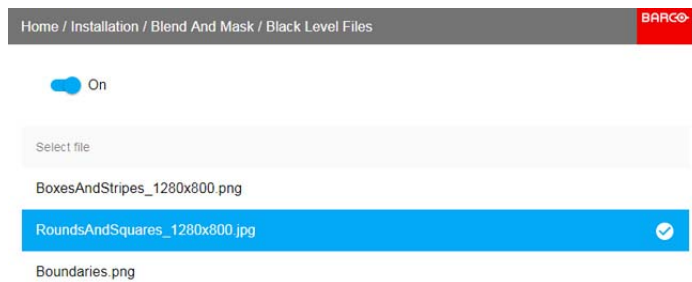


Image 8-42

3. Click on the on/off button on top to activate the selected Black Level adjustment file.

8.5.6 Blend Files

About custom Blend Files

Next to setting your specific Blending configuration in the GUI, you can also upload or download a custom Blend configuration file in png, jpg or tiff format to/from the projector. This is a timesaving option when multiple projectors need an identical blending configuration.

To upload or download Blend masks you can use the Prospector tool.

Alternatively, you can contact the "file endpoint" directly via the curl program or some other tool that supports http upload.

For more information on uploading/downloading Blend files using the Prospector, refer to the Prospector user manual.

For more information on uploading/downloading Blend files using curl or other tools that supports HTTP upload, refer to the Pulse API Reference Guide.

How to activate an uploaded Blend configuration file?

1. In the main menu, select *Installation* → *Blend and Mask* → *Blend Files*.



Image 8-43
Blend menu, Blend Files

The Blend Files menu is displayed.



Image 8-44

2. If any custom Blend files are available, select the desired file.

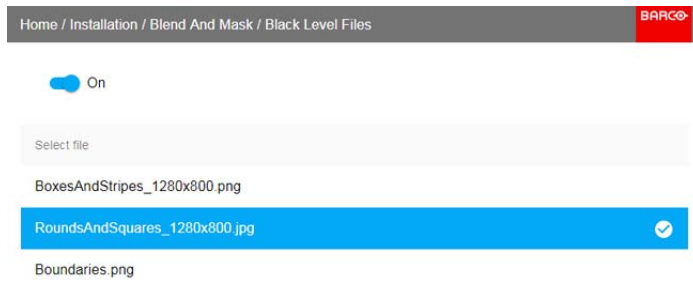


Image 8-45

3. Click on the on/off button on top to activate the selected Blend file.

8.6 Illumination

About

Home/Installation /Illumination/Power

Review light source status and adjust (dim) laser power from 0 to 100%.

Default: 100%

How to reduce the output light

In the menu, select:

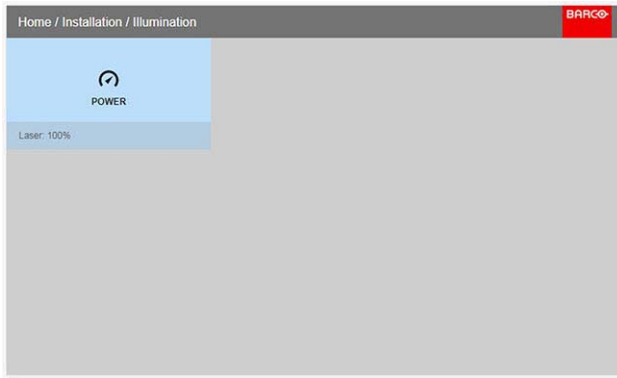


Image 8-46
Illumination Menu.

The actual illumination setting is indicated in the menu.

Enter the menu, and use the slider to adjust.

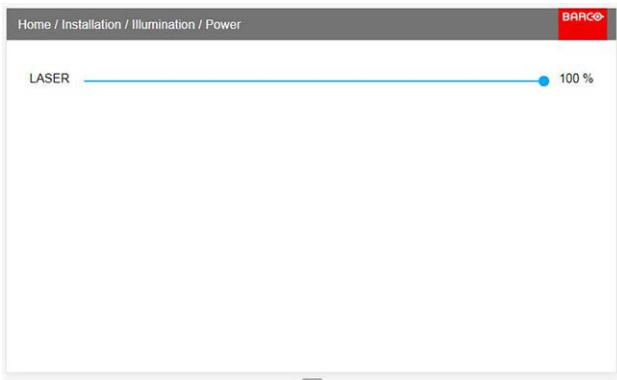


Image 8-47

8.7 Display Setup

About

Described in other topics, related to projector version.

9. SYSTEM SETTINGS MENU

Overview

- Communication
- Apply a menu theme
- Standby ECO
- Service
- Reset
- Lens Features

9.1 Communication

About

System settings / Communication

Network connection is required to communicate with the projector via LAN or Internet.

Current Ethernet communication information is given, and can be edited in this menu.

Default mode for Ethernet communications are: Automatic ON / IP Version 4 DHCP mode.

Setting	Description
Automatic	
ON	DHCP enabled
OFF	Static
IP version 4	
Static mode	Set address, subnet mask and default gateway according to network specification.
DHCP mode	Assigned IP address, subnet mask and gateway.

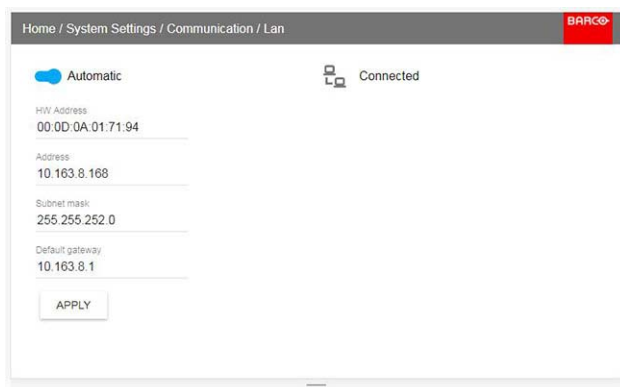


Image 9-1

Manually set up the IP address

Go to the menu *System settings / Communication / LAN*

Enable the Auto zone on the display and press enter. The Auto zone will change to "Manual".

Scroll down, and modify the desired fields. When in the desired fields, press "Enter" to enable the virtual keyboard, enter the desired values, and press "Enter" again to confirm the change.

9.2 Apply a menu theme

About

System settings / Themes

Themes are used to apply a predefined functionality to the OSD display. There are two options: light (default) or dark.

9.3 Standby ECO

About Standby ECO

When the ECO mode is enabled, the projector will automatically go to **ECO standby** mode after a time-out (default 15 minutes). All electronics (including fans, pumps, ...) go down except for a very small wake-up controller. See section dedicated to the Power Mode transitions for further details.

How to enable the ECO mode

1. In the main menu, select *System Settings* → *Standby ECO*.

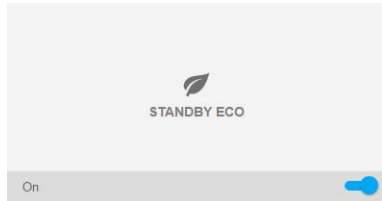


Image 9-2
System Settings Menu — Standby ECO

2. To enable the ECO mode, make sure the slider is set to On. The slider is enabled when set to the right and when it is colored blue.

How to disable the ECO mode

1. In the main menu, select *System Settings* → *Standby ECO*.

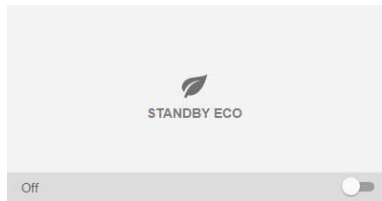


Image 9-3

2. To disable the ECO mode, make sure the slider is set to Off. The slider is disabled when set to the left and when it becomes grey.

9.4 Service

About

System settings / Service

The Service Menu is for service personnel and / or advanced users only.

See the Service Manual for detailed information regarding service issues.

The menu is password protected.

9.5 Reset

What can be done?

All settings and values on the projector can be reset to its default values. This can be done for one or more settings separately, or all settings together (factory reset).

Default settings

The following settings are default settings:

	Setting	Default value
UserInterface	Theme	Light
Network	Communication	LAN, Automatic settings
System	Eco Mode (if applicable)	Available
Screen	Screen luminance - Unit	nits

	Setting	Default value
Optics	High Contrast	Off
Illumination	Power	100%
ImageConnector	Color Space	auto
	Signal Range	auto
ImageResolution	Output Resolution (if applicable)	4K UHD
ImageWarp	Screen size	5120x3200 / 2560x1600
	4 corner	
	Bow	Warp off, no warp
	Warp files	Disabled, no files selected
ImageBlend	Blend/Mask size	
	Black Level	disabled, all value to zero
	Black Level Files	
	Blend Files	Disabled, no files selected
ImageRealColor	P7 Realcolor	all set to native
ImageStereo	Sync delay	0 µs
	Swap eye	Off
	Dark time	lowest value available
	Display mode	AutoStereo
ImageOrientation	Orientation	Table, Front
ImageSource	Source files	Standard
ImageFeatures	Contrast	mid value
	Brightness	mid value
	Saturation	mid value
	Sharpness	mid value
	Gamma	mid value
	Cropping (if applicable)	Off
	Aspect Ratio (if applicable)	16:9

How to reset all projector settings

1. In the main menu, select *System Settings* → *Reset*.
2. In the Reset menu, select *RESET ALL* and click **OK**.

How to reset one or more projector settings

1. In the main menu, select *System Settings* → *Reset*.



Image 9-4
System Settings menu, Reset

The Reset menu is displayed.

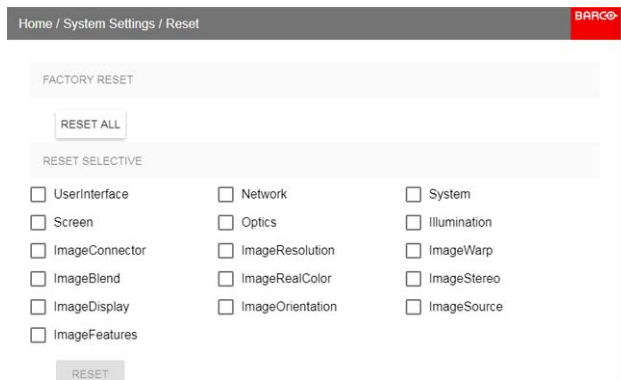


Image 9-5
Reset menu

2. Navigate to the checkbox next to the settings that need to be reset and press **OK**.
Multiple selections are possible.
3. Select **RESET** and press **OK** to reset all selected settings.

9.6 Lens Features

About

In order to prevent unintentional lens adjustments, especially after e.g. a completed setup and adjustment, there is a possibility to disable certain lens adjustment functions. These functions are directly accessible via the remote control, and can by that easily be adjusted by accident.

Enter the menu shown below, and disable the desired functions by toggling the desired buttons. The menu below shows all lens options in enabled position.

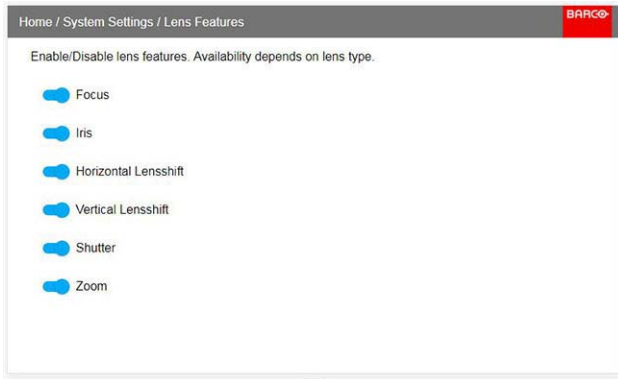


Image 9-6

10. STATUS MENU



This is a status menu only. No changes can be made to settings from this menu.

Overview

- Status menu overview

10.1 Status menu overview

Status menu

While in the main menu, press Status.

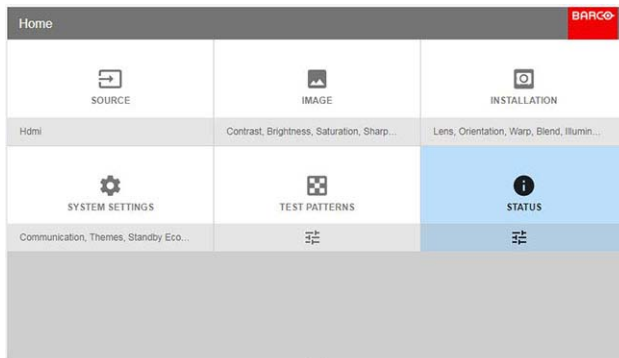


Image 10-1
Status Menu enter

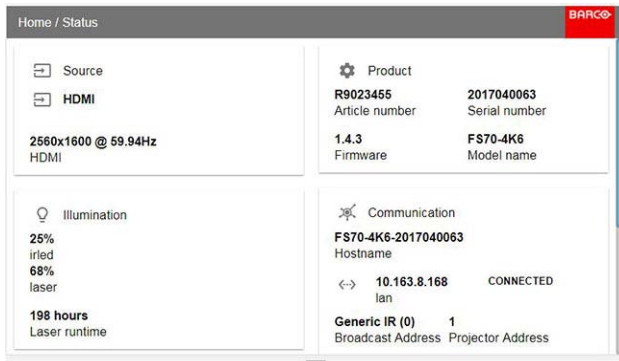


Image 10-2
Status overview

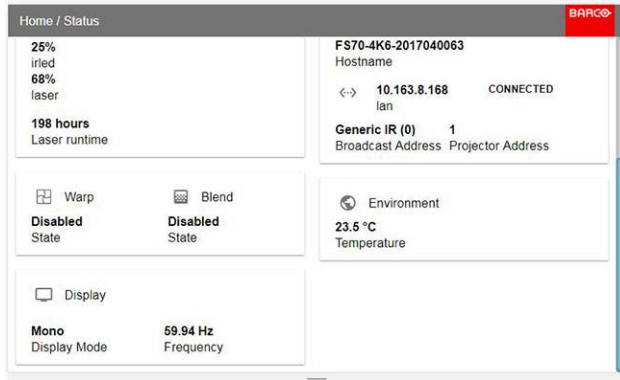


Image 10-3
Status overview (Menu scrolled down)..

Source status

Displays active source information

Product

Displays active product information:

- Article number: Projector article / part number
- Serial number: Projector serial number
- Firmware: Projector software package version
- Model name: Projector model name

Illumination

Shows the used light source power (in %) and runtime.

Communication

Lists the projector network address, the remote control broadcast address and the remote control projector address.

Warp

Displays the Warp status and type of warp used

Blend

Displays the Warp status and type of Blend used

Environment

Shows the ambient temperature.

Display

Shows display settings

11. 3D

3D setup

The projector is capable of displaying 3D images and movies in both active and passive stereo 3D input mode.

Setup of a 3D installation requires an advanced understanding of the 3D systems, both for the projector, and also for the signal source.

Regarding setup of the signal source, refer to the user manual for the specific unit.

In 3D setup, it is crucial that the projected images are perfectly synchronized through the whole signal path, from the signal source to the picture viewed through the 3D goggles.

See instructions in this chapter to set up the projector for this feature.

Active stereo input.

One channel input. (One cable). Update frequency @ 120 Hz. Extra sync. signal must be used when DVI source is used. For Displayport source, the sync signal is present in the signalcable, but external sync can also be used when necessary.

Passive stereo input.

Use two channel input (two cables), one for each eye. Update frequency limited to 60 Hz for each channel. Dual Sequential input source (DVI or Displayport) must be used. No external sync signal required.

11.1 Setup 3D mode.

Setup 3D mode.

1. Enter the menu *Home/Installation/Display Setup*, and select AutoStereo in the dropdown menu.



Image 11-1

2. Enter the menu *Home/Installation/3D Setup*, and set the dark time to 1600us or 1850us depending on which colorwheel installed. (The projector detect the color wheel, and only one option is available due to the color wheel).

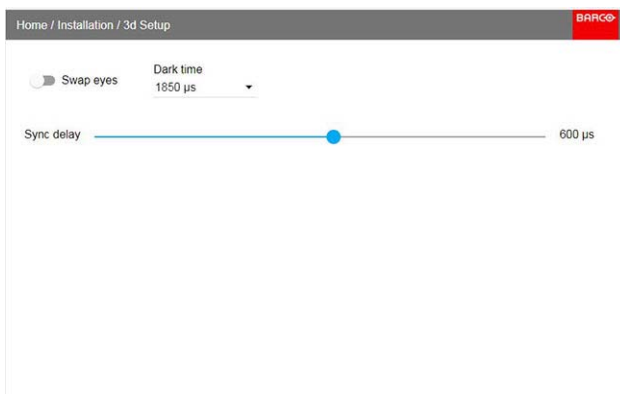


Image 11-2

3. Enter the Source menu, and select the desired input source. Must be either Dual Columns or Dual sequential sources. (DVI or Displayports).

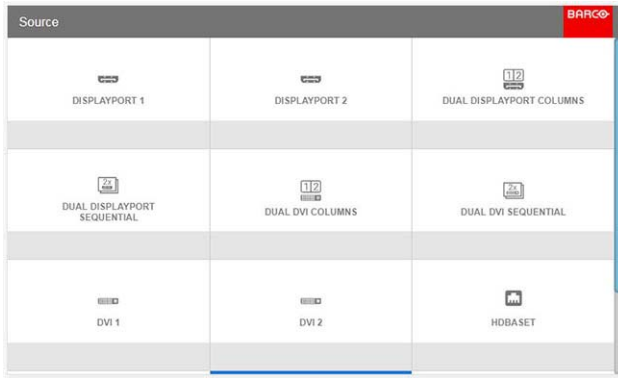


Image 11-3

- Put on the 3D goggles, and verify by looking through the goggles with one eye at the time that only one image is visible in each eye. A double picture or a shade of the picture from the other side shall not be observed. Repeat for both sides, and adjust the Sync Delay slider until a "clean" picture is visible in each eye. If the 3D picture looks a bit "strange" through the 3D goggles, the solution is to swap eyes by enabling the Swap eyes button in the menu.

12. USER MAINTENANCE

Overview

- Update Projector Firmware

12.1 Update Projector Firmware



CAUTION: Do NOT turn off, power down or remove mains power supply when an upgrade is in progress.



Once initiated, the upgrade procedure can take up to 20 minutes to complete.

The LCD display will show the progression and status of the upgrade during the process.

Update

- Go to www.barco.com and select your product. All available firmware downloads are filed under the Technical Downloads tab.
- Download the firmware. Extract and save the file to a USB stick with FAT file system. Use the eject function on your PC to safely remove the device from the computer.
- Place the projector in Standby mode (status indicator is steady White).
- Insert the USB Stick in to the USB port on the projector.
After a few seconds, the status indicator will flash. (rate: 3 Hz/180 FPM). This signals that the upgrade is in progress. If the upgrade file is corrupt or invalid, the status indicator will turn red and the upgrade process will stop. Note! The upgrade will not be installed in this instance, and the upgrade process must be restarted with a full and correct file. The projector may restart several times during the upgrade process
- The LCD display will show the progress of the update procedure, and also when the USB stick can be removed. The projector will return to standby mode (status indicator is steady amber) once the upgrade is completed successfully.

13. CLEANING THE PROJECTOR

13.1 Projector lenses

General guidelines for cleaning projector lenses

Blow off dust with clean compressed air (or pressurized air cans) .

Use lens cleaner and a clean lens cleaning cloth to remove the dust and contamination.

Wipe in broad strokes, in one direction only.

Warning: Do not wipe back and forwards across the lens surface as this tends to grind dirt into the coating.

Use a dry clean lens cleaning cloth to remove left liquid or stripes. Polish with small circles.

If there are still fingerprints on the surface, repeat with lens cleaner and a clean lens cleaning cloth, then polish again with a dry cloth.



If smears occur when cleaning lenses, replace the cloth. Smears are the first indication of a dirty cloth.

13.2 Projector cabinet



WARNING: Always disconnect the projector from the mains power net before attempting to clean the projector cabinet.

General guidelines for cleaning the projector cabinet (exterior only)

Clean the housing of the projector with a damp cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution.

13.3 Filters

General info regarding Air intake and filters.

The product is shipped default without any filters and by avoiding filters, the ventilation system operates for longer periods between maintenance, since no clogging of filters means more air is allowed through the system, resulting in lower operating temperatures over time. The air intake are just protected by a mesh. This mesh has to be vacuum cleaned occasionally when needed. No specific interval for this operation, but to be performed when needed.

For more demanding surrounds both smoke and dust filters can be applied externally to the system to avoid internal fouling.

General guidelines for cleaning projector filters (external)

Remove the filter from the projector then use a vacuum to remove excess dust from the filter. Do not wet or soak the filter.



Cleaning of the projector filter should be done in a separate room to avoid dust contamination.

14. TECHNICAL SPECIFICATIONS

About

The information in this section is subject to changes without any notice. For current technical information, visit the product website, or contact your sales support representative.

14.1 F70 — 4K6C

F70 — 4K6C

Brightness	5,000 - 7,500 lumens
Contrast ratio	1800:1 sequential, 50,000:1 dynamic
IR for NVG	yes
Brightness uniformity	90%
Aspect ratio	16:10
Projector type	1DLP laser phosphor
Resolution	3,840 x 2,400 (4K UHD) / 2,560 x 1,600 (native)
Lens type	FLD/FLD+
Optical lens shift	Up to 134% lens shift, depending on lens. Motorized zoom, focus, vertical and horizontal shift, iris* and shutter.
Color correction	P7 RealColor™
CLO (constant light output)	Yes*
Light source	Laser phosphor
Light source lifetime	Up to 60,000* hours, depending on mode of operation
Sealed DLP™ core	Yes
Orientation	360° rotation, no restrictions
3D	Active stereoscopic 3D*
Image processing	Embedded warp & blend engine
Keystone correction	Yes
Inputs	HDS DI 2x DP1.2 2x dual link DVI-I HDBaseT upgradable HDMI2.0 upgradable RJ 45 Ethernet DMX in/out*(upgradable) RS232 in 2x USB 12v out
Input resolutions	Including and up to: 3,840 x 2,400 @ 60Hz 3,840 x 2,160 @ 60Hz 4,096 x 2,160 @ 60Hz 2,560 x 1,600 @ 120Hz
Software tools	Projector Toolset
Control	IR, RS232, RJ45
Network connection	IR, RS232, RJ45

14. Technical Specifications

Power requirements	100-240V / 50-60Hz
Power consumption	1,100 W Max.
BTU per hour	Max 4,000 BTU/h
Noise level (typical at 25°C/77°F)	36 dB(A)
Operating temperature	10 - 40 °C (sea level)
Storage temperature	-20 to 60 °C
Operating humidity	20 - 80% RH
Storage humidity	10 - 90% RH
Dimensions (WxLxH)	475 x 593 x 286 mm / 18,7 x 23,3 x 11,2 in
Weight	37 kg / 81,5 lbs
Standard accessories	Power cord, wireless remote control
Certifications	CE, FCC Class A and cNus
Warranty	Limited 3 years parts and labor. Extendable up to 5 years
Notes	* SW upgradable. Please contact an authorized Barco representative for details.

14.2 F70 — W6

Brightness	5,500 - 8,000 lumens
Contrast ratio	1,800:1 sequential, 50,000:1 dynamic
IR for NVG	no
Brightness uniformity	90%
Aspect ratio	16:10
Projector type	1DLP laser phosphor
Resolution	1,920 x 1,200 (WUXGA)
Lens type	FLD/FLD+
Optical lens shift	Up to 134% lens shift, depending on lens. Motorized zoom, focus, vertical and horizontal shift, iris* and shutter.
Color correction	P7 RealColor™
CLO (constant light output)	Yes*
Light source	Laser phosphor
Light source lifetime	Up to 60,000* hours, depending on mode of operation
Sealed DLP™ core	Yes
Orientation	360° rotation, no restrictions
3D	Active stereoscopic 3D*
Image processing	Embedded warp & blend engine
Keystone correction	Yes
Inputs	HDSDI 2x DP1.2 2x dual link DVI-I HDBaseT upgradable HDMI2.0 upgradable RJ 45 Ethernet DMX in/out* (upgradable) RS232 in 2x USB 12v out

Input resolutions	Including and up to: 1,920 x 1200 @ 60Hz 2,560 x 1,600 @ 120Hz
Software tools	Projector Toolset
Control	IR, RS232, RJ45
Network connection	IR, RS232, RJ45
Power requirements	100-240V / 50-60Hz
Power consumption	1,100 W Max.
BTU per hour	Max 4,000 BTU/h
Noise level (typical at 25°C/77°F)	36 dB(A)
Operating temperature	10 - 40 °C (sea level)
Storage temperature	-20 to 60 °C
Operating humidity	20 - 80% RH
Storage humidity	10 - 90% RH
Dimensions (WxLxH)	475 x 593 x 286 mm / 18,7 x 23,3 x 11,2 in
Weight	37 kg / 81,5 lbs
Standard accessories	Power cord, wireless remote control
Certifications	CE, FCC Class A and cNus
Warranty	Limited 3 years parts and labor. Extendable up to 5 years
Notes	* SW upgradable. Please contact an authorized Barco representative for details.

14.3 FS70 — 4K6

Brightness	5,000 center lumens
Contrast ratio	1800:1 sequential, 50,000:1 dynamic
IR for NVG	yes
Brightness uniformity	90%
Aspect ratio	16:10
Projector type	1DLP laser phosphor
Resolution	3,840 x 2,400 (4K UHD) / 2,560 x 1,600 (native)
Lens type	FLD/FLD+
Optical lens shift	Up to 134% lens shift, depending on lens. Motorized zoom, focus, vertical and horizontal shift, iris** and shutter.
Color correction	P7 RealColor™
CLO (constant light output)	Yes*
Light source	Laser phosphor
Light source lifetime	Up to 60,000** hours, depending on mode of operation
Sealed DLP™ core	Yes
Orientation	360° rotation, no restrictions
3D	Active stereoscopic 3D*
Image processing	Embedded warp & blend engine*
Keystone correction	Yes

14. Technical Specifications

Inputs	HDSDI 2x DP1.2 2x dual link DVI-I HDBaseT** (upgradeable) HDMI1.4 **(2.0 upgradeable) RJ 45 Ethernet DMX in/out **(upgradeable) RS232 in 2x USB 12v out
Input resolutions	Including and up to: 3,840 x 2,400 @ 60Hz 3,840 x 2,160 @ 60Hz 4,096 x 2,160 @ 60Hz 2,560 x 1,600 @ 120Hz
Software tools	Projector Toolset
Control	IR, RS232, RJ45
Network connection	IR, RS232, RJ45
Power requirements	100-240V / 50-60Hz
Power consumption	1,100 W Max.
BTU per hour	Max 4,000 BTU/h
Noise level (typical at 25°C/77°F)	36 dB(A)
Operating temperature	10 - 40 °C (sea level)
Storage temperature	-20 to 60 °C
Operating humidity	20 - 80% RH
Storage humidity	10 - 90% RH
Dimensions (WxLxH)	475 x 593 x 286 mm / 18,7 x 23,3 x 11,2 in
Weight	37 kg / 81,5 lbs
Standard accessories	Power cord, wireless remote control
Certifications	CE, FCC Class A and cNus
Warranty	Limited 3 years parts and labor. Extendable up to 5 years
Notes	* SW upgradeable feature, available in Q2 2017 **HDMI2.0, HDBaseT ethernet and DMX available as software upgrade in Q2 2017

14.4 FS70 — W6

Brightness	5,500 center lumens
Contrast ratio	1,800:1 sequential, 50,000:1 dynamic
IR for NVG	yes
Brightness uniformity	90%
Aspect ratio	16:10
Projector type	1DLP laser phosphor
Resolution	1,920 x 1,200 (WUXGA)
Lens type	FLD/FLD+
Optical lens shift	Up to 134% lens shift, depending on lens. Motorized zoom, focus, vertical and horizontal shift, iris** and shutter.

Color correction	P7 RealColor™
CLO (constant light output)	Yes*
Light source	Laser phosphor
Light source lifetime	Up to 60,000** hours, depending on mode of operation
Sealed DLP™ core	Yes
Orientation	360° rotation, no restrictions
3D	Active stereoscopic 3D*
Image processing	Embedded warp & blend engine*
Keystone correction	Yes
Inputs	HDSDI 2x DP1.2 2x dual link DVI-I HDBaseT** (upgradeable) HDMI1.4 **(2.0 upgradeable) RJ 45 Ethernet DMX in/out **(upgradeable) RS232 in 2x USB 12v out
Input resolutions	Including and up to: 1,920 x 1200 @ 60Hz 2,560 x 1,600 @ 120Hz
Software tools	Projector Toolset
Control	IR, RS232, RJ45
Network connection	IR, RS232, RJ45
Power requirements	100-240V / 50-60Hz
Power consumption	1,100 W Max.
BTU per hour	Max 4,000 BTU/h
Noise level (typical at 25°C/77°F)	36 dB(A)
Operating temperature	10 - 40 °C (sea level)
Storage temperature	-20 to 60 °C
Operating humidity	20 - 80% RH
Storage humidity	10 - 90% RH
Dimensions (WxLxH)	475 x 593 x 286 mm / 18,7 x 23,3 x 11,2 in
Weight	37 kg / 81,5 lbs
Standard accessories	Power cord, wireless remote control
Certifications	CE, FCC Class A and cNus
Warranty	Limited 3 years parts and labor. Extendable up to 5 years
Notes	* SW upgradeable feature, available in Q2 2017 **HDMI2.0, HDBaseT ethernet and DMX available as software upgrade in Q2 2017