LG-C320 User Guide

Some of the content of this manual may differ from your phone depending on the software of the phone or your service provider.

Making an Emergency call when there is no USIM card present in the

- 1 Enter emergency number 111 or 112
- 2 Press Voice call to activate Emergency call.



P/N· MFI 67003504(1.0)

Installing the SIM Card and Charging the Battery

Installing the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card loaded with your subscription details, such as your PIN, any optional services available and many others.

Important! The plug-in SIM card can be easily damaged by scratches or bending, so be careful when handling, inserting or removing the card. Keep all SIM cards out of the reach of small children.

Illustrations

- 1 Open the battery cover 2 Remove the battery
- 3 Insert your SIM
- 4 Insert your battery 5 Close the battery cover
- 6 Charge your battery
- If the phone won't turn on, or if the display freezes or doesn't respond, follow the instructions for installing the battery again.



MARNING: Do not remove the battery when the phone is switched On, as this may damage the phone.

Video Camera

Shooting a guick video

- 1 Press Menu and select Camera and choose Video Camera. The video camera's viewfinder will appear on screen.
- 2 Point the camera to the subject of your recording
- 3 Press OK to start the recording. Rec will appear at the Top right of the viewfinder. Press again to stop recording.

After you've shot your video

A still image representing your captured video will appear on screen

After recording a video clip, you can check the menu as follow: Videos - View the pictures and videos you have taken in your Album

Play - Play the file.

New - Press to shoot another video straight away. Send - Send the video as Message, as an E-mail or via

Delete - Delete the video you have just made. The viewfinder will reappear.

Music

MP3 Player

Your LG-C320 has a built-in music player so you can play all

NOTE:

- · Before using music player, you will need to transfer music file onto your phone.
- Music player supports codec types as follows: MP3, WMA, and variations of file formats

select MP3 player. From here you can access to: Last played song - View all the songs you have played recently. All songs - Contains all the songs you have on your phone. My Playlists - Contains all playlists you have created. Artists - Allows you to view all tracks sorted by artist. Albums - Allows you to view all tracks sorted by album. Genres - Allows you to view all tracks sorted by genre. Shuffle all songs - Allows you to play all of the songs in random

Validity period - Choose how long your messages are stored at

Character encoding - Choose how your characters are encoded. This affects the size of your message and therefore data costs.

Send long text as - Choose whether to send your message as Multiple SMS or MMS when you enter a text longer than 2

Changing your multimedia message settings

Press Menu, select Messaging, then choose Settings and Multimedia message. You can make changes to: Retrieval mode - Choose to automatically or manually

download multimedia messages depending on whether you are at home or roaming.

Delivery report - Choose to request or allow a delivery report. Read reply - Choose to request or allow a read reply. Priority - Choose the priority level of your multimedia message. Validity period - Choose how long your message is stored at the message centre

your favourite music.

AAC. Music player does not necessarily support all features

To access the music player, press Menu and select Music and

Slide duration - Choose how long your slides appear on screen. Creation mode - Allows you to select the contents type supported by MMS.

Delivery time - Configures the delivery time of message to the recipient. The multimedia message centre will deliver the message after the delivery time.

MMS centre - Allows you to configure network information such as the multimedia service centre and the internet profile to send a multimedia message.

Phonebook

Searching for a contact

- 1 Press Menu and select Phonebook.
- 2 Using the keypad enter the first letter of the name of the contact you want to call.
- 3 To scroll through the contacts and their different numbers use the navigation keys.

Adding a new contact

- Press Menu and select Phonebook
- 2 select New contact

Getting to Know Your Phone

-Soft keys (Left soft key / Right soft key) . These keys perform the function Indicated in the Multitasking key bottom of the display. Allows access to Home screen, Main menu, and running appliactions Main I CD Send key Widget menu Dials a phone number and answers a call Allows access to some useful widgets and links. In standby mode: Shows the history of calls End key Switch on/off (hold down) Alpha numeric kevs End or reject a call. • In standby mode: Input numbers to dial Hold down Menu key / OK key International calls · Selects menu options, confirms actions and - Connect voice mail centre answers a call. To 9 - Speed dials Navigation key - Hold the key down to go Silent mode In standby mode: Briefly: Profile selector
Briefly: E-mail provider In editing mode: Enter numbers & characters Briefly: Message Inbox Briefly: Phonehook In menu: Scroll up & down.

Calling

Making a Call

- 1 Make sure your phone is on.
- 2 You can use the keypad. To delete press the key.
- 3 Press to begin the call.
- 4 To end the call, press .

TIP! To enter + when making an international call, press and hold 0.

Making a call from your Contacts

It's easy to call anyone whose number you have stored in your Phonebook

- 1 Press Menu to open the main menu. Select Phonebook.
- 2 Using the keypad, enter the first letter of the contact you want to call and scroll to the **Phonebook**.
- 3 Press to begin the call.

Answering and rejecting a call

When your phone rings, press Accept or press to answer

While your phone is ringing you can press Silent to mute the

Games and Applications

Allows access to pre-installed and downloaded games and

E-Mail

Sending an email using your new account

- To send/receive an email, you should set up an email account. 1 Press Menu, select E-Mail and choose the account you want
- 2 Choose Create new E-mail and a new email window will
- 3 Write a subject line then press OK.
- 4 Enter your message using the keypad.

FM Radio

Listening to the Radio

or USIM card.

select Done.

Setting your Alarm

choose Alarm clock.

added to the alarm as well

Adding an event to your calendar

Organiser then select Calendar.

Tools

- 1 Press Menu and select Music, then choose FM radio
- 2 Select the channel number of the station you would like to listen to

3 Choose whether to store your new contact on your Handset

4 Enter the information you want in the fields provided and

1 To access the Alarm clock press menu, and select Tools and

alert type, alert tone, volume, snooze interval. A memo can be

2 To set a new alarm select New alarm. Set the time, repeat,

3 When the details are entered, press Done to save the alarm.

2 Select the date you would like to add an event to. You can

3 To add a New schedule select Options then New schedule

choose a date either by scrolling to it using the navigation

1 To access the Calendar press menu, and select Tools and chose

NOTE: If you are in an area with bad radio reception, you may have difficulty listening to the radio, then insert headset for Good Radio Reception

ringing. This is useful if you have forgotten to change your

NOTE: In call when speaker is activated, the speaker icon

is displayed with red colour strike, when the speaker is

You can assign a speed dial number to a contact you call

2 Your voicemail is preset to speed dial 1 and you cannot

3 Your Phonebook will open. Select the contact you'd like

to assign to that number using the navigation keys then

Press Select To call a speed dial number press and hold the

will begin automatically and there is no need to press .

assigned number until the contact appears on screen. The call

change this. Select any other number either by using the

navigation keys and selecting Set or by pressing the hard

Press or select Reject in order to reject an incoming call.

deactivated speaker icon is displayed without red colour cross.

1 Press Menu to open the main menu. Select Phonebook, then

profile to silent for a meeting.

select Options and Speed dials.

Speed dialing

key number.

frequently.

Browser

Accessing the web

You can launch the WAP browser and access the homepage of the activated profile on web settings. You can also manually enter a URL address and access the associated WAP page.

1 To go straight to the browser home page, select Home. Alternately, select Enter address and type in the URL, followed by Connect.

NOTE: You will incur extra cost by connecting to these services and downloading content. Check data charges with your network provider.

4 Enter the details of the Schedule, including the category,

Adding an item to your task list

Organiser then select Tasks.

memo, and priority

Adding a memo

2 To set a new task select New task

Organiser then select Memo.

3 Enter the details of the memo.

keys, press Options then Lock

2 To set a new memo select New memo

subject, location, start time, finish time, alarm, and repeat.

1 To access the Tasks press menu, and select Tools and choose

3 Enter the details of the task, including the subject, due date,

4 When the details are entered, press Done to save the task.

1 To access the Memo press menu, and select Tools and choose

4 When the details are entered, press Save to save the memo.

5 To lock a memo, move to the memo, using the navigation

Note: you will need the Security code to unlock the memo.

5 When the details are entered, press Done to save the schedule.

Messaging Your LG-C320 includes functions related to SMS (Short Message Service), MMS (Multimedia Message Service) as well as the network's service messages. To use these functions, press Menu and select Messaging.

You can only check the logs of All, missed, dialled and received

calls if the network supports Calling Line Identification (CLI)

You can set call-specific functions. Press Menu, select Settings

Call barring - Select which calls you would like to be barred.

Fixed dial numbers - Choose a list of numbers that can be

Excuse messages - Before you reject an incoming call, you can

use "Excuse messages" to send a message to explain why you

Common settings - Allows access to Answer mode. Send my

number, Bluetooth answer mode, Hang up mode, Call reject.

number, Minute minder, Auto redial, Send DTMF tones, Save new

Call waiting - Be alerted when you have a call waiting.

Call divert - Choose whether to divert your calls

- message.
- The default setting of the message editor is SMS mode.
- the right for more information on how to enter text.
- Sound, Template, Emoticon, Name & number, New slide, Subject and More (Business card/Schedule/Memo/Tasks/My business card).
- 5 Choose Send to
- number.

Calculate Date

will be once a certain number of days have passed.

Once you have finished recording, select Options>Send Via>Message/E-Mail/Bluetooth

- 1 Press Menu and select Tools, then choose Calculator.
- 2 Press the numeric keys to input numbers

Using the stopwatch

- 1 Press Menu and select Tools, then choose Stopwatch.

Converting Units

- 2 Select Start to begin the timer.
- Length, Weight, Temperature, Volume or Velocity

Camera

SIM card holder

Side keys

In standby mode: Controls

During playing MP3 music:

Audio volume adjustment

the ring volume.

During a call: Earpiece

volume adjustment

Taking a guick photo

- 1 Press Menu and select Camera and Camera.
- 2 Point the camera to the subject of your photo and press OK to take the Photo

After taking a photo

Your captured photo will appear on the screen. The image name is shown on the screen with five icons on the bottom. Images - View the pictures and videos you have taken in your

Send - Send the photo as Message, as an E-mail or via Bluetooth

New - Take another photo straight away.

Set as - Use the image as Wallpaper, as a Contact image, or in your Start up image or Shut down image.

Delete - Delete the photo you have just taken. The viewfinder

Sending a message

Haadsat

Viewing your Calls

within the service area

called from your phone.

do not receive an incoming call

and choose Call

Changing the call settings

Charger/USB cable connector

TIP: Please ensure the

phone is powered on

card is inserted before

cable for Mass Storage.

connecting the USB

. external memory

- 1 Press Menu, select Messaging and choose Write new
- 2 A new message editor will open. Message editor combines SMS and MMS in one intuitive mode that is easy to switch between.
- 3 Enter your message using the keypad. See Entering text on
- 4 Select Options and choose Insert to add an Image, Video,
- 6 Choose a contact from the list of contacts or enter the phone
- 7 Select Send.

Date finder is a handy tool to help you calculate what the date

Use your Voice recorder to record voice memos or other sounds.

Sending a voice recording

Using your calculator

1 Press Menu and select Tools, then choose Unit converter. 2 Choose whether you would like to convert Currency, Area.

Adding a city to your World clock

1 Press Menu and select Tools, then choose World clock.

MARNING: Image, Sound, Video, New slide, Subject, Business card, Schedule or My business card is added to the message editor, it will be automatically converted to MMS mode and you will be charged accordingly.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in contacts, writing a message and creating scheduling events in the calendar all require entering text. The following text input methods are available in the phone: Abc mode, and 123 mode.

NOTE: Some fields may allow only one input mode (e.g. telephone number in contact fields)

Changing your text message settings

Press Menu, select Messaging, then choose Settings and Text message. You can make changes to:

Text message centre - Enter the details for your message centre. Delivery report - Choose to receive confirmation that your message have been delivered.

2 To find out the time of specific city, press Options and select New city

Settings

Changing your profiles 1 Press Menu and select Settings

- 2 Select Profiles and then choose the profile you want to edit.
- 3 Select Options and choose Personalise
- 4 You can change all of the tones, its volumes and alert options from here

Using Flight Mode

When Flight mode is activated, you will not be able to make calls, connect to the Internet or send messages.

Changing your Device settings 1 Press Menu and select Settings

2 Select Device settings and choose from the list below.

Date and time - Adjust your date and time settings or choose whether to update the time automatically or to use the daylight saving option.

Power save - Choose to switch the factory set power saving settings On or Off.

the message centre Message types - Convert your Text, Voice, Fax, X.400 or Email.

pages in the message field.

Languages - Change the language of for your LG-C320's display. Auto keylock - Enables/Disables Auto Keylock.

Security - Adjust your security settings, including PIN codes and handset lock

Memory info - See Viewing memory status for more information

Reset all settings - Restores all settings to their factory defaults. Device info - View the technical information for your LG-C320.

Changing the date & time

1 Press Menu and select Settings.

2 Select Device and choose Date and time and choose from the list below:

Date and time settings - Select On Auto update, and the phone will automatically update the date and time.

Date format - You can set the date format (DD/MM/YYYY, MM/ DD/YYYY YYYY/MM/DD)

Date separator - You can enter the current date. You can set the date separator (DD/MM/YYYY, DD.MM.YYYY, DD-MM-YYYY). Time format - You can set the date format 12 hours or 24 hours.

Changing your security settings

Change your security settings to keep your LG-C320 and the important information it holds protected.

- 1 Press Menu and select Settings and choose Device
- 2 Select Security and choose from the list below:

PIN code request - Choose a PIN code to be requested when you turn your phone on.

Device lock - Choose a security code to lock your phone Never, At device start up, When SIM card is changed or immediate. Application lock - You can lock the contents you want to hide. (Phonebook, Messaging, E-mail, etc.)

Change codes - Change your PIN code PIN2 code, Security

Note: Default security code is 0000

Viewing memory status

Press Menu and select Settings, select Device and choose Memory info You will then see the current status of the memory space available in your LG-C320.

Resetting your phone

Use Reset all settings in Device of Settings menu to reset all the settings to the factory definitions. You need the security

Other screens - Choose the theme of your home screen or

Phone Software update

LG Mobile Phone Software undate from internet

For more information on using this function, please visit the http://update.lgmobile.com or http://www.lg.com/common/ index.jsp → select country → Support.

This Feature allows you to update the firmware of your phone to the latest version conveniently from the internet without the need to visit a service center As the mobile phone firmware update requires the user's full

attention for the duration of the undate process, please make sure to check all instructions and notes that appear at each step before proceeding. Please note that removing the USB data cable or battery during the upgrade may seriously damage you

Changing your connectivity settings

Your connectivity settings have already been set up by your network operator, so you can enjoy your new phone immediately. To change any settings, use this menu-Select Connectivity in the SETTINGS tab.

Changing your Bluetooth settings

To access Bluetooth press menu, and select Settings and chose Connectivity then select Bluetooth.

Pairing with another Bluetooth device

By pairing your LG-C320 and another device, you can set up a passcode protected connection. This means your pairing is more secure

- 1 Check your Bluetooth is Turn on and Visible. You can change your visibility in the **Settings** of **Bluetooth** menu, by selecting My device visibility, then Visible
- 2 From Bluetooth choose Activate Bluetooth and select Search new device
- 3 Your LG-C320 will search for devices. When the search is completed Add and Refresh will appear on screen
- 4 Choose the device you want to pair with select Add and enter a passcode then choose OK
- 5 Your phone will then connect to the other device, on which you should enter the same passcode.

• The highest SAR value for this model phone tested by DASY4

for use at the ear is 0.612 W/kg (10 g) and when worn on the

• The SAR limit recommended by the Institute of Electrical

and Electronics Engineers (IEEE) is 1.6 W/kg averaged over

6 Your passcode protected Bluetooth connection is now ready.

Using a Bluetooth headset

1 Check your Bluetooth is Activate Bluetooth and Visible.

2 Follow the instructions that came with your headset to place it in pairing mode and pair your devices.

To switch Bluetooth on:

- 1 Press Menu and select Settings. Choose Connectivity then select Bluetooth.
- 3 Select Deactivate Bluetooth to switch Bluetooth off.

- 1 Open the file you want to send, typically this will be a photo, video or music file.
- 2 Select Options and choose Send via, then Bluetooth.
- 3 Your LG-C320 will automatically search for other Bluetooth
- enabled devices within range

To receive a file:

- 1 To receive files, your Bluetooth must be both Activate Bluetooth and Visible.
- 2 A message will prompt you to accept the file from the sender. Select Yes to receive the file.

TIP! Keep an eye on the progress bar to make sure your

TIP! The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electron ics is under licence. Other trademarks and trade names are those of their respective owners.

PC suite

Installing LG PC Suite on your computer

- 1 Connect the handset and PC via USB cable and wait for a while. Installation guide message will be displayed.
- 2 Follow the instructions on the screen to complete the LG PC Suite Installer wizard

3 Once installation is complete, the LG PC Suite icon will appear on your desktop.

Viewing your phone files on your PC

Viewing the contents of your phone on your PC helps you to arrange files, organise documents and remove contents you no longer need.

- 1 Connect your phone to your PC as outlined previously.
- 2 Click on the Photos icon.
- 3 Phone image files will be loaded on the PC. When you click on the Phone Memory, they will be displayed.
- 4 Click on the Videos icon

supported by this device

5 Phone video files will be loaded on the PC. When you click on the Phone Memory, they will be displayed.

Note: When uninstalling PC Suite IV, USB and Bluetooth Drivers are not automatically removed. Therefore, they must be uninstalled manually Note: LG air Sync and On Screen Phone (OSP) are not

1 Connect the USB cable to your phone and your PC.

- 2 Select the PC suite from the popula menu in your phone
- 3 Click on the Backup icon, and select Backup or Restore.

Backing up and restoring your phone's information

- 4 Mark the contents you would like to back up or restore. Select the location you would like to backup information to, or
- restore information from Click OK 5 Your information will be backed up.

Guidelines for safe and efficient use

Please read these simple guidelines. Not following these guidelines may be dangerous or illegal.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information. This mobile phone model LG-C320 has been designed to comply with applicable safety requirements for exposure to radio waves. These requirements are based on

- The radio wave exposure quidelines employ a unit of measurement known as the Specific Absorption Rate or SAR Tests for SAR are conducted using standardised methods with the phone transmitting at its highest certified power level in all used frequency bands
- While there may be differences between the SAR levels of relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP) is 2W/kg averaged over 10g of tissue.

⚠ WARNING

1a of tissue.

body is 1.33 W/kg(10 g).

Product care and maintenance

Only use batteries, chargers and accessories approved for use with this particular phone model. The use of any other types may void any approval or warranty applying to the phone. and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required. Repairs under warranty, at LG'soption, may include replacement parts or boards that are either new or reconditioned, provided that they have functionality equal to that of the parts being replaced.
- personal computers.

radiators or cookers. Do not dron

• Do not subject this unit to mechanical vibration or shock.

- special regulations. For example, do not use your phone in
- charged. It may cause an electric shock and can seriously damage your phone.
- handset can become hot and create a fire hazard. Use a dry cloth to clean the exterior of the unit (do not use
- solvents such as benzene thinner or alcohol)
- The phone should be charged in a well ventilated area.
- Do not subject this unit to excessive smoke or dust.
- tickets: it can affect the information on the magnetic strips.

- · Do not tap the screen with a sharp object as it may damage
- Do not expose the phone to liquid or moisture.
- Use the accessories like earphones cautiously. Do not touch the antenna unnecessarily.

Efficient phone operation

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment. Avoid placing the phone over pacemakers, for example, in your breast pocket.
- · Mobile phones may interfere with some hearing aids. · Minor interference may affect TVs, radios, PCs, etc.

Check the laws and regulations on the use of mobile phones in the area when you drive.

- Do not use a hand-held phone while driving
- · Give full attention to driving.
- · Use a hands-free kit, if available.
- · Do not take notes or look up phone numbers while driving. Jotting down a "to do" list or flipping through your address book takes attention away from your primary responsibility, driving safely.
- If possible, place calls when you are not moving or before pulling into traffic. Try to plan calls when you will not be drivina. Do not engage in stressful or emotional conversations that
- may be distracting. Make people you are talking with aware you are driving and suspend conversations that have the potential to divert your attention from the road. · Call roadside assistance or a special nonemergency wireless assistance number when necessary. If you see a broken down

vehicle posing no serious hazard, a broken traffic signal, a

minor traffic accident where no one appears injured, or a

vehicle you know to be stolen, call roadside assistance or

other special nonemergency wireless number.

- driving conditions so require
- such as car stereos and safety equipment • If your vehicle is equipped with an airbag, ensure it is not obstructed by your mobile device or accessories. It may fail or cause a serious injury if obstructed when deployed.
- If you are listening to music whilst out and about, please ensure that the volume is at a reasonable level so that you are aware of your surroundings. This is particularly imperative

Avoid damage to your hearing

Damage to your hearing can occur if you are exposed to loud sound for long periods of time. We therefore recommend that you do not turn on or off the handset close to your ear. We also recommend that music and call volumes are set to a reasonable level

Glass Parts

Some parts of your mobile device are made of glass. This glass could break if your mobile device is dropped on a hard surface or receives a substantial impact. If the glass breaks, do not

· Pull off the road and park before making or answering a call if touch or attempt to remove. Stop using your mobile device until the glass is replaced by an authorized service provider. • RF energy may affect some electronic systems in your vehicle Blasting area

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

- Potentially explosive atmospheres
- Do not use the phone at a refueling point. • Do not use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the same compartment of your vehicle as your mobile phone and accessories.

In aircraft

Technical Data

Min -10°C

Ambient Temperatures

Wireless devices can cause interference in aircraft.

- Turn your mobile phone off before boarding any aircraft.
- Do not use it on the ground without permission from the crew

Keep the phone in a safe place out of the reach of small children. It includes small parts which may cause a choking hazard if detached.

· Max: +55°C (discharging) +45°C (charging)

Declaration of Conformity

C€0168

Emergency calls may not be available under all mobile networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service

- Use your wireless phone to call emergency services for yourself or others in the case of fire, traffic accident or medical
- New Zealand Dial (1-1-1)

Remember, it is a free call on your wireless phone for emergency services.

 Use your wireless phone to help others in emergencies, if you see an auto accident crime in progress or other serious emergency where lives are in danger, call the emergency number, as you would want others to do for you.

Battery information and care

· You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory

//ANUFACTURER'S WARRANTY sustralia & New Zealand

LG offers you a warranty that the enclosed Product and its enclosed accessories w from defects in material and workmanship according to the following terms and co

(1) The warranty for the Product is for ONE (1) year beginning on the date of purchase of

1. WHAT THIS WARRANTY COVERS:

Keep away from electrical appliances such as TVs, radios, and

effect that could compromise the battery's performance.

- · Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack. • Keep the metal contacts of the battery pack clean. Replace the battery when it no longer provides acceptable
- performance. The battery pack maybe recharged hundreds of times until it needs replacing. · Recharge the battery if it has not been used for a long time to
- maximize usability. • Do not expose the battery charger to direct sunlight or use it in high humidity, such as in the bathroom
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance. • There is risk of explosion if the battery is replaced by an
- incorrect type Dispose of used batteries according to the manufacturer's instructions. Please recycle when possible. Do not dispose as
- · If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.

- · Actual battery life will depend on network configuration, product settings, usage patterns, battery and environmental

Your wireless telephone gives you the powerful ability to communicate by voice - almost anywhere, anytime. But an phones, one that every user must uphold. When driving a car, driving is your first responsibility. When using your wireless phone behind the wheel of a car, practice good common sense

and remember the following tips: • Use a hands free device. If possible, add an additional layer of convenience and safety to your wireless phone with one of the many hands free accessories available today.

· Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.

Accessories

Various accessories are available for use with your mobile phone. These are detailed below.

Charger Battery Stereo headset

NOTE

- · Always use genuine LG accessories. Failure to do so may void vour warranty Accessories may be different in different regions. Please
- check with our regional service company or agent for further enquires.

Backlight - Choose how long the backlight remains on. Also, use the navigation keys to adjust the main screen brightness. TIP! The longer the backlight is on for, the more battery power is used and you may need to charge your phone

Menu style - Change the menu view to List style or Grid style.

Homescreen - Adjust the Wallpaper and Display items.

Theme - Ouickly change the whole look of your screen.

code to activate this function.

Changing your display settings

1 Press Menu and select Settings.

2 Select Display and choose from:

more often

Font - Adjust the font style and Font Size.

Greeting message - After selecting On, you can write a welcome message. The message will appear on screen whenever you start-up the phone.

start-up/shut down screen.

scientific guidelines that include safety margins designed to assure the safety of all persons, regardless of age and health.

- various LG phone models, they are all designed to meet the

Emergency calls

- provider.
- emergincies:
- Australia Dial (0-0-0)
- International Dial (1-1-2) other local emergency number.

- (2) Defects or damage from abnormal use, abnormal conditions, improper storage exposure to moisture or damoness, unauthorised modifications, unauthorised
- (3) This warranty is only valid to the original purchasing Customer for the duration of the warranty period as long as it is purchased and used in AUSTRALIA or NEW ZEALAND (4) During the warranty period, any defective LG Product or part will be repaired or replaced by LG or its authorised service centre, at LG's option, with new or factor rebuilt replacement items. LG or the authorised service centre will return the Pro
- rebuilt replacement items. LG or the authonsed service centre will return use rivue, to the Customer in working condition. No charge for either parts or labour in repair or replacement of the Product will be incurred by the Customer. If parts, boards or equipment are replaced, they shall become the property of LG. (5) Upon request from LG, the Customer must provide LG with proof of the date of (6) The Customer will bear the cost of transporting, delivering and handling the Product to and from LG or its authorised service centre.
- (7) The benefits available from this warranty are in addition to all applicable statutory

2. WHAT THIS WARRANTY DOES NOT COVER:

- (1) Defects or damage resulting from use of the Product in other than its normal and customary manner.
- exposure or inclusive or camprisss, unadounteed incommenders, unadounteed connections, unauthorised repair, misuse, neglect, abuse, accident, afteration, improper installation, or other acts which are not the fault of LG, including damage caused by shipping, blown fuses, spills of food or liquid. (3) Breakage or damage to antennas, unless caused directly by defects in material or
- who the statement of the Product during the applicable warranty period, the Customer shall have no coverage or benefits under this warranty. (5) Products which have had the serial number removed or made illegible.

(6) If the battery short circuits or the seals of the battery are broken or show a

- of tampering, or the battery was used in equipment in a manner other than that which has been specified, the Customer shall have no coverage or benefits unde (7) Damage resulting from use of non-LG approved accessories (8) All plastic surfaces and all other externally exposed parts that are scratched or damaged due to normal use.
- (9) Products operated outside published maximum ratings.
- (10) Products used or obtained in a rental program.

- 3 Your LG-C320 will automatically connect to your Bluetooth

Sending and receiving your files using Bluetooth

- 2 Select Activate Bluetooth
- - 4 Choose the device you want to send the file to and select **OK**.
 - The unit should be kept away from heat sources such as

 - · Switch off the phone in any area where you are required by
 - hospitals as it may affect sensitive medical equipment. · Do not handle the phone with wet hands while it is being
 - Do not charge a handset near flammable material as the
 - Do not charge the phone when it is on soft furnishings.
 - Do not keep the phone next to credit cards or transport.
 - · Always unplug the charger from the wall socket after the phone is fully charged to save unnecessary power consumption of the charger.
- conditions.

Driver Safety Tips

important responsibility accompanies the benefits of wireless

ANUFACTURER'S WARRANTY Istralia & New Zealand

(13) Where applicable, Products that have been subject to an unauthorised removal or deactivation of the network operator lock function. 3. STATEMENT:

Except for those terms that cannot by law be excluded, all terms other than those coupp to muscle settins late cannot by larve devaluously, at lest to some it and truste questess) contained in this warranty statement are excluded. To the extent permitted by law, LE excludes all liability (whether in contract, for or or or or consequential special, incidental or infrarect loss or demange including loss of profit, loss or impairment of privacy of conversations, work stoppage or loss or impairment of data arising out of the use or inability to use the Product.

(12) Defects or damage resulting from breakage of or tampering with the LCD screen

4. HOW TO GET WARRANTY SERVICE: o obtain information regarding warranty service, please call the following toll free dephone numbers:

AUSTRALIA: LG Electronics Australia Pty Ltd 2 Wonderland Drive Eastern Creek NSW 2766 PD Roy 212 PO Box 212 HORSLEY PARK NSW 2175 Tel: 1300 LG CARE (1300 54 2273) Australia Fax: 02-8805-4201

NEW ZEALAND: LG Electronics Australia Pty Ltd Unit 1, 3.8 Highbrook Drive East Tamaki 2013. PO Box 68195 Greenmount Auckland 2141 Tei: B800 LG CARE (0800 54 2273) New Zealand Eav 100-014-2441

LG Electronics Australia Ptv Ltd

LG Electronics Lagistics and Services B.X. Videoraccom 15, 1327 AC Aframa, The Netherlands (11) Concumphilos (such as fuspe)