




★ HD connection

Using an HDMI Cable

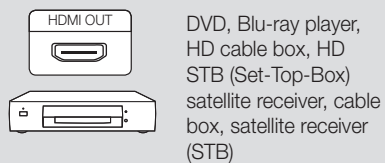

★ HD connection


Using an HDMI to DVI Cable

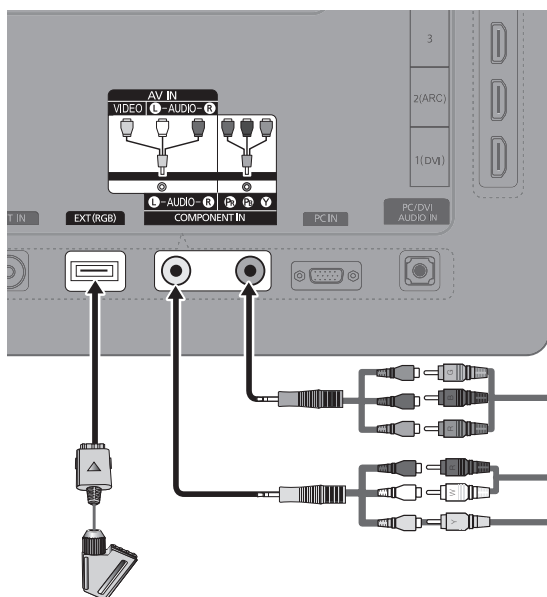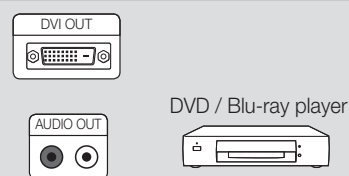

Using a Scart Cable

Component connection

Using a Component Cable

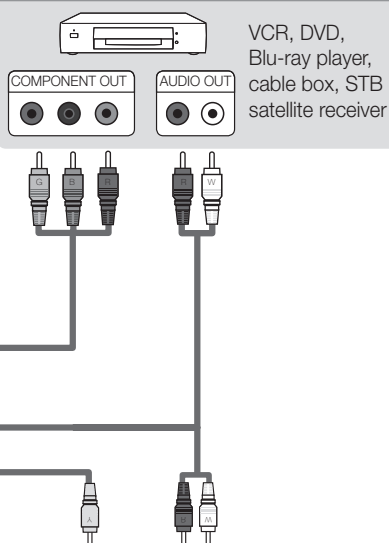


Using an Audio/Video Cable

Plasma TV

QUICK SETUP GUIDE

The Supplied Accessories

 - Remote Control & Batteries (AAA x 2)
- Owner's Instructions
- Cleaning Cloth



- Blanking Bracket & Screw (X1)



- Holder-Wire stand



- Cable Tie



- Holder-Wire (3EA)



- SCART Adapter



- Component Adapter



- AV Adapter




- Ferrite Core (2EA)




- Ferrite Core (2EA)

Ferrite Core: The ferrite cores are used to shield the cables from interference. When connecting a cable, open the ferrite core and clip it around the cable near the plug as shown in the figure.

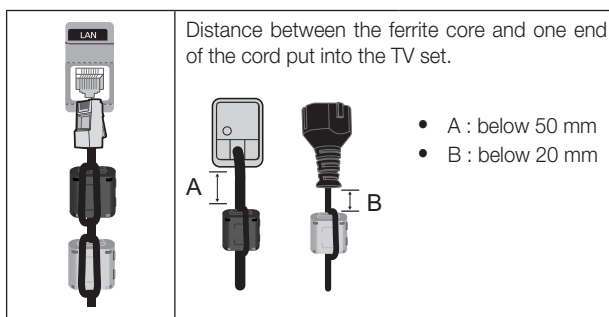

 See separate guide for installing the stand.



- Stand (1EA)



- Guide Stand (1EA)



- 5EA (M4 X L12)



- 5EA (M4 X L10)


- Screws




BN68-02806A-00

Installing the Stand


Preset

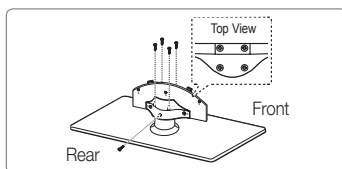

Step 1

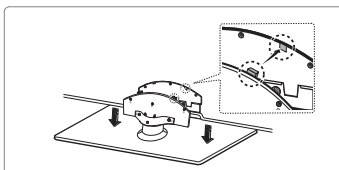

Step 2

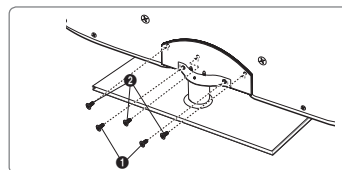

Preset: Place the Guide Stand and Cover Neck onto the stand and fasten it using the screws. Applicable to models (Depending on the model)


Step 1. Attach your PDP TV to the stand.

- Two or more people should carry the TV.
- Make sure to distinguish between the front and back of the stand when assembling them.
- To make sure the TV is installed on the stand at a proper level, do not apply excess downward pressure to the upper left or right sides of the TV.


Step 2. Fasten two screws at position 1 and then fasten three screw at position 2.

- Stand the product up and fasten the screws. If you fasten the screws with the PDP TV placed down, it may lean to one side.

Using the remote control buttons

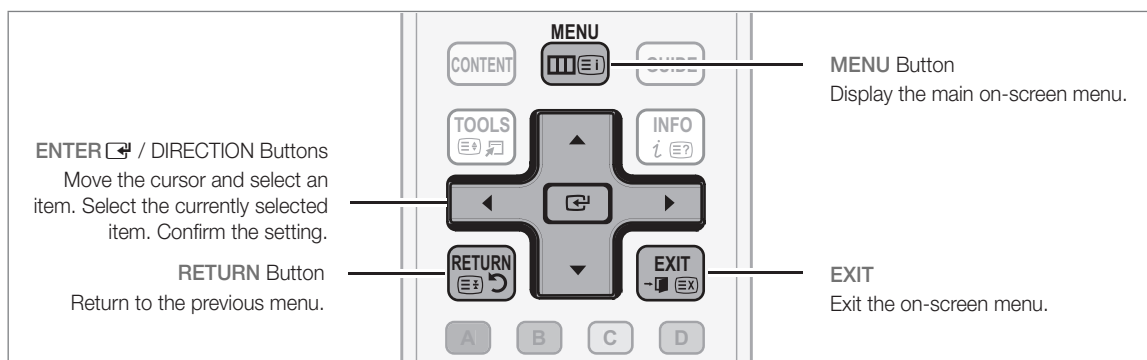

Installing Batteries in the Remote Control

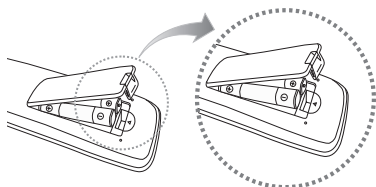


NOTE

- Use the remote control within 23 feet from the TV.
- Bright light may affect the performance of the remote control. Avoid using nearby special fluorescent light or neon signs.
- The colour and shape may vary depending on the model.

Plug & Play

When the TV is initially powered on, basic settings proceed automatically and subsequently. If you want to reset this feature, press the **MENU** button to display menu. You can set the Plug & Play by selecting 'Setup → Plug & Play'.

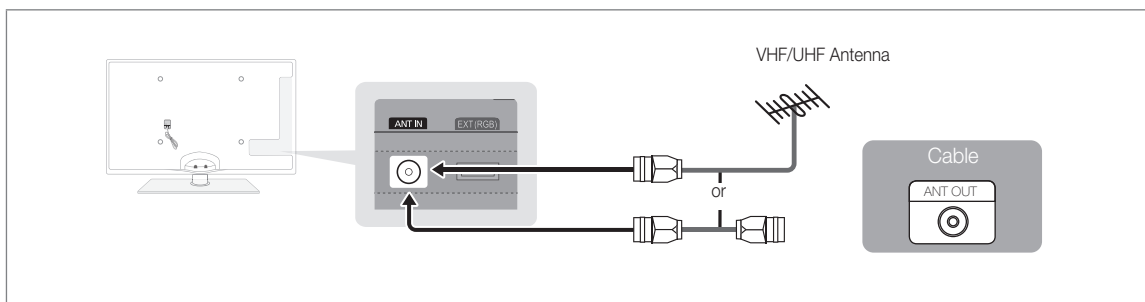

On the screen, you can set as follows.

The each step may vary depending on the Antenna source.

