QUICK START






X100 | Action Camera





Getting Started - Remove Camera from Waterproof housing.

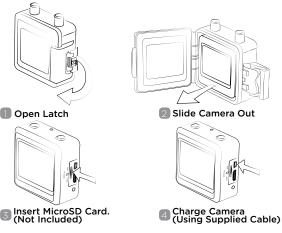

Before you can use the X100 please ensure the battery has been charged. It takes approximately 5 hours to fully charge.


Product Diagram

- A Wi-Fi Activation button
- B LED power indicator
- C LCD screen
- D SHOOT(menu select)

- POWER (and menu)
- G USB interface




Mini HDMI interface

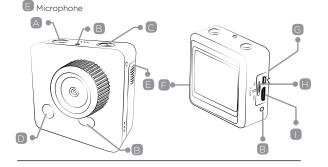

Camera Settings

- Default Video Capture Resolution: 1080P@60fps
- Default Camera Capture Resolution: 8M (3264x2448)

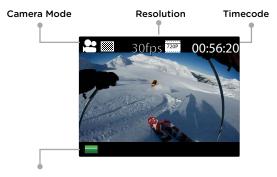

Battery Indicator



Wi-Fi Setup

The X100 allows full camera control, live previewing and playback of photos/videos on most Smartphones and Tablets.

1. Download the App onto your Smart Phone: www.kaiserbaas.com/apps/x100-app Kaiser Baas X100



- 2. Activate Wi-Fi on your X100 camera by pressing Wi-Fi button.
- Go to the Wi-Fi settings on your Phone, you will see Kaiser Baas X100 in the list of available Wireless networks (WIFI_CAM_000).

Using Camera Modes





HOLD the POWER button for 5 seconds to turn the X100 ON. Press the SHOOT button to start recording Video or taking Photos. To swap between Video Mode and Photo Mode HOLD the SHOOT button for 3 seconds and then release.

Wrist Remote

Please note: with the remote control you cannot turn the camera on. Please ensure the camera is switched on before using the remote. The remote is not waterproof. To use the remote simply click the function you would like to perform. No pairing or setup needed. You may use only one remote per camera.

A LED Indicators





- D Power Off Hold for 5 secs
- Micro USB Charge Port
 On the Back of Remote



More Support

Need further assistance? Please visit: www.kaiserbaas.com/support

Or email: helpdesk@kaiserbaas.com

For the full Kaiser Baas accessories range visit www.kaiserbaas.com

CHALLENGE YOURSELF