



®  
GENERATION FUTURE

# HOOVER



## USER MANUAL

## IMPORTANT SAFETY REMINDERS

This appliance should only be used for domestic cleaning, as described in this user guide. Please ensure that this guide is fully understood before operating the appliance.

Do not leave the appliance plugged in. Always switch off and remove the plug from the socket after use, or before cleaning the appliance or any maintenance task.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

If the power cord is damaged stop using the appliance immediately. To avoid a safety hazard, an authorised Hoover service engineer must replace the power cord.

Keep hands, feet, loose clothing and hair away from rotating brushes.

Use only attachments, consumables or spares recommended or supplied by Hoover.

When using cleaning tools ensure that the appliance is kept in the upright (parked) position. This will avoid possible damage to the carpet or floor covering. When cleaning stairs, do not position the appliance above you.

Static electricity: some carpets can cause a small build up of static electricity. Any static discharge is not hazardous to health.

Do not use your appliance out of doors or on any wet surface or for wet pick up.

Do not pick up hard or sharp objects, matches, hot ashes,

cigarette ends or other similar items.

Do not spray with or pick up flammable liquids, cleaning fluids, aerosols or their vapours.

Do not run over the power cord when using your appliance or remove the plug by pulling on the power cord.

Do not continue to use your appliance if it appears faulty.

Hoover service: To ensure the continued safe and efficient operation of this appliance we recommend that any servicing or repairs are only carried out by an authorised Hoover service engineer.

Do not stand on or wrap the cord around arms or legs when using your appliance.


Do not use the appliance to clean animals or people.

When using the cleaning tools, ensure to always steady the appliance with your other hand. This will ensure that the appliance does not fall while in use.

**WARNING:** A thermal cut out switches off the appliance to prevent overheating if it is used when full or there is a blockage or dirty filters. If this should happen then switch off, unplug and correct the fault. It will take approximately 45 minutes for the cut out to automatically reset.

### The Environment

 
The symbol on this appliance indicates that this appliance may not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For more detailed information about treatment, recovery and recycling of this appliance, please contact your local city office, your household and waste disposal service or the shop where you purchased the appliance.

 This appliance complies with the European Directives 2006/95/EC, 2004/108/EC and 2011/65/EU.

HOOVER Limited, Pentrebach, Merthyr Tydfil, Mid Glamorgan, CF48 4TU, UK


## Effortless cleaning with your new Hoover

This vacuum cleaner is supplied with an Energy Label as required by European Regulation (EU) 665/2013. The label shows a red prohibition circle on the right covering the hard floor symbol. This indicates that the vacuum cleaner is not suitable for use on hard floors.

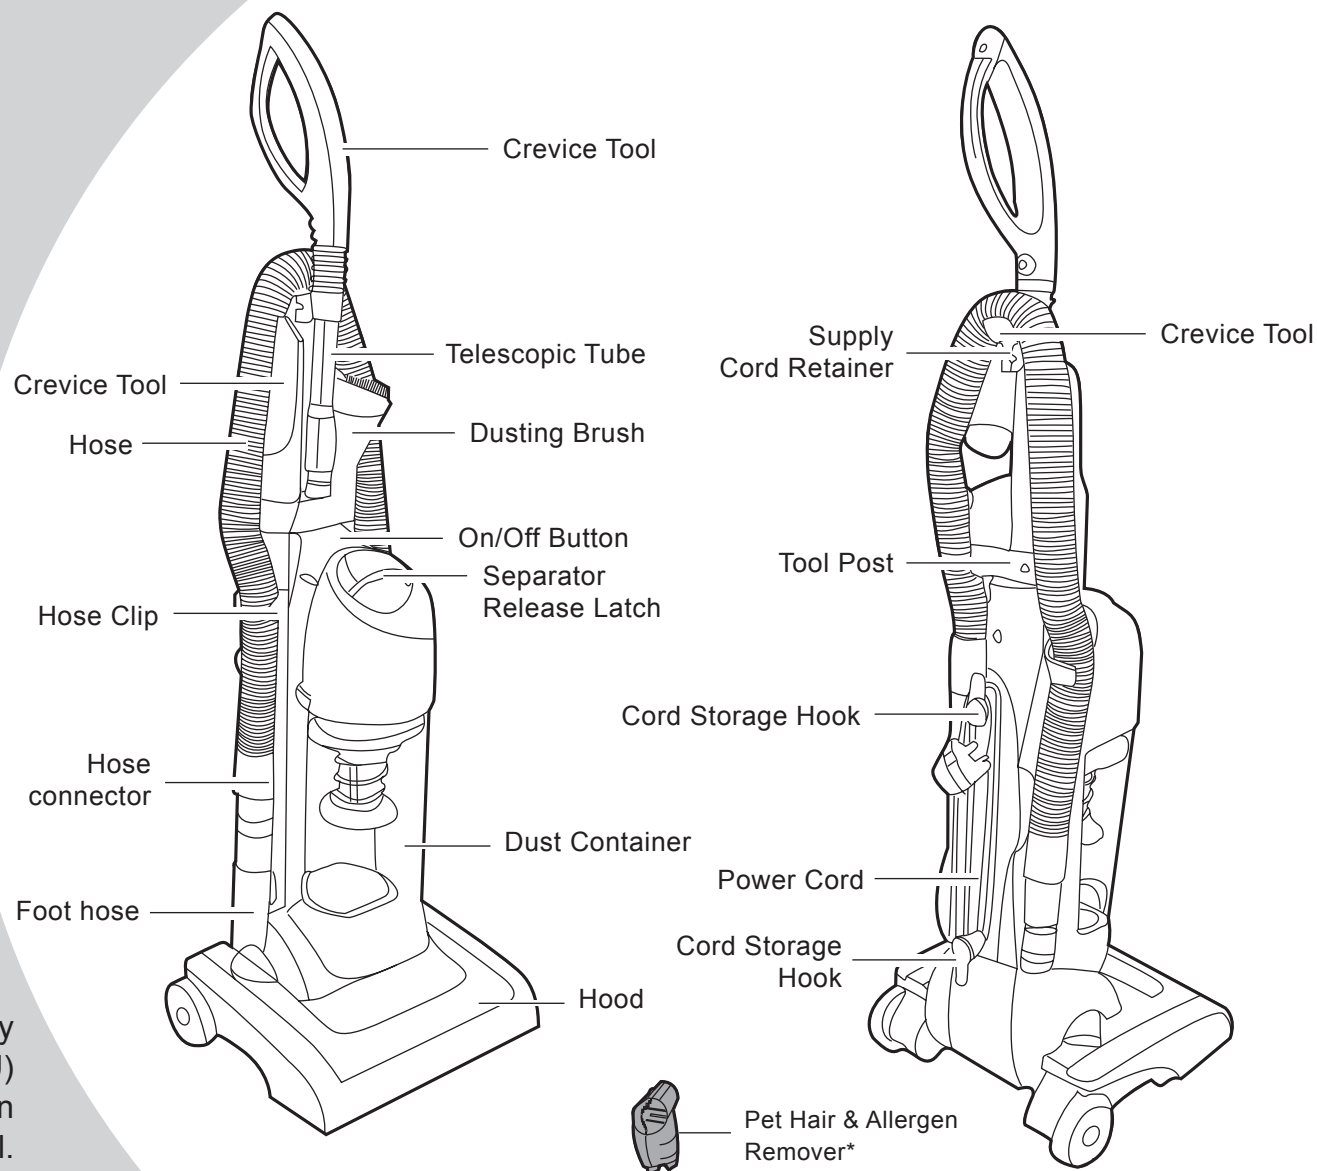


## PREPARING TO USE YOUR CLEANER

 
- 1 Insert handle and tube assembly into body of cleaner.
- 2 Align holes and push bolt through. Remove the bin then fit the nut. Securely fasten the bolt.
- 3 Locate the tools on the tool holder.
- 4 Position hose over handle hose support.
- 5 Position hose in lower hose clip.
- 6 Push hose end into foot hose socket.
- 7 Rotate cord storage hook to release power cord.
- 8 Secure power cord in retainer.

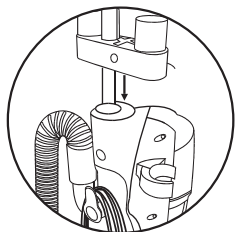


1

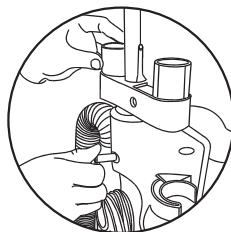 


2

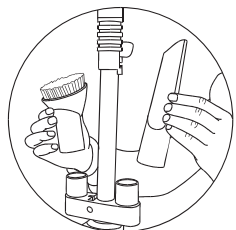 


3

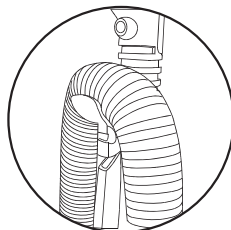 


4

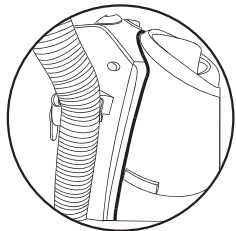 


5

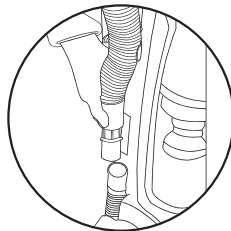 

6

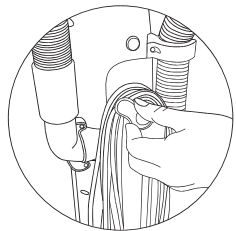 


7

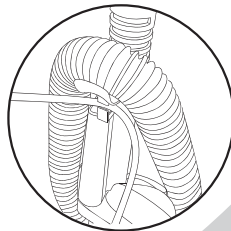 

8


## POWER SWITCH SETTING
 
### Switching on and off

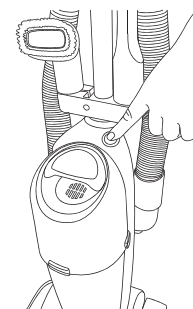

Push bottom of the switch to switch on.  
Push top of switch to switch off.

## CLEANER RELEASE


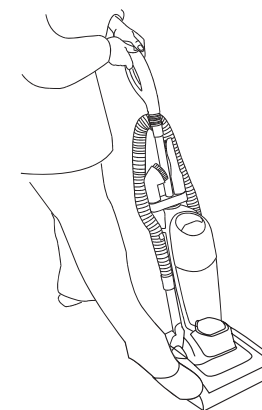 


Unlock the cleaner by placing one foot on the hood and leaning the handle backward.  
For cleaning under low furniture simply lower handle to floor.

## CLEANING TOOLS

  **! IMPORTANT:** When using cleaning tools, the cleaner must be kept in the upright (parked) position, particularly when cleaning stairs.


Detach cleaning hose.

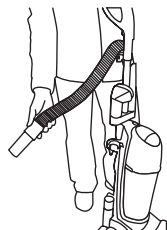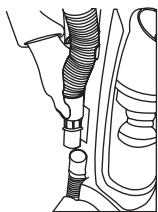


Fitting crevice tool.



 Fitting dusting brush.

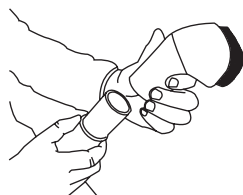

 All accessories can fit on the end of the tube.

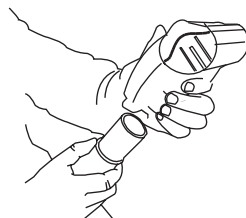


**Pet Hair & Allergen Remover\***  
Ideal for removing pet hairs.  
Do not touch the rotating brush.

(\*certain models only)


## CLEANING THE STAIRS

 IT IS DANGEROUS TO PLACE THE CLEANER ABOVE YOU WHEN CLEANING STAIRS


**ALWAYS** work with the cleaner below you. Ensure it is positioned up against the bottom step.

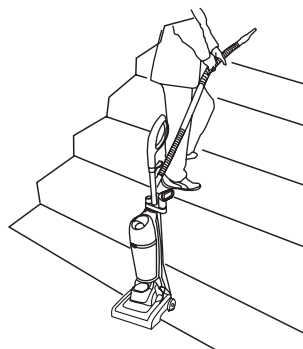


## REMOVAL AND EMPTYING OF THE DUST CONTAINER

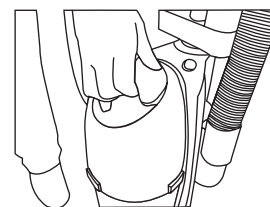 


Lift the container release catch.

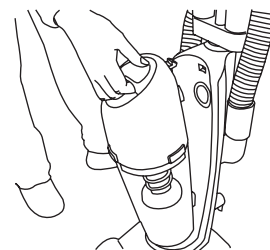 

Tilt the container forwards and remove.

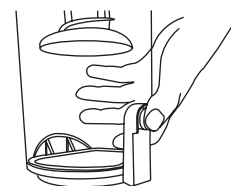 

Hold the container away from you.

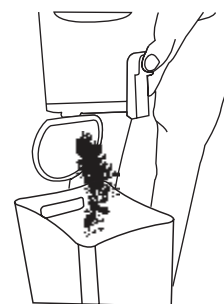 

Thanks to its easy opening system, the dust container opens and empties with no dust contact.

## MAINTAINING THE DUST CONTAINER AND FILTERS

(PERIODIC MAINTENANCE IS REQUIRED TO MAINTAIN OPTIMUM PERFORMANCE)

 


Remove the dust container as described on the previous page.


Twist the top part of the container whilst holding the lower part.



Remove the container top to expose the pre-motor filter.

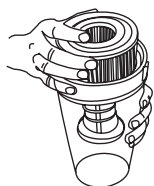

Carefully remove the pre-motor filter.

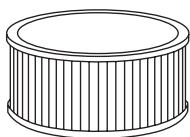 


The pre-motor filter should be washed after every five bin empties. Wash under hand warm water. Remove excess water and leave to dry for 24 hours. When completely dry, refit the filter.



Remove the separator screen.



 
Inspect the separator screen and remove any dust and debris with a soft brush. The separator screen can be washed when necessary with hand warm water.

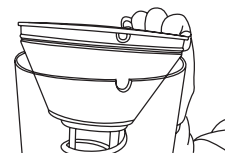


Refit the separator screen. Please pay attention to alignment tab.



 
Refit the Pre-motor filter only when completely dry.

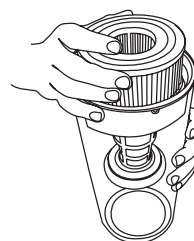

 Open end of the pre-motor filter must face upwards.

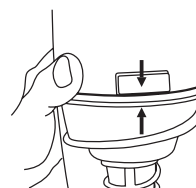

 Refit the container top. Please pay attention to alignment tab.

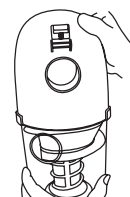


Twist the top part of the container whilst holding the lower part to lock together.



## CHANGING THE BELT OR BRUSH

 If your cleaner is not picking up efficiently, the belt or brush (or both) may need replacing, but first make sure you have:


- Emptied the dust container
- Cleaned the filters
- Checked for blockages

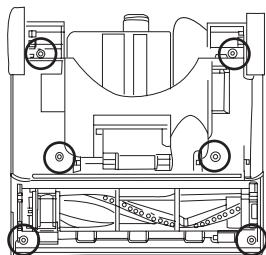


### Remove hood

Turn the machine over.

 
Locate the six screws as shown opposite.

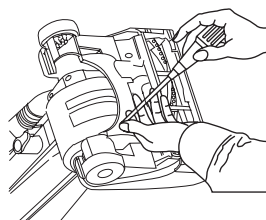

Remove the screws completely.

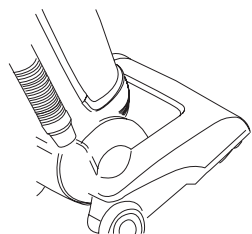 

 Remove the hood. Inspect the belt and brushes.

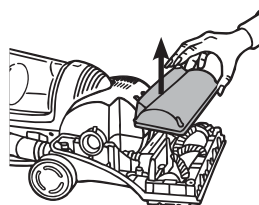


Lift off brushroll guard to remove.

To remove the brush, pull upwards and outwards.




 **IMPORTANT:** Switch cleaner off and remove plug from electricity supply before checking the brushes or removing hood.

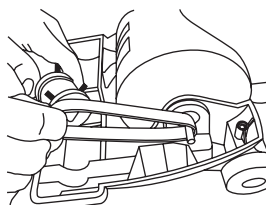


### Replace belt

 
Locate the new belt around the motor spindle then around the brush. Locate the left hand end of the brush in cleaner housing.

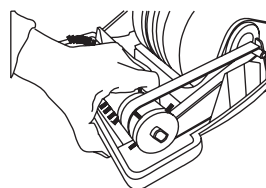

 Hold the brush assembly and stretch the belt until brush mountings slot down into the cleaner housing.

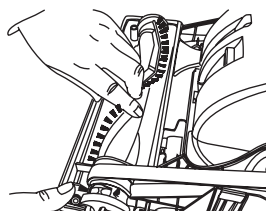


 Rotate the brush to ensure free movement of the belt.

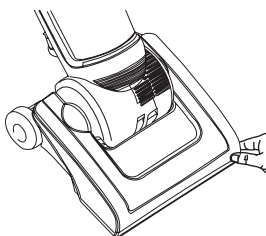

### Refit hood.

 Secure hood and brush guard, using screws.

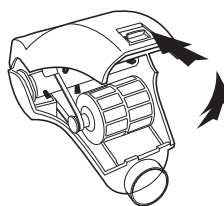

### Remove a blockage from the pet Hair & Allergen Remover \*

Open clip and lift cover to remove blockage.

 
(\*certain models only)

## CLEARING A BLOCKAGE




**IMPORTANT:** Switch the cleaner off and remove the plug from the electricity supply before dismantling cleaner.


This cleaner is unlikely to become blocked, except by overfilling of the dust container or accidentally picking up large solid objects. Clearing a blockage is simple.

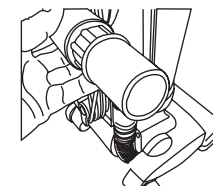

 If cleaning tools were in use, check cleaning tool. Next check hose handgrip.

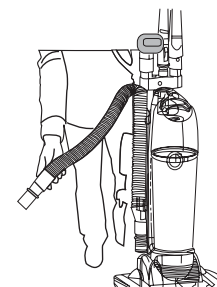

 Turn the cleaner ON and stretch the hose to its full length.

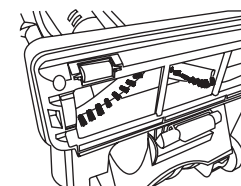

Check that the brushes are free of debris and can rotate.




Check for a blockage in the hose socket.


## Filter Maintenance

 To maintain optimum performance, please follow these steps:


1. Rinse filter under hand warm water.
2. Do not scrub the filter.
3. Remove the excess water with a dry cloth and leave to air dry for 24 hours.

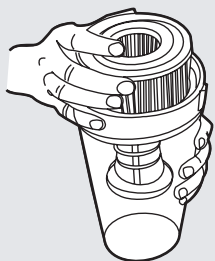

Remove pre-motor filter.

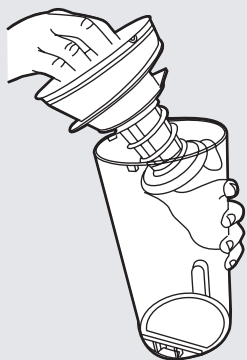 

Remove separator screen.

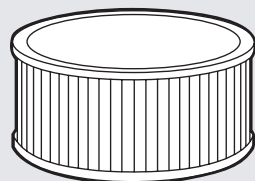 

Wash the pre-motor filter under hand warm water and leave to air dry for 24 hours or until completely dry.

Do not scrub or brush the filter as permanent damage will occur.

## User checklist

If your cleaner is not working properly run through the following checklist.

1. Is there a working electricity supply to the cleaner? Check with another electrical product.
  2. Is the dust container full or choked with fine dust? To empty the dust container see the instructions on page 5/6.
  3. Is the hose blocked? To clear a blockage, see the instructions on page 7.
  4. Is there a blockage in the cleaner base? To clear a blockage, see the instructions on page 7.
  5. Are the filters blocked? To clear the filters, see the instructions on page 6.
  6. Are the brushes rotating correctly? To check the brushes, see the instructions on page 7.
  7. Has the cleaner overheated? If so, it will take about 45 minutes to reset itself.
- If there is any doubt call the Hoover Service Office for advice. They may be able to assist you over the telephone. A service charge will be made if the cleaner is examined and found to be in working order, has not been assembled in accordance with these instructions or has been used incorrectly.

## WARNING!

A thermal cut out switches off the cleaner to prevent overheating if it is used when full or there is a blockage or dirty filters. If this should happen switch off, unplug and correct the fault. It will take about 45 minutes for the cut out to automatically reset.

**IMPORTANT:** Do not run cleaner over the supply cord as this could damage the supply cord insulation.



## **IMPORTANT INFORMATION**

### **Hoover Service**

Should you require service at any time, please contact your local Hoover Service Office.

### **Hoover spares and Consumables**

Always replace parts with genuine Hoover spares. These are available from your local Hoover dealer or direct from Hoover. When ordering parts always quote your model number.

## **Quality**

Hoover's factories have been independently assessed for quality. Our products are made using a quality system which meets the requirements of ISO 9001

## **GUARANTEE STATEMENT**

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Subject to change without notice.



GENERATION FUTURE

Hoover Limited  
Pentrebach  
Merthyr Tydfil  
Mid Glamorgan  
CF48 4TU

HOOVER CUSTOMER HELPLINE  
08444 995 599

© 2014 48011330