


Polycom® EagleEye™ MSR Camera Quick Tips


3725-61109-002A | August 2017

The Polycom EagleEye MSR Camera system includes a USB motorized pan-tilt-zoom (MPTZ) camera and supports certified Skype Room Systems docks only.



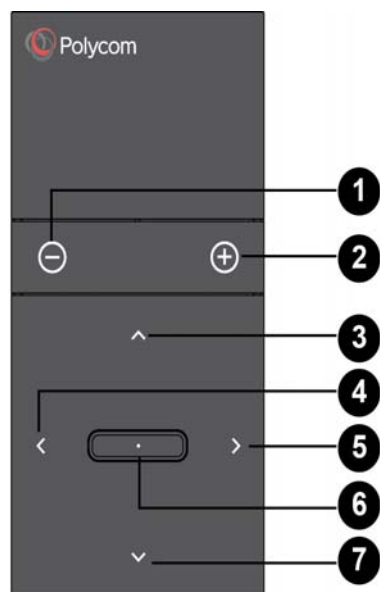

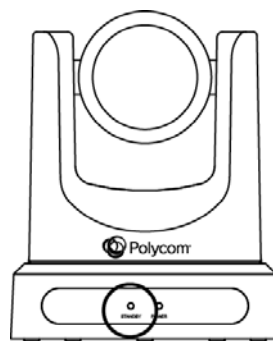


Parts of the Remote Control

| Number | Description |
|--------|--|
| 1 | Zoom camera out |
| 2 | Zoom camera in |
| 3 | Pan / tilt the camera using the up button |
| 4 | Pan / tilt the camera using the left button |
| 5 | Pan / tilt the camera using the right button |
| 6 | Press Select button to set the camera position |
| 7 | Pan / tilt the camera using the down button |



Indicator Lights

| Indicator | Description |
|---|--|
|  | Sending video |
|  | Sleep |
|  | Boot |
|  | Blinking amber lights indicate the firmware upgrade is in progress |
|  | Blinking green lights indicate the camera Home position is set |

Wake the EagleEye MSR Camera System

You can wake the EagleEye MSR camera system in the following ways:

- Press any button on the remote.
- Send the video content.
- Place a call.



Set Camera Home Position

- » Press and hold the **Select** button for 5 seconds until the LED light blinks green.

Move to Camera Home Position

- » Press the **Select** button.

Zoom In or Out

- Press  to zoom in.
- Press  to zoom out.

Pan or Tilt

- » Press the left, right, up, and down navigation buttons to pan or tilt the camera.

More Information

For a better user experience, Polycom recommends using an Icron 2304 extender with the EagleEye MSR Camera system to extend a USB connection.

For more information about setting up and using the system, refer to support.polycom.com.