4-139-836-**11**(1) SONY

FM/AM Clock Radio

Operating Instructions

ICF-C7iP

DREAM MACHINE







No Power No Problem is a trademark of Sony Corporation.

©2009 Sony Corporation

http://www.sony.net/

SONY_®

Portable Audio

LIMITED WARRANTY (U.S. Only)

Sony Electronics Inc. ("Sony") warrants this product against defects in material or workmanship for the time periods and as set forth below. Pursuant to this Limited Warranty, Sony will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. For purposes of this Limited Warranty, "refurbished" means a product or part that has been returned to its original specifications. In the event of a defect, these are your exclusive remedies.

Labor: For a period of one (1) year from the original date of purchase of the product ("Labor Warranty"), Sony will, at its option, repair or replace with new or refurbished product, product determined to be defective. If Sony elects to replace the product after this Labor Warranty has expired but while the Parts Warranty below is still in effect, it will do so for the applicable labor charge.

Parts: For a period of one (1) year from the original date of purchase of product ("Parts Warranty"), Sony will supply new or refurbished replacement parts in exchange for parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: To obtain warranty service, you must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the Sony authorized service facility specified. packaging or packaging attoruling an equal degree of protection to the Sorry authorized sorrise country to the sorry authorized sorrise country to the sorry authorized sorrise that it is your responsibility to backup any data, software or other materials will be lost or reformatted during service and Sony will not be responsible for any such damage or loss. A dated purchase receipt is required. For specific instructions on how to obtain warranty service for your product,

Visit Sony's Web Site: www.sony.com/service

Or call the Sony Customer Information Service Center 1-800-222-SONY (7669)

For an accessory or part not available from your authorized dealer, call

1-800-488-SONY (7669)

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become the property of Sony.

This Limited Warranty only covers product issues caused by defects in material or workmanship during ording consumer use; it does not cover product issues caused by any other reason, including but not limited to procissues due to commercial use, acts of God, misuse, limitations of technology, or modification of or to any pa the Sony product. This Limited Warranty does not cover Sony products sold AS IS or WITH ALL FAULTS or consumables (such as fuses or batteries). This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only in the United States.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This Limited Warranty gives you specific legal rights and you may have other rights which vary from state to state.

Owner's Record

Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding

Model No. ICF-C7iP

Serial No.

For customers who purchased this product in the

Please register this product on line at Please register this product on line at http://www.sony.com/productregistration.

Proper registration will enable us to send you periodic mailings about new products, services and other important announcements. Registerly your product will also allow us to contact you in the unlikely event that the product needs adjustment or modification. Thank you.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of fire, do not cover the ventilation of the apparatus with newspapers, tablecloths, curtains, etc. And do not place lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the appliance in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

As the main plug is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the main plug from the AC outlet immediately.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this

CAUTION

Danger of explosion if battery is incorrectly replaced. Replace only with the same or



CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN





This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the iterature accompanying the appliance.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more

- of the following measures:

 Reorient or relocate the receiving
- Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is
- Consult the dealer or an experienced radio/TV
- technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING

· Replace the battery for the clock backup with a Sony CR2032 lithium battery, and the battery for the remote commander with a Sony CR2025 lithium battery. Use of another battery may present a risk of fire or explosion.

- Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.
- Dispose of used battery promptly. Keep away from children

Important Safety Instructions

- 1) Read these instructions
- 2) Keep these instructions.
- 3) Heed all warnings.

instructions.

- 4) Follow all instructions
- 5) Do not use this apparatus near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over



 $13)\,Unplug \ this \ apparatus \ during \ lightning \ storms$ or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

For the state of california, USA only

Perchlorate Material -special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate Perchlorate Material: Lithium battery contains

Features

- · Wake or sleep to iPod/Radio
- Dual Alarm
- FM/AM 2-band digital synthesized tuner
- 30 Station Presets (20 FM. 10 AM)
- Brightness Control (High/Mid/Low) Extendable Snooze system from 10 to 60 min

Precautions

- Play the unit on the power source specified in "Specifications."
- To disconnect the AC power cord (mains lead), pull it out by the plug, not the cord.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off. Since a strong magnet is used for the speaker,
- keep personal credit cards using magnetic coding or spring-wound watches away from the unit to prevent possible damage from the magnet. • Do not leave the unit in a location near a heat
- source such as a radiator or airduct, or in a place subject to direct sunlight, excessive dust, mechanical vibration, or shock. • Allow adequate air circulation to prevent
- internal heat build-up. Do not place the unit on a surface (a rug, a blanket, etc.) or near materials (a curtain) which might block the ventilation holes. Should any solid object or liquid fall into the unit,
- unplug the unit and have it checked by qualified personnel before operating it any further.
- To clean the casing, use a soft cloth dampened with a mild detergent solution.
- Never touch the wire of the external FM antenna during a thunderstorm. Furthermore immediately disconnect the AC power cord

NOTES ON LITHIUM BATTERY

- Wipe the battery with a dry cloth to assure a good contact.
- Be sure to observe the correct polarity when installing the battery.
- Do not hold the battery with metallic tweezers, otherwise a short-circuit may occur.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Troubleshooting

sound at the preset alarm time.

Should any problem persist after you have made the following checks, consult your nearest Sony

The clock flashes "AM 12:00" due to a power interruption. • The battery is low. Replace the battery. Remove

the old battery and install a new one The radio, iPod or buzzer alarm does not

• Check that alarm "A" or alarm "B" is properly displayed. The radio or iPod alarm is activated but no

sound comes on at the preset alarm time. Check the alarm volume setting.

- There is no sound from the iPod.
- Make sure the iPod is securely connected.
- Adjust the **VOLUME**.

The iPod cannot be operated with this unit.

Make sure the iPod is securely connected.

The iPod cannot be charged. • Make sure the iPod is securely connected.

When daylight saving time begins, the clock does not employ the daylight saving time automatically.

- Make sure the clock is set correctly
- Press and hold CLOCK and SNOOZE/DATE/ **SLEEP OFF** simultaneously for at least 2 seconds to activate the Automatic DST function.

Specifications

iPod section

DC out: 5V MAX: 500mA

Radio section Frequency range

-	-		
Band		Frequency	Channel step
FM		87.5 – 108 MHz	0.1 MHz
ΔМ		530 _ 1 710 kHz	10 kHz

General

Speaker Approx. 3.8 cm (1 $^{1}/_{2}$ inches) dia. 8 Ω

AUDIO IN jack (ø 3.5 mm stereo minijack) **Power output** 0.8 W (at 10% harmonic distortion)

Power requirement 120 V AC. 60 Hz

For clock back up: 3V DC, one CR2032 battery

Dimensions Approx. $115 \times 124.7 \times 97.1 \text{ mm (w/h/d)}$ $(4^{9})_{16} \times 4^{15})_{16} \times 3^{7}$ /s inches) not including projecting parts and controls

Mass

Approx. 910 g (2 lb 0.09 oz) including power

supply unit Supplied accessories

Remote commander (1) AM loop antenna (1) Audio connecting cable (1) Universal dock adapter for iPhone (1) Universal dock adapter for iPhone 3G (1)

without notice.

Design and specifications are subject to change

Compatible iPod models

The compatible iPod models are as follows Update your iPod to use the latest software before you use it.







iPod 5th

iPod 4th

*









iPod touch

0

 
- In these Operating Instructions, "iPod" is used as a general reference to iPod functions on an iPod or iPhone, unless otherwise specified by
- The connector of the unit is for sole use with an iPod. If you use devices that do not match with the connector, connect to the **AUDIO IN** terminal of this unit with the supplied audio connecting cable.
- Sony cannot accept responsibility in the event that data recorded to an iPod is lost or damaged when using an iPod connected to this unit.

Connecting the antenna

To connect the AM loop antenna

The shape and the length of the antenna is designed to receive AM signals. Do not dismantle or roll up the antenna.

1 Remove only the loop part from the plastic stand.



3 Connect the cords to the AM antenna terminals. Cord (A) or cord (B) can be connected to

Insert the cord while

either terminal.

4 Make sure the AM loop antenna is connected firmly by pulling softly.

Adjusting the AM loop antenna Find a place and an orientation that provide good

• Do not place the AM loop antenna near the

unit or other AV equipment, as noise may

Preparing the remote

Before using the card remote commander for the

AUDIO RADIO DISPLAY/ MEMORY

PRESET- OFF PRESET+

The ▶II and VOL + buttons have a

tactile dot.

first time, remove the insulation film (See Fig.

commander

battery

CR2032 battery inside of the unit as a backup

About the backup

The battery keeps the clock operating in the event Adjust the direction of the AM loop antenna for of a power interruption.

the display.

weak, the current time and alarm will be


battery. Use of another battery may cause a fire or explosion.

If "AM 12:00" flashes in the display when the unit is connected to AC outlet for the first time, the battery may be weak. In this case, consult your Sony dealer.

Replacing the battery

- **1** Keep the AC plug connected to the AC outlet, remove the screw that secures the battery holder at the bottom of the unit using a screwdriver, and remove the
- with the **◆** side facing up (See Fig. **B**-**②**). **3** Insert the battery holder back into the
- 4 Press iPod&iPhone, RADIO BAND, **AUDIO IN or SNOOZE/DATE/SLEEP**

When you replace the battery, do not disconnect the plug from the AC outlet. Otherwise, the calendar, current time, alarm and station presets

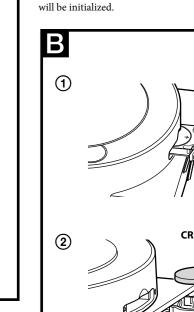


When to replace the battery With normal use, the battery (CR2025) should last for about six months. When the remote

CR2025

• Do not attempt to charge the battery. • If you are not going to use the remote commander for a long time, remove the battery to avoid any damage that may be caused by


Notes

leakage and corrosion.

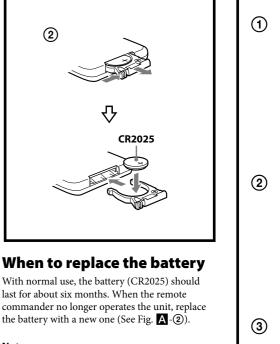

incorrect after the battery is changed (Reset)

 Reset button is in the small hole located near the







If a power interruption occurs while the batterv is

Replace the battery with a Sony CR2032 lithium


- battery holder (See Fig. **B**-①). **2** Replace a new battery in the battery holder
- unit and secure it with the screw (See Fig. **B**-**3**).

OFF to turn "\sign" off in the display.

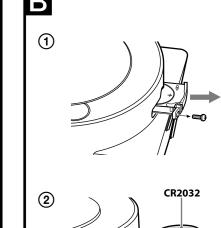

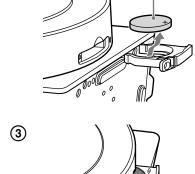

If the time in the display is Press the Reset button with a pointed device. The

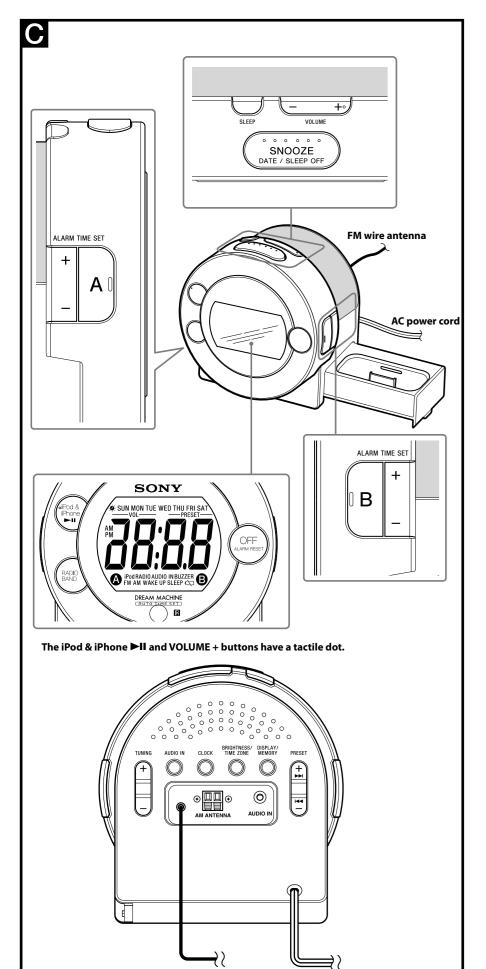

Setting the clock for the first time

This unit is preset to the current EST (Eastern Standard Time) at the factory, and is powered by a backup battery. All you need to do the first time is just plug it in and select your time zone. **1** Plug in the unit.

- The current EST (Eastern Standard Time) appears in the display.
- **2** Press and hold **BRIGHTNESS/TIME ZONE** for at least 2 seconds.
- Area number "2" flashes in the display. 3 Press ALARM TIME SET + or -
- repeatedly to select the number as follows:

Area number	Time zone
1	Atlantic standard Time
2	Eastern standard Time
(default setting)	
3	Central standard Time
4	Mountain standard Time

time (summer time) period can be canceled.

The Automatic DST/Summer Time adjustment

To cancel Automatic DST/Summer Time

adjustment during the daylight saving

Press and hold **CLOCK** and **SNOOZE/DATE/ SLEEP OFF** at the same time at least 2 seconds

while the clock is displayed. "and "OFF" appear in the display to show that Automatic DST/Summer Time adjustment has been canceled. The display returns to the clock.

- The change timing of Automatic DST/Summe Time adjustment employed by the unit (see above) is subjected to variation by circumstances and the law in each country/ region. In such a case, cancel the Automatic DST/Summer Time adjustment and set the DST display manually as necessary. Customers living in a country/region that do not use daylight saving time (summer time) must cancel Automatic DST/Summer Time adjustment before using the unit.
- To activate Automatic DST/Summer Time adjustment again, press and hold **CLOCK** and SNOOZE/DATE/SLEEP OFF at the same time at least 2 seconds.
- "and "On" appear in the display to show that Automatic DST/Summer Time adjustment has been activated. The display returns to the

Setting the clock manually

- 1 Plug in the unit.
- **2** Press and hold **CLOCK** for at least 2 seconds.
- The year starts to flash in the display. **3** Press ALARM TIME SET + or -
- repeatedly to set the year.
- 4 Press CLOCK.
- **5** Repeat steps **3** and **4** to set the month, day, hour and minute, and then press CLOCK.

The seconds start incrementing from zero

- If you do not press any button for about 1 minute while setting the clock, the clock setting will be canceled.
- A calendar is installed in this unit. When the date is set, the day of the week is automatically displayed. SUN = Sunday, MON = Monday,

TUE = Tuesday, WED = Wednesday, THU = Thursday, FRI = Friday, SAT = Saturday

To display the year and date

Press **SNOOZE/DATE/SLEEP OFF** once for the date, and press it again for the year. After a while, the display will change back to the current time automatically.

Setting the brightness of the display

Three levels of brightness are available by pressing **BRIGHTNESS/TIME ZONE.**

 $High (default) \longrightarrow Middle \longrightarrow Low$

Playing the radio

-Manual tuning

Pacific standard Time

Yukon standard Time

4 Press BRIGHTNESS/TIME ZONE to set.

Though the clock is correctly set at the factory.

storage. If necessary, set the clock to the correct

time by referring to "Setting the clock manually."

When daylight saving time

This model automatically adjusts for daylight

" $\stackrel{\bullet}{\bullet}$ " is displayed from the beginning of daylight

end of daylight saving time (summer time)

saving time (summer time) and disappears at the

• Daylight saving time (summer time) begins at:

2:00 AM on the second Sunday of March.

• Standard time begins at: 2:00 AM on the first

(summer time) begins

saving time (summer time).

discrepancies may arise during transport or

Hawaiian standard Time

- 1 Press RADIO BAND to turn on the radio and select the AM or FM band.
- **2** Press **TUNING +** or **-** to tune in to a desired frequency.
- **3** Adjust the volume using **VOLUME +** or

Tuning in to a station

The unit automatically scan AM or FM stations.

- 1 Press RADIO BAND to turn on the radio
- to select the AM or FM band. **2** Press and hold **TUNING +** or **-**. +: scans upward through the frequency
- -: scans downwards through the frequency bands.
- Scanning starts from the currently-tuned frequency. When a station is received,

3 Adjust the volume using **VOLUME +**

 
-Preset tuning

You can preset 20 stations for FM and 10 stations

Presetting a station

- 1 Follow steps 1 and 2 in "Manual tuning" to tune the frequency you wish to preset.
- **2** Press and hold **DISPLAY/MEMORY** for at least 2 seconds.
- **3** Press **PRESET** + or to select the preset number, then press **DISPLAY/MEMORY**. The frequency is stored with the selected

Example: The following display appears when you preset FM 105.8 MHz to preset number 1 for FM.





seconds, and then returns to the current time

The display shows the frequency for about 10

To preset another station, repeat these steps.

If you try to store another station with the same preset number, the previously stored station will

Tuning in to a preset station

- 1 Press RADIO BAND to turn on the radio and select the AM or FM band.
- **2** Press **PRESET +** or **-** to select the desired preset number.
- **3** Adjust the volume using **VOLUME +** or

-Auto preset tuning

- 1 Press RADIO BAND to turn on the radio and select the AM or FM band.
- **2** Press and hold **RADIO BAND** until "AP" appears in the display.
- 3 Press DISPLAY/MEMORY. The unit automatically presets the available channels in order.

Improving the reception

FM: Extend the FM wire antenna fully to increase

AM: Connect the supplied AM loop antenna to the unit. Rotate the antenna horizontally for optimum reception.

Notes on radio reception

- Keep digital music players or mobile phones away from the AM loop antenna or the FM antenna, as this may lead to reception interference.
- When you are listening to the radio with an iPhone connected to the unit, interference with radio reception may occur.
- When you are listening to the radio while charging an iPod, interference with radio reception may occur.

Playing an iPod

You can enjoy iPod audio by connecting to this unit. To use an iPod, refer to the user's guide of vour iPod.

If you are using an iPhone or iPhone 3G, attach the supplied universal dock adapter for iPhone or iPhone 3G before inserting into the connector. The adapter number, 12 or 15, is shown on the bottom-rear of the supplied universal dock adapters. (12) is for the iPhone, and (15) is for the iPhone 3G. Check the adapter number before use. Universal dock adapter






- When inserting an iPod into the unit, be sure to use the universal dock adapter supplied with your iPod or commercially available from Apple Inc.
- The connector of the unit is exclusively for use with an iPod. If you use a device that does not match the connector, connect it to the AUDIO **IN** terminal of this unit with the supplied audio connecting cable.
- Sony cannot accept responsibility in the event that data recorded on an iPod is lost or damaged when using an iPod connected to this
- For details of environmental conditions for operating your iPod, check the website of Apple

1 Press PUSH OPEN.

The Docking Tray is ejected halfway.

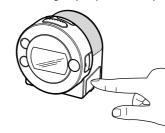



- 7 Press ALARM TIME SET A or B. The alarm mode setting is entered 3 Attach the adapter for your iPod/iPhone 8 Press ALARM TIME SET + or -
- connector of the unit. 5 Press iPod & iPhone ►II. The iPod begins to play automatically.

4 Insert your iPod/iPhone into the

You can operate the connected iPod by this unit or the iPod buttons. **6** Adjust the volume using **VOLUME +** or

- .				
o	Press			
urn off the iPod	OFF , or press and			
	hold inad o			

	iPhone ►II
Pause playback	iPod & iPhone ▶II To resume play, press it again.
Go to the next track	▶ ▶I
Go back to the previous track	I ◀◀*
Locate a point while listening to the sound	►► (forward) or ►► (backward) while playing and hold it until you find the point.

listening to the sound	► (backward) while playing and hold it until you find the point.
Locate a point while observing the display	►► (forward) or ► (backward) in pause and hold it until you find the point.
Go back to the previous menu	MENU**
Select a menu item or a track for playback	↑ / ▼ **

During playback, this operation goes back to the beginning of the current track. To go back to the previous track, press twice. **These operations are available only when using

Execute the selected menu **ENTER****

the supplied remote commander

or begin playback

- When placing or removing the iPod, hold the iPod at the same angle as that of the connector on this unit, and do not twist or bend the iPod as connector damage may result. • Do not carry the unit with an iPod set on the
- connector. Doing so may cause a malfunction. · When placing or removing the iPod, hold the Docking Tray securely with one hand and take care not to press the controls of the iPod by
- Before disconnecting the iPod, pause playback.

To use the unit as a battery charger You can use the unit as a battery charger. Charging begins when the iPod is connected to

Charging status appears in the iPod display. For details, see the user's guide of your iPod

On copyrights

and marks are not specified.

Setting the alarm

clock for the first time")

the display.

To Set the alarm

B for at least 2 seconds.

ALARM TIME SET + or

The days of the week flash

Week end: SUN SAT

flashes.

alarm."

the volume

The minute flashes.

2 Press ALARM TIME SET + or -

3 Press ALARM TIME SET A or B

4 Repeat step 2 to set the minute.

5 Press ALARM TIME SET A or B

This clock radio is equipped with 3 alarm

modes—iPod, radio and buzzer. Before setting the

alarm, make sure to set the clock (see "Setting the

1 Press and hold ALARM TIME SET A or

"WAKE UP" appears and the hour flashes in

repeatedly until the desired hour appears.

To cycle the hour rapidly, press and hold

6 Repeat step **2** to set the days of the week.

You can select the days from the following

Week day: MON TUE WED THU FRI

Every day: SUN MON TUE WED THU FRI

repeatedly until the desired alarm mode

"RADIO" or "BUZZER." Set the alarm mode

RADIO: see "B Setting the radio alarm."
BUZZER: see "C Setting the buzzer alarm."

2 Press ALARM TIME SET A or B to select

3 Press ALARM TIME SET + or - to adjust

display, press **ALARM TIME SET A** or **B**

• To wake up to music stored in an iPod touch/

iPhone, connect the iPod touch/iPhone to the

unit first, follow the steps above to set alarm

time, and then select the music function.

• Even if the iPod alarm setting is complete, if

you turn the iPod touch/iPhone power off

before the unit, the iPod alarm will not work.

2 Press ALARM TIME SET A or B to select

3 Press **ALARM TIME SET +** or **-** to adjust

5 Press ALARM TIME SET + or - to select

7 Press ALARM TIME SET + or - to select

display, press ALARM TIME SET A or B

You can choose one of 3 settings: "iPod",

iPod: see "A Setting the iPod alarm."

A Setting the iPod alarm

"iPod" alarm mode.

The setting is entered

"VOL" appears in the displa-

4 Press ALARM TIME SET A or B

5 If "A" or "B" does not appear in the

The iPod will sound at the set time.

When using an iPod touch/iPhone

B Setting the radio alarm

"RADIO" alarm mode.

"VOL" appears in the display

4 Press ALARM TIME SET A or B.

Band ("FM" or "AM") or "--" flashes

-" is the last station received.

the desired band or "--".

If you select "--", jump to step 8.

6 Press ALARM TIME SET A or B

the desired preset number.

8 If "A" or "B" does not appear in the

The radio will turn on at the set time.

The setting is entered.

alarm."

the volume.

1 Perform steps 1 to 8 in "To set the

1 Perform steps 1 to 8 in "To set the

- iPod is a trademark of Apple Inc., registered in the U.S. and other counti
- iPhone is trademark of Apple Inc. All other trademarks and registered trademarks are of their respective holders. In this manual,
 - 2 Press ALARM TIME SET A or B to select "BUZZER" alarm mode. The setting is entered.
 - **3** If "A" or "B" does not appear in the display, press **ALARM TIME SET A** or ${\bf B}$

The buzzer will sound at the set time.

C Setting the Buzzer Alarm

1 Perform steps 1 to 8 in "To set the

The volume cannot be set for the buzzer alarm

To confirm an alarm time setting Press **ALARM/TIME SET +** or **-**. The setting will be displayed for about 4 seconds

To change an alarm setting Press and hold **ALARM/TIME SET +** for at least 2 seconds to move the alarm time forwards. Press and hold **ALARM/TIME SET** – for at least

2 seconds to move the alarm time back. When you release the button, the changed time will be displayed for about 2 seconds. To change the alarm time again, press ALARM/TIME SET + or - within these 2 seconds, otherwise the setting change will be fixed as displayed.

To doze for a few more minutes Press SNOOZE/DATE/SLEEP OFF.

The sound turns off but will automatically come on again after about 10 minutes. You can change the snooze time by pressing SNOOZE/DATE/SLEEP OFF repeatedly within

4 seconds. The maximum length of the snooze time is 60 minutes

To stop the alarm

Press **OFF/ALARM RESET** to turn off the alarm. The alarm will sound again at the same time the next day.

To deactivate the alarm Press **ALARM TIME SET A** or **B** to turn off the

ALARM A or B indicator from the display

Note on the alarm in the event of a power In the event of a power interruption, the alarm

will work until the battery is totally discharged. However, certain functions will be affected as • The backlight will not light up.

- If the alarm mode is set to iPod or radio, it will change to BUZZER automatically.
- If a power interruption occurs while the alarm is sounding, the alarm will stop. • If **OFF/ALARM RESET** is not pressed, the alarm
- will sound for about 5 minutes \bullet If " $\ ^{\circ}$ " appears in the display, the alarm will not sound in the event of power interruption.
- Replace the battery if "\\D" appears. • The snooze function will not work.
- During a power interruption, the alarm will sound at the set time only once.

Setting the sleep timer

You can fall asleep to the music, etc., using the built-in sleep timer that turns off the unit automatically after a preset duration.

- **1** Press **SLEEP** while the unit is turned on. "SLEEP" appears and the sleep time flashes in the display
- duration. Each time you press **SLEEP**, the duration (in minutes) changes as follows:

2 Press **SLEEP** to set the sleep timer

 $90 \longrightarrow 60 \longrightarrow 30 \longrightarrow 15$ — OFF ←—

The display returns to clock mode for about 4 seconds after you have finished the duration setting and released **SLEEP**, and then the sleep timer starts.

The unit will play for the duration you set, and then shut off

To turn off the unit before the preset Press SNOOZE/DATE/SLEEP OFF or OFF/

ALARM RESET To change the sleep timer setting


You can press **SLEEP** repeatedly to select the desired sleep timer setting even after the sleep timer has been activated.

To deactivate the sleep timer Press **SLEEP** repeatedly to set the sleep timer to "OFF" in step 2.

Connecting external equipment

To listen to sound

1 Connect the **AUDIO IN** jack of the unit to the line out jack or headphone jack of the external equipment using the audio connecting cable (supplied).

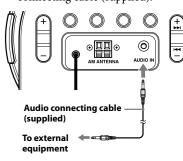

- **2** Press **AUDIO IN** to display "AUDIO IN."
- **3** Play the equipment connected to the AUDIO IN jack.
- **4** Adjust the volume using **VOLUME** + or –.

To return to the radio Press RADIO BAND. The frequency is shown in the display

To return to the iPod

Press iPod & iPhone ►II

To stop listening Press **OFF**, and stop playback on the connected

- Refer also to the connected equipment's manual • The supplied audio connecting cable may not be used with some external equipment. In this case, use a cord suitable for the external equipment you are using.
- When you listen to the radio with external equipment connected, turn off the connected equipment to prevent noise. If noise occurs, even when the equipment is turned off, disconnect and place the external equipment away from the unit.