






Setup Guide

Guide d'installation

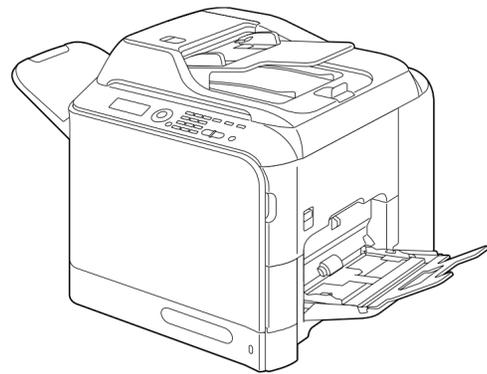


411589700

Printed in XXXXXX

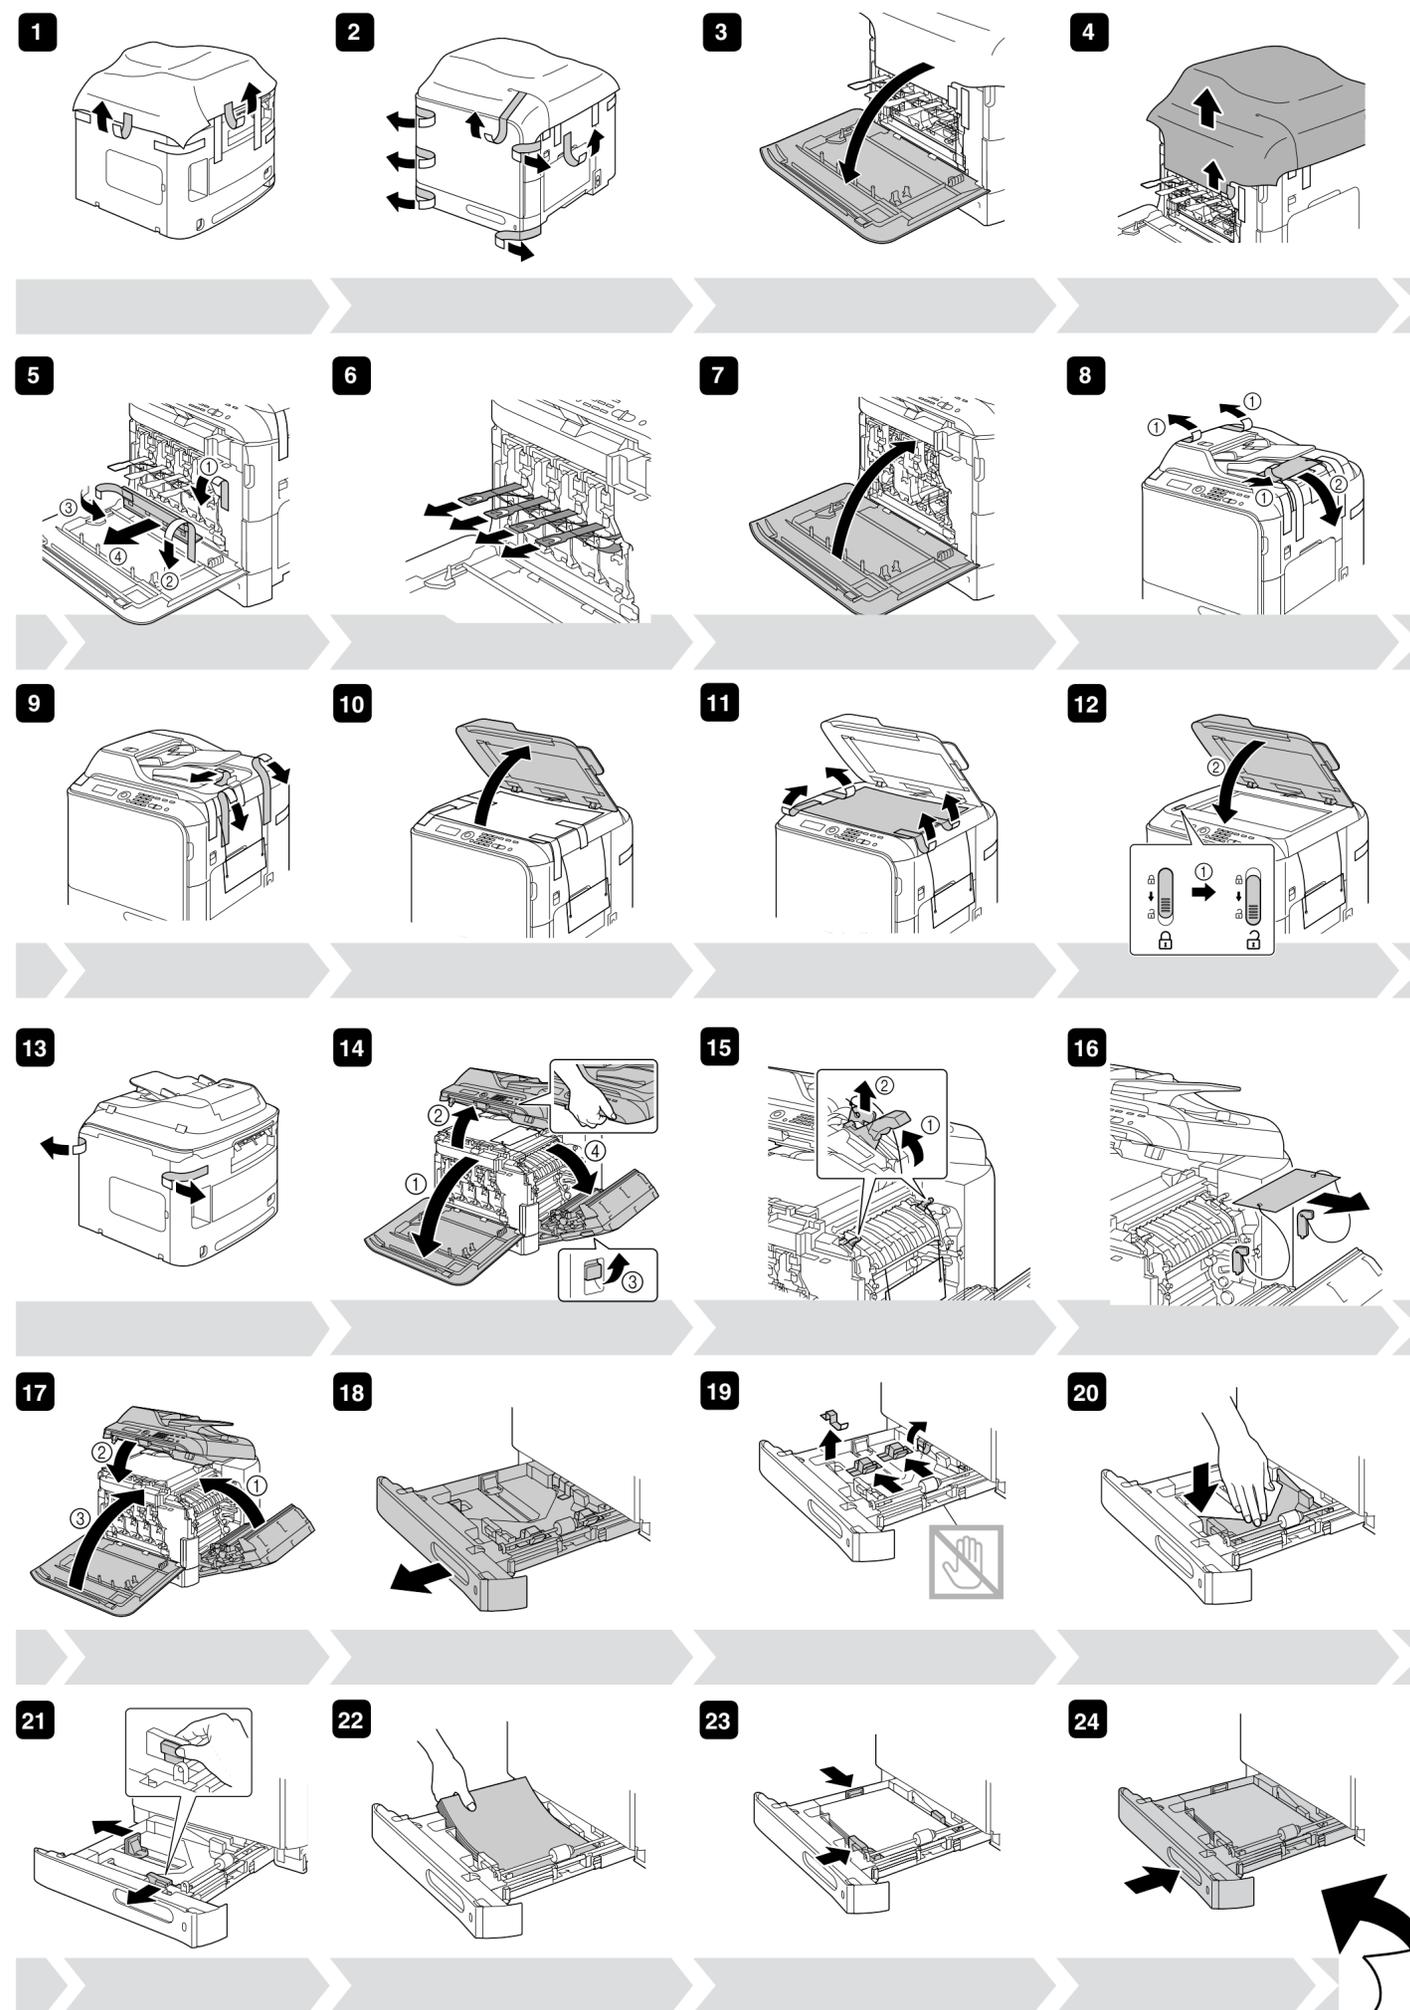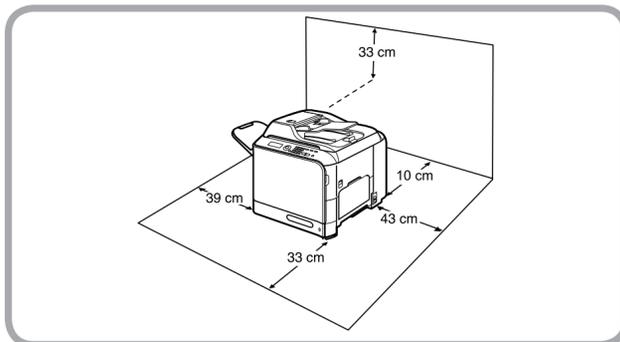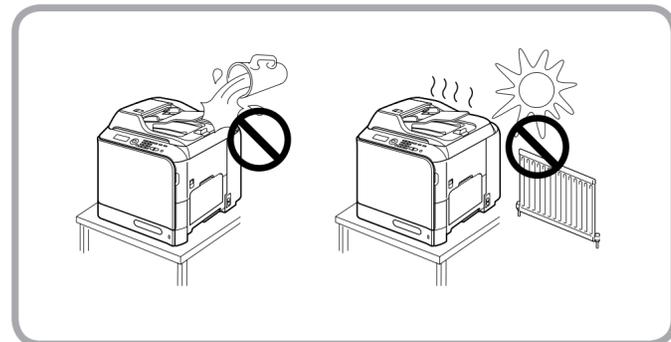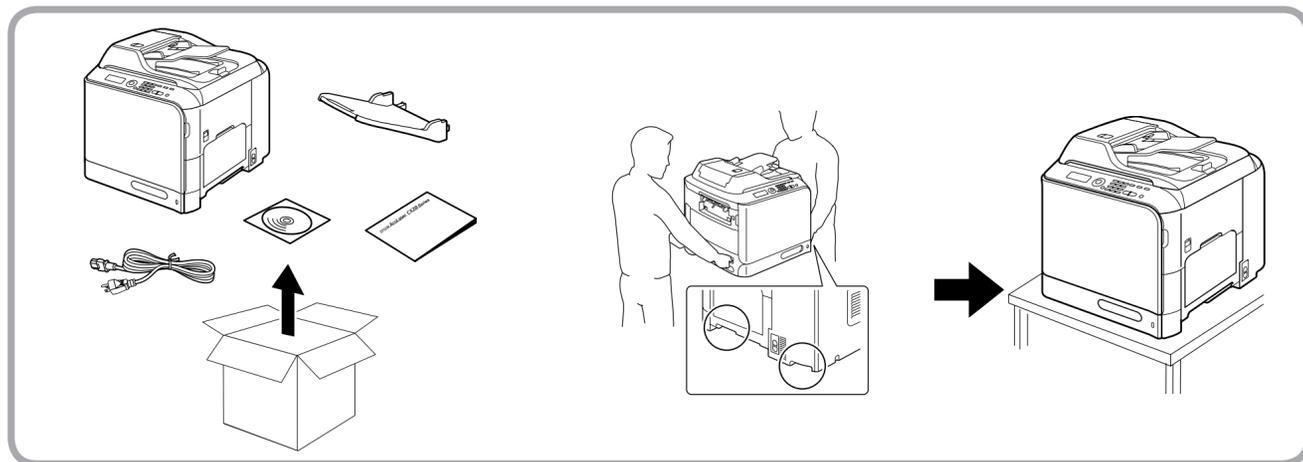


EN Before setting up your printer, examine the safety information in the Safety Information Guide. Dispose of the packing material according to your local regulations.


FR Avant d'installer votre imprimante, veuillez lire les consignes de sécurité dans le Guide d'informations de sécurité. Mettez les éléments d'emballage au rebut conformément à la réglementation en vigueur.

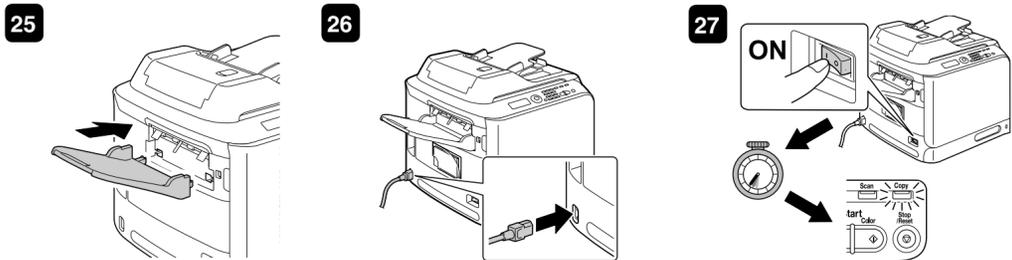



28 USB

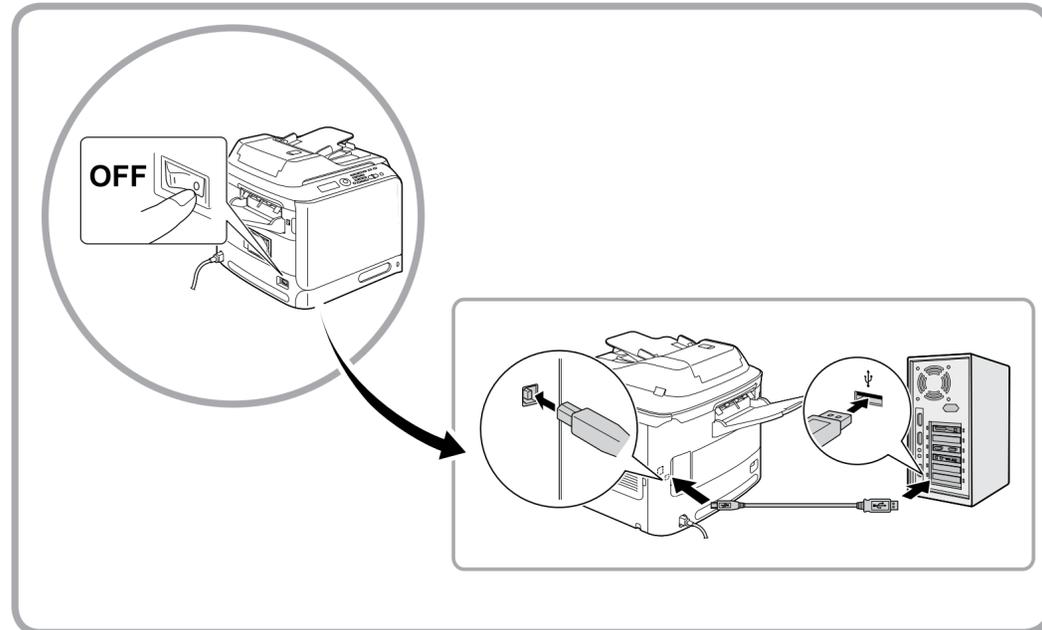

28 10/100 BaseTX

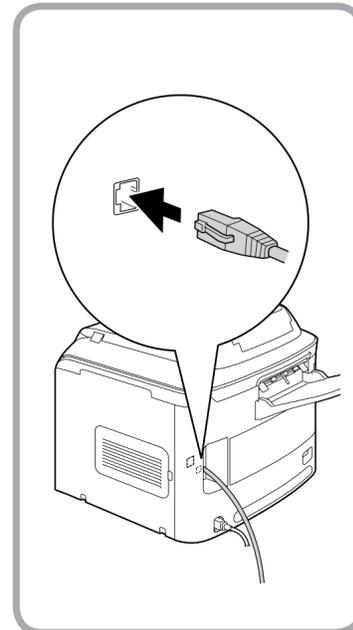


29 Windows

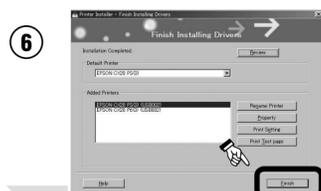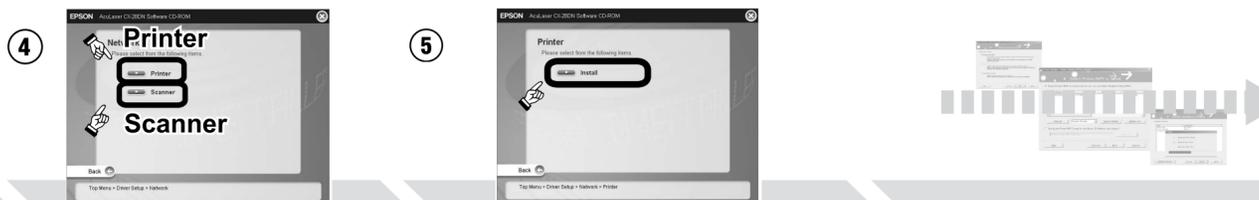

29 Macintosh/Linux

EN For the printer driver installation procedure, refer to the Reference Guide on the software CD-ROM.
CD:\Manual\English\REF_GUIDE.PDF

FR Pour l'installation du pilote d'imprimante, reportez-vous à Reference Guide sur le CD-ROM du logiciel.
CD:\Manual\French\REF_GUIDE.PDF

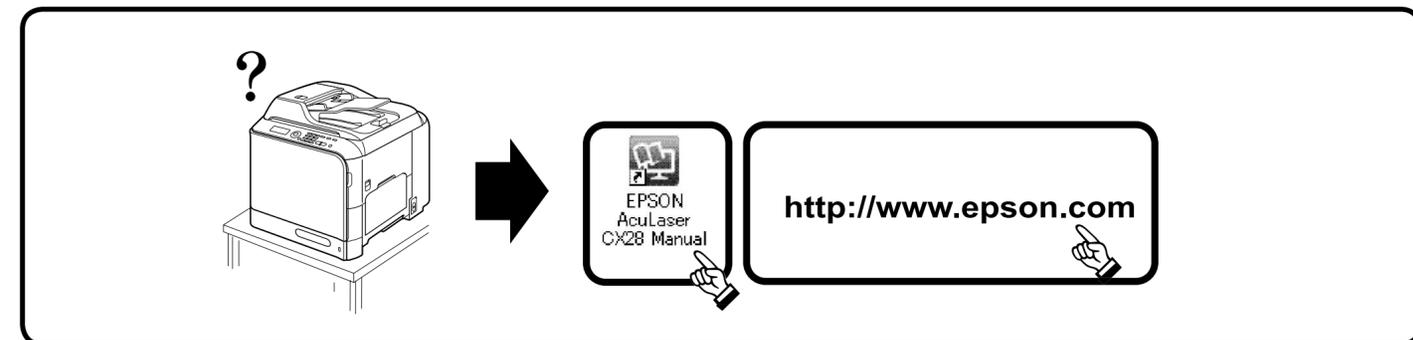

To read the online guide, you must have Adobe Acrobat Reader 5.0 or later, or Adobe Reader, installed on your computer.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. No patent liability is assumed with respect to the use of the information contained herein. Neither is any liability assumed for damages resulting from the use of the information contained herein.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation and its affiliates shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

EPSON is a registered trademark and EPSON AcuLaser is a trademark of Seiko Epson Corporation.

Microsoft, Windows, and Windows Vista are registered trademarks of Microsoft Corporation.

Apple and Macintosh are registered trademarks of Apple, Inc.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.