

## Quick Reference Guide




## Customize your device

Tap **Settings** to customize, connect or turn on options to personalize your device.

**Wallpaper** Change the look of the Home and Lock screens.

**Accounts and backup** Tap Users to add additional users for the device.

**Connections** Connect to Wi-Fi network, Bluetooth device and other connection options.

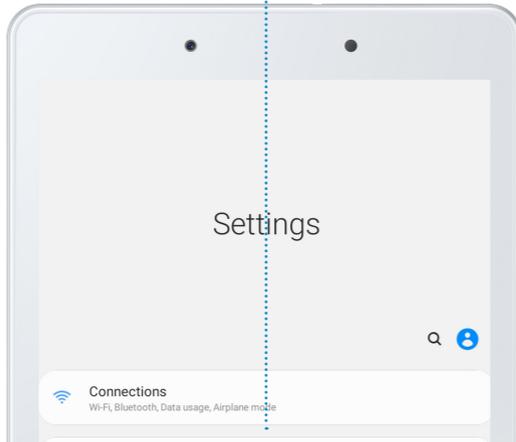

## Samsung Care

Get more than just protection for your device. Pick the time and place, and a team member will meet you to setup, troubleshoot, repair or replace your product.

Enroll, at [samsung.com/us/support/premium-care](https://samsung.com/us/support/premium-care)

### Get to know your product:

- Access user manuals, tips and more at [samsung.com/us/support](https://samsung.com/us/support)

### Ask the community:

- Ask questions and get solutions from Samsung customers, at [us.community.samsung.com](https://us.community.samsung.com)

### Contact us for support:

- For hardware or software support, visit [samsung.com/us/support/contact](https://samsung.com/us/support/contact) or call us at 1.800.SAMSUNG
- Find a service location near you, at [samsung.com/us/support/service/locations/](https://samsung.com/us/support/service/locations/)

**Lockscreen** Select a screen lock type and set security options.

**Display** Customize the Home screen and display brightness.

**Sound** Set device volume and sounds.

## About your device



©2019 Samsung Electronics America, Inc. Samsung and Galaxy Tab are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of tablet may vary.

Printed in Vietnam  
JM19-T290-B005

## Device features

**Expandable storage** Expand storage with a microSD™ card.


**Family share** Connect with your loved ones by sharing photos, events, reminders and notes.

**Multuser** Allows multiple users for one device.

## Set up your device

### Install an optional microSD card

1. Use the tray removal tool to open the microSD™ card tray.
2. Insert the microSD card (sold separately) into the tray with the gold contacts facing down, as shown.

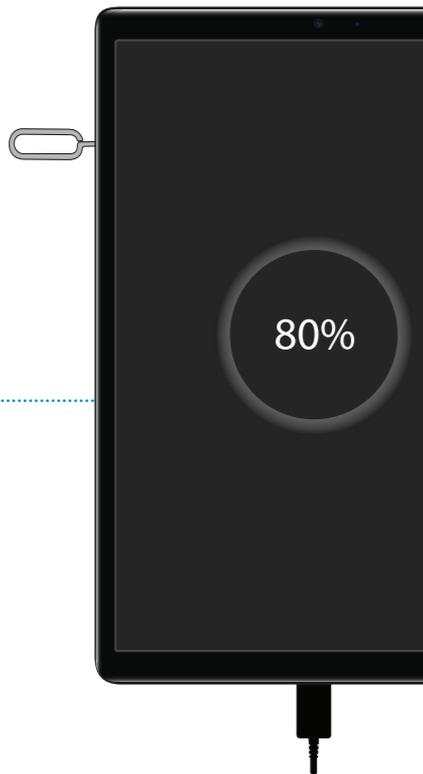

### Charge the battery

Before turning on your device charge it fully with the provided charger.

Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

## Using your device

### Turning your tablet on/off

- To turn your tablet on, press and hold the **Power/Lock** button.
- Press the **Power/Lock** button again to turn it off.


### Locking/unlocking the screen

- To turn on your screen, press the **Power/Lock** button. Then swipe up on the screen to unlock it.
- To turn off your screen and prevent accidental key presses, press the **Power/Lock** button.

## Galaxy Store

Get essential and exclusive content for your device.

1. From the Home screen tap  **Galaxy Store**.
2. Follow the prompts to complete setup.
3. Now you can enjoy the following:
  - Premium offers and special benefits
  - Decorate your Galaxy with various themes
  - Change fonts device fonts
  - Add new effects and stickers.customizing photos

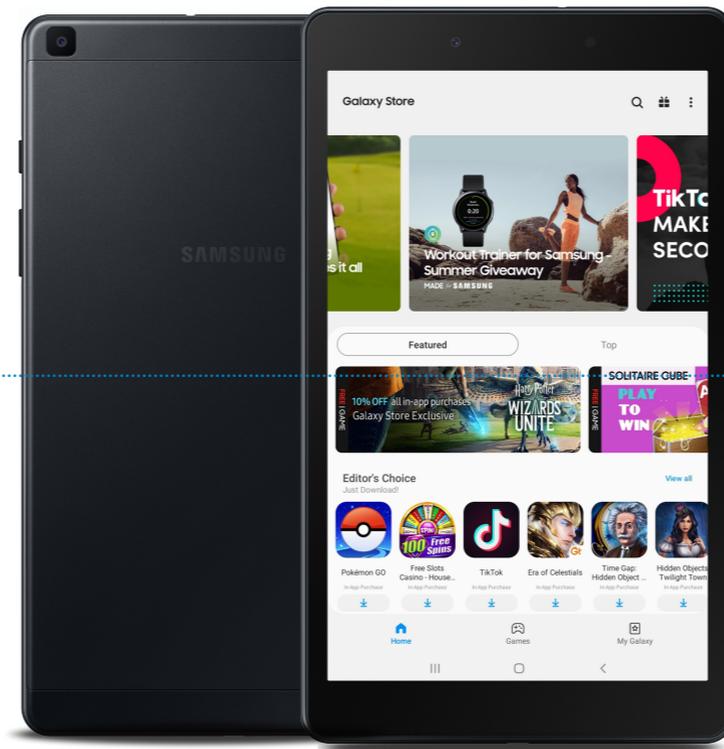

Visit [samsung.com/global/galaxy/apps/galaxy-store](https://samsung.com/global/galaxy/apps/galaxy-store) for more information.

## Samsung Kids

Samsung Kids is kid-friendly and parent-controlled. Parents can monitor screen time, set play time limits, and add apps from Galaxy Apps for Kids.

From the Home, tap **Samsung Kids**  and follow the prompts to setup.

