

 
Kodak

Video Monitor

CFH-V15



Quick Start Guide

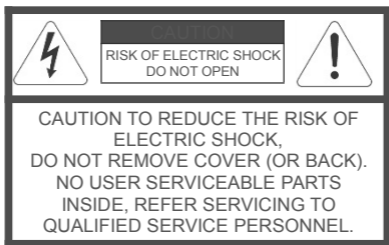

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Warning

To prevent fire or shock hazards, do not expose this product to rain or moisture.

To avoid electrical shock, do not open the cabinet. Please refer servicing to qualified personnel only.

Regulatory Notices for USA

This equipment has been tested and found to comply with the limits for a digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

The shielded interface cable recommended in this manual must be used with this equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules.

Camera Mounting

To mount the KODAK Video Monitor CFH-V15 to a wall, unscrew the base of the camera and remove the plate.

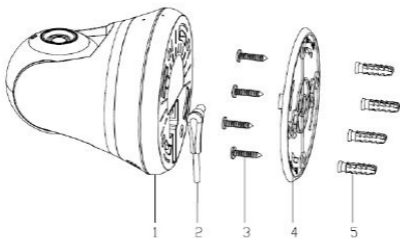

With the included screws and anchors, fasten the mounting bracket onto the wall. Before mounting the camera, the camera should be plugged into the AC adapter. Then, reattach the base cover and screw the stand back onto the mounting bracket.

1. iSecurity+ App



To get started, download the iSecurity+ app from the Apple App Store or the Google Play Store.

2. Connect to Power




Remove the mounting plate from the bottom of the camera. Then, connect the KODAK Video Monitor CFH-V15 to the AC power adapter, and plug the power cord into the electrical outlet.

3a. Wi-Fi Setup Mode



The camera will automatically go into setup mode. The “Wi-Fi Setup” LED on the front of the camera will blink and alternate between green and orange. The KODAK Video Monitor CFH-V15 will rotate when the camera is ready for setup (this may take up to 2 minutes when the camera is first powered on).


3b. Connect Device to KODAK Video Monitor CFH-V15

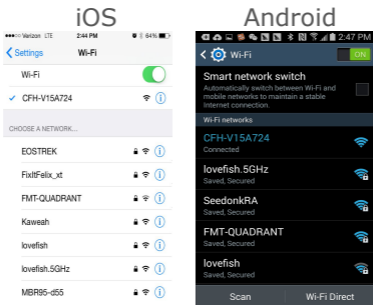

Before connecting to the camera, please turn on the Wi-Fi on your device as well as your personal Wi-Fi network. Then, go to your device Settings → under the Wi-Fi settings, connect to the CFH-V15XXXX (last 4 digits of the MAC ID, as seen on the back of the camera) network. Make sure that you see the Wi-Fi symbol after connecting to the camera.


4a. Launch iSecurity+ App

Once your device establishes its connection to the KODAK Video Monitor CFH-V15 (usually takes around 30 seconds), launch the iSecurity+ app. If you don't see the pop-up prompt, please close the app and re-launch it. The iSecurity+ app will automatically detect your camera. When prompted, click 'Yes' to setup your camera.

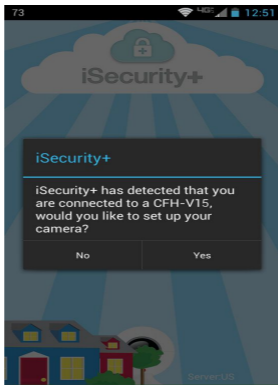


4b. Setup Wizard

Follow the instructions in the Camera Setup Wizard to complete installation.

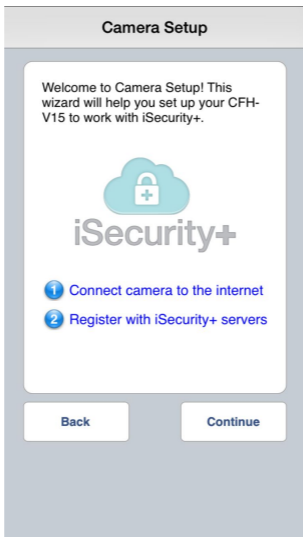

4c. Setup Complete

 
Once you see the page below, the setup process has been completed. Restart iSecurity+ and please log in again.

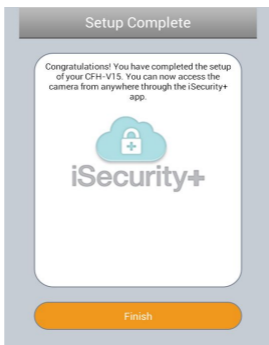


You can use your iOS or Android devices to access the camera anywhere in the world. Make sure your phone has access to the Internet via 3G, 4G or Wi-Fi to establish a connection.

5. Using iSecurity+

 Please enter your username and password, created during the setup process, in the login window to access your KODAK Video Monitor CFH-V15.

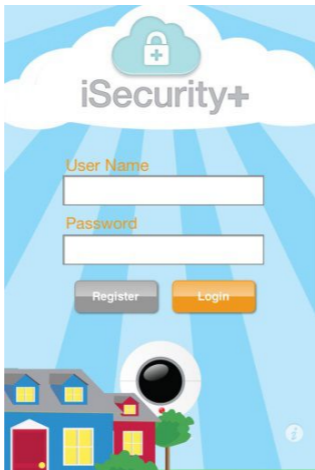

6a. iSecurity+ Features – Main Window

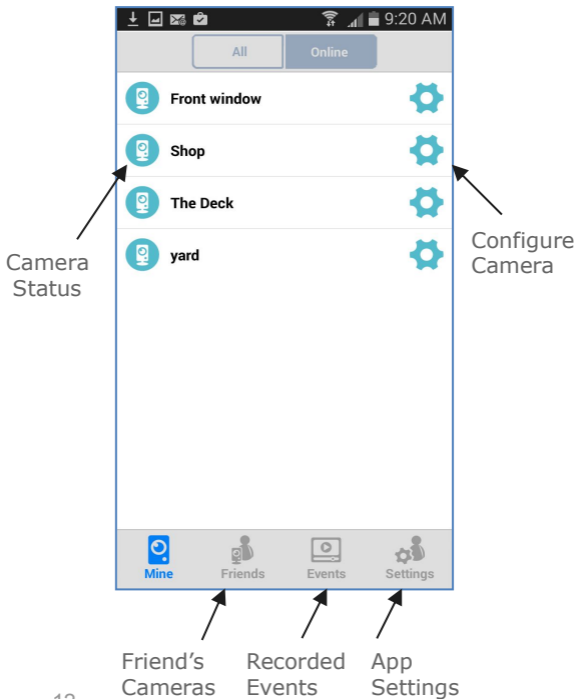

6b. Electronic PTZ Function

Zooming In - Touch the screen with two fingers together and slide outward at an angle to zoom in.




Zooming Out - Touch the screen with two fingers apart and slide inwards at an angle to zoom out.




7. iSecurity+ Features – Camera Viewer

Swipe directional controls to change the camera Pan & Tilt view.

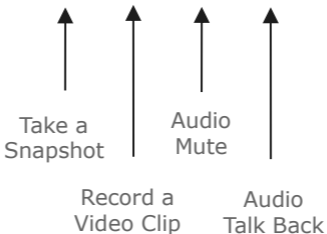

8. Audio Talkback

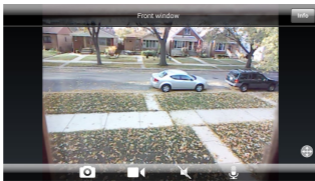

1. To use Audio Talkback, first press the Audio button to initiate sound to listen in.
2. Then, press and hold down the Audio Talkback button and speak into your device. Let go of the Audio Talkback button for the audio to transfer to the camera's speaker.

Safety Information

Do not point the camera directly at the sun, otherwise it will damage the image sensor.

Keep the camera away from heat to avoid electric shock.

Keep the camera away from rain and moisture.

Do not attempt to open, dismantle, repair, or service the camera. Doing so may cause electric shock and other hazards.

Any evidence of misuse, abuse, or tampering will void the Limited Warranty.

To maintain compliance with FCC's RF exposure guidelines, this equipment should be installed and operated with minimum distance of 20 cm between the radiator and your body. Use only the supplied antenna.

Troubleshooting

LED Status Indicators

During Wi-Fi Setup Mode

Blinking green & orange: Setup mode on

Orange: Setup mode initializing

Light off: Setup mode off

During Normal Operation

Green: Connected to iSecurity+

Orange: Connected to local network

Blinking orange: Not connected to any network

Setup button (Resetting the camera)

Press and hold the button for 5 seconds to reset the camera.

Press and hold the button for 15 seconds to factory reset the camera back to default settings.

For More Information

For support or to learn more about KODAK Connected Family Home products, please visit:

www.connectedfamilyhome.com

To get the latest software updates or to learn more about iSecurity+, please visit:

www.isecurityplus.com

Limited One Year Manufacturer Warranty

Seedonk Inc. will repair or replace (at our discretion) your camera unit free of charge (except for shipping cost) for 12 months from the date of purchase, if unit is determined to be defective. The customer should return the defective unit to the original place of purchase first, based on its return or refund policy. If the original vendor's return/refund policy has expired and this unit is still within the limited manufacturer's warranty, customers can call **1-888-733-9123** or email us at support@isecurityplus.com to get an RMA ID and shipping instructions. Camera must be shipped with proof of purchase. Customer will need to pay for shipping of the defective camera to Seedonk. Seedonk will be responsible for shipment of replacement camera. In the absence of a purchase receipt, the warranty period shall be 12 months from the date the camera was manufactured.

In no event, shall Seedonk be liable for any special, incidental, or consequential damages for breach of this or any other warranty, expressed or implied, whatsoever.

The detailed terms and conditions can be found on the Seedonk website.

Kodak

Video Monitor

CFH-V15



The Kodak trademark and trade dress are used under license from Kodak

For more information visit:
www.connectedfamilyhome.com

Apple, iPad, and iPhone are trademarks of Apple Inc.
Android is the trademark of Google Inc.

© 2015 Seedonk, Inc. All rights reserved

Made in China