



Before the first use

⚠ Before using the tumble dryer for the first time, ensure that it is correctly installed and connected.

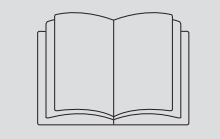

It is **essential** to read the operating instructions.

Operating the tumble dryer

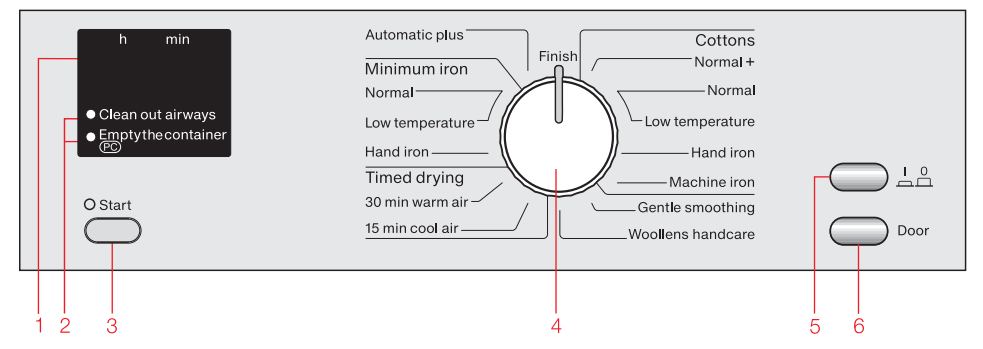

1 Display

Shows the programme duration, check/fault messages and programmable functions.

2 Check / Fault indicator lights

The PC check light is also used by service technicians to run diagnostic checks on your tumble dryer and may be used to update programming data in the future.

3 Start button

Press the Start button to start a programme. The Start indicator light will flash as soon as the programme can be started. It lights up constantly once the programme has started.

4 Programme selector

For selecting the programme.

5 -D- button

For switching the appliance on or off. -D- or the programme duration will light up as confirmation that the tumble dryer has been switched on.

6 Door button

Pressing this button will open the door even when the appliance is not switched on at the mains.

Programme duration / Estimated time remaining

The estimated programme duration will appear in the display. The following factors all affect the estimated time remaining: residual moisture content after spinning; type of fabric; size of load; room temperature; fluctuations in power supply.

Drum lighting

When the dryer is switched on at the mains and the door is opened, the drum lighting will come on. It will go out a few minutes later to save energy.

Energy saving tips

To avoid unnecessarily long drying times and high consumption of energy:

- Make sure your laundry is spun at the maximum spin speed before drying.

- Load according to the optimum amount of laundry recommended for the programme being used. Underloading is uneconomical. Overloading gives poorer quality of drying and may cause unnecessary creasing.

- After every cycle remove the fluff from the fluff filters in the door and in the door opening.
- Ensure sufficient room ventilation.
- Check the condenser unit once a year and clean it if necessary.

Drying

1. Notes on correct laundry care

⚠ Remove foreign objects like detergent dispensing devices from the laundry. They can melt and damage the dryer and the laundry.


- Sort the laundry according to the type of fibre and weave, size, garment care label symbol and the drying level required.
- Disentangle the laundry.
- Check seams and stitching to ensure that padding and linings are intact.
- Fasten duvet covers and pillow cases to prevent small items from being rolled up inside them.
- Fasten hooks and eyes.
- Tie together textile belts and apron ties.
- Sew in or remove underwiring from bras.

2. Switching on the tumble dryer

- Switch the tumble dryer on with the -D- button. The drum lighting will come on.

3. Loading the tumble dryer


- Press the Door button to open the door.
- Unfold the laundry and load loosely into the drum.

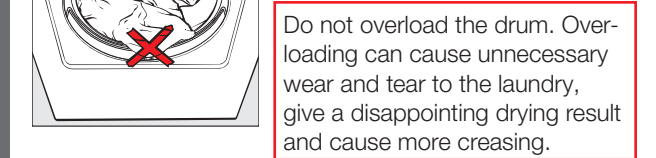

⚠ When closing the door, make sure that laundry does not get trapped in the door opening.

- Close the door.

BEFORE THE FIRST USE/OPERATING THE TUMBLE DRYER

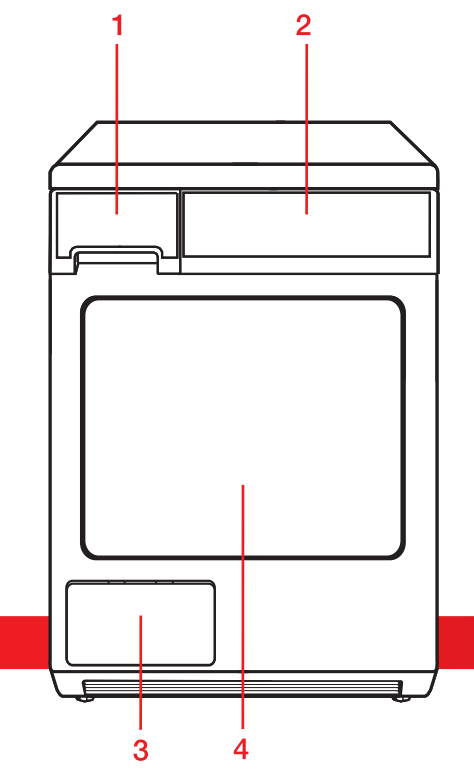

- 1 Condensed water container
- 2 Control panel
- 3 Service panel for condenser unit
- 4 Door

4. Selecting a programme

- Turn the programme selector to the required programme. The programme duration is preset and cannot be altered.

5. Starting the programme

- Press the flashing Start button. The indicator light for the Start button will now light up constantly.

6. Removing the laundry at the end of the programme

At the end of the programme: -D- lights up and the buzzer sounds.

After the programme has finished, the drum will continue to rotate in a certain rhythm, depending on the selected programme.

- Press the Door button.
- Open the door.
- Remove the laundry.

⚠ Check that all items have been removed from the drum. If items are left in the dryer, they could be damaged by overdrying when the dryer is next used.

- Press the -D- button to switch the dryer off.
- Clean the fluff filters.
- Close the door.
- Empty the condensed water container. Exception: You have chosen to externally drain the condensed water.

Changing the programme sequence

You cannot change to another programme once a programme has started (this prevents unintentional alterations).

If the programme selector has been moved, -D- remains lit up until the original programme is reset.

You will need to cancel the current programme before you can select a new one.

Cancelling a programme while it is running and selecting a new programme

- Turn the programme selector to Finish. The items will be cooled down, depending on the temperature reached and how long they have been dried for. The programme is not finished until -D- lights up.
- Press the -D- button to switch the dryer off.
- Press the -D- button to switch the dryer on.
- Select and start a new programme straight away.

Adding or removing laundry after a programme has started

⚠ Restart the programme immediately after adding or removing items. Otherwise, remove all items and spread them out to cool down completely.

- Press the Door button.
- Open the door.

⚠ Danger of burning: Do not touch the back of the drum when adding or removing items. The drum and the items can get very hot.

- Add or remove items.
- Close the door.
- Press the Start button.

Programme duration

Altering the programme sequence can cause the programme duration shown in the time display to be adjusted.

Garment care label symbols

Drying

- ☑ Normal/Higher temperature
- ☑ Low temperature
- ☒ Do not tumble dry

Ironing

- ☒ Very hot
- ☒ Hot
- ☒ Warm
- ☒ Do not iron

Tips on drying

– Always observe the maximum recommended loads given in the "Programme chart".

⚠ Never overload the drum. Overloading can cause unnecessary wear and tear to the laundry, give a disappointing drying result and cause more creasing.

– Do not put soaking wet items into the tumble dryer to dry them; spin them first in the washing machine at the maximum spin speed.

– Minimum iron fabric tends to crease more, the larger the load. This is particularly the case for garments made from very fine weave fabric, such as shirts or blouses.

Programme chart

Programme	Items	Load (in kg)*	Machine iron	Hand iron	Low temperature	Normal	Normal+
Cottons	Single and multi-layered cotton fabric such as towelling, jerseywear, T-shirts, underwear, workwear, covers, flannelette bed linen and baby clothes. Select for delicate fabric with the ☑ symbol on the care label.	7.0	X	X		X	X
Minimum iron	Minimum iron items made of cotton, synthetic or mixed fibre, e.g.: tops, dresses, shirts, blouses, skirts, trousers and table linen.	3.5			X		
Automatic plus	Normal - Low temperature: Select for delicate fabric with the ☑ symbol on the care label. Mixed loads of garments suitable for the Cottons and Minimum iron programmes. Sort according to colour.	5.0			X		
30 min warm air	Multi-layered fabric whose layers have different drying characteristics, e.g. jackets, pillows, sleeping bags and other voluminous items. For drying individual items, e.g. bath towels, bathing costumes, tea towels and small loads.	7.0					
15 min cool air	Any item which only needs airing.	7.0					
Gentle smoothing	Minimum iron items (dry or damp) made of cotton, synthetic or mixed fibre, e.g. trousers, jackets, shirts.	1.0					
Woolens hand-care	Woolen garments and fabric containing wool blends, e.g. pullovers, jackets, socks and leggings.	2.0					

X = Yes

* Weight of dry laundry

TDA 150 C


en - AU, NZ

M-Nr. 10 002 140/00

Emptying the condensed water container


Empty the condensed water container after every drying programme.

The *Empty the container* indicator light will come on if the maximum level of the condensed water container is reached. The indicator light will go out when the door is opened and closed again when the tumble dryer is switched on.

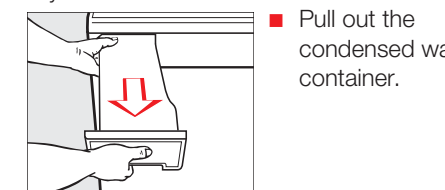

■ Pull out the condensed water container.

■ To prevent water running out, hold it at the front and towards the back and keep it in a horizontal position when carrying it.

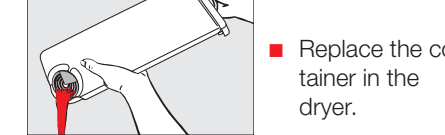

■ Empty the container.


■ Replace the container in the dryer.

⚠ Do not drink the condensed water. It can cause health problems in people and animals.

Cleaning the fluff filters


Removing visible fluff

Clean the surfaces of the fluff filters in the door and the door opening after each drying programme.

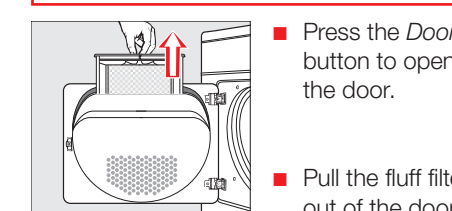

■ Press the *Door* button to open the door.

■ Pull the fluff filter out of the door.

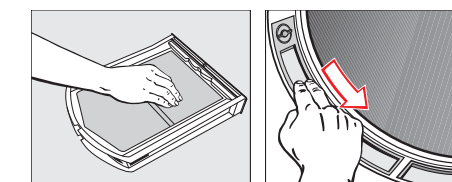

■ Use your fingers or a vacuum cleaner to remove the fluff from all of the fluff filters.

■ Remove any fluff from the hollow part of the door with a bottle brush or a vacuum cleaner.

■ Also clean the door seal with a damp cloth.

■ Once clean, push the filter back into the door holder until it clicks into position. Ensure it is facing the correct way.


■ Close the door.

Cleaning the fluff filters with water

If there is a great deal of compacted fluff on any of the filters, they should be removed and cleaned with water.

■ Open the door and pull the fluff filter out of the door.

The two filters in the door opening can also be removed if you need to clean them with water:

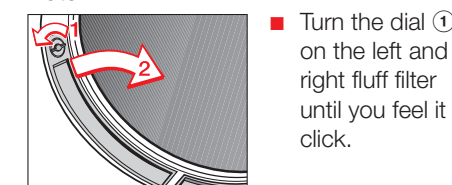

■ Turn the dial ① on the left and right fluff filter until you feel it click.

■ Pull the filter out of the door opening by the dial as shown ②.

■ Rinse all the filters under hot, running water.

■ Dry the fluff filters thoroughly with care.

■ Clean the area underneath these filters, e.g. with a vacuum cleaner.

⚠ Do not replace the fluff filters if they are damp. Damp or wet filters could cause operational faults.

■ Push the large filter back into the door holder until it clicks into position. Ensure it is facing the correct way.

■ Replace the filters in the door opening by first inserting them at the bottom and then pressing them into place at the top.

■ Lock both dials (you will feel them click into position).

Cleaning the dryer

■ Clean the housing, control panel and door seal with a slightly damp cloth and a mild detergent or soapy water.

■ The drum and other stainless steel parts can be cleaned with a suitable proprietary stainless steel cleaner following the manufacturer's instructions.

Do not use solvents, abrasive cleaners, glass cleaners or all-purpose cleaners. These could damage plastic surfaces and other parts.


■ Dry all parts with a soft cloth.

Cleaning the condenser unit

Check the condenser unit once a year and clean it if necessary. Always check the fluff filters and the condenser unit if the *Clean out airways* indicator light comes on.


Removing the condenser unit

■ Use the yellow lever supplied to open the service panel.

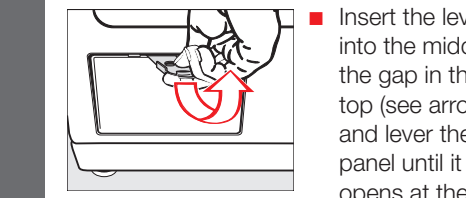


■ Insert the lever into the middle of the gap in the top (see arrow) and lever the panel until it opens at the top.

■ Now remove the panel by pulling it diagonally upwards. Then place it to one side.

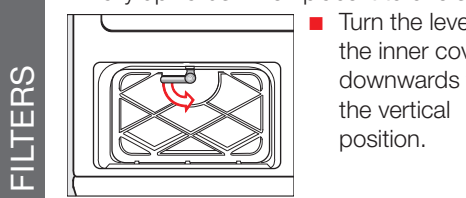


■ Turn the lever on the inner cover downwards to the vertical position.

■ Then remove it by pulling it diagonally upwards.

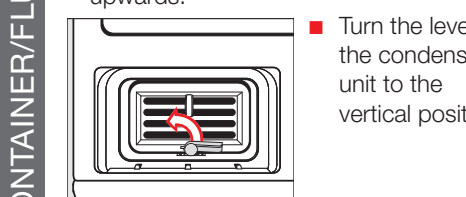


■ Turn the lever on the condenser unit to the vertical position.

The hook on the lever will click out of the groove at the bottom of the condenser unit housing.

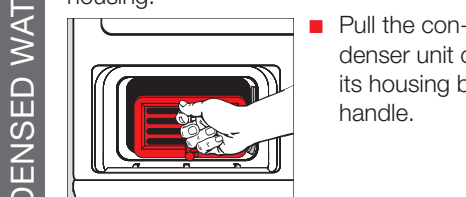

■ Pull the condenser unit out of its housing by the handle.

Checking the heat exchanger unit

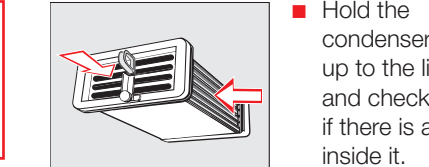

The arrows in the illustration above indicate where to look.

If you cannot see any fluff:


■ Refit the condenser unit (see the operating instructions).

If you can see some fluff:

■ Clean the condenser unit.

Cleaning the condenser unit

When rinsing the condenser unit, make sure you position it as shown in the next two illustrations.

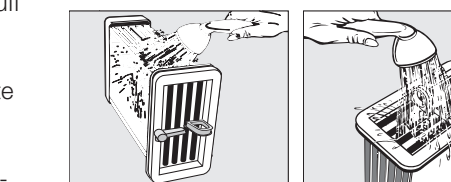

■ Rinse the condenser unit from the side and from the front with a shower head or similar.

■ Check the condenser unit again for any visible fluff and, if necessary, flush it through again until it has all gone.

■ Also make sure that the rubber seals are clean.

■ Shake the water off the condenser unit until no more droplets of water are visible.

■ Remove any soiling still visible inside the housing (see the operating instructions).

■ Refit the condenser unit (see the operating instructions).

Problem/Fault message	Possible cause and remedy
The Empty the container indicator lights up. The programme is cancelled and the buzzer sounds.	The condensed water container is full or there is a kink in the drain hose. ■ Empty out the condensed water container. ■ Check the drain hose. ■ Open and close the door while the dryer is switched on. The indicator light will go out.
The programme is cancelled, U lights up	This is not a fault. In some programmes, if the drum has been overloaded or underloaded, the programme will be cancelled. This can also happen if the items are already dry. ■ Open and close the door to resume drying. ■ Use the <i>30 min warm air</i> programme (timed drying) to dry individual items.
The Start indicator light flashes slowly and the display is dark	The tumble dryer is in standby mode. This is not a fault, but a normal function. ■ See "Standby" in "Programmable functions" in the operating instructions.
The Clean out airways indicator light comes on at the end of a programme	There is a build-up of fluff in the airways. ■ Clean the fluff filters. ■ Clean the condenser unit. ■ Open and close the door while the dryer is switched on. The indicator light will go out.
Bars flash in the display at the end of a programme: L...L...L...L...L...	The programme has finished but the laundry has not yet cooled down. ■ Either remove the laundry and spread it out to cool down or leave it in the tumble dryer to cool down during the cooling phase.
-U- lights up	The programme selector has been moved. ■ Select the original programme. The time remaining will appear in the display again.

Problem/Fault message	Possible cause and remedy
The laundry is not sufficiently dry	The load consisted of different types of fabric. ■ Finish drying using the <i>30 min warm air</i> timed drying programme. ■ Select a more suitable programme next time. Tip: You can alter the residual moisture level for some programmes. See "Programmable functions" in the operating instructions.
Items made of synthetic fibres are charged with static electricity after drying	Synthetic fibres tend to attract static charge. Static charge can be reduced by adding a fabric softener to the final rinse in the washing programme.
There is a build-up of fluff	Fluff is principally the result of friction when garments are being worn and to some extent when they are being washed. Machine drying hardly causes any fluff to form. Fluff is collected by the fluff filters in the door and door opening and can be easily removed. See "Cleaning and care".
Water leaks from the machine after the condenser unit has been cleaned	The inner cover of the condenser unit has not been locked properly and/or the condenser unit has not been positioned correctly. Fluff has collected in the condenser unit housing. ■ Ensure that the condenser unit is positioned correctly and lock the inner cover. ■ Check the rubber seals. ■ Use a cloth to remove any visible fluff from the inside of the condenser unit housing.

Quick Start Guide
Condenser tumble dryer



These short instructions are not a substitute for the operating instructions supplied with the appliance. Please read the operating instructions supplied with your tumble dryer before using it for the first time and take note of the Warning and Safety instructions, as well as the full descriptions on how to use your appliance.