

**Samsung Premium Care**

Get more than just protection for your device. Pick the time and place, and a team member will meet you to setup, troubleshoot, repair or replace your product.

Enroll, at samsung.com/us/support/premium-care

Get to know your product:

- Access user manuals, tips and more at samsung.com/us/support

Ask the community:

- Ask questions and get solutions from Samsung customers, at us.community.samsung.com

Contact us for support:

- For hardware or software support, visit samsung.com/us/support/contact or call us at 1.800.SAMSUNG
- Find a service location near you, at support-us.samsung.com/cyberlocator/asc_locator.jsp

**About your device**

 
©2019 Samsung Electronics America, Inc. Samsung and Galaxy Tab are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of tablet may vary.



Printed in Korea
GH68-50503A

**Customize your device**

From a home screen swipe up, and tap **Settings** to customize, connect or turn on options to personalize your device.

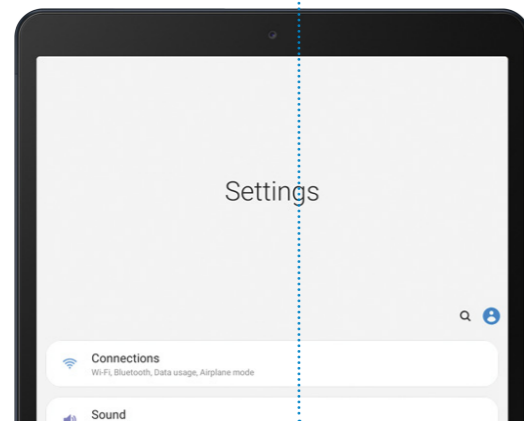

Connections Connect to Wi-Fi network, Bluetooth device and other connection options.



Lockscreen Select a screen lock type and set security options.



Display Customize the Home screen and display brightness.



Sounds Set device volume and sounds.



Wallpaper Change the look of the Home and Lock screens.

 


Accounts and backup Tap Users to add additional users for the device.



Security Set security options.

Device features

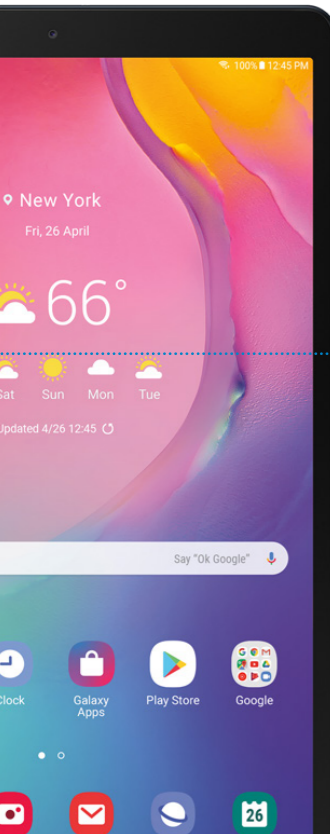

Expandable storage Expand storage with a microSD™ card.

Kids mode Kids Mode is a treasure trove of fun, child-safe content.

Multi user Allows multiple users for one device.

 
 
Set up your device

Install an optional microSD card

1. Use the tray removal tool to open the microSD card tray.
2. Insert the microSD card (sold separately) into the tray with the gold contacts facing down, as shown.

Charge the battery


Before turning on your device charge it fully with the provided charger.

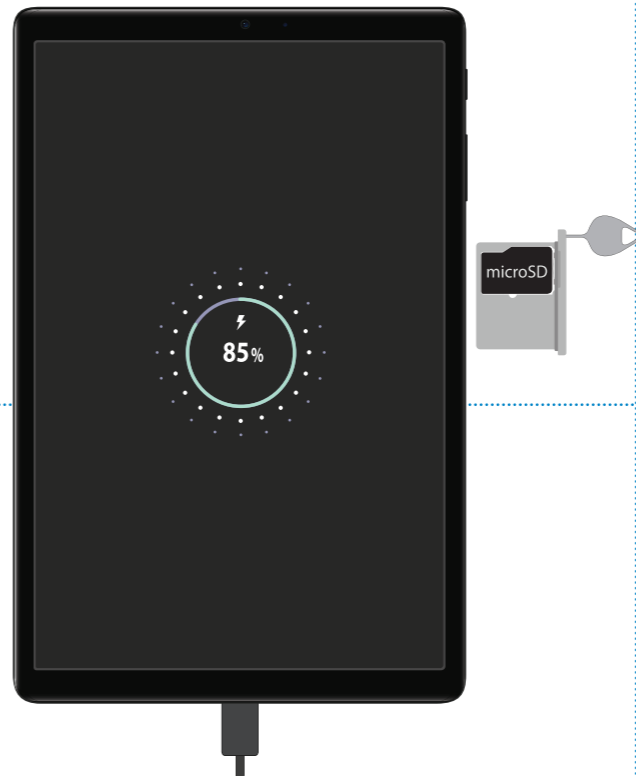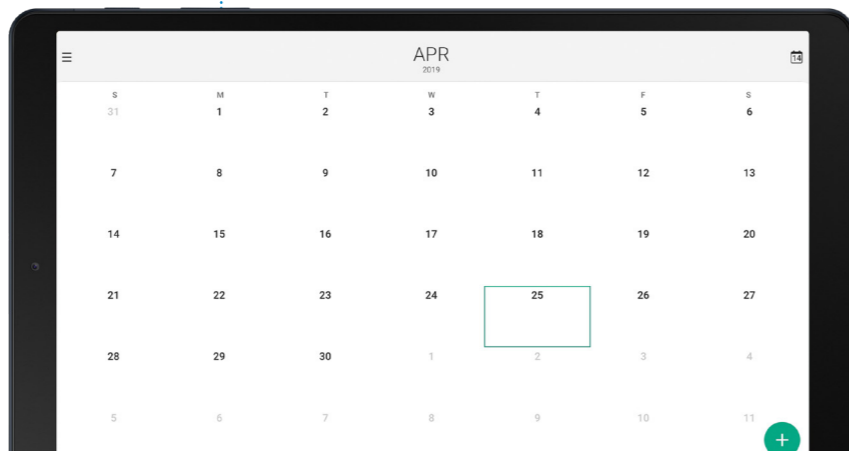

Learn more

The Help feature will give you access to the user manual and information on how to use your device.

 To open the Help feature, from the Home screen, swipe up and tap Settings > Help.

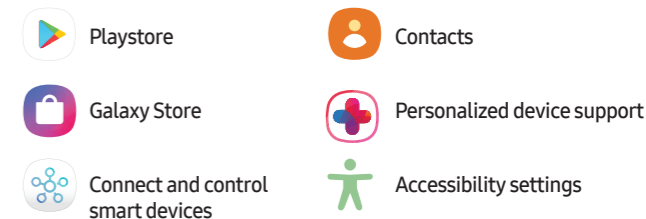

Note: Use only Samsung approved charging devices and batteries. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.