QUICK START



 


X150 | WiFi Pro-Action Camera

KAISER BAAS K



Getting Started - Remove Camera from Waterproof housing.



Open Latch



Insert MicroSD Card. (Not Included)



2 Slide Camera Out



Charge Camera (Using Supplied Cable)


Before you can use the X100 please ensure the battery has been charged. It takes approximately 5 hours to fully charge.



Product Diagram

- A Wi-Fi Activation button
- B LED power indicator
- C LCD screen
- SHOOT(menu select)


- POWER (and menu)
- G USB interface
- Micro SD card port
- Mini HDMI interface

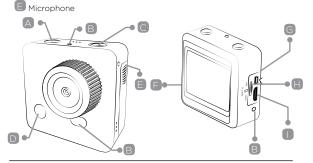



Camera Settings

- Default Video Capture Resolution: 1080P@60fps
- Default Camera Capture Resolution: 8M (3264x2448)

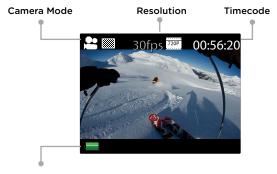

Battery Indicator



Format Your Memory Card

It is important to first format your Micro SD card to ensure it is compatible.

NOTE: A Class-6 or Class-10 Micro SD card up to 32GB is recommended. Micro SD cards lower than Class-6 will not support higher resolutions.

To navigate the X150 menu use the WiFi button on the front of the X150 to scroll through the Menu List and press the SHOOT button to select.

Turn on the X150

- · Press and HOLD the POWER button for 5 seconds
- 1. Enter the Setup Menu
 - · Press the POWER button
- Swap to General Settings (HOLD the SHOOT button for a few seconds)
 - · Navigate by using the WiFi button to scroll
- Go to the format option and select YES to format the Micro SD card (Press SHOOT to select)



Using Camera Modes



HOLD the POWER button for 5 seconds to turn the X150 ON.



Press the SHOOT button to start recording Video or taking Photos.

To swap between Video Mode and Photo Mode HOLD the SHOOT button for 3 seconds and then release.



For the full User Guide and further information please visit: www.kaiserbaas.com/x150

Need further assistance? Please visit: www.kaiserbaas.com/support

Or email helpdesk@kaiserbaas.com

For the full Kaiser Baas accesories range visit

www.kaiserbaas.com



/kaiserbaas

Share your footage with us on our social media

CHALLENGE YOURSELF