
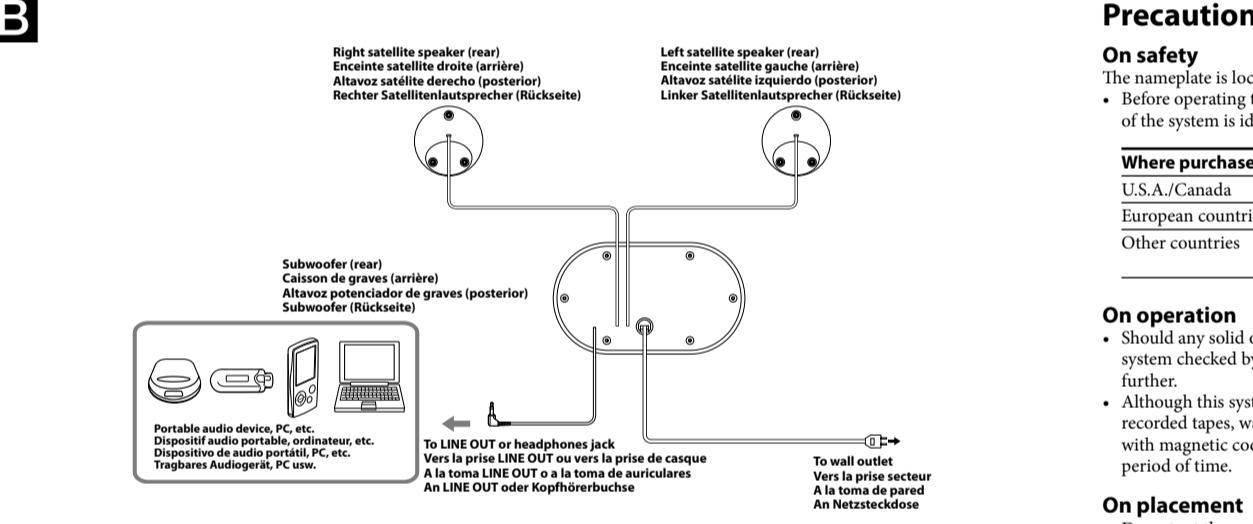


# Active Speaker System

Operating Instructions  
Mode d'emploi  
Manual de instrucciones  
Bedienungsanleitung  
Istruzioni per l'uso  
Gebruiksaanwijzing  
Instruções de Funcionamento  
Bruksanvisning

<http://www.sony.net/>

SRS-D25  
©2008 Sony Corporation Printed in China

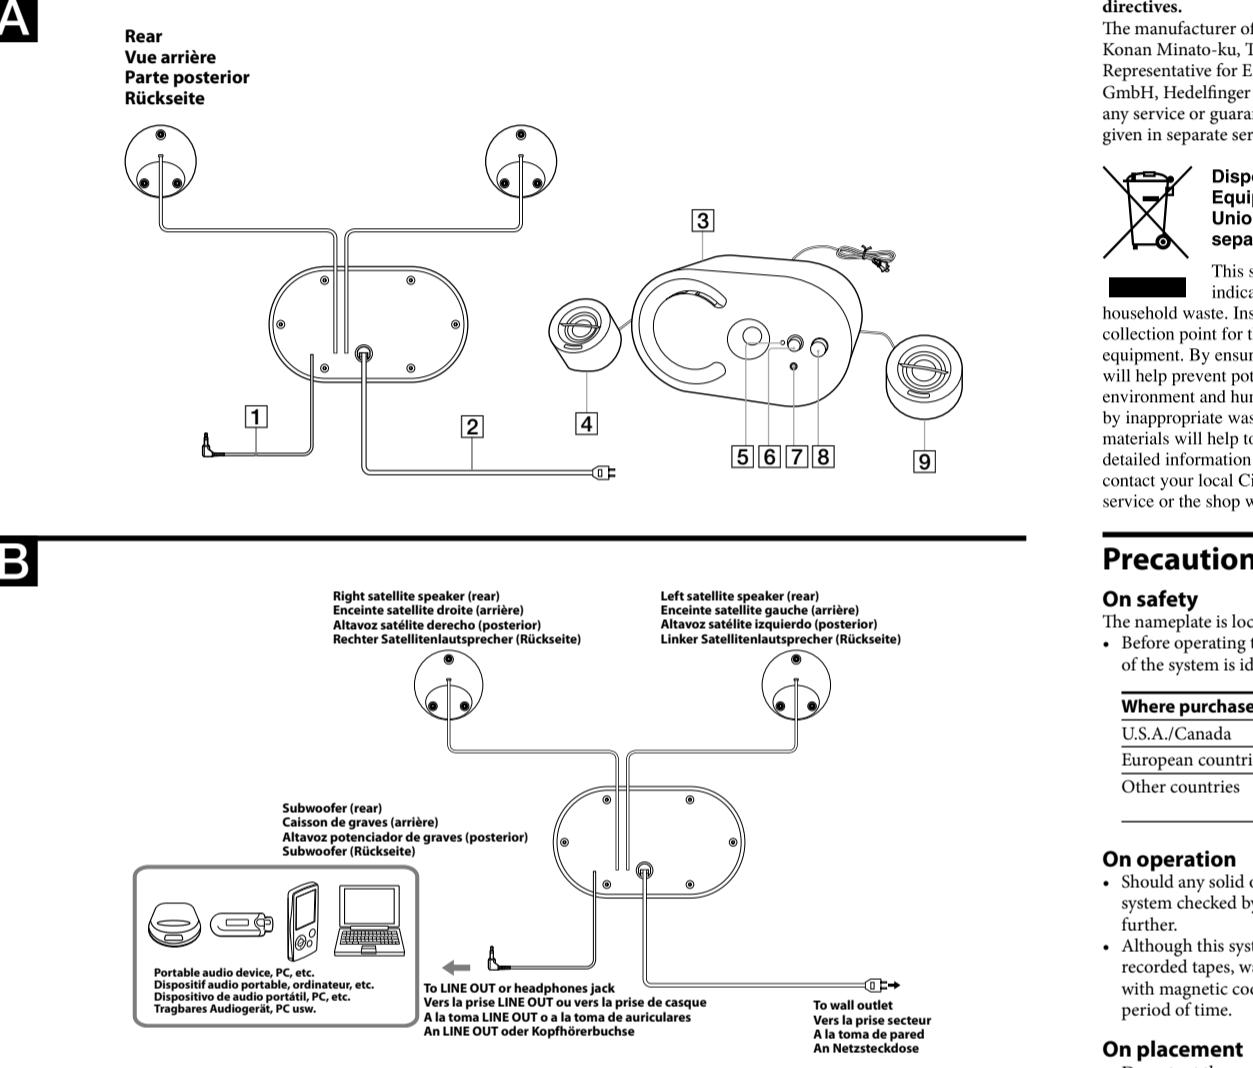

## English

Before operating the system, please read this manual thoroughly and retain it for future reference.

### WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

To reduce the risk of electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

To reduce the risk of fire, do not cover the ventilation opening of the apparatus with newspapers, tablecloths, curtains, etc.

Do not place the naked flame sources such as lighted candles on the apparatus.

To reduce the risk of fire or electric shock, do not expose this apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on the apparatus.

Do not install the apparatus in a confined space, such as a bookcase or built-in cabinet.

As the main plug is used to disconnect the system from the mains, connect the system to an easily accessible AC outlet.

Should you notice an abnormality in the system, disconnect the main plug from the AC outlet immediately.

The power cord is not disconnected from the mains as long as it is connected to the AC outlet, even if the system itself has been turned off.

Excessive sound pressure from earphones and headphones can cause hearing loss.

### CAUTION

You are cautioned that any changes or modification not expressly approved in this manual could void your authority to operate this equipment.

**Notice for customers:** the following information is only applicable to equipment sold in countries applying EU directives.

The manufacturer of this product is Sony Corporation, 1-7-1 Konan Minato-ku, Tokyo, 108-0075 Japan. The Authorized Representative for EMC and product safety is Sony Deutschland GmbH, Hedelfinger Straße 61, 70327 Stuttgart, Germany. For any service or guarantee matters, please refer to the addresses given in separate service or guarantee documents.

**Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems)**

This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

By ensuring this product is disposed of correctly, you help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The recycling of this product will help to preserve natural resources.

For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

**Troubleshooting**

Should you have a problem with your speaker system, check the following list and take the suggested measures. If the problem persists, consult your nearest Sony dealer.

### No sound

• Check that both this system and the source device are turned on.

• Turn up the volume of the system.

• Turn up the volume of the source device as high as possible to the extent that sound is not distorted. For details on volume adjustment, refer to the operating instructions supplied with the device.

• Ensure that you turn up the volume of the source device.

• Make sure all the connections have been correctly made.

### Low sound level

• Turn up the volume of the source device as high as possible to the extent that sound is not distorted. For details on volume adjustment, refer to the operating instructions supplied with the device.

• Turn up the volume of the system.

### Distorted sound

• Turn down the volume of the source device to the point where sound is no longer distorted. For details on volume adjustment, refer to the operating instructions supplied with the device.

• If the source device has a bass boost function, set it to off.

• Make sure none of the audio devices are positioned too close to the TV set.

### The noise or noise in the speaker output.

• Make sure all the connections have been correctly made.

• Make sure none of the audio devices are positioned too close to the TV set.

### The brightness of the POWER indicator is unstable.

• The brightness of the Power indicator may become unstable when the volume is turned up. This is not a malfunction.

### On placement

• Do not set the system in an inclined position.

• Do not leave the system in a location near heat sources, or in a place subject to direct sunlight, excessive dust, moisture, rain or mechanical shock.

### On cleaning

Do not use alcohol, benzine, or thinner to clean the cabinet.

### If the TV picture or monitor display is magnetically distorted

Although this system is magnetically shielded, there may be cases that the picture on some TV sets/personal computer sets become magnetically distorted. In such a case, turn off the power of the TV set/personal computer set, and after 15 to 30 minutes turn it on again. For the personal computer set, take the appropriate measures such as data storage before turning it off.

When there are no improvements, locate the system further away from the TV set/personal computer set.

Furthermore, do not move any plastic parts in which magnets are attached or used near the TV set/personal computer set, such as audio racks, TV stands, toys etc. This may cause magnetic distortion to the picture due to their interaction with the system.

### Others

• If you have any questions or problems concerning this system that are not covered in this manual, please consult your nearest Sony dealer.

• Should any problem persist, consult your nearest Sony dealer.

### Identifying parts (See fig. A)

#### 1 Input cord

Connecting cord with stereo-mini plug

#### 2 Power cord

Power cord

#### 3 Subwoofer

Satellite speaker (L)

#### 4 Satellite speaker (R)

#### 5 Power indicator

#### 6 POWER button

#### 7 (headphones) jack

#### 8 VOLUME control

#### 9 Satellite speaker (R)

### Supplied accessories

Operating Instructions (1)

### Optional accessories

Connecting cord RK-G138

Plug adaptor PC-234S, PC-236MS

The above optional accessories are not provided in some areas.

Design and specifications are subject to change without notice.

Dimensions (w/h/d)

Approx. 65 x 65 x 67.5 mm

(2 1/2" x 2 1/2" x 2 1/2")

(Satellite speaker)

Approx. 208 x 118 x 130 mm

(8 1/4" x 4 3/4" x 5 1/4")

(Subwoofer)

Weight (approx. 3 kg)

(Satellite speaker)

Approx. 2 kg (4 lb. 7 oz.) (Subwoofer)

Cord length

1.8 m (Power cord)

Power consumptions

24 W

### Accessories supplied

Mode d'emploi (1)

### Accessories in option

Connecting cord RK-G138

Adaptateur de fiche PC-234S, PC-236MS

The above optional accessories are not provided in some areas.

Design and specifications are subject to change without notice.

Dimensions (w/h/d)

Approx. 65 x 65 x 67.5 mm

(2 1/2" x 2 1/2" x 2 1/2")

(Satellite speaker)

Approx. 208 x 118 x 130 mm

(8 1/4" x 4 3/4" x 5 1/4")

(Subwoofer)

Weight (approx. 90 g (3 oz))

(Satellite speaker)

Environ 2 kg (4 lb. 7 oz.)

(Caisson de graves)

Length of the cord

1.8 m (cordon d'alimentation)

Consumption electric

24 W

### Accessories for sale

Mode d'emploi (1)

### Accessories in option

Connecting cord RK-G138

Adaptateur de fiche PC-234S, PC-236MS

The above optional accessories are not provided in some areas.

Design and specifications are subject to change without notice.

Dimensions (w/h/d)

Approx. 65 x 65 x 67.5 mm

(2 1/2" x 2 1/2" x 2 1/2")

(Satellite speaker)

Approx. 208 x 118 x 130 mm

(8 1/4" x 4 3/4" x 5 1/4")

(Subwoofer)

Weight (approx. 90 g (3 oz))

(Satellite speaker)

Environ 2 kg (4 lb. 7 oz.)

(Caisson de graves)

Length of the cord

1.8 m (cordon d'alimentation)

Consumption electric

24 W

### Description of the unit

(consulte la figura A)

#### 1 Raccordement du système au dispositif source.

#### 2 Raccordement le cordon d'alimentation à la prise secteur.

Design and specifications are subject to change without notice.

Dimensions (w/h/d)

Approx. 65 x 65 x 67.5 mm

(2 1/2" x 2 1/2" x 2 1/2")

(Satellite speaker)

Approx. 208

