 



# AIRTAME

## user manual

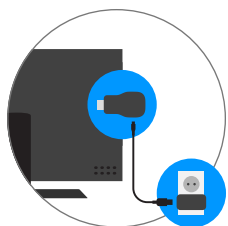


### Step 1

 Plug your AIRTAME device into the HDMI port of your TV / projector, directly, or using the HDMI extension cable included in the package. Then power your AIRTAME by connecting the included USB cable to your TV / projector, or into a power socket using the included power adapter.

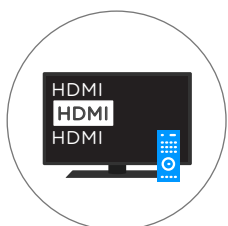

### Step 2

 Turn on your TV / projector and select the HDMI input source that you have plugged your AIRTAME device into. You should now see an AIRTAME setup screen on your TV / projector.

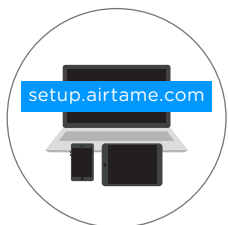

### Step 3

 
Go to [setup.airtame.com](http://setup.airtame.com) from the browser on your laptop or mobile device and follow the instructions.

Note: You will need to use a laptop to setup your AIRTAME device for the first time.



### Step 4

When you have downloaded the AIRTAME application to your laptop from [setup.airtame.com](http://setup.airtame.com), open the application and select 'setup new AIRTAME'. Follow the setup guide.

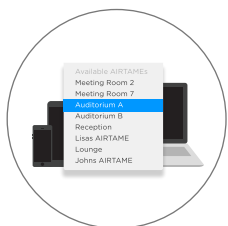

### Step 5

After you have completed the setup guide, select the device that you want to stream to from the AIRTAME menu and select 'duplicate'.

Note: If you do not see your AIRTAME in the menu simply restart the AIRTAME application.



### Step 6

You will now be streaming directly from your laptop or mobile device to your TV / projector.

Note: From your laptop, you can mirror your entire screen to your TV / projector. From your mobile device, you are able to stream locally stored images & documents to the TV / projector through the AIRTAME mobile application.