



A MORE DETAILED AND EXTENSIVE INSTRUCTIONS FOR USE can be downloaded from:
www.whirlpool.eu

YOUR SAFETY AND THAT OF OTHERS IS VERY IMPORTANT

This manual and the appliance itself provide important safety warnings, to be read and observed at all times.

This is the danger symbol, pertaining to safety, which alerts users to potential risks to themselves and others.



All safety warnings are preceded by the danger symbol and the following terms:



DANGER

Indicates a hazardous situation which, if not avoided, will cause serious injury.



WARNING

Indicates a hazardous situation which, if not avoided, could cause serious injury.


All safety warnings give specific details of the potential risk present and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the appliance. Carefully observe the following instructions:

- Use protective gloves to perform all unpacking and installation operations.
- The appliance must be disconnected from the power supply before carrying out any installation work.
- Installation and maintenance must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the appliance unless specifically stated in the user manual.
- Power cable replacement must be carried out by a qualified electrician. Contact an authorised service centre.
- Regulations require that the appliance is earthed.

- The power cable must be long enough for connecting the Appliance, once fitted in its housing, to the main power supply.
- For installation to comply with current safety regulations, an all-pole disconnect switch with minimum contact gap of 3 mm must be used.
- Do not use multiple plug adaptors if the oven is fitted with a plug.
- Do not use extension leads.
- Do not pull the power supply cable.
- The electrical components must not be accessible to the user after installation.
- Do not touch the appliance with any wet part of the body and do not operate it when barefoot.
- This appliance is designed solely for use as a domestic appliance for cooking food. No other type of use is permitted (e.g.: heating rooms or outdoor use).
The Manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.
- This appliance is intended to be used built-in. Do not use it freestanding.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Very young (0-3 years) and young children (3-8 years) shall be kept away unless continuously supervised.
- Children from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance only if they are supervised or have been given instructions on safe appliance use and if they understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- During and after use, do not touch the heating elements or interior surfaces of the appliance: risk of burns. Do not allow the appliance to come into contact with cloths or other flammable materials until all the components have cooled down completely.

- At the end of cooking, exercise caution when opening the appliance door, letting the hot air or steam exit gradually before accessing the appliance. Do not obstruct the vent apertures.
- Use oven gloves to remove pans and accessories, taking care not to touch the heating elements.
- Do not place flammable materials in or near the appliance: a fire may break out if the appliance is inadvertently switched on.
- Do not use the microwave oven for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.
- Do not use the microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.
- Do not leave the appliance unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.
- Use containers suitable for use in a microwave oven only.
- Overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.
- Do not use microwave oven for deep-frying, because the oil temperature cannot be controlled.
- After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. Ensure the lid and the teat is removed before heating.
- If alcoholic beverages are used when cooking foods (e.g. rum, cognac, wine), remember that alcohol evaporates at high temperatures. As a result, there is a risk that vapors released by the alcohol may catch fire upon coming into contact with the electrical heating element.
- Do not use microwave oven for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.


- If material inside/outside the appliance should ignite or smoke is observed, keep appliance door closed and turn the appliance off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.
- Do not over-cook food. Fire could result.
- Cleaning is the only maintenance normally required. Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.
- Never use steam cleaning equipment.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the appliance door glass since they can scratch the surface, which may result in shattering of the glass.
- Do not use corrosive chemicals or vapors in this appliance. This type of appliance is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.
- Do not remove any cover. The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.
- Service only to be carried out by a trained service technician. It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.

THIS OVEN, which is intended to come into contact with foodstuffs, complies with European Regulation () n. 1935/2004 and has been designed, manufactured and sold in conformity with the safety requirements of the

“Low Voltage” directive 2006/95/CE (which replaces 73/23/CEE and subsequent amendments), the protection requirements of “EMC” 2004/108/CE.

SAFEGUARDING THE ENVIRONMENT

DISPOSAL OF PACKAGING MATERIALS


The packaging material is 100% recyclable and is marked with the recycle symbol ().

The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

ENERGY SAVING TIPS

- Only pre-heat the microwave oven if specified in the cooking table or recipe.
- Use dark lacquered or enameled baking moulds as they absorb heat far better.
- Switch the appliance off 10/15 minutes before the set cooking time. Food requiring prolonged cooking will continue to cook even once the appliance is switched off.

SCRAPPING THE PRODUCT

- This appliance is marked in conformity with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

INSTALLATION

AFTER UNPACKING THE APPLIANCE, make sure that it has not been damaged during transport and that the appliance door closes properly.

IN THE EVENT OF PROBLEMS, contact the dealer or the nearest After-sales Service.

TO PREVENT ANY DAMAGE, only remove the appliance from its polystyrene foam base at the time of installation.

MOUNTING THE APPLIANCE

FOLLOW THE SUPPLIED SEPARATE MOUNTING INSTRUCTIONS when installing the appliance.

PRIOR TO CONNECTING

CHECK THAT THE VOLTAGE on the rating plate corresponds to the voltage in the home.

DO NOT REMOVE the microwave inlet protection plates located on the side of the microwave oven cavity wall. They prevent grease & food particles from entering the microwave inlet channels.

ENSURE THE MICROWAVE oven cavity is empty before mounting.

ENSURE THAT THE APPLIANCE IS NOT DAMAGED. Check that the microwave oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the microwave oven and clean the interior with a soft, damp cloth.

DO NOT OPERATE this appliance if it has a damaged mains cord, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

IF THE POWER SUPPLY CORD is too short, have a qualified electrician or serviceman install an outlet near the appliance.

THE POWER SUPPLY CORD must be long enough for connecting the appliance, once fitting in its housing, to the main power supply.

FOR INSTALLATION to comply with current safety regulations, an all-pole disconnect switch with minimum contact gap of 3 mm must be utilized.

AFTER CONNECTING

THE APPLIANCE can be operated only if the microwave oven door is firmly closed.

THE EARTHING OF THIS APPLIANCE IS COMPULSORY. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

THE MANUFACTURERS are not liable for any problems caused by the user's failure to observe these instructions.

RECOMMENDED USE AND TIPS

CLING FILM AND BAGS

REMOVE WIRE TWIST-TIES from paper or plastic bags before placing the bag in the microwave oven cavity.

CLING FILM SHOULD BE SCORED or pricked with a fork to relieve the pressure and to prevent bursting because steam builds up during cooking.

COOKING FOOD

SINCE MICROWAVES penetrate the food to a limited depth, if there are a number of pieces to cook at once, arrange the pieces in a circle to create more outside pieces.

SMALL PIECES cook more quickly than large pieces.

CUT FOOD into pieces of equal size for uniform cooking.

MOISTURE EVAPORATES during microwave cooking.

A MICROWAVE-PROOF COVER on the container helps reduce moisture loss.

MOST FOODS WILL CONTINUE to cook after microwave has finished cooking it. Therefore, always allow for standing time to complete the cooking.

STIRRING IS USUALLY NECESSARY during microwave cooking. When stirring, bring the cooked portions on the outside edges towards the centre and the less-cooked centre portions towards the outside.

PLACE THIN SLICES OF MEAT on top of each other or interlace them. Thicker slices such as meat loaf and sausages have to be placed close to each other.

LIQUIDS

LIQUIDS MAY OVERHEAT beyond boiling point without visibly bubbling. This could cause hot liquids to suddenly boil over.

TO PREVENT THIS POSSIBILITY:

- 1 Avoid using straight-sided containers with narrow necks.
- 2 Stir the liquid before placing the container in the microwave oven cavity and leave the teaspoon in the container.
- 3 After heating, stir again before carefully removing the container from the microwave oven.

BABY FOOD

AFTER HEATING BABY FOOD or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving.

THIS WILL ENSURE that the heat is evenly distributed and avoid the risk of scalding or burns.

ENSURE that the lid and the teat are removed before heating.

FROZEN FOOD

FOR BEST RESULTS, we recommend defrosting directly on the glass turntable. If needed, it is possible to use a light-plastic container that is suitable for microwave.

BOILED FOOD, stews and meat sauces defrost better if stirred during the defrosting time.

SEPARATE PIECES as they begin to defrost. Individual slices defrost more easily.



QUICK START GUIDE



THIS QUICK START GUIDE is designed to cover a range of different models. The number of buttons and functions may therefore differ from the specific model you have purchased.

THE PRINCIPLE OF OPERATION IS:

- ↻ Choose function
- ↻ Adjust setting
- ↻ Press the start button

MENU OR NON MENU DISPLAY.

MENU: the operating system in these models will help and guide you thru the process.

 
NON MENU: the display shows only 4-5 letter words, digits and indicator lights.

PLEASE NOTE!

SOME MODELS HAVE PUSH - PUSH KNOBS

THE KNOBS OF THESE OVENS are aligned with the buttons on the panel, at delivery.


The knobs will slide out if pushed and their various functions can be accessed. It is not necessary to have them protruding from the panel during operation. Simply push them back into the panel when you are done with the setting and continue to operate the oven.

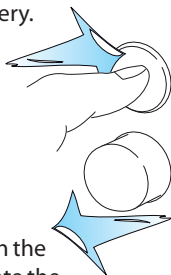

APPEARANCE

THE ACTUAL APPEARANCE of the control panel may look different than the panels shown in this guide depending on the model you have purchased.

 Example panels

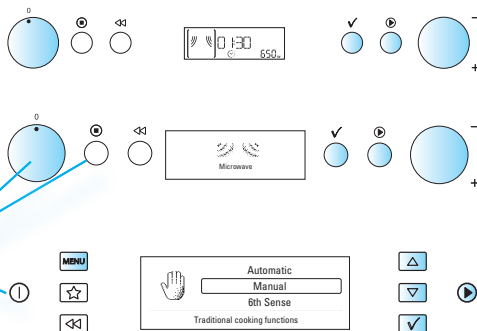

ON/OFF

THE APPLIANCE IS TURNED ON or OFF using the On/Off button or simply by turning the Multifunction Knob.



QUICK START GUIDE



EN

MENU

INITIAL SETTINGS

WHEN THE APPLIANCE IS FIRST PLUGGED IN it will ask you to set the Language and 24 hour Clock.

LANGUAGE

- 1 **USE THE UP / DOWN BUTTONS OR +/- KNOB** to choose one of the available languages.
- 2 **PRESS THE OK BUTTON** again to confirm the change.

CLOCK

- 1 **USE THE UP / DOWN BUTTONS OR +/- KNOB** to set the 24 hour clock.
- 2 **PRESS THE OK BUTTON** again to confirm the change.

AFTER A POWER FAILURE the Clock will flash and needs to be reset.

CLOCK

- 1 **USE THE UP / DOWN BUTTONS OR +/- KNOB** to set the 24 hour clock.
- 2 **PRESS THE OK BUTTON** again to confirm the change.

NON MENU

INITIAL SETTINGS

WHEN THE APPLIANCE IS FIRST PLUGGED IN it will ask you to set the Clock.

AFTER A POWER FAILURE the Clock will flash and needs to be reset.

CLOCK

- 1 **TURN THE ADJUST KNOB** to set the hours.
- 2 **PRESS THE OK BUTTON** (the two right hand digits (minutes) flicker).
- 3 **TURN THE ADJUST KNOB** to set the minutes.
- 4 **PRESS THE OK BUTTON** again to confirm the change.

The Clock is set and in operation.

 
IF YOU WISH TO REMOVE THE CLOCK from the display once it has been set, simply enter the clock setting mode again and press the On / Off button while the digits flicker.



1. CHOOSE FUNCTION (BUTTON VERSIONS)

SHORTCUT BUTTON

The oven automatically compiles a list of your favorite shortcuts for you to use.

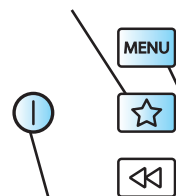


ON / OFF BUTTON

Press shortly to stop or reset any of the oven functions.

DIGITAL DISPLAY

 The display includes a 24-hour Clock, Symbols, Receptions, Hints & Menus.

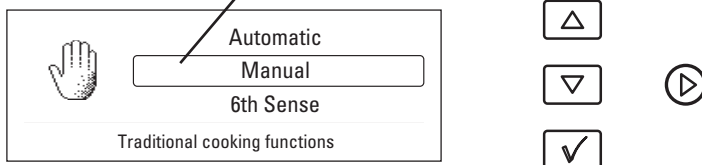

NOTE:

THE NUMBER OF FUNCTIONS may differ from the specific model you have purchased.

THE MULTIFUNCTION KNOB lets you choose between various functions.

FUNCTION	DESCRIPTION
Standby	24 hour clock, blank display & Kitchen timer
Microwave	Cooking & Reheating with microwaves only
Crisp	Crisping dough based foods such as Pizza & Pie
Grill	Browning with Grill only
Grill + MW	Combi cooking
Turbogrill	Grilling
Turbogrill + MW	Cooking with Grill and microwaves
Forced Air	Baking with hot air
Forced Air + MW	Roasting with hot air + microwaves
Quick Heat	Preheating the empty oven before using Forced Air
6 th Sense Steam	Steam cooking
Jet Defrost	Defrosting quickly
6 th Sense Reheat	Automatic reheating
6 th Sense Crisp	Automatic crisping
Setting	Change various settings



QUICK START GUIDE (MENU)

 


EN

1. CHOOSE FUNCTION (KNOB VERSIONS)

DIGITAL DISPLAY

The display includes a 24-hour Clock, Symbols, Receptions, Hints & Menus.

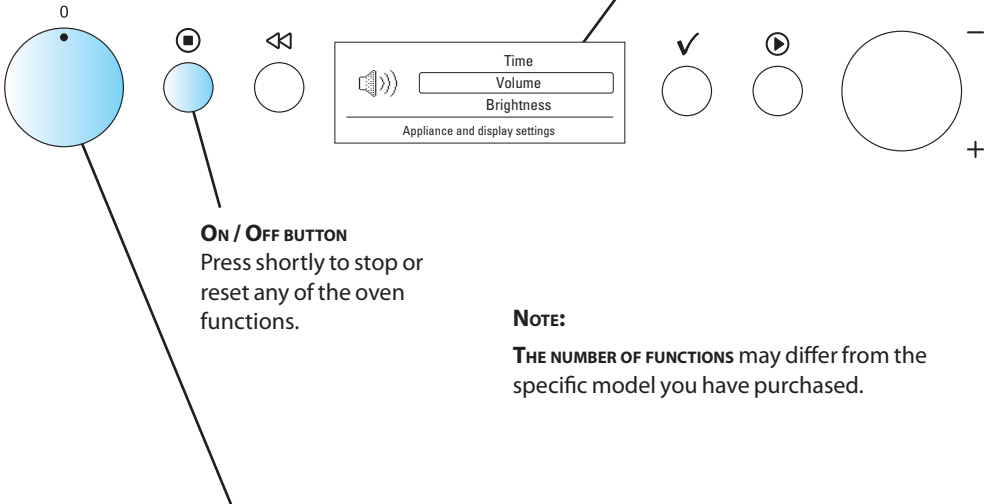

ON / OFF BUTTON

Press shortly to stop or reset any of the oven functions.

NOTE:

THE NUMBER OF FUNCTIONS may differ from the specific model you have purchased.

THE MULTIFUNCTION KNOB lets you choose between various functions.


FUNCTION	DESCRIPTION
Standby	24 hour clock, blank display & Kitchen timer
Microwave	Cooking & Reheating with microwaves only
Crisp	Crisping dough based foods such as Pizza & Pie
Grill	Browning with Grill only
Grill + MW	Combi cooking
Turbogrill	Grilling
Turbogrill + MW	Cooking with Grill and microwaves
Forced Air	Baking with hot air
Forced Air + MW	Roasting with hot air + microwaves
Quick Heat	Preheating the empty oven before using Forced Air
6 th Sense Steam	Steam cooking
Jet Defrost	Defrosting quickly
6 th Sense Reheat	Automatic reheating
6 th Sense Crisp	Automatic crisping
Setting	Change various settings



1. CHOOSE FUNCTION

DIGITAL DISPLAY

 The display includes a 24-hour clock and indicator symbols.

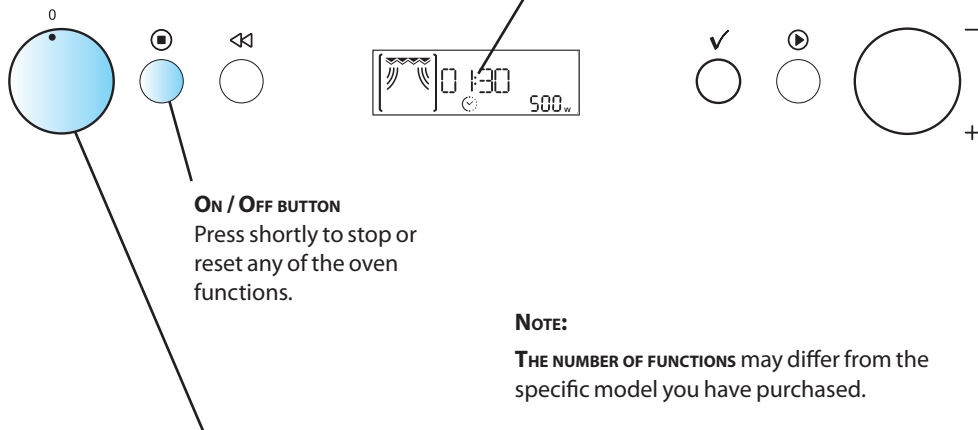

ON / OFF BUTTON

Press shortly to stop or reset any of the oven functions.

NOTE:

THE NUMBER OF FUNCTIONS may differ from the specific model you have purchased.

THE MULTIFUNCTION KNOB lets you choose between various functions.

FUNCTION	DESCRIPTION
Standby	24 hour clock, blank display & Kitchen timer
Microwave	Cooking & Reheating with microwaves only
Crisp	Crisping dough based foods such as Pizza & Pie
Grill	Browning with Grill only
Grill + MW	Combi cooking
Turbogrill	Grilling
Turbogrill + MW	Cooking with Grill and microwaves
Forced Air	Baking with hot air
Forced Air + MW	Roasting with hot air + microwaves
Quick Heat	Preheating the empty oven before using Forced Air
6 th Sense Steam	Steam cooking
Jet Defrost	Defrosting quickly
6 th Sense Reheat	Automatic reheating
6 th Sense Crisp	Automatic crisping
Auto Reheat	Automatic reheating
Auto Crisp	Automatic crisping
Setting	Change various settings



QUICK START GUIDE (MENU)



 
EN

2. ADJUST SETTING (BUTTON VERSIONS)

3. START

JET START BUTTON

Use to start the cooking process or invoke the Jet Start function.

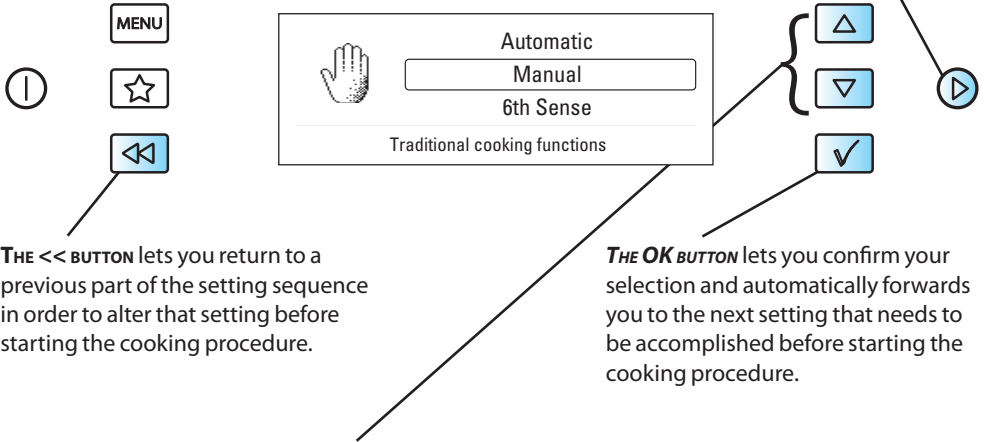

THE << BUTTON lets you return to a previous part of the setting sequence in order to alter that setting before starting the cooking procedure.

THE OK BUTTON lets you confirm your selection and automatically forwards you to the next setting that needs to be accomplished before starting the cooking procedure.

THE ADJUST BUTTONS lets you adjust various settings.

FUNCTION	TURN TO SET
Standby (zero position)	Kitchen timer
Microwave	Microwave power & Cooking time
Crisp	Cooking time
Grill	Cooking time & Grill power level
Grill + MW	Cooking time, Microwave Power & Grill power level
Turbogrill	Cooking time
Turbogrill + MW	Microwave power & Cooking time
Forced Air	Temperature & Cooking time
Forced Air + MW	Temperature, Microwave power & Cooking time
Quick Heat	Temperature
6 th Sense Steam	Steaming time
Jet Defrost	Food class & Weight
6 th Sense Reheat	Doneness
6 th Sense Crisp	Doneness, Food class
Setting	Clock, Buzzer, ECO & Brightness

 


2. ADJUST SETTING (KNOB VERSIONS)

3. START

JET START BUTTON

Use to start the cooking process or invoke the Jet Start function.

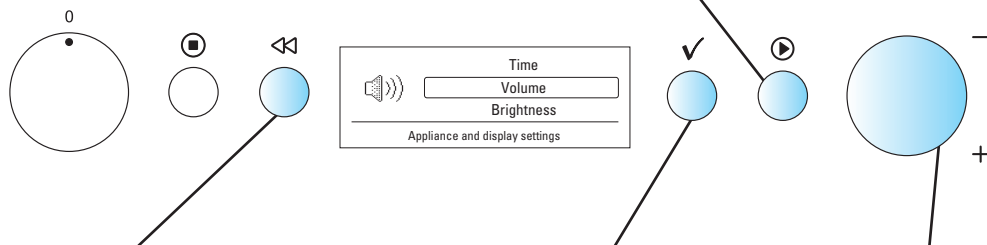

THE << BUTTON lets you return to a previous part of the setting sequence in order to alter that setting before starting the cooking procedure.

THE OK BUTTON lets you confirm your selection and automatically forwards you to the next setting that needs to be accomplished before starting the cooking procedure.

THE ADJUST KNOB lets you adjust various settings.

FUNCTION	TURN TO SET
Standby (zero position)	Kitchen timer
Microwave	Microwave power & Cooking time
Crisp	Cooking time
Grill	Cooking time & Grill power level
Grill + MW	Cooking time, Microwave Power & Grill power level
Turbogrill	Cooking time
Turbogrill + MW	Microwave power & Cooking time
Forced Air	Temperature & Cooking time
Forced Air + MW	Temperature, Microwave power & Cooking time
Quick Heat	Temperature
6 th Sense Steam	Steaming time
Jet Defrost	Food class & Weight
6 th Sense Reheat	Doneness
6 th Sense Crisp	Doneness, Food class
Setting	Clock, Buzzer, ECO & Brightness



QUICK START GUIDE (NON MENU)



 
EN

2. ADJUST SETTING


3. START

JET START BUTTON

Use to start the cooking process or invoke the Jet Start function.

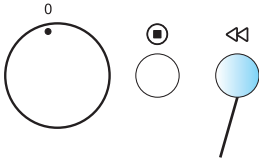

 THE << BUTTON lets you return to a previous part of the setting sequence in order to alter that setting before starting the cooking procedure.

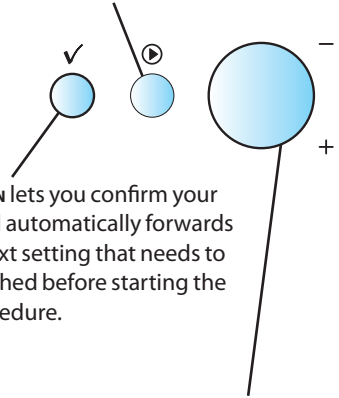

THE OK BUTTON lets you confirm your selection and automatically forwards you to the next setting that needs to be accomplished before starting the cooking procedure.

THE ADJUST KNOB lets you adjust various settings.

FUNCTION	TURN TO SET
Standby (zero position)	Kitchen timer
Microwave	Microwave power & Cooking time
Crisp	Cooking time
Grill	Cooking time & Grill power level
Grill + MW	Cooking time, Microwave Power & Grill power level
Turbogrill	Cooking time
Turbogrill + MW	Microwave power & Cooking time
Forced Air	Temperature & Cooking time
Forced Air + MW	Temperature, Microwave power & Cooking time
Quick Heat	Temperature
6 th Sense Steam	Steaming time
Jet Defrost	Food class & Weight
6 th Sense Reheat	Doneness
6 th Sense Crisp	Doneness, Food class
Auto Reheat	Doneness, Food class & Weight
Auto Crisp	Food class & Weight
Setting	Clock, Buzzer, ECO & Brightness