

**SAMSUNG**  
Galaxy Watch

**Quick Start Guide**



**Charge**

Charge your watch before using it.



**Navigate**

**Rotate** the bezel left or right to:

- From the watch screen, view notifications and widgets
- Select an app
- Navigate screens

**Swipe** the screen to:

- From the watch screen, view notifications and widgets
- View the Quick Panel
- Navigate screens



Tap to view more apps

Tap to open Recent app

From the watch screen, press to view apps or return to the watch screen



**Connect**

Visit Galaxy Apps or the Google Play Store to install the Galaxy Wearable app to connect your watch and smartphone.


Open the app and follow the prompts to pair your watch to your smartphone.

**Activate**

The Galaxy Watch (R805 and R815) are 4G LTE-enabled. Get texts, alerts, make and receive calls, even when you leave your phone behind.

Consult your service provider for more information about activation.

For a list of compatible smartphones, visit [samsung.com/us/support/mobile/wearables](https://samsung.com/us/support/mobile/wearables)

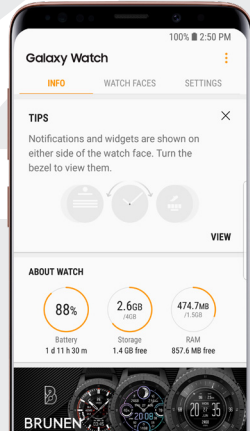

**Explore**

From the top edge of any screen, swipe down to view the Quick Panel.



Disconnect from all networks in Airplane mode

Save battery power in Power Saving mode

Keep your watch face on in Always On mode

Adjust the screen brightness

Set volume

Turn off vibration, incoming calls, and alerts in Do Not Disturb mode

Open settings

Turn on Theater mode to minimize disturbances in dark and quiet places

©2018 Samsung Electronics America, Inc. Samsung and Samsung Galaxy Watch are trademarks of Samsung Electronics Co., Ltd. Google Play Store is a trademark of Google LLC. Other company names, product names and marks are the property of their respective owners. Screen images simulated. Appearance of devices may vary.





## Customize

Touch and hold the watch face and select a preloaded watch face or download a new one.

Tap **CUSTOMIZE** to create a custom watch face or download additional watch faces by rotating to the last screen and tapping Galaxy Apps.



## Calls



Tap to make a call.



Swipe or rotate the bezel to answer.



Swipe or rotate the bezel to reject the call and send the call to voicemail.

Swipe up to open **Decline messages** to send the call to voicemail and respond with a preloaded or customized message.

**Note:** The watch must be connected via LTE or to a smartphone via Bluetooth to make or receive calls.

## Useful apps



**Galaxy Apps** Download apps optimized for your watch.



**SmartThings** Control your smart devices and appliances from your watch.



**Samsung Health** Help keep your body fit and healthy.



**Bixby** Use your voice to check the weather, set an alarm and more.

Bixby functionality limited at launch.

Visit [samsung.com/us/support](https://samsung.com/us/support) to learn more.



## Messages

Create, view and reply to messages.

Swipe up or rotate the bezel to reply with a preloaded quick response.



Tap **Edit responses** to add a custom quick response.



Tap **Doodle** to draw a message.



Tap **Voice input** and speak your message.



Tap **Emoji** to select and send an emoji.





Tap to open **Handwriting** or **Keyboard** mode.



## Find your device

If you misplace your Galaxy Watch or the connected smartphone, you can use the Galaxy Wearable app to find it.

### Find My Watch

From your smartphone, tap **Galaxy Wearable**  > **SETTINGS** > **Find My Watch** and tap **Start** .

### Find My Phone

From the watch, tap **Find My Phone**  > **Start** .