

RAZER HAMMERHEAD TRUE WIRELESS EARBUDS

MASTER GUIDE

Lift your limitations and enjoy true audio freedom with the Razer


Hammerhead True Wireless. Move freely with compact, wireless earbuds packed with performance, including an ultra-low latency connection for smooth, uninterrupted high-quality sound.

CONTENTS


1. WHAT'S INSIDE	6
2. WHAT'S NEEDED	7
3. LET'S GET YOU COVERED	7
4. GETTING STARTED	8
5. SAFETY AND MAINTENANCE	13
6. LEGALESE	14

1. WHAT'S INSIDE


• Razer Hammerhead True Wireless Earbuds

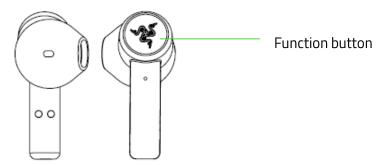

Charging case

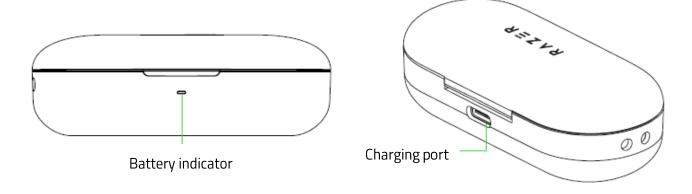


Charging cable

 

Silicone earbud sleeves



 Wrist strap




2. WHAT'S NEEDED

Devices with Bluetooth audio capability



3. LET'S GET YOU COVERED


You've got a great device in your hands complete with a 2-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at <u>razerid.razer.com</u>

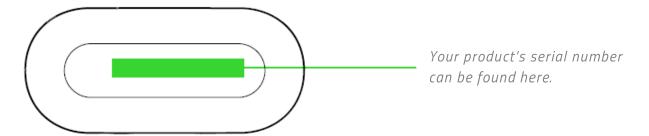

4. GETTING STARTED

CHARGING YOUR RAZER HAMMERHEAD TRUE WIRELESS

For first time use, connect the charging case to a USB port using the charging cable without removing the earbuds. For subsequent use, the charging case and the earbuds can be charged independently.

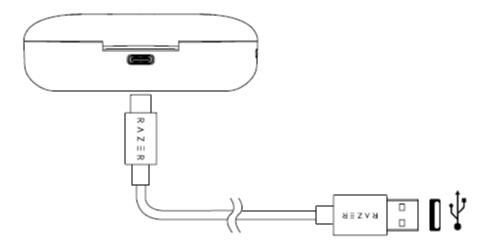

Wait until your Razer Hammerhead True Wireless is fully charged.

BATTERY INDICATOR FOR THE CHARGING CASE WHEN PLUGGED IN


	Status
Static red —	Charging
Static green —	Fully charged

BATTERY INDICATOR FOR THE CHARGING CASE WHEN UNPLUGGED


	Status
Static green —	Battery full
Static orange —	Battery low
Static red —	Battery critical

POWER ON/OFF

Press and hold the function button for each earbud for at least 2 seconds to power on. You will hear an audio prompt from each earbud once they are powered on. Once you have paired both earbuds, opening the lid if they are in the charging case will also power them on.

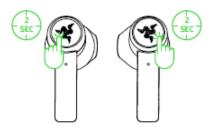

To power off the device, simply place the earbuds back inside the charging case and close the lid. If the earbuds are left idle for a few minutes, you will hear an audio prompt and then the earbuds will power off.

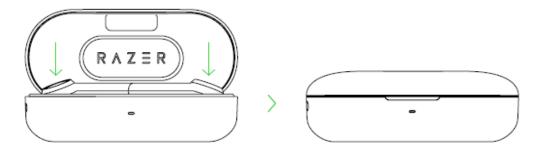


PAIRING TO A MOBILE DEVICE

When trying to connect your Razer product, remember to keep it within 1 meter of your mobile device.

1. If the earbuds are inside the charging case, simply open the lid to enter pairing mode.




If the earbuds are outside the case, make sure they are powered on, and then press and hold the function button for each earbud for at least 6 seconds to enter pairing mode.

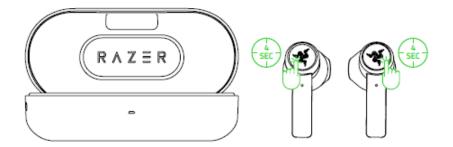


You will hear an audio prompt while the earbuds are in pairing mode.




2. Enable Bluetooth on your mobile device and select "Razer Hammerhead True Wireless Earbuds" from the list of devices found. Type "0000" as the password if needed.

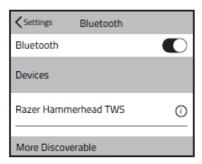

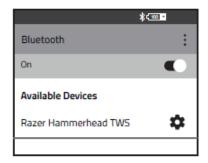

 3. Wait for pairing to complete. You will hear an audio prompt when the earbuds have successfully paired and connected to your device.



If the earbuds fail to connect to your audio source, the earbuds will stay in search mode then power off after 5 minutes. If this happens, simply repeat the steps again to pair.

Once the earbuds have been paired, it will automatically try to connect to that paired mobile device every time the charging case's lid is opened, or the earbuds are powered on. Your Razer Hammerhead True Wireless Earbuds can only connect to one mobile device at a time.

To pair to a new device, press and hold the function button for both earbuds for at least 6 seconds until you hear the audio prompt for pairing mode. Repeat steps 2 and 3 to pair a new device.



To restore to an unpaired state, first enter pairing mode for both earbuds. Then, triple tap and hold the last tap on any earbud until you hear the audio prompt for pairing mode. Repeat steps 2 and 3 to pair a new device.



GAMING MODE

On any earbud, triple tap then hold the last tap for at least 2 seconds to activate gaming mode. Once enabled, your earbuds will function at a lower latency; giving you real-time audio feedback while gaming. Repeat the same gesture to disable gaming mode.



For best performance, it is recommended to keep your earbuds within a very close distance of the audio source.

FUNCTION BUTTON QUICK REFERENCE

The following functions are only available when the earbuds are paired to a mobile device.

ACTION	EFFECT	AUDIO PROMPT
	Answer call	Voice
Press and hold for 1/2 second	End call	None
	Play/pause media	None
	Power on the corresponding earbud	Voice
Press and hold for 2 seconds	Reject incoming call	Voice
	Activate virtual assistant	Tone
Press and hold for 6 seconds	Activate pairing mode for the corresponding earbud	Voice
Double tap	Accept incoming call or switch calls	None
	Skip to the next track when playing media	None
Triple tap	Return to the previous track when playing media	None
Triple tap then hold the last tap for 2 seconds	Enable/disable Gaming Mode	Voice
	While in pairing mode, clear paired devices	Voice

5. SAFETY AND MAINTENANCE

SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Hammerhead True Wireless Earbuds, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to <u>support.razer.com</u> for assistance.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0°C (32°F) to 40°C (104°F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

The device isolates external ambient sounds even at low volumes, resulting in lowered awareness of your external surroundings. Please remove the device when engaging in any activity that requires active awareness of your surroundings.

Listening to excessively loud volume over an extended period of time can damage your hearing. Furthermore, legislation of certain countries permits only a maximum sound level of 86dB for 8 hours a day. We therefore recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time. Please, take good care of your hearing.

MAINTENANCE AND USE

The Razer Hammerhead True Wireless Earbuds requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

6. LEGALESE

COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION

© 2019 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers.", and "Powered by Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by Razer is under license.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Hammerhead True Wireless Earbuds (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

LIMITED PRODUCT WARRANTY

For the latest and current terms of the Limited Product Warranty, please visit: <u>razer.com/warranty</u>.

LIMITATION OF LIABILITY

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

GENERAL

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.