
Connecting a AV device

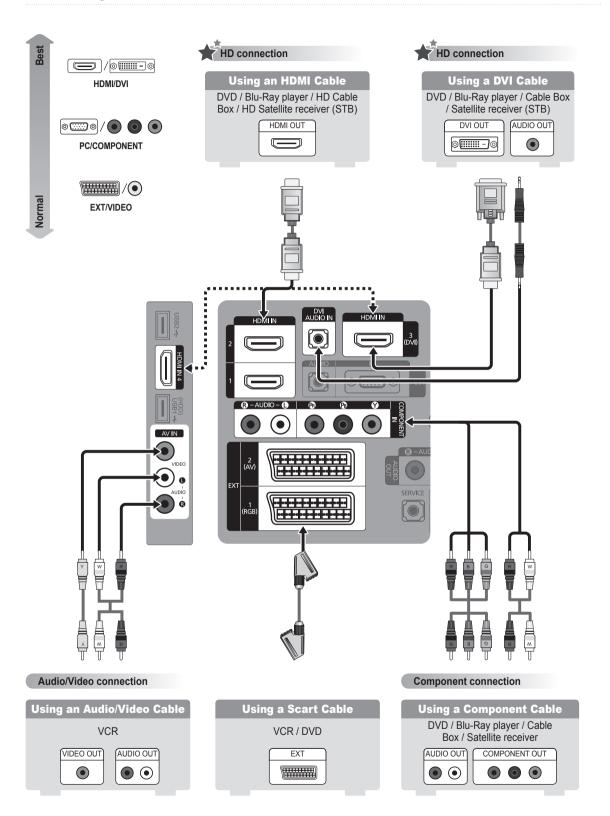



LCD TV QUICK SETUP GUIDE

The Supplied Accessories



Remote Control & Batteries (AAA x 2)



Cleaning Cloth



User Manual



Power Cord



Cover-Bottom

 


Stand Screw X 4 (Depending on the model)



Holder-Wire Cable (Depending on the model)


Installing Batteries in the Remote Control





BN68-01894F-01

Installing the Stand

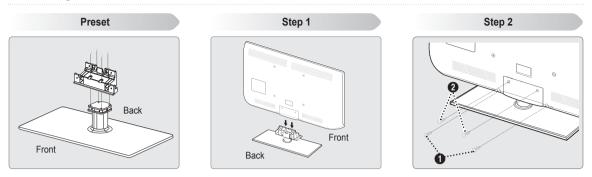


Preset: Place the Guide Stand and Cover Neck onto the stand and fasten it using the screws. Applicable to models (Depending on the model)

Step 1. Attach your LCD TV to the stand.


- Ø Two or more people should carry the TV.
- Ø Make sure to distinguish between the front and back of the stand when assembling them.
- To make sure the TV is installed on the stand at a proper level, do not apply excess downward pressure to the upper left of right sides of the TV.
- Step 2. Fasten two screws at position 1 and then fasten two screw at position 2.
 - Stand the product up and fasten the screws. If you fasten the screws with the LCD TV placed down, it may lean to one side.

Assembling the Cables

Enclose the cables in the Holder-Wire Cable so that the cables are not visible through the transparent stand.

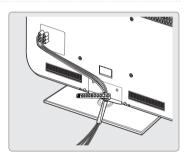


Using the remote control buttons

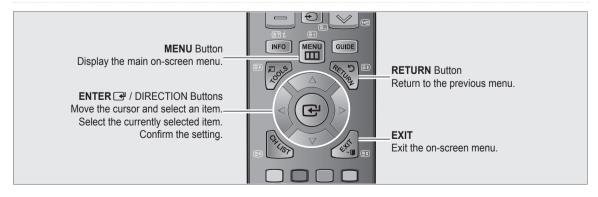

Plug & Play

When the TV is initially powered on, basic settings proceed automatically and subsequently. If you want to reset this feature, press the **MENU** button to display menu. You can set the Plug & Play by selecting 'Setup \rightarrow Plug & Play'.

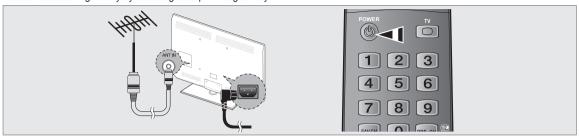

On the screen, you can set as follows.

Description: The each step may vary depending on the Antenna source.

