



## Samsung Care

### Get to know your product:

- Access user manuals, tips and more at [samsung.com/us/support](https://samsung.com/us/support)

### Ask the community:

 
- Ask questions and get solutions from Samsung customers, at [us.community.samsung.com](https://us.community.samsung.com)

### Contact us for support:


- For hardware or software support, visit [samsung.com/us/support/contact](https://samsung.com/us/support/contact) or call us at 1.800.SAMSUNG
- Find a service location near you, at [support-us.samsung.com/cyber/locator/asc\\_locator.jsp](https://support-us.samsung.com/cyber/locator/asc_locator.jsp)



## About your device

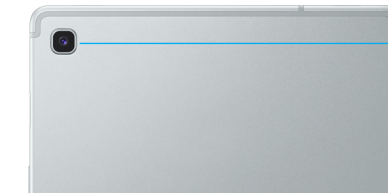

Camera

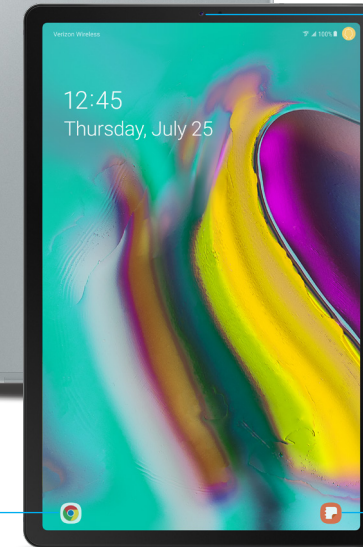 

Camera

Power/Lock & Fingerprint scanner

Volume

SIM/microSD™ card slot

Notes

Chrome

USB/Charger port

## Additional information

### Your wireless device and third-party services

Verizon Wireless is the mobile carrier associated with this wireless device, but many services and features offered through this are provided by or in conjunction with third parties. Verizon Wireless is not responsible for your use of this device or any non-Verizon Wireless applications, services and products, including any personal information you choose to use, submit or share with others. Specific third-party terms and conditions, terms of use and privacy policies apply. Please review carefully all applicable terms, conditions and policies prior to using this wireless device and any associated application, product or service.

©2019 Samsung Electronics America, Inc. Samsung and Galaxy Tab are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of tablet may vary.

Printed in Vietnam  
GH68-50785A



## Quick Reference Manual

 
## Customize your device

Tap **Settings** to customize, connect or turn on options to personalize your device.

**Wallpaper** Change the look of the Home and Lock screens.

**Accounts and backup** Tap Users to add additional users.

**Biometrics and security** Setup facial recognition or use the fingerprint scanner to unlock your device..

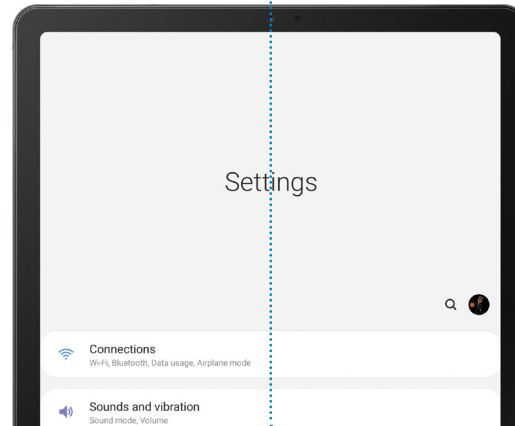

**Connections** Connect to Wi-Fi network, Bluetooth device and other connection options.



**Lock screen** Select a screen lock type and set security options.



**Display** Customize the Home screen and display brightness.



**Sounds and vibration** Set device volume and sounds.

## Device features

**Expandable storage** Expand storage with a microSD™ card.

**Flexible security** Use biometric security feature to unlock your device.

 
**Family share** Connect with your loved ones by sharing photos, events, reminders and notes.

**Bixby home** See upcoming appointments, photos, tomorrow's weather and more.

**Multiusers** Add multiple users for one device.

# Set up your device

Your device already has a SIM card installed.

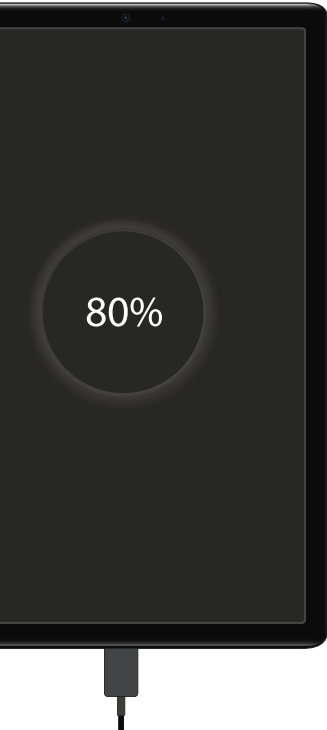

## Install an optional microSD card

1. Use the tray removal tool to open the microSD™ card tray.
2. Insert the microSD card (sold separately) into the tray with the gold contacts facing down, as shown.

## Charge the battery

Before turning on your device charge it fully with the provided charger.

# Using your device

## Turning your tablet on/off

- To turn your tablet on, press and hold the **Power/Lock** button.
- Press the **Power/Lock** button again to turn it off.

## Locking/unlocking the screen

- To turn on your screen, press the **Power/Lock** button. Then swipe up on the screen to unlock it.
- To turn off your screen and prevent accidental key presses, press the **Power/Lock** button.

# Activating your tablet

Activate your tablet to use the Internet on Verizon's 4G LTE network.

Turn on your tablet. Then follow the on-screen instructions in the Setup Wizard.

 
**Note:** Subject to specific terms of use. For coverage details, visit [verizonwireless.com/CoverageLocator](http://verizonwireless.com/CoverageLocator).

# Bixby

Set reminders, see upcoming appointments, photos, tomorrow's weather and more.

To launch Bixby, from the home screen swipe right and follow the prompts to set up.

Visit [samsung.com/us/support/owners/app/Bixby](http://samsung.com/us/support/owners/app/Bixby) for more information.

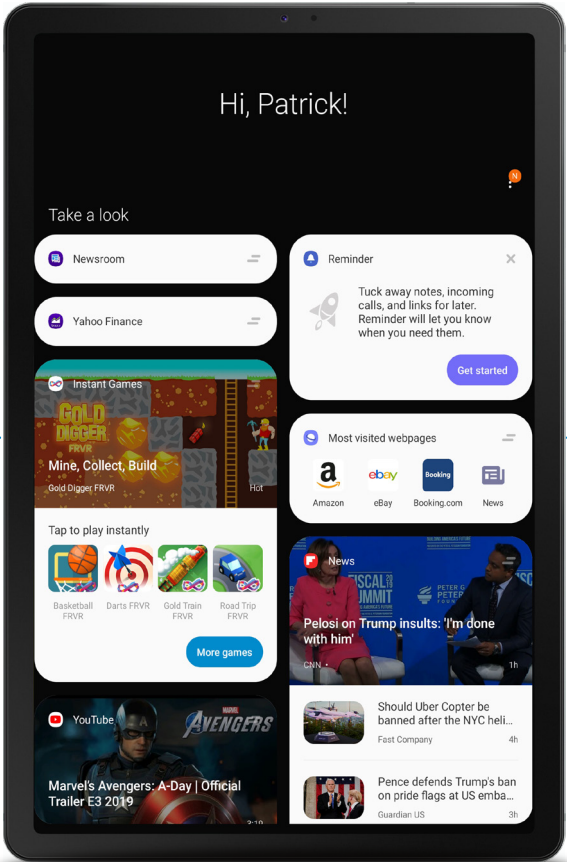

# Learn more

Use the Help feature to access the user manual and other information on how to use your device, including:



Installing apps



Adding, editing, and deleting contacts



Installing Samsung apps



Configuring accessibility settings



Connecting and controlling smart devices



Adding, editing, and deleting calendar events

To open the Help feature, from the Home screen, swipe up and tap **Settings** > **Help**.

# Manage your account



**My Verizon Mobile app**

Manage your account, track your usage, edit account information, pay your bill and more.



**International travel**

For features and rates when outside the US, visit: [verizonwireless.com/International](http://verizonwireless.com/International).



**Customer service**

Call 800.922.0204

Twitter @VZWSupport