

SAMSUNG
Galaxy Tab E

T A B L E T

User Manual

Please read this manual before operating your device
and keep it for future reference.

SAMSUNG

Legal Notices

WARNING! This product contains chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. For more information, please call 1-800-SAMSUNG (726-7864).

Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG mobile device, including but not limited to, accessories, parts, or software relating thereto (the “mobile device”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

Open Source Software

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: opensource.samsung.com.

Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT “AS IS”, AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

Modification of Software

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

Samsung Knox

Samsung Knox is Samsung's security platform and is a mark for a Samsung device tested for security with enterprise use in mind. Additional licensing fee may be required. For more information about Knox, please refer to: samsung.com/us/knox [090116]

Samsung Electronics America (SEA), Inc.

Address:

85 Challenger Road
Ridgefield Park,
New Jersey 07660

Phone:

1-800-SAMSUNG (726-7864)

Internet Address:

samsung.com

©2016 Samsung Electronics America, Inc.
Samsung, Samsung Galaxy, and Multi Window are all trademarks of Samsung Electronics Co., Ltd.

Other marks are the property of their respective owners.

Note: Some multimedia (audio/video) files contain Digital Rights Management (DRM) technology to verify you have the right to use the files. Preloaded apps on your device may not be compatible with DRM-protected files.

Note: Screen images are simulated. Appearance of device may vary.

Do you have questions about your Samsung Mobile Device?

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: samsung.com/us/support.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Legal Information

Important legal information can be accessed in writing on the mobile device or at samsung.com.

READ THIS INFORMATION BEFORE USING YOUR MOBILE DEVICE.

Samsung Limited Warranty - This product is covered under the applicable Samsung Limited Warranty **INCLUDING ITS DISPUTE RESOLUTION PROCEDURE and your right to opt out of arbitration within 30 calendar days of the first consumer purchase. You may opt out by either sending an email to optout@sea.samsung.com with the subject line "Arbitration Opt-Out" or by calling 1-800-SAMSUNG (726-7864).** For more detailed procedures, please refer to the "Dispute Resolution Procedures and Arbitration and Opt-Out" section of the Limited Warranty.

Full written terms and detailed information about the warranty and obtaining service are available on the device at: **Settings > About device > Legal information > Samsung legal** or you may access the online version of the Health/Safety and Warranty guide for your device at:

English

samsung.com/us/Legal/Tablet-HSGuide

Spanish

samsung.com/us/Legal/Tablet-HSGuide-SP

The online version of the **End User License Agreement (EULA)** for your device can be found online at:

samsung.com/us/Legal/SamsungLegal-EULA4

Table of Contents

Getting Started	1	Settings	51
Front View.....	2	How to Use Settings.....	52
Back View.....	3	Wi-Fi.....	53
Assemble Your Device.....	4	Bluetooth.....	55
Set Up Your Device.....	5	Airplane Mode.....	57
Set Up Accounts on Your Device.....	6	Data Usage.....	58
Know Your Device	7	More Connection Settings.....	59
Home Screen.....	8	Smart Manager.....	61
Status Bar.....	11	Applications Settings.....	62
Navigation.....	12	Sound Settings.....	64
Notification Panel.....	13	Notifications.....	66
Multi Window.....	15	Display.....	67
Enter Text.....	17	Advanced Features.....	69
Applications	19	Users.....	70
Apps List.....	20	Wallpaper.....	71
Google Applications.....	22	Home Screen Settings.....	72
Microsoft Applications.....	24	Lock Screen and Security.....	73
Additional Applications.....	25	Privacy.....	76
Calculator.....	26	Accessibility.....	78
Calendar.....	27	Accounts.....	80
Camera.....	29	Google Settings.....	81
Clock.....	32	Backup and Reset.....	82
Contacts.....	34	Language and Input.....	84
Email.....	37	Battery.....	86
Galaxy Apps.....	39	Storage.....	87
Gallery.....	40	Date and Time.....	89
Internet.....	42	User Manual.....	90
Memo.....	44	About Device.....	91
Music Player.....	45		
My Files.....	47		
Video Player.....	49		

Getting Started

 
Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.

Front View



- **Front camera:** Take self-portraits and record videos of yourself.
- **Recent:** Tap to display recent apps, or touch and hold for Multi window™.
- **Back:** Return to the previous screen, or close a dialog box, menu, or keyboard.
- **Home key:** Return to the Home screen.
- **USB charger/Accessory port:** Connect the USB charger (included) and other optional accessories (not included).

Back View

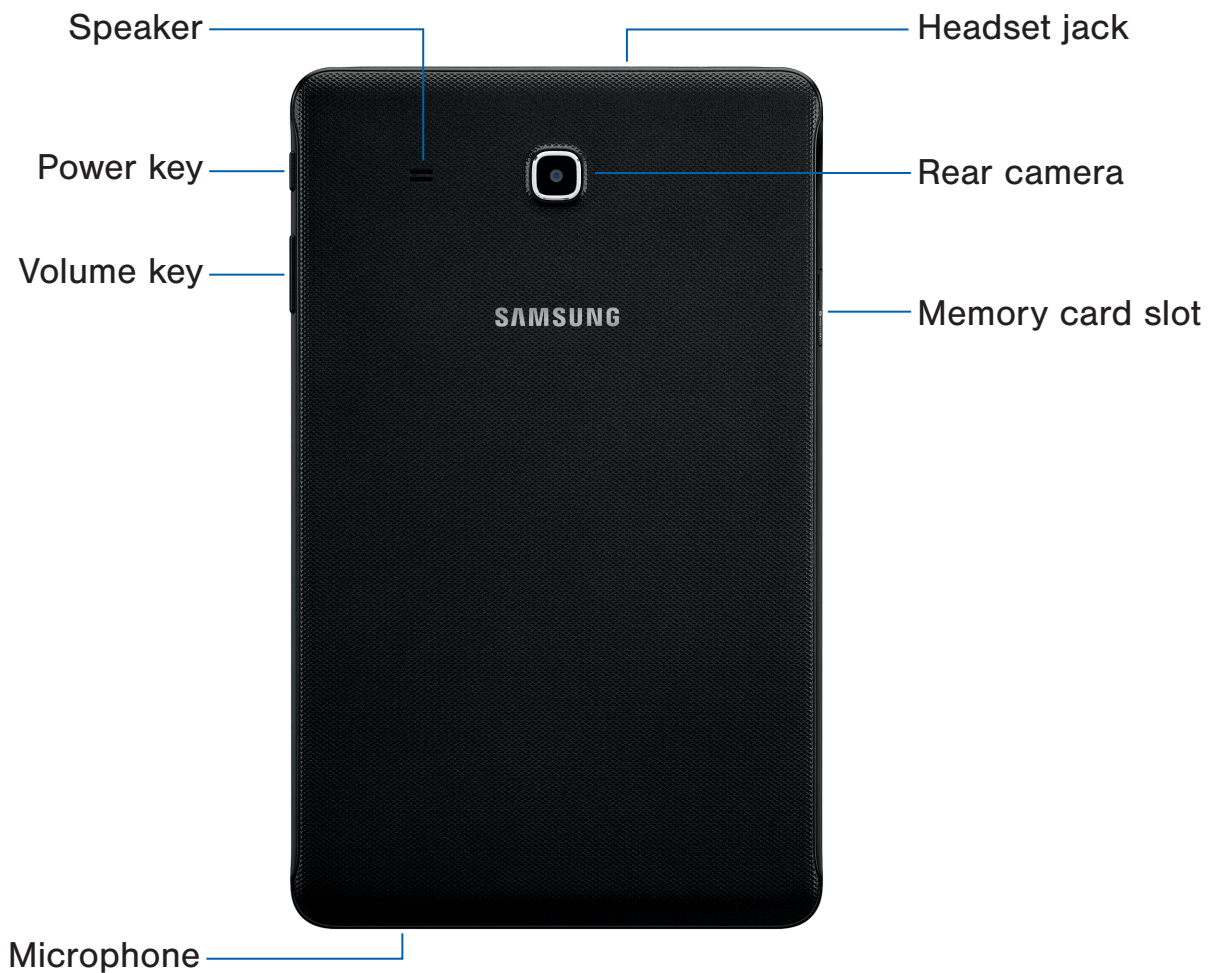

- **Headset jack:** Connect an optional headset (not included).
- **Rear camera:** Take pictures and record videos.
- **Memory card slot:** Install an optional memory card (not included) for storage of files.
- **Microphone:** Record audio and detect voice commands.
- **Volume key:** Adjust the volume of your device's sounds.
- **Power key:** Press and hold to turn the device on or off, or to restart it. Press to lock or wake up the screen.
- **Speaker:** Play music and other sounds.

Assemble Your Device

 
This section helps you to assemble your device.

Install an Optional Memory Card

You can install an optional microSD™ or microSDHC™ memory card (not included) to expand available memory space.

Note: A memory card can be installed at any time. It is not necessary to install it prior to using the device.

1. Open the memory card slot cover and turn to expose the slot.

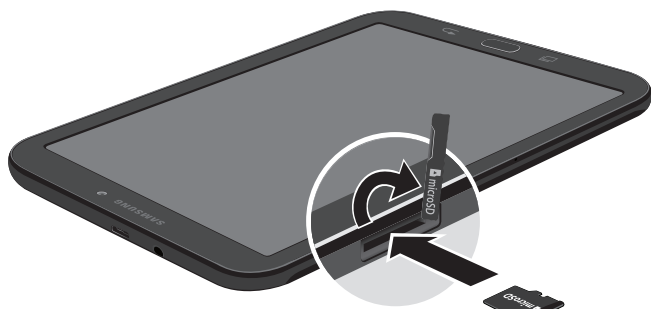

2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.
3. Close the memory card slot cover.

Charge the Battery

Your device is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (charging head and USB cable) is included with the device for charging the battery.

The battery comes partially charged. You can use the device while charging.

Note: It is recommended you fully charge the battery before using your device for the first time.

Caution: Use only charging devices and batteries approved by Samsung. Samsung accessories are designed for your device to maximize battery life. Using other accessories may invalidate your warranty and may cause damage.

1. Insert the USB cable into the USB charger/Accessory port.



2. Connect the USB cable to the charging head, then plug the charging head into a standard outlet.
3. Unplug the charging head from the outlet and remove the USB cable from the device when charging is complete.

When to Charge the Battery

When the battery is low and only a few minutes of operation remain, the device sounds a warning tone at regular intervals. In this condition, your device conserves its remaining battery power by dimming the screen. When the battery level becomes too low, the device automatically turns off.

For a quick check of your battery level:

- ▶ View the battery charge indicator located in the top right corner of your device's display. A solid color (🔋) indicates a full charge.

You can also choose to display a percentage value. Viewing a percentage value can provide a better idea of the remaining charge on the battery. For more information, see [Battery](#).

Set Up Your Device

Turn Your Device On or Off

Turn the Device On

- ▶ Press and hold the **Power** key until the device starts up.

Turn the Device Off

1. Press and hold the **Power** key until the device options menu displays.
2. Tap **Power off** and confirm if prompted.

Initial Set Up

The first time you turn your device on, a Welcome screen is displayed. It guides you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi® network, set up accounts, choose location services, learn about your device's features, and more.

Note: Voice Assistant provides voice prompts and descriptions of items to improve accessibility. During setup, you can enable or disable Voice Assistant by pressing the **Home** key quickly three times.

Secure Your Device

Use your device's screen lock features to secure your device.

Lock the Device

By default, the device locks automatically when the screen times out.

To lock the device:

- ▶ Press the **Power** key.

Unlock the Device

The default screen lock on your device is Swipe.

Note: To choose a more secure screen lock, see [Set a Screen Lock](#).

To unlock your device:

- ▶ Press the **Power** key or **Home** key, and then touch and drag your finger across the screen.

Set Up Accounts on Your Device




Samsung Account

Create a Samsung account, for access to Samsung content and apps on your device.

When you turn on your device for the first time, set up your existing Samsung account or create a new Samsung account.

– or –

To create a new Samsung account or set up your Samsung account on your device at any time, use Accounts settings. For more information, see [Accounts](#).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** >  **Add account** > **Samsung account**.




Google Account

Your new device uses your Google™ Account to fully utilize its Android™ features, including Gmail™, Google Hangouts™, and the Google Play™ store.

When you turn on your device for the first time, set up your existing Google Account or create a new Google Account.

– or –

To create a new Google Account or set up your Google Account on your device at any time, use Accounts settings. For more information, see [Accounts](#).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** >  **Add account** > **Google**.

Factory Reset Protection

When you sign in to a Google Account on your device, Factory Reset Protection is turned on. Factory Reset Protection (FRP) prevents other people from using your device if it is reset to factory settings without your permission. For example, if your device is lost or stolen and a factory data reset is performed, only someone with your Google Account username and password can use the device.

You will not be able to access the device after a factory data reset if you do not have your Google Account username and password. For more information, see [Factory Data Reset](#).



Caution: You should remove your Google Account before shipping your device to Samsung or any other service provider for service and before resetting the device to factory settings.

Enable Factory Reset Protection

Adding a Google Account to your device automatically turns on the Factory Reset Protection (FRP) security feature. For more information, see google.com.

Disable Factory Reset Protection

To disable FRP, remove all Google Accounts from the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **Google**.
 - If you have more than one Google Account set up on your device, tap the Google Account you want to remove.
3. Tap **More** > **Remove account**.

 
Know Your Device

Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.

Warning: Please note that a touch screen responds best to a light touch from the pad of your finger or a capacitive stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

Home Screen

The Home screen is the starting point for using your device.

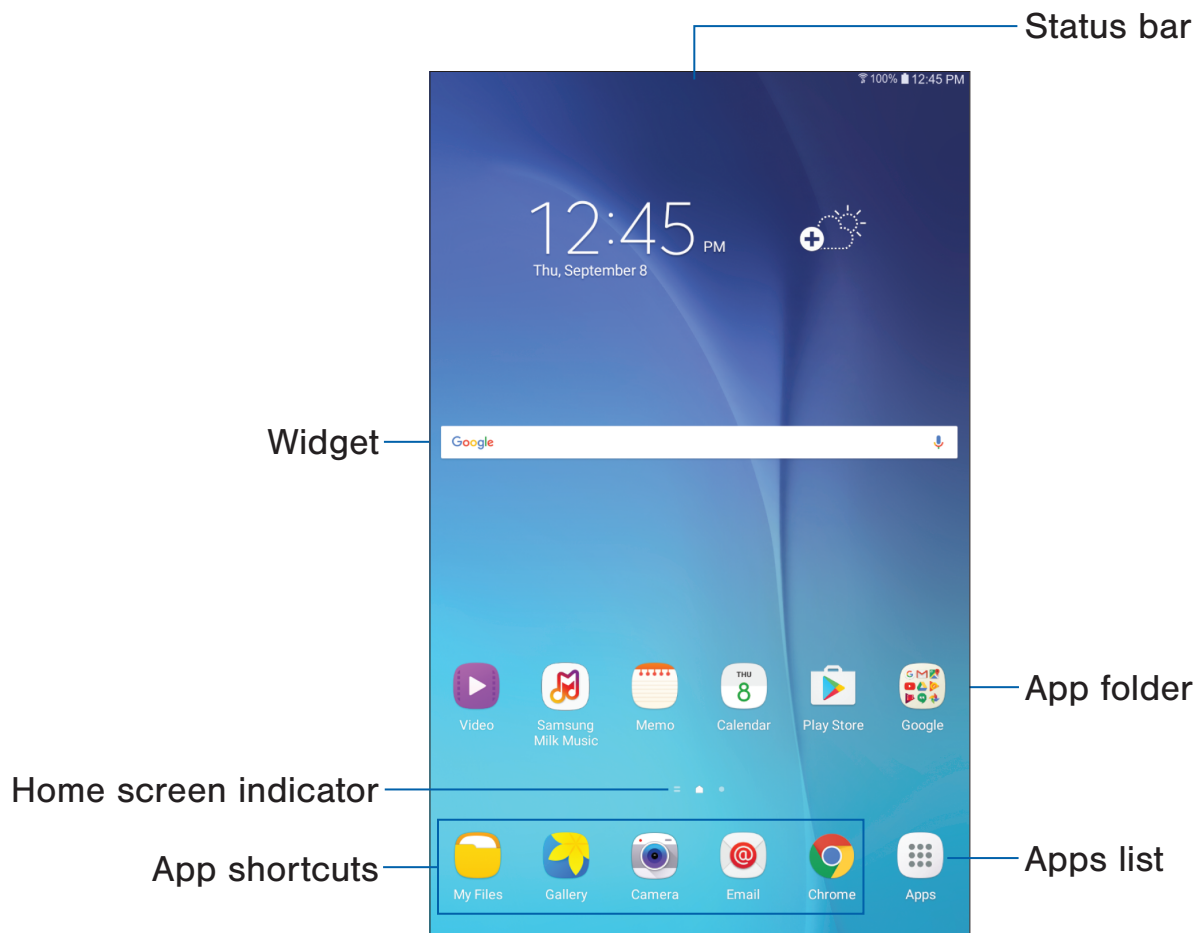




- **Status bar:** Displays device status icons (right) and notification icons (left). For more information, see [Status Bar](#).
- **App folder:** Groups multiple apps into a folder.
- **Apps list:** Allows quick access to all of your applications.
- **App shortcuts:** Launches your favorite applications.
- **Home screen indicator:** Indicates which Home screen is currently visible.
- **Widget:** Runs as a simple application extension (not a shortcut) on a Home screen.

Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.

Manage Home Screens

Your device comes with multiple Home screens to hold apps and widgets. You can rearrange the Home screens in a different order.

1. From a Home screen, pinch the screen.
2. Use these options to manage screens:
 - **Add a screen:** Swipe to the end of the screens, and then tap  **Add**.
 - **Remove a screen:** Touch and hold a screen, and then drag it to  **Remove**.
 - **Set a screen as the main Home screen:** Tap  **Main Home screen** at the top of a screen. This screen displays when you press the Home key.
 - **Change the order of screens:** Touch and hold on a screen, and then drag to a new position.
 - **Flipboard Briefing:** Swipe to the left of the screens to find the Flipboard Briefing screen. To enable or disable this feature, tap **On/Off** at the top of the screen.



Change the Wallpaper

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.
2. Tap **Wallpapers** to customize.

For more information, see [Wallpaper](#) in Settings.

To access Wallpaper settings:

- ▶ From a Home screen, tap  **Apps** >  **Settings** > **Wallpaper**.


Widgets

Widgets are simple application extensions that run on a Home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

Add a Widget to a Home Screen

1. From a Home screen, pinch the screen.
2. Tap **Widgets**.
3. Touch and hold a widget, drag it to a Home screen, and release it.

Remove a Widget


1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to  **Remove** and release it.

Note: Removing a widget does not delete the widget, it just removes the widget from the Home screen.


App Shortcuts

You can use app shortcuts to launch an app from any Home screen.

Add a Shortcut to a Home Screen

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, drag it to a Home screen, and release it.

Remove a Shortcut

1. Touch and hold a shortcut to release it.
2. Drag the app shortcut to  **Remove** and release it.



Note: Removing a shortcut does not delete the app, it just removes the shortcut from the Home screen.

Folders

Place folders on a Home screen to organize items.

Create a Folder

You can create app folders on a Home screen.

1. From a Home screen, touch and hold an app shortcut and drag it on top of another app shortcut until a highlighted box appears.
2. Release the app shortcut to create the folder.
 - **Enter folder name:** Enter a name for the folder.
 -  **Palette:** Change the color.
 -  **Add application:** Place more apps in the folder. Tap apps to select them, and then tap **Add**.
3. Tap anywhere outside of the folder to close it.
 - To add more apps, touch and hold an app shortcut and drag it to the folder.

Remove a Folder from a Home Screen

1. Touch and hold the folder until it detaches.
2. Drag the folder to  **Remove** and release it.

Status Bar

The Status bar at the top of the Home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.

Status Icons



Battery full: Battery is fully charged.



Battery low: Battery is low.



Battery charging: Battery is charging.



Mute mode: Mute mode is enabled.



Wi-Fi active: Wi-Fi is active.



Wi-Fi available: A Wi-Fi network is available.

Notification Icons



New email: New email has arrived.



New Gmail: New Gmail has arrived.



File download in progress: Download of a file or app is in progress.



File upload in progress: File is being uploaded or sent.



GPS active: Location service (GPS) is active and acquiring a signal.



App updates available: App updates are available from the Google Play store.



App update successful: App installation or updates are complete.

Navigation

Learn the basics for how to navigate through your device.

Touchscreen Navigation

Use the following motions and gestures on your touchscreen to navigate the device.

Tap

Lightly tap items to select or launch them.

- Tap the keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app shortcut to launch the application.

Touch and Hold

Activate items by a touch and hold gesture.

- Touch and hold a widget on a Home screen to move it.
- Touch and hold a field to display a pop-up menu of options.

Swipe

Lightly drag your finger vertically or horizontally across the screen to swipe.

- Swipe to unlock the screen.
- Swipe to scroll through the Home screens or menu options.

Drag

Touch and hold an item, and then move it to a new location to drag.

- Drag a shortcut to add it to a Home screen.
- Drag a widget to move it on a Home screen.




Pinch and Spread

Pinch the screen using your thumb and forefinger or spread by moving your fingers apart.

- Pinch the screen to zoom out while viewing a picture or a web page.
- Spread your fingers on the screen to zoom in while viewing a picture or a web page.


Common Options

The device uses basic command options to perform common actions.

- **More:** Tap to view more menu options for a screen. This often allows you to select items to delete or share.
- **Delete:** Tap to select items to delete.
- **Share:** Tap to select items to share, and then choose a sharing method.
- **Edit:** Tap to customize the screen.
- **On/Off:** Tap to turn the option on () or off ().
- **Checkbox:** Tap to enable or select. When enabled, a checkmark is displayed. You can often tap a checkbox at the top of the screen to select all.
-  **Menu:** Tap to view available options for the field.

Notification Panel


Notification icons on the Status bar display calendar events, device status, and more. For details, open the Notification panel.

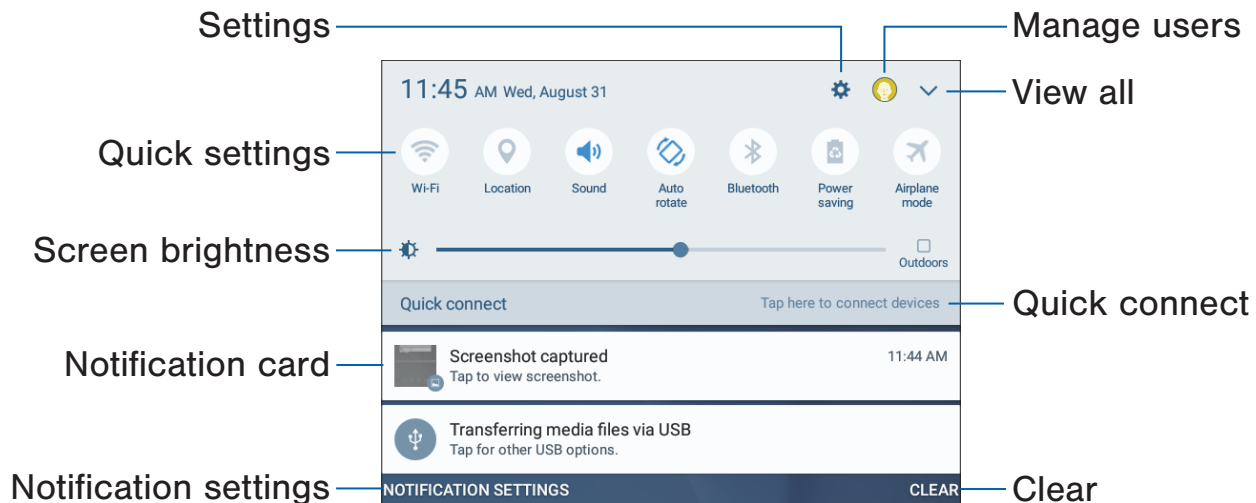 

- **Manage users:** Change users or display Users settings.
- **View all:** See all available Quick settings.
- **Quick connect:** Search for nearby devices to connect with quickly and easily.
- **Clear:** Clear all notifications.
- **Notification settings:** Enable or disable notifications from each app. For more information, see [Notifications](#).
- **Notification card:** View details about a notification.
- **Screen brightness:** Adjust screen brightness.
- **Quick settings:** Quickly enable or disable a feature.
- **Settings:** Display the Settings screen.

View the Notification Panel

You can access the Notification panel from any Home screen.

1. Drag the Status bar down to display the Notification panel.
2. Swipe down the list to see notification details.
 - To open an item, tap it.
 - To clear a single notification, drag the notification left or right.
 - To clear all notifications, tap **Clear**.
3. Drag upward from the bottom of the screen or tap  **Back** to close the Notification panel.


Quick Settings

In addition to notifications, the Notification panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.

To view additional Quick settings:

1. Drag the Status bar down to display the Notification panel.
2. Swipe left or right across the visible icons.

To customize the Quick settings that display:

1. Drag the Status bar down to display the Notification panel.
2. Tap  **View all**, and then tap **Edit**.
 - **Quick settings:** Drag the icons to change their positions.
 - **Quick connect:** Tap **On/Off** to show or hide this feature on the Notification panel.
3. Tap **Done** to save.

Quick Connect

Search for nearby devices automatically to connect to them quickly and easily.

 
1. Drag the Status bar down to display the Notification panel.
2. Tap **Quick connect**. Your device automatically scans for compatible devices.
 - **Scan for nearby devices:** Scan for compatible devices.
 - **Refresh:** Update the list of discovered devices.
 - **More:**
 - **Set device visibility:** Configure device visibility.
 - **About Quick connect:** View Quick connect information.
3. Tap a device from the list and select options to begin sharing.

To disconnect from a device:

1. Drag the Status bar down to display the Notification panel.
2. Tap **Quick connect**.
3. Tap **Remove from list** for the paired device.


Multi Window

Multitask by using multiple applications at the same time.

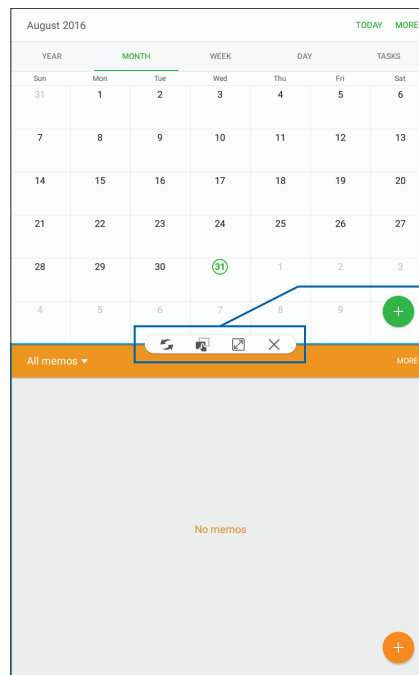

Window controls

Window Controls

Select an application window and tap  **Window controls** in the middle of the window to display the window controls.

Control Buttons



Switch windows: Switch the positions of two Multi window applications.



Drag and drop content: Move items between the application windows. Drag an item to share from one window to another. Some applications may not support this feature.



Maximize window: Open the selected window in full screen view.




Close app: Close the selected application.

Activate Multi Window

Apps that support Multi window display together on a split screen. You can switch between the apps, adjust the size of their display on the screen, and copy information from one app to the other.




Note: Multi window is not available for all apps.

1. From any screen, touch and hold  **Recent**.
2. If you are currently using an app that supports Multi window, tap an app to add in split screen, or tap two new apps to open in split view.

- or -

Tap two apps that support Multi window to open them in split screen view.

You can also launch recently used apps directly into Multi window view:

1. Tap  **Recent**.
 - Recently used apps that support Multi window have  **Multi window** in the title bar.
2. Tap  **Multi window** in the title bar to launch the application in Multi window view.
 - Other recently used apps that support Multi window appear below the launched app.
3. Tap the app icon to add it to the split screen view.

 
Note: Only applications that support Multi window have the Multi window icon.

Enter Text

Text can be entered using a keyboard or by speaking.

Use the Samsung Keyboard

Enter text using a QWERTY keyboard.

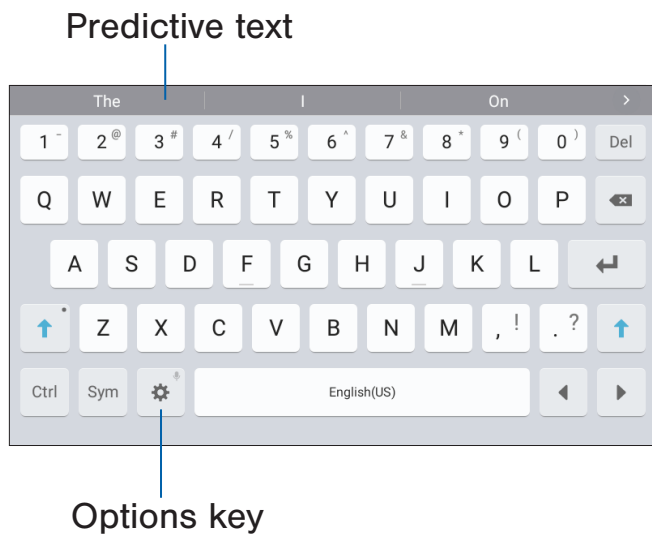

Special Keys



Keyboard layout: Change the layout of the keyboard.



Keyboard settings: Access keyboard settings.

Note: Available options depend on the app in use. Not all options are available for all apps.

Predictive Text

Predictive text suggests words that match your text entries, and can automatically complete common words. Predictive text can learn your personal writing style from your contacts, messages, email, and social networking sites—improving the accuracy of predicting text entries.

Configure the Samsung Keyboard

To customize the Samsung Keyboard:

1. From a Home screen, tap **Apps** > **Settings**.
2. Tap **Language and input**.
3. Tap **Samsung keyboard** for options.

For more information, see [Samsung Keyboard](#).

Special Keys

Sym **Symbol:** Tap to insert symbols.

Ctrl **Control:** Touch and hold for quick access to cut (x), copy (c), paste (v), undo (z), redo (y), and select all (a).

Touch and hold the **Options** key to:



Voice typing mode: Use Google Voice™ typing.



Handwriting mode: Use your handwriting to enter text.



 
Clipboard: Access the clipboard.




Emoticon: Insert emoticons.

Use Google Voice Typing

Instead of typing, enter text by speaking.

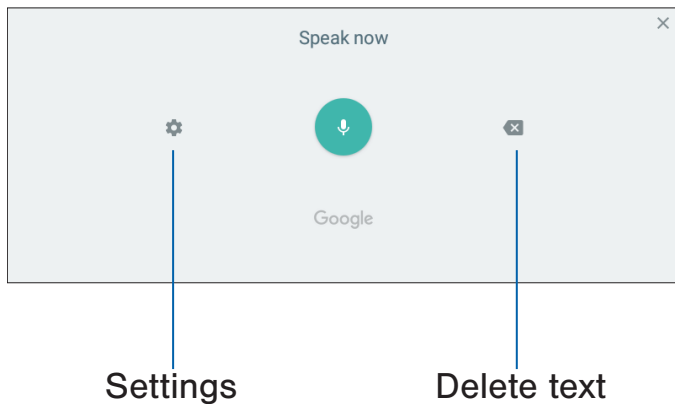



To enable Google voice typing:

1. Tap  **Voice input** on the Samsung keyboard.
 - You may need to touch and hold **Options** (left of the Space bar) to find it.
2. Speak your text.

Note: Tap  **Settings** > **Languages** to download additional languages for use with Google voice typing.

Configure Google Voice Typing

To customize Google voice typing:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input**.
3. Tap **Google voice typing** for options.

For more information, see [Google Voice Typing](#).

Applications


Learn how to change the way apps are displayed, organize apps into folders, and uninstall or disable apps.

Apps List

The Apps list displays all preloaded apps and apps that you downloaded. You can uninstall, disable, or hide apps from view.



Shortcuts to apps can be placed on any of the Home screens. For more information, see [Add a Shortcut to a Home Screen](#).

Access Applications

1. From a Home screen, tap  **Apps**.
2. Tap an application's shortcut to launch it.
3. Press the **Home** key to return to the main Home screen.

Download and Install New Apps

Find new apps to download and install on your device.




-  **Play Store:** Download new apps from the Google Play store. Visit play.google.com/store/apps to learn more.
-  **Galaxy Apps:** View and download Samsung apps that are optimized for use with Galaxy devices. Visit samsung.com/levant/apps/mobile/galaxyapps to learn more.

Uninstall or Disable Apps




You can uninstall or disable apps you download and install.

- Preloaded apps cannot be uninstalled.
- Apps that are disabled are turned off and hidden from view.

To uninstall or disable an app:

1. From a Home screen, tap  **Apps**.
2. Tap **Edit**. Apps that can be uninstalled or disabled show  **Uninstall/Disable** on their icon.
3. Tap  **Uninstall/Disable** and follow the prompts to either uninstall or disable the app.


To enable apps after disabling them:

1. From a Home screen, tap  **Apps** >  **Settings** > **Applications** > **Application manager**.
2. Tap  **Menu**, and choose **Turned off**, and then tap the app you want to enable.
3. Tap **Enable**. The app is displayed again in the Apps list.

For more information, see [Application Manager Options](#).

Search for Apps


To locate an app in your Apps list:

1. From a Home screen, tap  **Apps**.
2. Tap **Search**.
 - Enter a word or words in the **Search** field. As you type, apps that match display on the screen.
 - Tap an entry to launch that app.


Organize Your Apps

The Apps shortcuts can be organized into folders and rearranged in a custom order.

Change the Order Apps Are Listed




1. From a Home screen, tap  **Apps > Edit**.
2. Touch and hold an app shortcut or folder and drag it to a new location.
3. Tap **Done** when finished.

To alphabetize your apps:

1. From a Home screen, tap  **Apps > A-Z**.
2. Tap **Save**.

Use Folders to Organize Apps


You can organize Apps in a folder on an Apps list screen.

1. From a Home screen, tap  **Apps > Edit**.
2. Touch and hold an app shortcut and drag it on top of another app shortcut until a highlighted box displays.
3. Release the app shortcut to create the folder.
 - **Enter folder name:** Name the folder.
 -  **Palette:** Change the folder color.
 -  **Add application:** Place more apps in the folder. Tap apps to select them, and then tap **Add**.
4. Tap anywhere outside of the folder to close it.
 - To add more apps, touch and hold an app shortcut and drag it to the folder.
5. Tap **Done** when you are finished.

To launch apps in a folder:


- ▶ Tap a folder, and then tap an app shortcut to launch it.

To delete a folder:

1. From a Home screen, tap  **Apps > Edit**.
2. Tap the folder to delete, and then tap **Delete folder**. Confirm when prompted.
3. Tap **Done** when finished.

Add a Folder to a Home Screen

To add a folder to a Home screen:

1. From a Home screen, tap  **Apps**.
2. Touch and hold a folder, drag it to a Home screen, and then release it.

Google Applications

Enjoy these apps from Google.

Note: Certain applications require a Google Account. Visit google.com to learn more.



Chrome

Browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your mobile device.

Visit google.com/chrome/browser/mobile to learn more about Chrome™.



Drive

Open, view, rename, and share your Google Docs™ and files.

Visit drive.google.com to learn more about Google Drive™.



Gmail

Send and receive email with Gmail, Google's web-based email service.

Visit gmail.com to learn more.



Google

Search not only the Internet, but also the apps and contents of your device.



Hangouts

Meet friends and family online, share photos, host video calls, and send SMS and Hangouts messages.

Visit hangouts.google.com to learn more.



Maps

Find your current location and get directions and other location-based information.

Visit google.com/maps to learn more.

Note: You must enable location services to use Maps. For more information, see [Location](#).



Photos

Automatically backs up your photos and videos to your Google Account.

Visit photos.google.com to learn more about Google Photos™.



Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly or download them for viewing when you are not connected to the Internet. You can also view videos saved on your device.

Visit play.google.com/about/movies to learn more.



Play Music

Play music and audio files on your device.

Visit play.google.com/about/music to learn more.



Play Store

Find new apps, movies and TV shows, music, books, magazines, and games in Google Play store.

Visit play.google.com/store to learn more.



Voice Search

Use voice commands to search the web with Google.



YouTube

View and upload YouTube™ videos right from your device.

Visit youtube.com to learn more.

Microsoft Applications

These Microsoft applications are also preloaded on your device.



Excel

View, create, and edit spreadsheets on your device. You can unlock the full Excel® experience with an Office 365™ subscription.



OneDrive

Store and share photos, videos, documents, and more in your free online OneDrive® account, which you can then access from your personal computer, tablet, or phone.



OneNote

Stay organized using text, pictures, or audio notes. Create Quick Notes or review and edit shared OneNote® notebooks using OneDrive.



PowerPoint

View, create, and edit presentations on your device. You can unlock the full PowerPoint® experience with an Office 365 subscription.



Skype

Hold video and voice calls, and send instant messages to anyone around the world.



Word

View, create, and edit documents on your device. You can unlock the full Word experience with an Office 365 subscription.

Additional Applications

There are also additional apps, including several Samsung apps, preloaded on your device.



Samsung Milk Music

Stream music with Samsung Milk Music™, a radio service that offers a simple way to find the music that is right for you. With a library of over 13 million songs and 200+ stations, the interactive dial makes it easy to skim through stations to find the perfect soundtrack for the moment.

Note: Support for Samsung Milk Music ended September 22, 2016. You can continue your music experience by signing up for Slacker™ Radio, the service that powered Samsung Milk Music.



Samsung+

Get live help, discover new features, and unlock promotions for your Samsung device.



SideSync

Share screens, windows, and data between a PC and Samsung Android device.



Smart Manager

Access your Battery, RAM, Storage, and Device security information.

For more information, see [Smart Manager](#).

Calculator





The Calculator provides basic and advanced arithmetic functions.

Scientific Calculator

The device also provides advanced arithmetic functions.

Basic Operation

You can use your calculator to perform basic operations.

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. Tap the  **Equals** key to view the result.
6. Tap  **Clear** to clear the results.


Additional Functions

You can perform additional functions on your calculator.

To clear the calculator history:

- ▶ Tap **Clear history**.

To copy all or part of the calculation to the clipboard:



- ▶ Touch and hold an entry in the display field, and then tap  **Copy**.

Calendar

Manage your events and tasks.




Calendar View

To choose a calendar view:

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap one of the following:
 - **Year:** Display all twelve months of this year. Swipe across the screen to display another year.
 - **Month:** Display the current month. Swipe across the screen to display another month. Events and tasks are also displayed.
 - **Week:** Display the current week. Swipe across the screen to display another week.
 - **Day:** Display today's schedule by hour. Swipe across the screen to display another day.
 - **Tasks:** Display all tasks.
3. Tap **Today** to return to the current date.



Create an Event

You can use Calendar to create events.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Add** to add an event.
3. Enter details for the event, and then tap **Save**.



Share an Event

You can share events you create from Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap an event to view it.
3. Tap **Share**, choose a sharing method, and follow the prompts.




Delete an Event

You can delete events you create from Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap an event to view it.
3. Tap **Delete**. Confirm when prompted.




Create a Task

You can use Calendar to create tasks. Tasks are items you add to the calendar to be accomplished on a certain day. A task appears as a checklist item and is removed once you mark the task as complete.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap **Tasks** (by default, Month is shown).
3. Tap the **Enter new task** field to enter a new task.
4. You can choose to set the task for **Today**, **Tomorrow**, or tap  **Expand** to set the following options:
 - **Set date:** Choose a date on the calendar for the task.
 - **My tasks:** Change the calendar on which the task is saved. You can change the task to an event by tapping **My calendars**.
 - **Reminder:** Set a reminder alert.
 - **Notes:** Save a note with your task.
 - **Priority:** Assign a priority to the task.
5. Tap **Save** to save the task.



Delete a Task

You can delete tasks you create from Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap a day on the calendar to view the tasks for the day, or tap **Tasks**.
3. Tap the  **Checkbox** by the task to mark it as complete and remove it from the calendar.
 - To delete the task permanently, tap the task to open it, and then tap **Delete**. Confirm when prompted.

 
Calendar Settings

These settings allow you to modify settings associated with using Calendar.

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap **More** > **Settings**.
3. Tap an option and follow the prompts.

Camera

Take pictures and record videos with the Camera app.

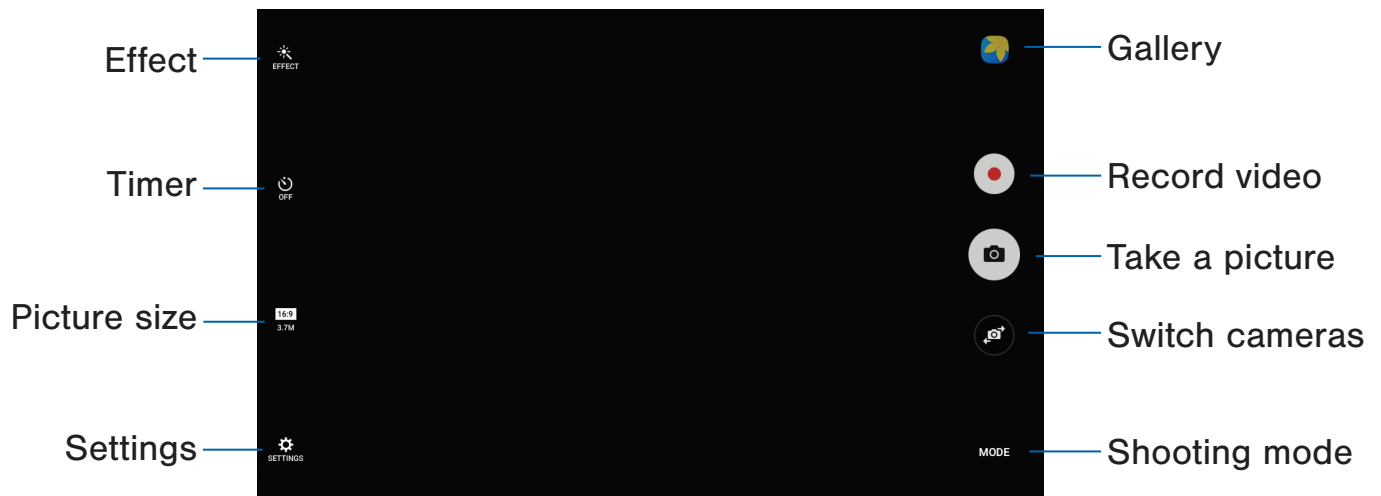




- **Gallery:** Open the Gallery to view photos and videos.
- **Record video:** Record a video.
- **Take a picture:** Take a picture.
- **Switch cameras:** Switch between the rear and front cameras.
- **Shooting mode:** Change the shooting mode.
- **Settings:** Configure other camera settings.
- **Picture size:** Change the picture size (resolution and screen ratio).
- **Timer:** Set the camera timer.
- **Effect:** Add an effect before taking a photo or video.

Take Pictures

Take pictures with your device's front or rear camera.



Note: Prior to using the camera, remove the plastic protective covering from the camera lens.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Compose your shot by aiming the camera at the subject and using the display screen as a viewfinder. While composing your picture, use the options or these gestures:
 - Touch the screen with two fingers and pinch or spread them on the screen to zoom in and out.
3. If desired, before taking the photo, you can tap icons to access various camera options and settings. You can also touch the screen to move the focus field to the area you touch.
4. Tap  **Take a picture** to take the picture.

Note: You can also press the **Volume** key up or down to take a picture. This is the default function of the Volume key while Camera is active. You can also set the Volume key to act as the video record key or as a zoom key.

Shooting Mode

Several visual effects are available. Modes differ by which camera is active (front or rear facing).

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap **Mode** to view the following options. Each section indicates which camera (front or rear) the modes are available for.




Both cameras

- **Auto:** Take the best possible picture by setting the device to adjust the exposure and color of pictures automatically.
- **Beauty face:** Take portrait pictures with an airbrushed effect.
- **Sound & shot:** Enrich your pictures by adding a few seconds of background sound.

Rear camera only

- **Panorama:** Create a linear panorama by taking consecutive pictures in either a horizontal or vertical direction.
- **Continuous shot:** Take pictures continuously by pressing and holding the Camera button.
- **Sports:** Take clearer pictures of fast moving subjects.

Camera Settings

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Quick settings are listed across one side of the camera view finder. Available options vary depending on the camera or recording mode used. Default settings include:
 - **Effect:** Add special graphical effects. Available for the rear camera only.
 - **Timer:** Take time-delayed pictures or videos.
 - **Picture size:** Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
3. Tap  **Settings** to configure settings for Camera. Available options vary depending on the camera/recording mode used.

Both cameras

- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Location tags:** Attach a GPS location tag to the picture.
- **Review pictures:** Set to show pictures after taking them.
- **Storage location:** Choose to store your photos to your device or optional memory card.
- **Volume keys function:** Use the Volume key as the camera key, the record key, or as a zoom key.
- **Reset settings:** Reset the camera settings.

Rear camera



- **Video size:** Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **View mode:** Choose between standard and full screen view mode.

Front camera

- **Gesture control:** Detect palm and automatically take a picture two seconds later.
- **Save as horizontally flipped:** Invert the image to create a mirror-image of the original scene.

Clock

The Clock app offers features for keeping track of time and setting alarms.



1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap a tab to use a feature:
 - **Alarm:** Set an alarm to ring at a specific time.
 - **World clock:** View the time of day or night in other parts of the world. World clock displays time in hundreds of different cities, within all 24 time zones around the world.
 - **Stopwatch:** Measure intervals of time.
 - **Timer:** Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

Alarm

Set an alarm to ring at a specific time.

Create an Alarm




Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap the following items to configure an alarm:
 - **Date:** Choose the day for this alarm.
 - **Time:** Set a time for the alarm.
 - **Repeat:** Choose when to repeat the alarm.

- **Options:** Tap to view and set the following options:
 - **Volume:** Drag the slider to set the volume of the alarm.
 - **Alarm tone:** Choose a sound to play for the alarm.
 - **Snooze:** Set interval and repeat values for the alarm while snoozing.
 - **Increasing volume:** Play a tone at a low volume at an interval before the alarm time, and slowly increase in volume. Available when you have chosen an alarm type that includes sound.
 - **Alarm name:** Enter a name for the alarm.
3. Tap **Save** to save the alarm.

Delete an Alarm



You can delete an alarm that you created.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Find the alarm in the alarm list (under the **Alarm** tab), and then tap  **Delete** in the upper right corner of the alarm entry.

World Clock


The world clock lets you keep track of the current time in multiple cities around the globe.

To list a city on the main World clock screen:




1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **World clock**.
3. Tap the **Search** field and enter the name of a city. Tap the city to view it on the globe.

– or –

Touch and spin the globe to locate a city, and then tap the city. A pop-up displays information about the city.



4. Tap  **Add city**.
 - Repeat to add multiple cities.

To remove a city from the main World clock screen:

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **World clock**.
3. Find the city to remove, and then tap  **Delete** in the upper right corner of the city entry.



Stopwatch

The Stopwatch lets you time events down to the hundredth of a second.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **Stopwatch** and use the following options:
 - **Start**: Begin timing.
 - **Stop**: Stop timing.
 - **Lap**: Keep track of lap times.
 - **Resume**: Continue timing after stopping the clock.
 - **Reset**: Reset the Stopwatch to zero.

Timer

The Timer provides a countdown timer for up to 99 hours, 59 minutes, and 59 seconds.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap **Timer**.
3. Use the keypad and tap **Hours**, **Minutes**, and **Seconds** to set the length of the Timer. The following options are available:
 - **Start**: Begin the Timer.
 - **Pause**: Pause the Timer.
 - **Resume**: Resume the Timer.
 - **Cancel**: Stop the Timer.
 - **Reset**: Reset the Timer.



Contacts

Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts.

For more information on connecting with and managing your accounts through your device, see [Accounts](#).



Manage Contacts

Access your list of contacts by using the Contacts app. To access your Contacts list:

- ▶ From a Home screen, tap  **Apps** >  **Contacts**.

Find a Contact

You can search for a contact or scroll the list to find one by name.








1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Search** field, and then enter characters to find contacts that match.

– or –

Tap a letter on the side of the list to jump directly to that letter in the alphabetical list. You can also press and slide across the alphabetical list to select a letter with better precision.

Add a Contact



Use the following procedure to add a new contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Create contact**, and then tap contact fields to enter information.
 - Choose a storage account for the contact. You can store the contact on the device or sync it with an account.
 - Tap  **Contact photo** to assign a picture to the new contact.
 - Enter a name, phone number, email address, and assign the contact to a group.
 - Tap  **Add** to enter additional entries.
 - Tap  **Remove** to remove an entry.
 - Tap  **More** for additional fields.
 - Tap the label to the right of an entry to choose a label for the field (for example, **Home** or **Work**).

3. Tap **Save**.



Edit a Contact

When editing a contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.



Share a Contact

When you share a contact, the contact's information is sent as a vCard file (VCF). You can share a vCard via Bluetooth® or Wi-Fi Direct, attach it to an email, or save it to a storage location.




1. From a Home screen, tap  **Apps >  Contacts.**
2. Tap a contact to display it, and then tap **More > Share contact.**
3. Choose a sharing method and follow the prompts.

Link Contacts

When you have contacts from various accounts, you may have multiple similar entries for a single contact. Contacts lets you link multiple entries into a single contact.



1. From a Home screen, tap  **Apps >  Contacts.**
2. Tap the contact to display it.
3. Tap **More > Link contacts.**
4. Tap contacts to choose them.
5. Tap **Link.**

Unlink Contacts

1. From a Home screen, tap  **Apps >  Contacts.**
2. Tap the contact to display it.
3. Tap **More > Manage linked contacts.**
4. Tap  **Separate** beside contacts to unlink them from the main contact.

Delete Contacts





You can delete a single contact or choose multiple contacts to delete.

1. From a Home screen, tap  **Apps >  Contacts.**
2. Touch and hold a contact to select it. You can also tap other contacts or tap the **All** checkbox at the top of the screen to select all contacts.
3. Tap **Delete**, and then confirm when prompted.





Favorites

When you mark contacts as favorites, they are easily accessible from other apps. Favorites are displayed together in Contacts.

Mark Contacts as Favorites

1. From a Home screen, tap  **Apps >  Contacts.**
2. Tap a contact to display it, and then tap  **Add to Favorites** (the star brightens ).



Remove Contacts from Favorites

1. From a Home screen, tap  **Apps >  Contacts.**
2. Tap a contact to display it, and then tap  **Remove from Favorites** (the star dims .



Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or for a team. Groups make it easy to find contacts, and you can send messages to the members of a group.



Create a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **Groups**, and then tap **Create**.
3. Tap fields to enter information about the group:
 - **Group name:** Enter a name for the new group.
 - **Add member:** Select contacts to add to the new group, and then tap **Done**.
4. Tap **Save**.

Rename a Group



1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **Groups**, and then tap a group.
3. Tap **Edit** and enter a new name.
4. Tap **Save**.

Add Contacts to a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **Groups**, and then tap a group.
3. Tap **Edit** > **Add member**, and then tap the contacts you want to add. When finished, tap **Done**.
4. Tap **Save**.



Send an Email to a Group

You can send an email to members of a group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **Groups**, and then tap a group.
3. Tap **More** > **Send email**.
4. Tap contacts to select them, or tap the **All** checkbox at the top of the screen to select all, and then tap **Done**.
 - Only group members that have an email address in their records are displayed.
5. Choose an email account and follow the prompts.
6. Type your message and tap **Send**.



Delete a Group

Preset groups, such as Family, cannot be deleted.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **Groups**, and then tap the group to delete.
3. Tap **More** > **Delete**.
4. Tap **Group only** to only delete the group or tap **Groups and members** to delete the group and the contacts in the groups.

Contact Settings



These settings allow you to modify settings associated with using the Contacts app.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap **More** > **Settings**.
3. Tap an option and follow the prompts.

Email



Use the Email app to view and manage all your email accounts in one application.

To access Email:




- ▶ From a Home screen, tap  **Apps** >  **Email**.

Configure Email Accounts

You can configure Email for most accounts in just a few steps.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Follow the prompts to set up your email account.

To add another Email account:




1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap **More** > **Settings** >  **Add account**.
3. Enter your email address and password.

The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email is displayed in the Inbox for the account.

Note: To configure email account settings at any time, tap **More** > **Settings**. Tap the email account to display account settings.



View Multiple Email Accounts

You can view email you receive for all accounts on the Combined inbox screen or you can view email accounts individually.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Menu** at the top left of the screen to view the current account mailbox.
3. Tap the account name to view:
 - **Combined inbox:** View all email in a combined inbox.
 - **[Account Name]:** View email for only one email account.






Manage Your Inbox

There are several tools available from the Inbox screen.

- ▶ From a Home screen, tap  **Apps** >  **Email**.
 - Tap a message to read and reply or forward it.
 - Tap **Search** to search for key words in your email inbox.
 - Tap **More** for additional message options like sorting, deleting, sharing and more.



Create and Send an Email

This section describes how to create and send an email using the Email app.

1. From a Home screen, tap  **Apps** >  **Email** >  **Compose**.
2. Tap the **To** field to manually add an email address, or tap  **Add recipient** to select a recipient from Contacts or Groups.
 - If manually entering recipients, enter additional recipients by separating each entry with a semicolon (;). More recipients can be added at any time before the message is sent.
 - If adding a recipient from your Contacts, tap the contact to place a checkmark, and then tap **Done**. The contact is placed in the recipients field.
 - Tap  **More** to add Cc and Bcc fields.
3. Tap the **Subject** and **Message** fields and use the keypad to enter text.
 - Tap **Attach** to add Files, Images, Audio, and more to your email.
 - Tap **More** for additional email options.
4. Review your message and tap **Send**.



Remove Email Accounts

To remove an email account:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap **More** > **Settings**.
3. Tap the account you want to remove.
4. Tap **Remove**. Confirm when prompted.

Email Settings



These settings allow you to modify settings associated with using the Email app.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap **More** > **Settings**.
3. Under **General**, tap an option and follow the prompts.
4. Tap an account to configure specific settings for only that account.

Galaxy Apps

Samsung Galaxy Apps provides a quick and easy way to find and download free premium apps that are compatible with your Galaxy device.

To access the Samsung Galaxy Apps website:

- ▶ From a Home screen, tap  **Apps** >  **Galaxy Apps**.

Galaxy Essentials

Galaxy Essentials is a collection of specially chosen applications available through Samsung Apps.

From Galaxy Essentials, you can access and download a collection of premium content, free of charge.

To access Galaxy Essentials:

1. Swipe across the Home screens and locate and tap the **Galaxy Essentials** widget.
2. Follow the prompts to download Galaxy Essentials apps.

Note: A Samsung account is required to purchase and download apps.




Gallery

View, edit, and manage pictures and videos.

Note: Some functions described in this section are only available if there are images or videos in the Gallery.

View Images and Videos

Launching Gallery displays available folders. When another application, such as Email, saves an image, a Download folder is automatically created to contain the image. Likewise, capturing a screenshot automatically creates a Screenshots folder.




1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **Menu** in the upper left corner, and then tap an option to choose the way items are displayed.
 - In Albums view, you can create albums to organize your images. On the drop-down menu, tap **Albums**, and then tap **More** > **Create album**.
3. Depending on the view mode selected, either tap an image or video to view it, or first tap an album or folder and then tap an image or video.
 - When viewing an image or video, you can swipe left or right to view the next or previous image or video.

Zoom In or Out

Use one of the following methods to zoom in or out on an image:





- Double tap anywhere on the screen to zoom in or zoom out.
- Spread two fingers apart on any place to zoom in. Pinch the screen to zoom out.

Play Videos

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder or category to open it.
3. Tap a video to view it.
4. Tap  **Play** to play the video.



Edit Images

You can edit images stored on your device.

- ▶ While viewing an image, tap the screen once to see the following options:
 -  **Favorite:** Mark the image as a favorite, and then access it from the Favorites view.
 -  **Share:** Send the image to your contacts by email, messaging, social media, cloud accounts, or other methods.
 -  **Edit:** View and use the editing tools.
 -  **Delete:** Delete the image from your device.
 - **More:**
 - **Rotate left:** Rotate the photo counter-clockwise.
 - **Rotate right:** Rotate the photo clockwise.
 - **Details:** View and edit information about the image, including the date created, location, and properties.
 - **Slideshow:** Start a slideshow with the images and videos in the current folder.

- **Set as contact picture:** Set the image as the photo for a contact.
- **Set as wallpaper:** Set the image as a wallpaper for the Home and Lock screens.
- **Move to Private/Remove from Private:** Move or remove the selected photo to or from Private. This option is only available when Private mode is enabled.

Delete Images and Videos

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder or category to open it.
3. Tap **More** > **Edit**.
4. Tap images and videos to select them, or tap the **All** checkbox at the top of the screen to select all images and videos.
5. Tap **Delete**, and confirm when prompted.



– or –

When viewing a single image or video, tap


 **Delete**.

Share Images and Videos

Use one of the following methods:

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap **More** > **Share**, select images and videos, and then tap **Share** to send them to others or share them with social network services.

– or –

While viewing a single image or video, tap  **Share** to send it to others or share it with social network services.

Internet







Access the Internet with a fully-featured web browser.

To access the Internet:

- ▶ From a Home screen, tap  **Apps** >  **Internet**.

Command Keys

The following command keys are available on the browser window:

-  **Back** or  **Back**: Return to the previous page.
-  **Forward**: Go forward to a recent page.
-  **Refresh**: Refresh or reload the current Web page.
- **Home**: Display your Internet Home screen.
- **Bookmarks**: Manage bookmarked pages, saved pages, and history.
- **More**: Open a new secret tab, display Internet app settings, and more.
-  **New tab**: Open a new browser tab.
-  **Close tab**: Close a browser tab.

View a Web Site

To view a web site:

- ▶ Tap the address field, enter the web address, and then tap **Go** on the keyboard.

To share, save, or print the current web page:

- ▶ Tap **More**.


To zoom in or out:

- ▶ Tap the screen twice or pinch the screen to zoom out. Stretch the screen to zoom in.

Browser Tabs

Use tabs to view multiple web pages at the same time.

To open a new tab:

- ▶ Tap  **New tab**.
 - If all tabs are closed, tap **New tab**.
 - Tap a different tab to view it.

To close a tab:

- ▶ Tap  **Close tab**.

Bookmarks Page

The Bookmarks page stores Bookmarks, Saved pages, and History.

Save and Open Bookmarks

Bookmarking a web page saves the web address so that you can access it quickly.

To bookmark the current web page:

1. Tap **Bookmarks** > **Add**.
2. Type a title for the bookmark and tap **Save**.

To open a bookmarked web page:

- ▶ Tap **Bookmarks**, then tap an entry.

Saved Web Pages

Saving a web page stores the web page content on your device so that you can access it offline.

To save the current web page:

- ▶ Tap **More > Save web page**.

To view saved web pages:

1. Tap **Bookmarks > Saved pages**.
2. Tap a saved page to open it in the browser.

View History

To view a list of recently visited web pages:

- ▶ Tap **Bookmarks > History**.

Share Pages

To share a web page address with others:


- ▶ Tap **More > Share**, and follow the prompts.

Secret Mode

Pages viewed in Secret mode are not listed in your browser history or search history, and leave no traces (such as cookies) on your device. Secret tabs are a darker shade than the normal tab windows.

Note: Any downloaded files remain on your device after you close the secret tab.


To enable Secret mode:

1. From a Home screen, tap  **Apps > Internet**.
2. Tap **More > Turn on Secret mode**.
3. Tap **Create password** to protect your Secret mode data with a password.

– or –


Tap **Do not use password**.

To turn off Secret mode:

1. From a Home screen, tap  **Apps > Internet**.
2. Tap **More > Turn off Secret mode**.

Internet Settings

These settings allow you to modify settings associated with using the Internet app.









1. From a Home screen, tap  **Apps > Internet**.
2. Tap **More > Settings**.
3. Tap an option and follow the prompts.

Memo

Use the Memo app to write and save notes on your device.



Compose a Memo

You can create memos using the Memo app.

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap  **Create memo** and type a memo.
Available options include:
 -  **Category**: Add or change the category.
 -  **Tasks**: Add tasks.
 -  **Image**: Insert an image into the memo.
 -  **Drawing**: Create a drawing and add it to the memo.
 -  **Voice**: Use your voice to insert text into the memo.
3. Tap **Save** when finished.



Edit Memos

You can make edits to memos you create.

1. From a Home screen, tap  **Apps** >  **Memo**.
2. Tap a memo to view it.
3. Tap the content and make edits.
4. When you are finished, tap **Save**.



Browse Memos

You can browse memos you create.

- ▶ From a Home screen, tap  **Apps** >  **Memo**.
 - Browse memo entries by swiping up or down.
 - To search for a memo, tap **Search**.

 
Memo Options

You can edit, share, or manage memos.

- ▶ From a Home screen, tap  **Apps** >  **Memo**.
 - While browsing memos, tap **More** for the following options:
 - **Edit**: Select notes to delete or move.
 - **Manage categories**: Create and manage categories to organize your memos.
 - Tap a memo, and then tap one of the following options:
 - **Share**: Send the memo to others using a variety of sharing methods or social media.
 - **Delete**: Delete the memo.
 - **More > Pin to Home screen**: Place a shortcut to the memo on a Home screen.





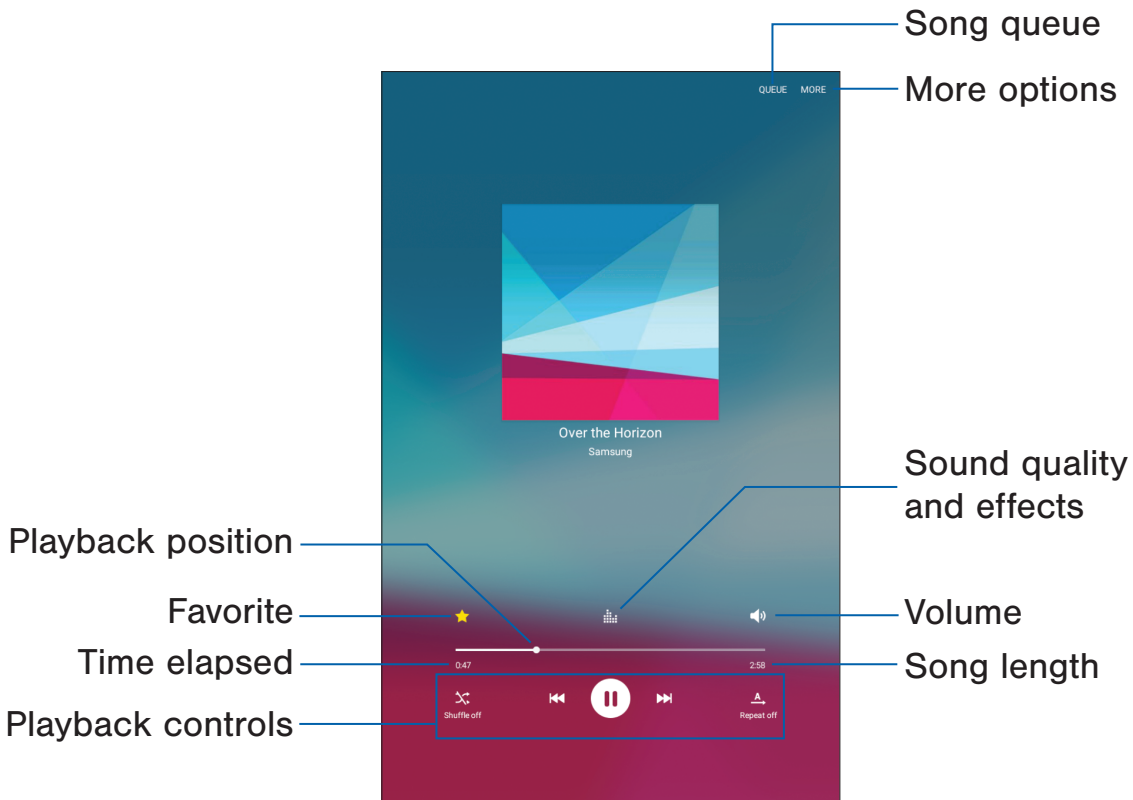











Music Player

Listen to your favorite songs with the Music player. Navigate through your music library, play songs, and create customized playlists.



- **Song queue:** View the current song list being played.
- **More options:** View more options.
- **Sound quality and effects:** Customize options to adjust sound effects.
- **Volume:** Adjust the volume.
- **Song length:** View the total length of the current song.
- **Playback controls:** Fast-forward or rewind, or play or pause the current song.
- **Time elapsed:** View the time elapsed for the current song.
- **Favorite:** Tag this song as a favorite.
- **Playback position:** Skip to another part of the current song.

Listen to Music



1. From a Home screen, tap  **Apps** >  **Music**.
2. Tap a library category at the top of the screen to view your music files.
3. Scroll through the list of songs and tap an entry to begin playback.
4. Use these controls while playing music:
 - Tap  **Pause** to pause playback. To start playback again, tap  **Play**.
 - Tap  **Rewind** to move to the previous song. Touch and hold  **Rewind** to rewind through the song. Tap  **Fast-forward** to move to the next song. Touch and hold  **Fast-forward** to move forward through the song.
 - Tap the repeat button to control playback. Choose  **Repeat off** to play all songs once,  **Repeat all** to repeat all songs, or  **Repeat 1** to repeat the current song.
 - Tap the shuffle button to control the order songs are played. Choose  **Shuffle off** to play songs in the order they appear in the list or  **Shuffle on** to play songs in random order.
 - Tap  **Favorite** to mark a song as a favorite. Whenever a song is a favorite, the star is gold. Favorite songs are included in the Favorites playlist.
 - Tap  **Sound effects** to access sound quality and effects settings. For more information, see [Sound Quality and Effects](#).
 - Tap  **Volume** to set the volume. You can also set volume by pressing the **Volume** key on the side of the tablet.

Note: When you close the Music screen, playback continues in the background, allowing you to listen to music while using other features of your tablet. When music is playing in the background, you can access playback controls from the Notification panel.

My Files

Access files stored on your device, including images, videos, songs, and sound clips.

To view files in My Files:

1. From a Home screen, tap  **Apps** >  **My Files**.
2. Tap a category to view the relevant files or folders.
3. Tap a file or folder to open it.

Manage Files



Files stored in the device are organized into the following groups:

- **Recent files:** View recently saved files.
- **Device storage:** View folders and files located on the device.
- **SD card:** View folders and files located on the optional memory card (not included).
 - This option appears if an optional memory card is installed.
- **Download history:** View all apps and files that have been downloaded to the device.
- **Documents:** View document files.
- **Images:** View image files.
- **Audio:** View audio files.
- **Videos:** View video files.

Note: Cloud drives vary depending on the services you sign in to.



My Files Options

Use My File options to search, edit, clear file history, and more.



- ▶ From a Home screen, tap  **Apps** >  **My Files**. Tap an option:
 - **Search:** Search for a file or folder.
 - **More:** Tap for the following options:
 - **Show/Conceal hidden files:** Show or conceal hidden files.
 - **Storage usage:** Tap to view memory information for your device.

Note: If a file has been opened, the Recent files category appears, and other options become available under **More**.

Category Options

 
1. From a Home screen, tap  **Apps** >  **My Files**.
2. After tapping a category, the following options are available:
 - **Search:** Search for a file in the selected category.
 - **View as:** Change the appearance of the files or folders.
 - **More:** Tap for the following options (not all categories support all options):
 - **Edit:** Select files or folders.
 - **Share:** Tap to select items to share, tap **Share**, select a sharing method, and follow the prompts.
 - **Create folder:** Create a new folder (Local storage).
 - **Add shortcut:** Add a shortcut folder to the main My Files screen.
 - **Sort by:** Change the sort order of the files.
 - **Show/Conceal hidden files:** Show or conceal hidden files.

Options for Selected Files and Folders

1. From a Home screen, tap  **Apps** >  **My Files**.
2. Tap **More** > **Edit**.
3. Tap a file or folder to select it, and select one of these functions:
 - **Delete:** Delete files or folders.
 - **Move:** Move files or folders to another folder.
 - **More:** Select one of the following options:
 - **Copy:** Copy files or folders to another folder.
 - **Rename:** Rename a file or folder. This option only appears when just one file or folder is selected.
 - **Add shortcut on Home screen:** Add a shortcut the Home screen.
 - **Move to Private/Remove from Private:** Move or remove the selected file or folder to or from Private. This option is only available when Private mode is enabled.
 - **Compress:** Create a zip folder containing the selected files. This option only appears in Local Storage categories. A selected zip folder has the additional options of **Extract** and **Extract to current folder**.
 - **Details:** View details of the selected files or folders.



Video Player

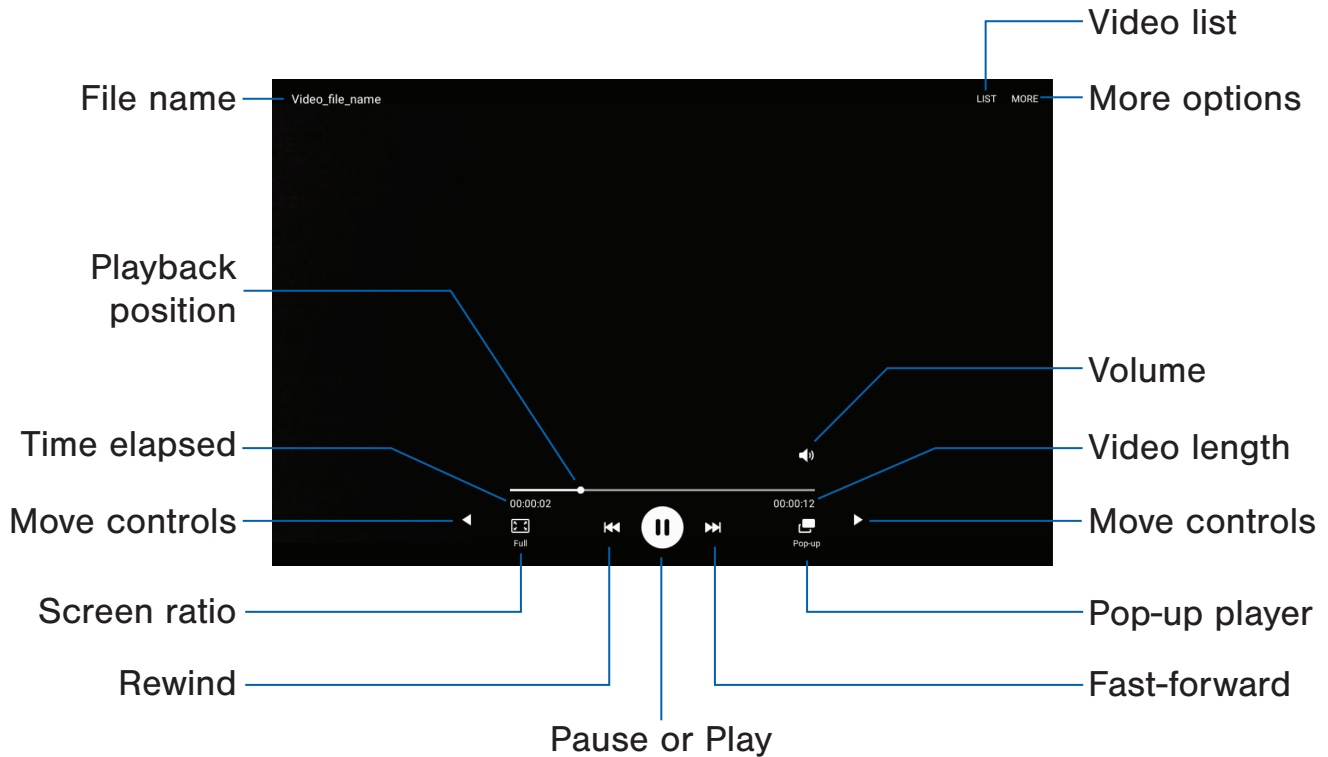Play and manage videos stored on your device.






- **Video list:** View the current video playlist.
- **More options:** View more options.
- **Volume:** Adjust the volume.
- **Video length:** View the total length of the video.
- **Move controls:** Move the Video player controls to the right or to the left (landscape orientation only).
- **Pop-up player:** Open the video in a pop-up window.
- **Fast-forward:** Skip to the next video or fast-forward through the current video.
- **Pause or Play:** Pause or play the current video.
- **Rewind:** Restart the video, skip to a previous video or rewind the video.
- **Screen ratio:** Change the screen ratio.
- **Time elapsed:** View the time elapsed for the current video.
- **Playback position:** Skip to another part of the video.
- **File name:** View the name of the video file.

Access the Video Player

1. From a Home screen, tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your device. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.





Use Pop-up Player

Multitask with Pop-up player by transforming your video player into a pop-up window. The video continues to play, and the pop-up player can be resized or moved anywhere on the screen.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap  **Pop-up** to continue playing the video in a floating window.
 - Drag the window to any location on the screen.
 - Use two fingers to pinch or spread to resize the floating window.

Change the Video Screen Size

You can change the size of the video during video playback.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap the screen ratio icon to cycle through the screen size options:
 -  **Full**: The entire screen is used, which may cause some minor distortion.
 -  **Fit to screen**: The video is played in its original size.



Settings

Configure your device's connections and settings, add accounts, and customize Home screens, apps, and features.


How to Use Settings

Access Settings

There are a couple of ways to access your device settings.



► From a Home screen, tap  **Apps** >  **Settings**.

– or –

Drag down from the Status bar to display the Notification panel, and then tap  **Settings**.

Search for Settings

If you are not sure exactly where to find a certain setting, you can use the Search feature.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Search**.
 - Enter a word or words in the **Search** field. As you type, settings that match display on the screen.
 - Tap an entry to go to that setting.

Wi-Fi

Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to a wireless Access Point (AP).



Turn Wi-Fi On or Off

Turning Wi-Fi on makes your device able to discover and connect to compatible in-range wireless APs.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **On/Off** to turn Wi-Fi on or off.



Wi-Fi Status Indicators

Status bar icons indicate your current Wi-Fi connection status:



- When Wi-Fi is connected, active, and communicating with a wireless Access Point,  **Wi-Fi active** is displayed in the Status bar.
- If a Wi-Fi access point is available, but your device is not connected to it,  Wi-Fi available is displayed. It may also be displayed if there is a communication issue with the target wireless Access Point.

Wi-Fi Networks

To scan for a Wi-Fi network and connect to it:



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **On/Off** to turn Wi-Fi on.
 - When Wi-Fi is turned on, your device automatically scans for available networks and displays them.
3. Tap the network you want to connect to.
 - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.

Manually Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **On/Off** to turn Wi-Fi on.
3. Tap **More** > **Add network**.
4. Enter information about the Wi-Fi network:
 - **Network name:** Enter the name of the Wi-Fi network.
 - **Security:** Select a security option and enter your password.
 - **Show advanced options:** Add advanced options such as IP settings and Proxy settings.
5. Tap **Connect** to store the new information and connect to your target wireless Access Point.



Wi-Fi Options

The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **On/Off** to turn Wi-Fi on.
3. Tap **More** for options:
 - **Add network:** Manually add a Wi-Fi network.
 - **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
 - **WPS PIN entry:** View the PIN used by your device to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
 - **Advanced:**
 - **Network notification:** Receive notifications when open networks in range are detected.
 - **Keep Wi-Fi on during sleep:** Specify when to disconnect from Wi-Fi.
 - **Install network certificates:** Install authentication certificates.
 - **MAC address:** View your MAC address.
 - **IP address:** View your IP address.

Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections via Wi-Fi, without having to connect to a Wi-Fi network.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **On/Off** to turn Wi-Fi on.
 - Wi-Fi must be on to configure settings.
3. Tap **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices.
4. Select a device, and then follow the prompts to complete the connection.

Wi-Fi Direct Status Indicator



When your device is connected to another device using Wi-Fi Direct,  **Wi-Fi Direct** is displayed in the Status bar.

Bluetooth


Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth-enabled computers, printers, and wireless devices.

Note: The Bluetooth communication range is approximately 30 feet.

Turn Bluetooth On or Off



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **On/Off** to turn Bluetooth on or off.

Bluetooth Status Indicator

When Bluetooth is turned on,  **Bluetooth** is displayed in the Status bar.

Scan for Bluetooth Devices



When you want to pair with another Bluetooth device, you can scan for nearby devices that are visible.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **On/Off** to turn Bluetooth on.
 - When Bluetooth is first turned on, it scans for nearby Bluetooth devices and displays them.
 - To manually perform a new scan, tap **Scan**.

Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.




Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **On/Off** to turn Bluetooth on.
 - Make sure that the target device is discoverable so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.
3. Tap the name of the name of the target device when you see it displayed in the Bluetooth devices section.
 - Your device automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.


Rename a Paired Device

Once you have paired your tablet to another device, you can rename the paired device to make it easier to recognize.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **On/Off** to turn Bluetooth on.
3. From the Bluetooth settings page, tap  **Settings** next to the previously paired device, and then tap **Rename**.
4. Enter a new name, and tap **Rename**.

Delete a Paired Device (Unpair)



When you unpair from a Bluetooth device, the two devices no longer recognize each other. To connect again, you have to pair the devices.

1. Verify your Bluetooth is active.
2. Tap **Bluetooth**, and then tap **On/Off** to turn on Bluetooth.
3. Tap  **Settings** next to the previously paired device, and then tap **Unpair** to delete the paired device.

Airplane Mode



Airplane mode disconnects your device from all networks and turns off connectivity features, such as Wi-Fi and Bluetooth.

While in Airplane mode, you can use other features, such as playing music, watching videos, and other offline applications.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Airplane mode**, and then tap **On/Off** to enable or disable the option.

Data Usage

Monitor how your data is being used, and set limits and restrictions to conserve it.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Data usage** for options:
 - **Data usage cycle:** Tap the drop-down menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.
 - **By application:** View data usage by application.
3. Tap **More** for the following option:
 - **Restrict networks:** Select Wi-Fi networks that are mobile hotspots. You can restrict apps from using these networks, and you can configure apps to warn you before using these networks for large downloads.

More Connection Settings



This option displays additional connectivity information.

Nearby Device Scanning

Scan for nearby devices to connect to and set them up easily. You receive a notification when there are available devices to connect to.



Note: This function uses Bluetooth Low Energy scanning even if Bluetooth is turned off on your device.

To enable nearby device scanning:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **More connection settings** > **Nearby device scanning**.
3. Tap **On/Off** to enable the feature.

Printing

Print images and documents to Samsung printers and other compatible printers (not included).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **More connection settings** > **Printing**.
3. Tap a print service and follow the prompts.

Note: Tap  **Download plug-in** to install additional print service drivers.



Virtual Private Networks (VPN)

Set up and manage your Virtual Private Networks (VPNs).

Note: You must set a screen lock Pattern, PIN, or Password before setting up a VPN. For more information, see [Set a Screen Lock](#).



Add a VPN

Use the VPN settings menu to add a VPN connection to your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **More connection settings** > **VPN**.
3. Tap **Add VPN** and follow the prompts to set up your VPN.



Connect to a VPN

To connect to a VPN:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **More connection settings** > **VPN**.
3. Tap the VPN, enter your log in information, and tap **Connect**.




Disconnect from a VPN

To disconnect from a VPN:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **More connection settings** > **VPN**.
3. Tap the VPN, and tap **Disconnect**.

Edit or Delete a VPN

Once you have set up a VPN connection, you can edit or delete the connection.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **More connection settings** > **VPN**.
3. Tap  **Settings** next to the VPN that you want to edit or delete.
4. Edit the VPN and tap **Save**.



– or –

Tap **Delete** to delete the VPN.

Ethernet

Manage your Ethernet connections.

Note: An Ethernet connection is required in order to [configure this setting](#).



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **More connection settings** > **Ethernet** and follow the prompts to connect to an Ethernet network.

Smart Manager

Smart Manager provides an overview of the status of your device's battery, storage, RAM, and system security. You can also automatically optimize your device's system resources.



Access Smart Manager

To access Smart Manager:

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Smart Manager**.

- or -



From a Home screen, tap  **Apps** >  **Smart Manager**.

Quick Optimization

The quick optimization feature improves device performance through the following actions:

- Identifying apps that use excessive battery power and clearing unneeded items from memory.
- Deleting unnecessary files and closing apps running in the background.
- Scanning for malware.



To use the quick optimization feature:

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Smart Manager**.

3. Tap **Clean all**.

Using Smart Manager

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Smart Manager**. Tap each of the following for options:

- **Battery:** Check the battery power and time remaining to use the device. For devices with low battery levels, conserve battery power by activating power saving features and closing apps that are consuming an excessive amount of battery power.
 - The usage time remaining shows the time remaining before the battery power runs out. Usage time remaining may vary depending on your device settings and operating conditions.
- **Storage:** Check the status of used and available memory capacity. You can delete unused or unneeded files, and uninstall apps that you do not use any more.
- **RAM:** Check the amount of available RAM. You can close background apps and reduce the amount of RAM you are using to speed up your device.
- **Device security:** Check the device's security status. This feature scans your device for malware.
 - Tap **Install My KNOX** to activate KNOX™ active protection on your device.

Applications Settings

Manage settings for applications on your device.




Application Manager

You can download and install new applications on your device. Use Application manager settings to manage your downloaded and preloaded applications.

Warning: Because this device can be configured with system software not provided by or supported by Google or any other company, you operate this software at your own risk.

Application Manager Options



If you have disabled apps, you can choose whether to display them.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications** > **Application manager**.
3. If you have disabled applications:
 - Tap  **All apps** at the top left of the screen.
 - Tap **All apps**, **Turned on**, or **Turned off**.
4. Tap **More** for the following options:
 - **Show/Hide system apps:** Show or hide system (background) apps.
 - **Apps that can appear on top:** Choose apps that can run on top of other running apps.
 - **Change system settings:** Select which apps can change system settings.
 - **Reset app preferences:** Reset options that have been changed. Existing app data is not deleted.

Note: Options vary by application.

Manage Apps



You can view and update information about an application, including memory usage, default settings, and permissions.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications** > **Application manager**.
3. Tap an application to view and update information about the application. The following options are displayed:
 - **Uninstall/Disable:** Uninstall or disable the application. Preloaded apps can only be disabled.
 - **Force stop:** Stop an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.
 - **Storage:** Manage the app's storage usage.
 - **Data usage:** View mobile data usage.
 - **Permissions:** View permissions granted to the app for access to your device's information.
 - **Notifications:** Configure notifications from the app.
 - **Set as default:** Set the app as a default for a certain category of apps.
 - **Battery:** View battery usage since the last full charge.
 - **Memory:** View memory usage.

Default Applications



If you have multiple applications of the same type, such as email apps, you can select one app to be the default.

You can also use a simpler Home screen that provides an easier user experience for first-time users.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications** > **Default applications**.
3. Tap the following to choose default apps:
 - **Browser app**: Choose a default browser app.
 - **Default app selection**: Choose default apps for other functions.
 - **Set as default**: Choose default apps for other functions.
 - **Home screen**: Choose a Home screen type.
 - **Device assistance app**: Choose an app that provides assistance for using your device.

Application Settings

Shortcuts to the settings for various apps are available in one convenient location.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Applications**.
3. Tap one of the following to display the settings for the selected app:
 - Calendar
 - Camera
 - Contacts
 - Email
 - Internet
 - Music
 - Weather

Sound Settings

Configure the sounds used to indicate notifications, screen touches, and other interactions.

Sound Mode



You can switch between sound modes, while preserving the individual sound settings you have made.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Sound mode**, and then choose a mode:
 - **Sound**: Use the sounds and volume levels you have chosen in Sound settings for notifications and alerts.
 - **Mute**: Mute all sounds and notifications.

Volume



Set the system volume level and default volume for notifications and other audio.

Tip: You can also set System volume from a Home screen by pressing the **Volume** key.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Volume** and drag the sliders to set the default volume for:
 - Notifications
 - Media
 - System

Notification Sounds

Choose a sound for notifications, such as for new messages and event reminders.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Notification sounds** and configure the following options:
 - **Default notification sound**: Choose a default sound for all notifications.
 - **Calendar notifications**: Choose a sound for Calendar notifications.
 - **Email notifications**: Configure email account notifications. An email account must be configured for this option to be available.

Do Not Disturb

This setting allows you to block all notifications and alerts.

Enable Do Not Disturb



To activate Do not disturb mode:

1. From a Home screen, tap  **Apps** >  **Settings** > **Sounds**.
2. Tap **Do not disturb** > **Turn on now** to enable this option.

Scheduling



This option allows you to turn Do not disturb mode on or off automatically at scheduled times.

Note: Scheduling is not available if Do not disturb mode has been turned on manually.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sounds**.
2. Tap **Do not disturb** > **Turn on as scheduled**, and set the Days, Start time, and End time.



Allow Exceptions

This option lets you customize which notifications are allowed while your device is in Do not disturb mode.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sounds**.
2. Tap **Do not disturb** > **Allow exceptions**, and tap one of the following options:
 - No exceptions
 - Alarms only
 - Custom



System Sounds

Set various other system sound options.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound**, and tap to enable each option:
 - **Touch sounds:** Play tones when you touch or tap the screen to make selections.
 - **Screen lock sounds:** Play a sound when you unlock the screen.
 - **Charging sound:** Play a sound when a charger is connected.

Key-Tap Sounds

Play tones when the Samsung keyboard is tapped.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Keyboard sound**, and then tap **On/Off** to enable.

Sound Quality and Effects

You can enable sound effects when connected to a headset.



Note: Sound effects are only available when headphones or a compatible Bluetooth headset (not included) is connected.

Choose from advanced sound options to customize your audio experience.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Sound** > **Sound quality and effects**.
3. Tap **Adapt sound** and follow the prompts to customize your sound settings.
4. Tap **On/Off** to enable each option:
 - **SoundAlive+**: Recreate the effects of rich surround sound.
 - **Tube Amp:** Simulate the soft timbre of a tube amplifier.

Notifications

Select which apps you want to receive alerts from. Alerts include notifications, sounds, and vibrations.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Notifications**.
3. Tap **On/Off** next to an app to enable or disable notifications.
 - Tap **Advanced** to configure more notification options for individual apps.

Display

Configure the tablet's display brightness, screen timeout delay, and other display settings.

Brightness



Adjust the screen brightness to suit your surroundings or personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Setting**
2. Tap **Display**.
3. Touch and drag the **Brightness** slider to set a custom brightness level,

Note: You can also control Brightness from the Notification panel.



Outdoor Mode

Adjust the screen settings so the screen can be viewed more easily while outdoors.

1. From a Home screen, tap  **Apps** >  **Setting**
2. Tap **Display**.
3. Tap **Outdoor mode** to enable or disable the feature.



Font Size and Style

You can set the font style and size for all text that displays on the screen.

1. From a Home screen, tap  **Apps** >  **Setting**
2. Tap **Display** > **Font** to choose a font size and font style.
 - Drag the slider to adjust the font size.
 - Tap a font style to select a font, or tap **Download fonts** to find new fonts.
3. Tap **OK** to set the font size and style.



Icon Backgrounds

You can show icons with a shaded background to make them stand out on the Home screen and Apps list screen.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Icon backgrounds** and choose one of the following options:
 - **Icons only:** Show icons only.
 - **Icons with backgrounds:** Show icons with shaded backgrounds.
3. Tap **Done**, and confirm when prompted.



Screen Timeout

Choose how long the display screen remains lit after you tap the screen or press any key.

1. From a Home screen, tap  **Apps** >  **Setting**
2. Tap **Display** > **Screen timeout** and choose a time period.






Smart Stay

Using the front camera to detect your face, the screen does not time out as long as you are facing the screen.

1. From a Home screen, tap  **Apps** >  **Setting**
2. Tap **Display** > **Smart stay**, and tap **On/Off** to turn the feature on.

Screen saver



The Screen saver setting controls what is displayed on the screen when the device is docked (dock not included) or while charging. You can choose to display colors or display photos.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Display** > **Screen saver**.
3. Tap **On/Off** to enable Screen saver.
4. Configure options:
 - **Colors**: Tap the selector to display a changing screen of colors.
 - **Photo Table**: Display pictures in a photo table. Tap  **Settings** for options.
 - **Photo frame**: Display pictures in a photo frame. Tap  **Settings** for options.
 - **Photos**: Display pictures from your Google Photos account. Tap  **Settings** for options.
5. Tap **Preview** to see a demonstration of Screen saver.

Advanced Features

Configure features on your device that make it easier to use.

You can control certain device actions by picking up the device and by touching the screen with the palm of your hand or turning over the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Advanced features**.
3. Tap **On/Off** to enable each of the following:
 - **Palm swipe to capture:** Capture an image of the screen by swiping the edge of your hand across it, from side to side, keeping in contact with the screen.
 - **Easy mute:** Mute sounds and video by covering the screen or turning over the device.

Users



Share your tablet with multiple people by creating User accounts.

Users have their own space, which they can customize with their own apps, wallpaper, and more. Users can also adjust tablet settings that affect everyone, such as Wi-Fi.




Restricted profiles allow only limited access to apps and content.

Set Up User Profiles

Set up user profiles and then select one when unlocking the device to use personalized settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Users**.
3. Tap **Add user or profile** and follow the prompts to set up a new user or profile.


Delete a User or Profile

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Users**.
3. Tap  **Delete** to delete the user or profile.


Note: Only the device owner can delete other users or profiles. Deleting a user's profile removes the user account from the device entirely. This includes the user's Google account, Samsung account, and any other local accounts associated with the user.

Switch User Profiles

To access the device with a user profile:

- ▶ From a Lock screen, tap  **Manage Users**, and then tap a profile.

– or –

Swipe down on the Status bar to display the Notification panel and tap  **Manage Users**, and then tap a profile.

Change User Account Nicknames and Photo IDs



Each user's profile includes a personal contact entry listed under **My profile** at the top of their Contacts list.

To change their ID photo and name, each user can edit their personal Contact entry. For more information, see [Edit a Contact](#).

Wallpaper

Change the look of the Home and Lock screens with wallpaper.



You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wallpaper**.
3. Tap **Home screen**, **Lock screen**, or **Home and lock screens**.
4. Tap an image to preview it, and then tap **Set as wallpaper**.
 - Tap **From Gallery** for additional wallpapers.

Home Screen Settings

Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.

To customize Home screen:

► From a Home screen, tap  **Apps** >  **Settings** > **Home screen**.

- or -



From a Home screen, either touch and hold an empty space on a screen or pinch the screen.

For more information, see [Home Screen](#).

Lock Screen and Security

Secure your device and protect your data with Lock Screen and Security settings.

Set a Screen Lock

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Screen lock type** to select a screen lock and level of security:
 - **Swipe**: Swipe the screen to unlock it. This option provides no security.
 - **Pattern**: Create a pattern that you draw on the screen to unlock your device. This option provides medium security.
 - **PIN**: Select a PIN to use for unlocking the screen. This option provides medium to high security.
 - **Password**: Create a password for unlocking the screen. This option provides high security.
 - **None**: Do not lock the screen.
3. Select your notification settings if a secured Lock screen is enabled.
 - **Show content**
 - **Hide content**
 - **Do not show notifications**

4. Choose a screen lock option:
 - **Info and app shortcuts**: Display owner information and app shortcuts on the Lock screen.
 - **Notifications on lock screen**: Show notifications on the Lock screen.
 - **Secure lock settings**: Set your secure lock functions such as Secured lock time and Smart lock. This option is not available with Swipe.



Note: Options vary based on the screen lock type.

Find My Mobile

Protect your device from loss or theft allowing your device to be locked, tracked, and for your data to be deleted remotely.



- ▶ To access your device remotely, visit findmymobile.samsung.com.

Note: You must sign up for a Samsung account and enable Google location service to use Find My Mobile.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Find My Mobile**.
3. Enter your Samsung account password or, if you are not logged in to your Samsung account, tap **Add account** and follow the prompts.
4. Tap an option to enable:
 - **Remote controls**: Activate or deactivate Remote controls, which allows you to access your device remotely.
 - **Google location service**: Activate or deactivate Google location service. This service must be on in order to find your device.

Unknown Sources



Enable installation of non-Google Play applications.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Unknown sources** to enable this option.

Warning: Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.



Encrypt Device

Require a numeric PIN or password to decrypt your device each time you power it on.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Encrypt device**.
3. Tap **Encrypt device** and follow the prompts to encrypt all data on your device.

Encrypt SD Card

Require a numeric PIN or password to decrypt your memory card (not included) when you first access it after powering on your device.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Encrypt SD card**.
3. Tap **Encrypt SD card** and follow the prompts to encrypt all data on your memory card.

Other Security Settings

Change other security settings, such as those for security updates and credential storage.



Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Make passwords visible** to turn the feature on.



Security Update Service

Automatically receive security updates.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following Security update service options:
 - **Security policy updates:** Automatically or manually check for security policy updates.
 - **Send security reports:** Send security reports to Samsung through Wi-Fi for threat analysis.



Device Administration

Manage your device administrators and application installation privileges.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** > **Device administrators**.
3. Tap **Android Device Manager** to enable it to lock or erase a lost device.



Credential Storage

Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following Credential storage options:
 - **Storage type:** Select a storage location for credential contents.
 - **View security certificates:** Display certificates in your device's ROM and other certificates you have installed.
 - **User certificates:** View user certificates.
 - **Install from device storage:** Install a new certificate from storage.
 - **Clear credentials:** Erase the credential contents from the device and reset the password.

Advanced Security Settings

Use these options to configure advanced security settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Lock screen and security** > **Other security settings** for the following Advanced options:
 - **Trust agents:** Perform selected actions when trusted devices are connected. (Only displays when a secure screen lock is set.)
 - To view Trust agents, set up a secured screen lock (Password, PIN, or Pattern). For more information, see [Set a Screen Lock](#).
 - **Pin windows:** Pin an app on your device screen, preventing access to other features of your device.
 - **Usage data access:** View the applications that can access your device's usage history.
 - **Notification access:** View the applications that can access notifications you receive on your device.
 - **Do not disturb permission:** View which apps have permission to change the Do not disturb settings.



Privacy

Choose from various modes designed to hide personal content from being accessed by anyone else using your device, or to aid you in an emergency.

Location



Some apps, such as Google Maps, may require one or more location services be turned on for full functionality.

Locating Method

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Privacy** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap **Locating method** to select how your location is determined:
 - **GPS and Wi-Fi:** Use GPS and Wi-Fi networks.
 - **Wi-Fi only:** Use Wi-Fi only (no GPS).
 - **GPS only:** Use GPS only.
5. Tap **Improve accuracy** to use other connections for determining your location:
 - **Wi-Fi scanning:** Allow apps and services to scan for Wi-Fi networks automatically, even when Wi-Fi is turned off.
 - **Bluetooth scanning:** Allow apps to scan for and connect to nearby devices automatically through Bluetooth, even when Bluetooth is turned off.



Recent Location Requests

Apps that have requested your location are listed under Recent location requests.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Privacy** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap an entry under **Recent location requests** to view the app's settings.



Location Services

Google uses Location History to store and use your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Privacy** > **Location**.
3. Tap **On/Off** to turn on Location services.
4. Tap **Google Location History** and sign in to your Google Account for options.

App Permissions

Control which apps have permissions to use certain features of your device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Privacy** > **App permissions**.
3. Tap the following features to see which apps have permission to access them:
 - Body sensors
 - Calendar
 - Camera
 - Contacts
 - Location
 - Microphone
 - Phone
 - SMS
 - Storage
 - Additional permissions
4. Tap **On/Off** next to each app to enable or disable permissions for that feature.



Private Mode

Hide personal content from being accessed by anyone else using your device.

Private mode is only available for certain applications.

Note: A secure screen lock (Pattern, PIN, or Password) is required to use Private Mode.

Set Up Private Mode



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Privacy** > **Private mode**.
3. Tap **On/Off** to turn Private mode on.
4. Select an access type, and then follow the prompts to configure it.
 - Tap **Auto off** to automatically turn off Private mode when the screen turns off.

Using Private Mode

When using Gallery, Video, Music, My Files, or Internet, select items you want to move to Private, and then tap **More** > **Move to Private**.

Report Diagnostic Info



This feature sends diagnostic information about your tablet when you are having technical problems.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Privacy** > **Report diagnostic info**.
3. Read the consent information, and then tap **Yes** to enable this feature or tap **No thanks**.

Accessibility

Accessibility services are special features that make using the device easier for those with certain physical disabilities.

Note: You can download additional accessibility applications from the Google Play store.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accessibility** for options:

Vision

- **Voice Assistant:** Speak feedback aloud to help blind and low-vision users.
 - Voice Assistant can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.
 - You can turn on Voice Assistant from any screen by pressing the Home key quickly three times (triple-press).
- **Voice Assistant help:** Tap for help on using Voice Assistant.
- **Dark screen:** Keep the screen turned off at all times for privacy.
- **Rapid key input:** Release your finger to enter selection instead of double tapping.
- **Speak passwords:** Read the characters aloud as you enter your passwords.
- **Text-to-speech:** Set your preferred TTS engine and options. For more information, see [Text-To-Speech Options](#).
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps.
- **Font size:** Set the font size.

- **High contrast fonts:** Adjust the color and outline of fonts to increase the contrast with the background.
- **High contrast keyboard:** Adjust the size of the Samsung keyboard and change its colors to increase the contrast between the keys and the background.
- **Show button shapes:** Show buttons with shaded backgrounds to make them stand out.
- **Magnifier window:** Magnify content shown on the screen.
- **Magnification gestures:** Use exaggerated gestures such as triple tapping, double pinching, and dragging two fingers across the screen.
- **Color inversion:** Reverse the display of colors from White text on a Black background to Black text on a White background.
- **Color correction:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color. Tap **Color correction** for options.

Hearing

- **Turn off all sounds:** Turn off all notifications and audio.
- **Samsung subtitles (CC):** Use Samsung subtitles with multimedia files when available. Tap Samsung subtitles (CC) for options.
- **Google subtitles (CC):** Use Google subtitles with multimedia files when available. Tap Google subtitles (CC) for options.
- **Left/right sound balance:** Use the slider to set the Left and Right balance when using a stereo device.
- **Mono audio:** Switch audio from stereo to mono for use with one earphone.

Dexterity and Interaction

- **Universal switch:** Control your device with your customized switches.
- **Assistant menu:** Improve the device accessibility for users with reduced dexterity.
- **Press and hold delay:** Select a time interval for this action.
- **Interaction control:** Block areas of the screen from touch interaction. Disable Auto rotate screen and hard key functions. Only show application notifications in the Notification panel and the Status bar.

More Settings

- **Direction lock:** Unlock the screen by swiping in a series of four to eight directions.
- **Direct access:** Open your accessibility settings by pressing the Home Key three times in quick succession.
- **Notification reminder:** Beep at set intervals to remind you of any unread notifications.
- **Single tap mode:** Dismiss or snooze alarms, calendar events, and timer alerts.
- **Manage accessibility:** Import and export your accessibility settings, or share them with other devices.

Services

Additional accessibility apps may be downloaded from the Google Play store. Certain accessibility services you install may be configured here.




Accounts

Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.

Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.



Add an Account

You can add and manage all your email, social networking, and picture and video sharing accounts.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** >  **Add account**.
3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.

Synchronize Accounts

You can synchronize your calendar, contacts, and other types of accounts.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **[Account type]**.
 - Tap **More** > **Sync all** to synchronize all accounts of this type.
3. Tap an account to view the sync settings for that account.



4. Tap individual data items to sync.
5. Tap **More** > **Sync now** to synchronize the account.

Note: Settings and options differ by account type.

Account Settings



Each account has its own set of settings. In addition, you can configure common settings for all accounts of the same type.

Note: Account settings and available features vary between account types and service providers. Contact your service provider for more information on your account's settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **[Account type]**.
3. Tap an account to configure that account's sync settings.
4. Tap other available options for the account.

Remove an Account

You can remove accounts from your device.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accounts** > **[Account type]**.
3. Tap the account and then tap **More** > **Remove account**.

Google Settings

Configure your device's Google settings.

Customize Google

To customize your Google settings:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Google**, and select an option to customize:
 - **Ads**: Configure your Google advertising profile.
 - **Location**: Configure your Google location settings.
 - **Nearby**: Use your device's sensors to connect with nearby devices.
 - **Search & Now**: Configure your Google search settings and Google Now settings.
 - **Security**: Configure the Android Device Manager and apps security settings.
 - **Set up nearby device**: Set up another device using Wi-Fi and Bluetooth.



Note: These options may change if you are signed in to your Google Account.

Backup and Reset

Use your Samsung account or your Google Account to back up or restore your data. You can also reset your device to its factory defaults.

Backup and Restore

Enable backup of your information to your Samsung account or Google servers.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Backup and reset** for options:

Samsung account

- **Back up my data:** Enable back up of your messages and more through your Samsung account.
- **Restore:** Use your Samsung account to restore your backup data.

Google Account



- **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
- **Backup account:** Select a Google Account to be used as your backup account.
- **Automatic restore:** Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

Auto Restart

Optimize your device by restarting it automatically at set times. The device only restarts if it is not in use and battery power is more than 30%.

Note: Any unsaved data is lost when the device restarts.

To enable Auto restart:



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** > **Auto restart**.
3. Tap **On/Off** to activate Auto restart, and then set the following parameters:
 - **Time:** Restart your device at this time of day.
 - **Days:** Restart your device on these days of the week.

Reset

Restore your device to its default settings.


Reset Settings

You can reset your device to its factory default settings, which resets everything except the security, language, and account settings. Personal data is not affected.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** > **Reset settings**.
3. Tap **Reset settings**, and confirm when prompted.

Reset Network Settings

You can reset Wi-Fi, Bluetooth, and other network settings to their defaults.

1. From a Home screen, tap  **Apps > Settings**.
2. Tap **Backup and reset > Reset network settings**.
3. Tap **Reset settings**, and confirm when prompted.

Factory Data Reset

You can reset your device to factory defaults, erasing all data from your device.

This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files. Any data stored on an external memory card is not affected.

Note: When you sign in to a Google Account on your device, Factory Reset Protection is activated. This protects your device in the event it is lost or stolen. For more information, see [Factory Reset Protection](#).


If you reset your device to factory default settings with the Factory Reset Protection (FRP) feature turned on, you must enter the user name and password for a registered Google Account to regain access to the device. You will not be able to access the device without the correct credentials.

Warning: If you reset your Google Account password, you must wait 72 hours after changing your password to perform a factory data reset on your device.

Before resetting your device:

1. Verify that the information you want to keep has transferred to your storage area.
2. Log in to your Google Account and confirm your user name and password.

To reset your device:



1. From a Home screen, tap  **Apps > Settings**.
2. Tap **Backup and reset > Factory data reset**.
3. Tap **Reset device** and follow the prompts to perform the reset.
4. When the device restarts, follow the prompts to set up your device.

Language and Input

Configure your device's language and input settings.



Set Your Default Language

You can select a default language for your device's menus and keyboards.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Language**.
3. Select a language from the list.

Default Keyboard




You can select a default keyboard for your device's menus and keyboards.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Default keyboard**.
3. Select a keyboard.

Note: Additional keyboards can be downloaded from the [Google Play store](#).



Samsung Keyboard

Configure options for using the Samsung keyboard.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Samsung keyboard** for options:
 - **Languages and types:** Set the keyboard type and language.
 -  **Add input languages:** Choose which languages are available on the keyboard. To switch between languages, slide the Space bar sideways.
 - **Smart typing:** Use predictive text and correct common typing mistakes to improve input.
 - **Predictive text:** Predictive text suggests words that match your text entries, and can automatically complete common words. Predictive text can learn your personal writing style from your contacts, messages, Gmail, and social networking sites—improving its accuracy of predicting your text entries.
 - Additional keyboard settings provide assistance with capitalization, punctuation, and much more.
 - **Key-tap feedback:** Play a tone or see character previews while typing.
 - **Customization:** Use text shortcuts, change the keyboard size, or use a high contrast keyboard.
 - **Other settings:** Reset keyboard settings, clear personalized data, and view information about the Samsung keyboard.




Google Voice Typing

Speak rather than type your text entries using Google voice typing.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Google voice typing** for options:
 - **Languages:** Select languages for Google voice typing.
 - **“Ok Google” detection:** Launch a Google search whenever you say “OK Google”.
 - **Hands-free:** Allow requests with the device locked.
 - **Speech output:** Select options for spoken feedback.
 - **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.
 - **Block offensive words:** Hide search results that contain offensive words.
 - **Bluetooth headset:** Use audio input from a Bluetooth headset (not included) if one is connected.



Text-To-Speech Options

Configure your Text-to-speech (TTS) options. TTS is used for various accessibility features, such as Voice Assistant. For more information, see [Accessibility](#).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Text-to-speech options** for options:
 - Choose either the Samsung or Google text-to-speech engine. Tap  **Settings** next to each TTS engine for options.
 - **Speech rate:** Set the speed at which the text is spoken.
 - **Default language status:** Display the default language in use.



Pointer Speed

Configure settings for using an optional mouse or trackpad (not included).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input**.
3. Drag the Pointer speed slider to the right to go faster or to the left to go slower.

Battery

View how battery power is used for device activities.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Battery** for options:
 - **Power saving mode:** Save battery power by limiting your device's performance, limiting vibration feedback, and restricting location services and most background data.
 - **Ultra power saving mode:** Save battery power by using a minimal Home screen layout and limiting the number of usable apps.
 - **Percentage on status bar:** Display the battery charge percentage next to the battery icon on the Status bar.
 - **Past and predicted usage:** View estimated usage time remaining based on your usage over the last 7 days.
 - **Recent battery usage:** Tap an item to view details of its battery usage.
3. Tap **More** for the following options:
 - **Refresh:** Update the listing.
 - **Optimize battery usage:** Choose apps to optimize their individual battery usage.

Storage

View the device memory and usage. Mount, unmount, or format an optional memory card (not included).

Device Memory



View and manage the memory used by the device.

1. Tap **Storage**.
2. Tap **Internal storage**, if an optional memory card is installed. Device storage used out of the total space available is displayed.

The amounts of memory used are further divided into:

- **Total space:** The total space in your device's memory.
 - **Available space:** The amount of storage space currently available.
 - **System memory:** The minimum amount of storage space required to run the system.
 - **Used space:** The amount of storage space currently being used.
 - **Other:** The space used by app data, downloaded files, and Android system files.
 - **Cached data:** The amount of data currently cached.
3. Tap **Explore** to launch My Files to view content stored on your device.

To increase available memory:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage**.
3. Tap **Internal storage**, if an optional memory card is installed.
4. Tap **Cached data** to clear cached data for all apps.
5. Tap **Delete** to confirm.

Memory Card (SD Card)



Once an optional memory card (not included) has been installed in your device, the card memory is displayed in the Storage setting.

Note: The [Portable storage](#) option only appears when an optional memory card is installed.

For more information, see [Install an Optional Memory Card](#).



Mount a Memory Card

When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you must mount it before it can be accessed.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage**.
3. Under **Portable storage**, tap your SD card, and then tap **Mount**.



Remove a Memory Card

Warning: To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage**.
3. Under **Portable storage**, tap your SD card, and then tap **Unmount**.
4. Open the memory card slot cover and turn to expose the slot.
5. Gently press inward on the memory card so that it pops out from the slot, and carefully pull the card out.
6. Close the memory card slot cover.

Format a Memory Card



Warning: When formatting an SD card, you should back up your music and photo files that are stored on the card because formatting the SD card deletes all of the stored data.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage**.
3. Under **Portable storage**, tap your SD card, and then tap **Format** and follow the prompts.

Date and Time

By default, your device receives date and time information from the wireless network.



When you are outside network coverage, you may want to set date and time information manually using the date and time settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Date and time**. The following options are available:
 - **Automatic date and time:** Update the date and time from the wireless network.
 - **Set date:** Enter the current date (only available when Automatic date and time is disabled).
 - **Set time:** Enter the current time (only available when the Automatic setting is disabled).
 - **Select time zone:** Choose your local time zone.
 - **Use 24-hour format:** Set the format for time displays.

User Manual



View tips and guidelines for using your device.

To view the user manual for this device:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **User manual**.

About Device

View information about your device, including status, legal information, hardware and software versions, and more.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **About device**, and then tap items for more details:
 - **Download updates manually:** Check for software updates.
 - **Scheduled software updates:** Set a time to automatically check for and install available software updates.
 - **Status:** View the status of the battery, network, and other information about your device.
 - **Legal information:** View legal notices and other legal information, including your embedded Samsung legal information.
 - **Device name:** View and change your device's name.
 - Additional device information includes the Model number, Android version, Build number, and more.