

# Quick Reference Guide



## Samsung Care

### Samsung Premium Care

Get more than just protection for your device. Pick the time and place, and a team member will meet you to set up, troubleshoot, repair or replace your product.

Enroll at [samsung.com/us/support/premium-care](https://samsung.com/us/support/premium-care)

### GET TO KNOW YOUR PRODUCT:

- Access user manuals, troubleshooting, and more at [samsung.com/us/support](https://samsung.com/us/support)

### ASK THE COMMUNITY:

- Ask questions and share solutions with other Samsung customers at [us.community.samsung.com](https://us.community.samsung.com)

### CONTACT US FOR SUPPORT:

- Get hardware or software support, at [samsung.com/us/support/contact](https://samsung.com/us/support/contact) or call us at 1.800.SAMSUNG
- Find a service location near you at [samsung.com/us/support/service/locations](https://samsung.com/us/support/service/locations)

## 1 About your phone



Images shown are of the Galaxy S10+ and are for reference only.

## 2 Set up your phone


Your SIM card may be pre-installed.



Note: Use only Samsung-approved charging devices and accessories. Samsung accessories are designed for your device to maximize battery life. Using other accessories may void your warranty and may cause damage.

## 3 Search

From the Home screen swipe up and search for apps, settings, contacts, and more.

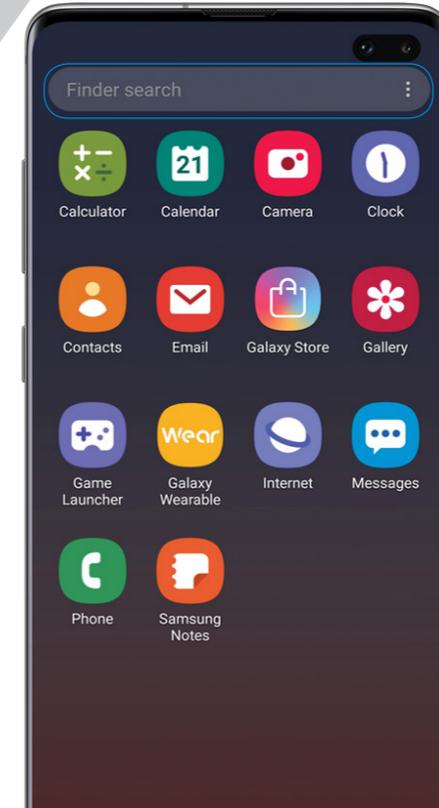

## Customize your phone

From the Home screen, swipe up, and then tap Settings to customize, connect and personalize your phone:

- CONNECTIONS**  
Connect to a Wi-Fi™ network, Bluetooth device and other connection options.
  - SOUNDS AND VIBRATION**  
Set device volume and sounds.
  - DISPLAY**  
Customize the Home screen, navigation gestures, and display brightness.
  - WALLPAPERS AND THEMES**  
Make the device your own with fun and unique wallpapers and themes.
  - DIGITAL WELLBEING**  
Configure usage limits on your device.
  - LOCK SCREEN**  
Select a screen lock type and set security options.
  - BIOMETRICS AND SECURITY**  
Set facial or fingerprint security options.
- The Help feature gives access to the user manual and useful information on how to use your device.
- To open, from Settings tap Help.
- Make a call
  - Send and receive texts
  - Manage contacts
  - Explore health & fitness
  - Enjoy curated support content
  - Utilize accessibility settings

## Learn more

The Help feature gives access to the user manual and useful information on how to use your device.

To open, from Settings tap Help.

- Make a call
- Send and receive texts
- Manage contacts
- Explore health & fitness
- Enjoy curated support content
- Utilize accessibility settings

## Performance

### Bixby Routines

Create custom routines that change your phone settings based on your location or activity. For example, while driving you can create a routine to automatically read notifications aloud.

1. Drag the Status bar down to display the Notification panel.
2. Touch and drag  to access all Quick Settings options.
3. Tap **Bixby Routines** . Then touch and hold to set up.

### Wireless PowerShare

Wirelessly charge compatible devices right from your phone.

1. Drag the Status bar down to display the Notification panel.
2. Touch and drag  to access all Quick Settings options.
3. Tap **Wireless PowerShare** .
4. With the phone face down, place the device on the back of the phone to charge.

Works with Qi compatible Samsung devices (compatibility with non-Samsung Qi devices is not guaranteed); speed and power efficiency of charge may vary by device. Your battery must have a minimum charge of 30 percent.



## Camera



### Features

- **Dual Pixel:** Focus in a blink.
- **Dual Aperture:** Adapt to bright light and super low light automatically.
- **Ultra wide:** Capture more of the scene.
- **High Dynamic Range (HDR)**  
**10+ recording:** Ensure bright colors are bright, while keeping dark colors dark.
- **Scene optimizer:** Recognize and optimize scenes and colors for brilliant photos.
- **Artistic Live Focus:** Blur the background of a photo to make the subject stand out.
- **Zoom:** Get a closer view of faraway subjects.
- **Hyperlapse:** Create a motion shot while recording a time-lapse video.
- **Super slow-mo:** Capture motion at 960 frames per second.
- **Slow motion:** Capture motion at 245 frames per second.

### BIXBY VISION

Identify objects and locations.

### TOOLS PANEL

Swipe left or right to select effects.

### CAMERA MODES

Swipe left or right to select a mode.

### GALLERY

View photos.

### CAPTURE

Capture images.

### TOGGLE CAMERAS

Switch between the back and front cameras.



### Create an AR Emoji

Turn your selfie into an emoji.

1. From the Home screen, tap **Camera**  > **AR Emoji** > **Create My Emoji**.
2. Tap  to capture your photo and customize and save your emoji.



### Personalize messages with an emoji

1. Tap **Messages**  > **New message**  > **Enter message field**.
2. Tap **Stickers**  to add a GIF or your very own emoji or sticker, and then tap **Send** .




## Recent apps

Enjoy the new full-screen view of recent apps.

Tap **Recents**  to view a list of recently opened apps.

- Tap an app icon to view options.
- Swipe up to close.
- Swipe down to open.

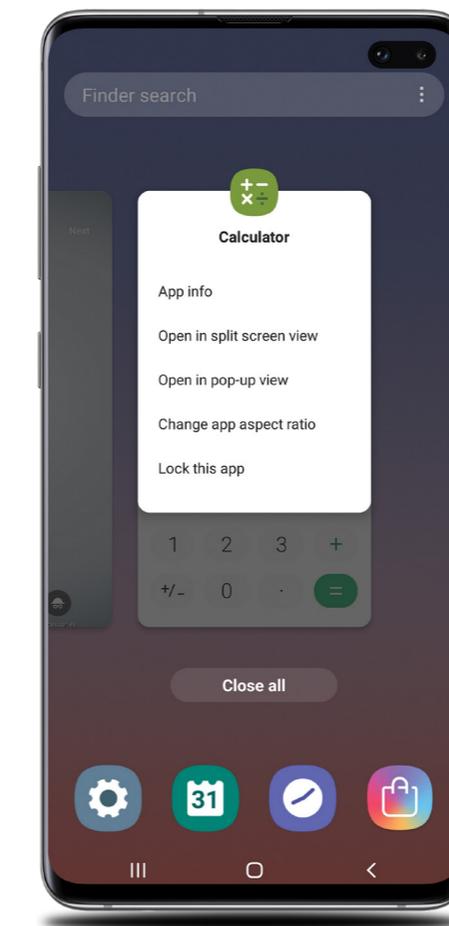

## Gestures

Customize the Home, Back and Recents keys or remove them and use gestures instead to increase screen space.

1. From **Settings** , tap **Display**  > **Navigation bar**.
2. Tap one of the following Navigation types:
  - Navigation buttons (default)
  - Full screen gestures
  - Button order
  - Gesture hints (Displays only when full screen gestures is selected)

©2019 Samsung Electronics America, Inc. Samsung and Galaxy S are both trademarks of Samsung Electronics Co., Ltd. Android, Google, Google Play, and other marks are trademarks of Google LLC. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated. Appearance of phone may vary.