

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS

BEFORE USING THE TOASTER KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

THIS IS AN ATTENDED APPLIANCE.

- Do not leave unattended during use, unplug after each use (risk of fire if an unattended appliance is left operating or plugged in).**

This appliance must not be used by children younger than 8 years old and persons with very extensive and complex disabilities. Children aged 8-14 years and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge shall not use this appliance, unless

ES

Al utilizar electrodomésticos, siempre deben seguirse precauciones básicas de seguridad, que incluyen las siguientes:

LEA LAS INSTRUCCIONES AL COMPLETO

LEA LAS INSTRUCCIONES AL COMPLETO ANTES DE UTILIZAR LA TOSTADORA.

- ESTE PRODUCTO REQUIERE SU ATENCIÓN.** No lo deje fuera de vigilancia durante el uso, desenchúfelo después de cada uso (si una unidad se deja en funcionamiento o enchufada y fuera de vigilancia, podría producirse un incendio).
- No deben utilizar el aparato niños menores de 8 años ni personas con discapacidades muy graves y complejas. Este aparato no puede ser utilizado por niños de 8 a 14 años ni personas con capacidades físicas, sensoriales o mentales disminuidas o sin experiencia ni conocimientos, a menos que lo hagan bajo una adecuada vigilancia, hayan sido instruidos sobre cómo emplearlo de manera segura y comprendan los riesgos que entraña su uso. No permita que los niños se ocupen de la limpieza y el mantenimiento de este aparato a menos que sean

they are supervised and have been given instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.

- Close supervision is necessary when any appliance is used by or near children.**

Do not use outdoors. This appliance is intended for indoor household use only. If the appliance is used improperly or for professional or semi-professional purposes or it is not used according to these instructions the Guarantee becomes invalid and Dualit refuses any liability for damage caused.

Electrical safety

- Before plugging in, check that the voltage on the rating label is the same as the mains supply.
- Always attach plug to appliances first, then plug cord into the wall outlet. To disconnect, set all controls to "off" then remove plug from wall outlet.
- We recommend that the toaster is plugged into a socket that has no other appliance connected to it. Failure to do this may cause an overload, trip a circuit breaker or blow a fuse. Preferably the socket

outlet should be protected by a Residual Current device (RCD).

- WARNING:** Unplug from outlet when not in use. Allow to cool before cleaning and before putting on or taking off parts.

Should any of the lights remain illuminated after using the appliance, immediately unplug the toaster and call service centre.

The toaster is not intended to be operated by means of an external timer or separate remote-control system.

To protect against fire, electric shock and injury to persons. Do not immerse any part of this product in water or other liquid.

NOTE: Any plug cut from power supply cord should be disposed of immediately. Inserting any cut off plug into a 13A socket-outlet is hazardous.

Do not operate any appliance with a damaged lead or plug, or after the appliance malfunctions or has been damaged, cracked or dropped in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Never use the plug without the fuse cover fitted. Ensure replacement fuse is the same current value as original.

- Replacement fuses should be ASTA approved to BS 1362.

Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.

General safety

- Do not touch hot surfaces. Use handles or knobs.
- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not use scouring pad or abrasive cleaner on the toaster body.
- The use of accessory attachments not recommended by Dualit may result in fire, electric shock or injury to persons.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not attempt to dislodge bread when the toaster is plugged in.
- Crumb tray must be in place during toasting.
- Crumb tray should be regularly cleaned. A build up of crumbs can burn or cause a fire.

Do not allow cable to touch hot surfaces, or to hang over edge of a table or counter top.

- Keep the appliance and its cord out of reach of children.

Do not use appliance for any purpose other than the intended use.

Do not store or use toaster in an appliance garage or under cupboards.

Do not put a pan on top of the toaster or warming rack.

Do not use if dropped, cracked or damaged.

Accessible surfaces of the toaster may get hot during use. Therefore use handles or knobs.

Do not use scouring pad or abrasive cleaner on the toaster body.

The use of accessory attachments not recommended by Dualit may result in fire, electric shock or injury to persons.

If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord anywhere inside.

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

A short power-supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords are available and may be used if care is exercised in their use. If extension cord is used:

1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance; and

2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

3. If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord anywhere inside.

In the interest of improving products, Dualit Ltd. reserves the right to change the product specification without prior notice.

All illustrations are for representation only, your model may vary from illustrations shown.

INSTRUCTIONS ON ENVIRONMENT PROTECTION

Do not dispose this product in the usual household garbage at the end of its life cycle. Please hand it over to a collection point for the recycling of electrical and electronic appliances. The symbol on the product, the instruction of use or the packaging will inform you about the methods of disposal. The materials are recyclable as mentioned on its marking. By recycling, material recycling or other forms of re-utilization of old appliances you are making an important contribution to protect our environment. Please enquire at the community administration for the authorised disposal location.

IMPORTANT: BEFORE FIRST USE

- Read this instruction manual before you start using the toaster. It gives you important safety information and will ensure you get the most out of your Dualit toaster.
- Keep this manual and your proof of purchase in a safe place.
- Before you use your toaster for the first time, wash all parts according to the cleaning instructions.

- Position the toaster according to the safety precautions.
- Make sure the toasting lever is in the raised position when you put the plug into the wall socket.
- The toasting lever will only engage when the toaster is plugged in with the power on.
- The cancel button will illuminate to show that the toaster is heating.
- To condition elements for use, let the toaster complete the first cycle without slices of bread in it and allow to cool to room temperature.
- When you turn the toaster on for the first time, a "new" smell/or smoke may be given off, this will dissipate after a few uses.

Register my appliance


DON'T FORGET TO
REGISTER YOUR TOASTER
WWW.DUALIT.COM/REGISTER
OR BY POST

Register my appliance


NO OLVIDE
REGISTRAR SU TOSTADORA
WWW.DUALIT.COM/REGISTER
O POR CORREO

Dualit®

Since 1945

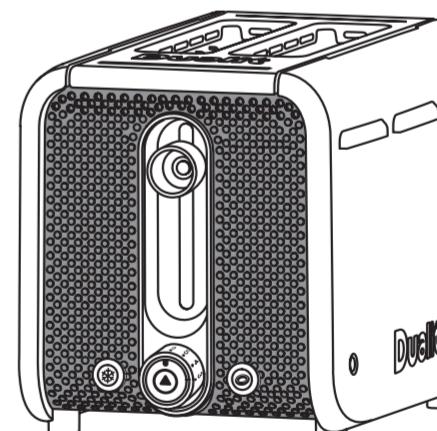

CSL2

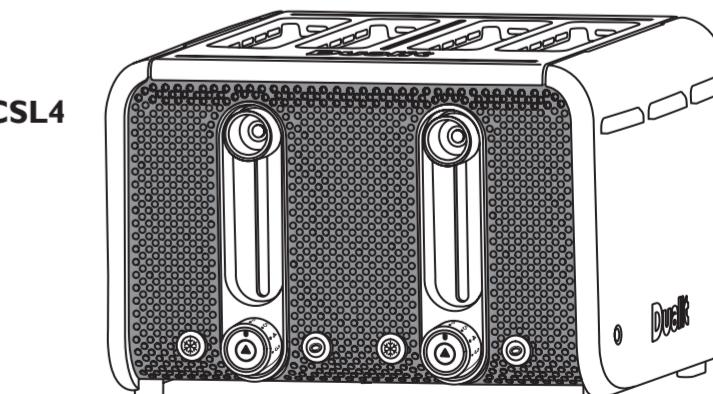


CSL4

EN Studio by Dualit Toaster
Instruction Manual

FR Studio by Dualit Toaster
Mode d'emploi

ES Studio by Dualit Toaster
Manual de instrucciones

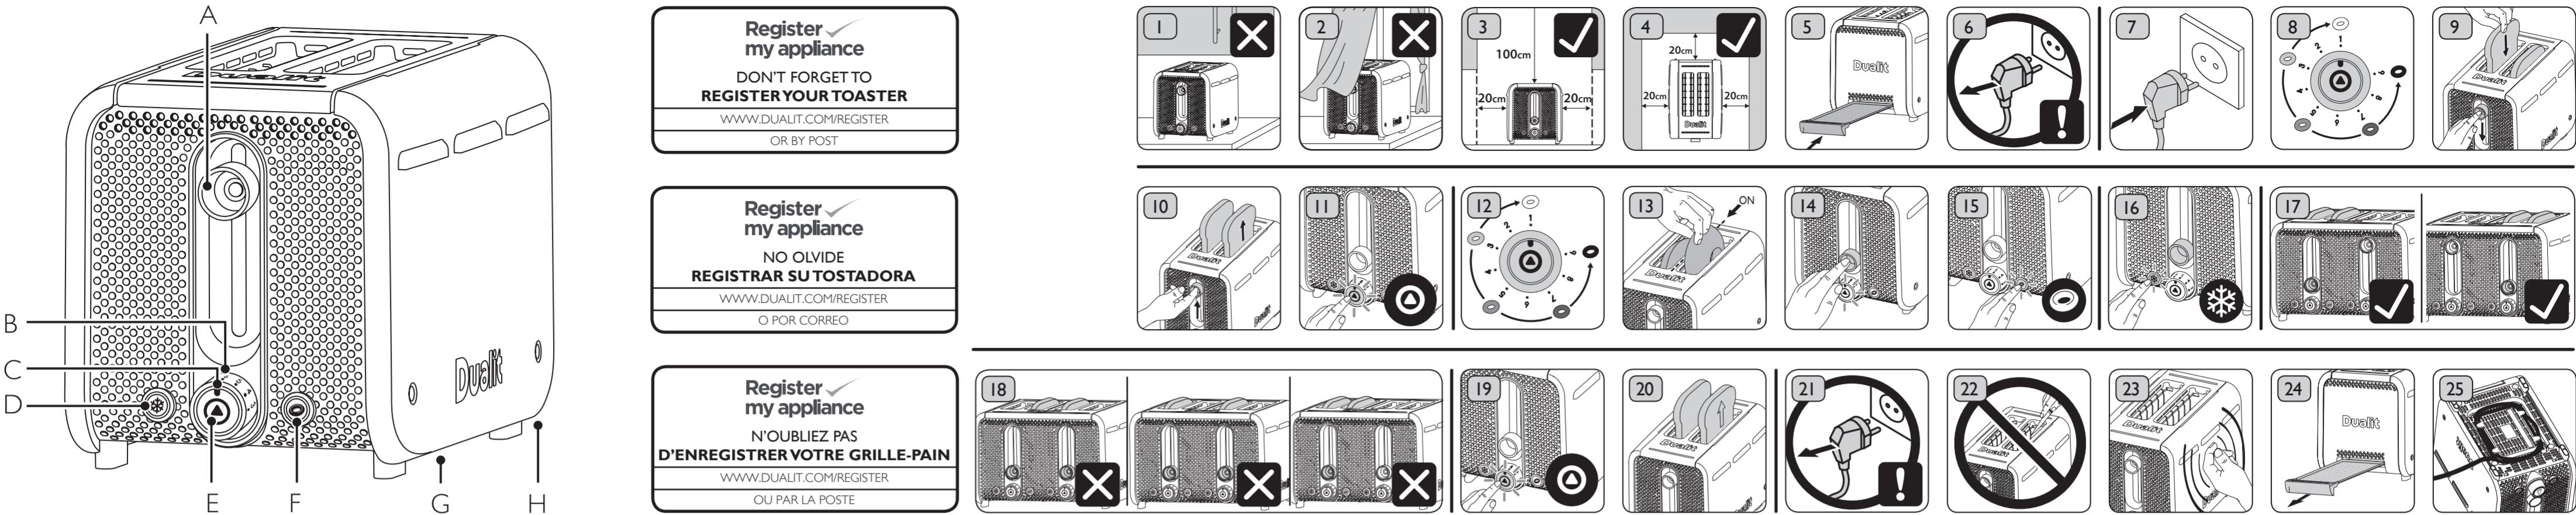

EN

- A. TOASTING LEVER
B. BROWNING CONTROL
C. BROWNING CONTROL INDICATOR
D. DEFROST BUTTON
E. CANCEL BUTTON
F. BAGEL BUTTON
G. CABLE TIDY
H. CRUMB TRAY

All illustrations are for representation only, your model may vary from illustrations shown.

SETTING UP

- 1** Do not store or use your toaster in an appliance garage or under cupboards. A fire may occur if incorrectly positioned.
2 Do not store or use your toaster close to curtains or flammable material. A fire may occur if incorrectly positioned.
3 Place the toaster on an open level surface. Ensure the toaster is positioned at least 20cm/100cm clear from any overhanging cupboards, walls or ceiling.
4 Ensure the toaster is positioned at least 20cm clear from any overhanging cupboards or walls.
5 Crumb tray must be in place during toasting.

6 UNPLUG WHEN NOT IN USE.

TOASTING BREAD

- The toaster will only engage when the power is switched on. Plug the toaster into the wall power socket and turn power on at socket.
To toast, turn the browning control indicator to your desired browning setting (1 is the lightest and 9 is the darkest setting). Note: the freshness, thickness and type of bread will effect required toasting times. We recommend setting 5 for medium slice, white bread. Adjust for your bread type, see chart below for a guide to toasting.

	REDUCE BROWNING SETTING (Turn slightly anti-clockwise)	SETTING 5	INCREASE BROWNING SETTING (Turn slightly clockwise)
FRESHNESS (age) of bread	5+ days old	2 days old	0 days (freshly baked)
MOISTURE CONTENT of bread	Dry	Average	Moist
COLOUR of bread	—	White	Brown Rye
INGREDIENTS in bread	Sweet	Savoury	Lots of seeds & savoury

- 9** Place the bread into the slots and press the toasting lever down until it engages. The browning control will be illuminated red for the duration of the toasting.

- 10** When toasted the toast will pop up automatically. If the slices are difficult to remove safely, lift the toasting lever up manually for extra high lift.
11 To immediately stop toasting, press the cancel button. After cancelling if any light remains illuminated after use immediately UNPLUG the toaster & call service centre.

BAGEL & BUN TOASTING

- Perfectly toast bagels or other bread products such as buns, English muffins or teacakes. This feature gently warms the inside of the item and toasts the outside to perfection.

- 12** Select the desired browning level. (1 is the lightest and 9 is the darkest setting).
13 Slice bagel into two equal halves. Press the bagel into the slots. Press the toasting lever down until it engages. Immediately press the defrost button. The button will be illuminated red.

- 15** Press the bagel button. The button will be illuminated red and only the outside elements will heat up.

- 16** To toast frozen bread, place the bread into the slots. Press the toasting lever down until it engages. Immediately press the defrost button. The button will be illuminated red.

- 17** Note: Defrost and reheat functions cannot be used at the same time. The toaster will perform the function that is selected first. If the incorrect function is selected, cancel toasting and start again.

4 SLOT TOASTING

- 18** If you want to toast 2 pieces of bread only load and engage one side of the toaster.

- 19** Press the cancel button located on the end of the browning control.

STOP TOASTING

CLEANING & CARE

- 20** The toaster will immediately stop and the items being toasted will pop up.

The light will go out.

- 21** After cancelling if any light remains illuminated after use immediately unplug the toaster & call service centre. **THIS IS AN ATTENDED APPLIANCE.** Do not leave unattended during use, unplug after each use (risk of fire if an unattended appliance is left operating).

- 22** When the toaster has cooled completely, tap the sides of the toaster lightly to dislodge any crumbs caught in the toasting chamber.

- 23** Crumbs will accumulate in the crumb tray and could catch fire if the tray is not emptied frequently. Pull out the crumb tray and wipe clean using a damp cloth.

- 24** Any other servicing should be performed by authorized service representative.

- Store the cleaned toaster unplugged with the cord wrapped round the cord tidy on the base of the toaster.

ES

- A. PALANCA DE TOSTADO
B. CONTROL DE DORADO
C. INDICADOR DE CONTROL DE DORADO
D. BOTÓN DE DESCONGELADO
E. BOTÓN DE DETENER
F. BOTÓN DE BAGEL Y PANECILLO
G. RECOGECAJAS
H. BANDEJA DE MIGAS

Es posible que las ilustraciones sean distintas del producto

MONTAJE

- 1** No guarde ni utilice su tostadora en un cobertizo para electrodomésticos ni debajo de alacenas. Puede ocurrir un incendio si se encuentra en la posición incorrecta.

- 5** La bandeja de migas debe estar correctamente instalada durante el tostado.

- 8** Para tostar, coloque el indicador de control de dorado en el nivel deseado (1 es el más claro y 9 el más oscuro). Nota: la frescura, grosor y tipo de pan afectará el tiempo de tostado. Recomendamos el nivel 5 para una rodaja de grosor medio de pan blanco. Ajuste el nivel de acuerdo con el tipo de pan; vea el recuadro para obtener una guía de tostado.

	REDUCIR EL NIVEL DE TOSTADO (GIRE LIGERAMENTE EN SENTIDO ANTIHORARIO)	NIVEL 5	AUMENTAR EL NIVEL DE TOSTADO (GIRE LIGERAMENTE EN SENTIDO HORARIO)
FRESCURA del pan (cuán viejo es)	más de 5 días	2 días	0 días (recién horneado)
CONTENIDO DE HUMEDAD del pan	Seco	Promedio	Húmedo
COLOR del pan	—	Blanco	Marrón Centeno
INGREDIENTES del pan	Dulce	Salado	Muchas semillas y salado

- 9** Inserte el pan en las ranuras y presione la palanca de tostado hacia abajo para comenzar a tostar el pan. El control de dorado se iluminará de color rojo durante todo el tostado.

- 10** Una vez completado el tostado, la tostada emergirá automáticamente. Si las rodajas son difíciles de retirar de manera segura, levante la palanca de tostado de manera manual para obtener una mayor elevación.

- 11** Para detener el tostado de inmediato, pulse el botón de detener. **Si la luz de neón continúa encendida después de detener el tostado tras usar el aparato, desenchufe inmediatamente la tostadora y llame al centro de servicios.**

- 12** Seleccione el nivel de tostado que deseé. (1 es el ajuste más suave y 9 el más intenso).
13 Corte el bagel en dos mitades idénticas antes de tostarlo. Introduzca el bagel de modo que ambos lados del corte se orienten hacia los elementos exteriores.

- 14** Presione hacia abajo la palanca de tostado hasta que encaje. El control de tostado se iluminará en rojo.

- 15** Presione el botón de bagel. El botón se iluminará en rojo y solo se calentarán los elementos exteriores.

- 17** Si desea tostar dos rodajas de pan, cargue y trabe un solo lado de la tostadora.
18 No cargue y trabe ambos lados de la tostadora para tostar dos rodajas de pan. ¡ATENCIÓN! DESENCHUFE EL ELECTRODOMÉSTICO CUANDO NO LO UTILICE.

DETENER EL TOSTADO

- El ciclo de tostado se detendrá automáticamente y se expulsará la tostada; sin embargo, se puede cancelar en cualquier momento si es preciso.

- 19** Si su tostada emerge automáticamente una vez completado el ciclo de tostado, o al presionar el botón de cancelar la luz de encendido continúa encendida después del uso, desenchufe inmediatamente la tostadora y llame al centro de servicios.

- 16** Para tostar congelado, coloque el pan en las ranuras. Presione la palanca de tostado hacia abajo hasta que quede trabada. Presione de inmediato el botón de descongelado. El botón se iluminará de color rojo.

- Nota: Las funciones de descongelado y recalentado no pueden ser utilizadas al mismo tiempo.

- La tostadora ejecutará la función que se seleccionó primero. Si se selecciona la función incorrecta, cancele el tostado y comience nuevamente.

- 20** Si su tostada emerge automáticamente una vez completado el ciclo de tostado, o al presionar el botón de cancelar la luz de encendido continúa encendida después del uso, desenchufe inmediatamente la tostadora y llame al centro de servicios.

- 21** Para detener el tostado de inmediato, pulse el botón de detener. **Si la luz de neón continúa encendida después de detener el tostado tras usar el aparato, desenchufe inmediatamente la tostadora y llame al centro de servicios.**

- 22** Se acumularán migas en la bandeja para migas, que podrían generar un incendio si ésta no se vacía con frecuencia. Tire hacia afuera de la bandeja de migas y limpíela con un paño húmedo.

- 23** No inserte ningún objeto filoso o metálico en las ranuras. Utilice ÚNICAMENTE UN CEPILLO SUAVE.

- 24** Se acumularán migas en la bandeja para migas, que podrían generar un incendio si ésta no se vacía con frecuencia. Tire hacia afuera de la bandeja de migas y limpíela con un paño húmedo.

LIMPIEZA Y CUIDADO

- 25** Un representante autorizado deberá realizar cualquier otra clase de servicio.

- Enrosque todo el cable sobrante alrededor del recogecables en la base de las tostadoras.

FR

- A. LEVIER DU GRILLE-PAIN
B. BOUTON DE THERMOSTAT
C. INDICATEUR DE THERMOSTAT
D. BOUTON DE DÉCONGÉLATION
E. BOUTON D'ANNULATION
F. BOUTON VIENNOISERIE
G. RANGE-CORDON
H. TIROIR RAMASSE-MIETTES

Il peut y avoir des différences entre les illustrations et le produit.

- 1** Ne rangez pas ni n'utilisez le grille-pain dans une armoire pour appareils ou sous un placard. Tout mauvais positionnement peut provoquer un incendie.

- 2** Ne rangez pas ni n'utilisez le grille-pain près de rideaux ou de matières inflammables. A火re peut occurer si elle est incorrectement positionnée.

- 3** Placez le grille-pain sur une surface plane dégagée. Veillez à positionner le grille-pain au moins à 20 cm/100 cm de tout placard mural, mur ou plafond.

- 4** Veillez à positionner le grille-pain au moins à 20 cm DES MURS.

- 5** LE TIROIR RAMASSE-MIETTES DOIT ÊTRE EN PLACE PENDANT L'UTILISATION DU GRILLE-PAIN.

- 6 ATTENTION ! DÉBRANCHEZ L'APPAREIL EN CAS D'INUTILISATION.**
COMMENT GRILLER DU PAIN

- 7** Le grille-pain ne fonctionnera que si il est sous tension. Branchez le grille-pain à la prise secteur murale et mettez la prise sous tension.

- 8** Pour faire griller, réglez l'intensité à l'aide du bouton de thermostat en fonction de vos préférences (1 étant le moins et 9 le plus grillé). Remarque : le temps de grillage variera en fonction de la fraîcheur, de l'épaisseur et du type de pain utilisé. Nous recommandons le réglage 5 pour une tranche de pain blanc de moyenne épaisseur. Réglez en fonction du type de pain, voir tableau sur le réglage du grille-pain.

- 9** Mettez le pain dans les fentes et appuyez par le levier du grille-pain pour commencer le grillage. Le voyant de brûlisser restera allumé pendant toute la durée de la cuisson.

- 10** Une fois cuit, le pain grillé sera automatiquement éjecté. Si vous n'avez pas réussi à retirer les tranches en toute sécurité, remontez le levier manuellement pour les soulever davantage.

- 11** Pour arrêter immédiatement le grille-pain en cours d'utilisation, appuyez sur le bouton d'annulation. **Après ce arrêt, si le voyant reste allumé après l'utilisation, débranchez immédiatement l'appareil et appelez le centre de dépannage. ATTENTION ! DÉBRANCHEZ L'APPAREIL EN CAS D'INUTILISATION.**

- 12** Coupez votre bagel en deux parties égales avant de le faire griller. Introduisez le bagel en orientant les parties « coupées » vers les éléments chauffants extérieurs.

- 13** Abaissez le levier jusqu'à ce qu'il s'enclenche. La commande de brûlisser s'allume en rouge.

- 14** Appuyez sur le bouton Bagel. Ce bouton s'allume en rouge et tous les éléments chauffants extérieurs se mettent à chauffer.

- 15** Appuyez sur le bouton Bagel. Ce bouton s'allume en rouge et tous les éléments chauffants extérieurs se mettent à chauffer.

- 16** Pour faire griller du pain congelé, placez les tranches dans les fentes. Abaissez le levier jusqu'à ce qu'il s'enclenche. Appuyez immédiatement sur le bouton de décongélation. Le bouton s'allume en rouge.

- 17** Remarque : il est impossible d'utiliser simultanément les fonctions de décongélation et de réchauffage. Le grille-pain effectuera la fonction qui a été sélectionnée en premier. En cas de sélection de la mauvaise fonction, annulez la cuisson et recommencez.

- 18** Votre pain est automatiquement éjecté dès que le cycle de cuisson est terminé ou que vous avez appuyé sur le bouton d'annulation. **Si le voyant reste allumé après l'utilisation, débranchez immédiatement l'appareil et appelez le centre de dépannage.**

- 19** Pour arrêter le cycle de cuisson, appuyez sur le bouton d'annulation de cuisson à tout moment. **Si le voyant d'alimentation reste allumé après l'utilisation, débranchez immédiatement l'appareil et appelez le centre de dépannage.**

- 20** Pour arrêter le cycle de cuisson, appuyez sur le bouton d'annulation de cuisson à tout moment. **Si le voyant d'alimentation reste allumé après l'utilisation, débranchez immédiatement l'appareil et appelez le centre de dépannage.**

- 21** N'insérez pas d'objets pointus ou métalliques dans les fentes. Utilisez uniquement une Brosse SOUPLE !

- 22** Tapez doucement sur les parois du grille-pain pour dégager les miettes à intervalles réguliers. Retirez les ramasse-miettes, videz-le et essayez-le.

- 23** Si le ramasse-miettes n'est pas utilisé fréquemment, les miettes vont s'accumuler et risquent de prendre feu. Retirez le ramasse-miettes comme indiqué sur l'illustration ci-dessous et essayez-le à l'aide d'un chiffon humide.