



EDS-MD Medical Device Server User Guide

- ◆ EDS-MD 4
- ◆ EDS-MD 8
- ◆ EDS-MD 16

Intellectual Property

© 2017 Lantronix, Inc. All rights reserved. No part of the contents of this publication may be transmitted or reproduced in any form or by any means without the written permission of Lantronix.

Lantronix and *EDS-MD* are registered trademarks of Lantronix, Inc. in the United States and other countries. *DeviceInstaller* is a trademark of Lantronix, Inc.

Patented: patents.lantronix.com; additional patents pending

Windows and *Internet Explorer* are registered trademarks of Microsoft Corporation. *Mozilla* and *Firefox* are registered trademarks of the Mozilla Foundation. *Chrome* is a trademark of Google Inc. *Safari* is a registered trademark of Apple Inc. All other trademarks and trade names are the property of their respective holders.

Warranty

For details on the Lantronix warranty policy, please go to our web site at www.lantronix.com/support/warranty.

Contacts

Lantronix, Inc.
7535 Irvine Center Drive
Suite 100
Irvine, CA 92618, USA

Toll Free: 800-526-8766
Phone: 949-453-3990
Fax: 949-453-3995

Technical Support

Online: www.lantronix.com/support

Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at www.lantronix.com/about/contact.

Disclaimer

All information contained herein is provided “AS IS.” **Lantronix undertakes no obligation to update the information in this publication.** Lantronix does not make, and specifically disclaims, all warranties of any kind (express, implied or otherwise) regarding title, non-infringement, fitness, quality, accuracy, completeness, usefulness, suitability or performance of the information provided herein. Lantronix shall have no liability whatsoever to any user for any damages, losses and causes of action (whether in contract or in tort or otherwise) in connection with the user’s access or usage of any of the information or content contained herein. **The information and specifications contained in this document are subject to change without notice.**

Revision History

Date	Rev.	Comments
September 2011	A	Initial Document for firmware release 7.2.0.0.
October 2011	B	Updated power cord part number information.
November 2011	C	Updated ethernet port information and cover product image.
November 2011	D	Added Suppliers Declaration of Conformity document.
March 2013	E	Updated pinout diagrams and part number information.
March 2013	F	Updated revision and trademark information.
January 2014	G	Added RJ45 serial port image.
June 2014	H	Updated power rating information.
April 2015	I	Updated to firmware release 7.2.0.3 which includes the addition of Ethernet 2 and 3 functionality.
April 2017	J	Added wall mount information. Updated temperature and new certification information.
January 2019	K	Updated Compliance standards and Declaration of Conformity documents.

Table of Contents

Intellectual Property _____	2
Warranty _____	2
Contacts _____	2
Disclaimer _____	2
Revision History _____	3
Table of Contents	4
List of Figures _____	10
List of Tables _____	11
1: Using This Guide	13
Purpose and Audience _____	13
Summary of Chapters _____	13
Safety Information _____	14
Cover _____	14
Power Plug _____	14
Input Supply _____	14
Grounding _____	15
Fuses _____	15
There are fuses on the internal power supply serviceable only by Lantronix. _____	15
Battery _____	15
Wall Mounting _____	15
Port Connections _____	15
WARNINGS OF NETWORK CONNECTIONS _____	16
Equipment Classifications _____	16
Environmental Conditions for Transportation and Storage _____	16
Cleaning Instructions _____	16
Electromagnetic Interference _____	17
Additional Documentation _____	17
2: Introduction	18
Key Features _____	18
Applications _____	18
Protocol Support _____	18
Troubleshooting Capabilities _____	19
Configuration Methods _____	19
Addresses and Port Numbers _____	19
Hardware Address _____	19
IP Address _____	20
Port Numbers _____	20

Product Information Label _____	20
3: Installation of EDS-MD Device Servers	21
Package Contents _____	21
User-Supplied Items _____	21
Identifying Hardware Components _____	22
Serial Ports _____	22
Ethernet Port _____	22
LEDs _____	23
Reset to Default Button _____	24
Technical Specification _____	25
Installing the EDS-MD _____	27
Finding a Suitable Location _____	27
Connect the EDS-MD to one or more serial devices _____	27
Wall Mounting Instructions _____	28
For Installations to Walls Requiring Anchors _____	28
For Installations to Walls Not Requiring Anchors _____	28
4: Using DeviceInstaller	30
Accessing EDS-MD Using DeviceInstaller _____	30
Device Detail Summary _____	31
5: Configuration Using Web Manager	33
Accessing Web Manager _____	33
Device Status Page _____	34
Web Manager Components _____	35
Navigating Web Manager _____	36
6: Network Settings	38
Network 1 (eth0) Status _____	38
Network 1 (eth0) Interface Settings _____	38
To Configure Network 1 (eth0) Interface Settings _____	40
Network 1 (eth0) Link Settings _____	40
To View or Configure Link 1(eth0) Settings _____	40
Network 2 (eth1) Interface Settings _____	41
To Configure Network 2 (eth1) Interface Settings _____	41
To View Network 2 (eth1) Interface Status _____	41
Network 2 (eth1) Link Settings _____	42
To View or Configure Link 2 (eth1) Settings _____	42
Network 3 (eth2) Interface Settings _____	43
To Configure Network 3 (eth2) Interface Settings _____	43
To View Network 3 (eth2) Interface Status _____	43

Network 3 (eth2) Link Settings _____	43
To View or Configure Link 3 (eth2) Settings _____	44
Network 2 (eth0) Status _____	44
7: Line and Tunnel Settings	45
Line Statistics _____	45
Line Settings _____	45
To Configure Line Settings _____	45
To Configure Line Command Mode _____	47
Tunnel Statistics _____	48
To View Tunnel Statistics _____	48
Tunnel Settings _____	48
Serial Settings _____	48
To Configure Tunnel Serial Settings _____	49
Packing Mode _____	49
To Configure Tunnel Packing Mode Settings _____	50
Accept Mode _____	50
To Configure Tunnel Accept Mode Settings _____	52
Connect Mode _____	52
Connecting Multiple Hosts _____	55
Host List Promotion _____	56
Disconnect Mode _____	56
To Configure Tunnel Disconnect Mode Settings _____	56
Modem Emulation _____	57
To Configure Tunnel Modem Emulation Settings _____	57
8: Terminal and Host Settings	58
Terminal Settings _____	58
To Configure the Terminal Network Connection _____	59
To Configure the Terminal Line Connection _____	59
Host Configuration _____	59
To Configure Host Settings _____	60
9: Network Services	61
DNS Settings _____	61
To View or Configure DNS Settings: _____	61
FTP Settings _____	62
To Configure FTP Settings _____	62
Syslog Settings _____	62
To View or Configure Syslog Settings _____	63
HTTP Settings _____	63
To Configure HTTP Settings _____	64

To Configure HTTP Authentication _____	65
RSS Settings _____	65
To Configure RSS Settings _____	66
Real Time Clock (RTC) Settings _____	66
To Configure RTC Settings _____	66
Email Settings _____	67
To View, Configure, and Send Email _____	67

10: Security Settings **69**

Public Key Infrastructure _____	69
TLS (SSL) _____	69
Digital Certificates _____	70
Trusted Authorities _____	70
Obtaining Certificates _____	70
Self-Signed Certificates _____	70
Certificate Formats _____	70
OpenSSL _____	71
Steel Belted RADIUS _____	71
Free RADIUS _____	71
SSH Settings _____	72
SSH Server Host Keys _____	72
SSH Client Known Hosts _____	73
SSH Server Authorized Users _____	73
SSH Client Users _____	74
To Configure SSH Settings _____	75
SSL Settings _____	75
Create a New Credential _____	75
To Create a New Credential _____	76
Upload Certificate _____	76
Certificate and Key Generation _____	77
To Configure an Existing SSL Credential _____	77
Trusted Authorities _____	78

11: Maintenance and Diagnostics Settings **79**

Filesystem Settings _____	79
Statistics _____	79
To View Statistics _____	79
File Display _____	80
To Display Files _____	80
File Modification _____	80
File Transfer _____	81
To Transfer or Modify Filesystem Files _____	81
Protocol Stack Settings _____	82

IP Settings	82
To Configure IP Protocol Stack Settings	82
ICMP Settings	82
To Configure ICMP Protocol Stack Settings	82
To View ICMP Protocol Stack Settings	83
ARP Settings	83
To Configure ARP Network Stack Settings	83
SMTP Settings	84
To Configure SMTP Protocol Stack Settings	84
Diagnostics	84
Hardware	84
To View Hardware Information	84
IP Sockets	84
To View the List of IP Sockets	85
Ping	85
To Ping a Remote Host	85
Traceroute	85
To Perform a Traceroute	86
Log	86
To Configure the Diagnostic Log Output	86
Memory	87
To View Memory Usage	87
Processes	87
To View Process Information	87
Threads	87
To View Thread Information	87
System Settings	88
To Reboot or Restore Factory Defaults	88

12: Management Interface Settings 89

Command Line Interface Settings	89
Basic CLI Settings	89
To View and Configure Basic CLI Settings	89
Telnet Settings	90
To Configure Telnet CLI Settings	90
SSH CLI Settings	90
To Configure SSH Settings	91
XML Settings	91
XML: Export Configuration	91
To Export Configuration in XML Format	92
XML: Export Status	92
To Export in XML Format	92
XML: Import Configuration	93

To Import Configuration in XML Format _____	94
13: Updating Firmware	95
Obtaining Firmware _____	95
Loading New Firmware through Web Manager _____	95
Loading New Firmware through FTP _____	96
14: Branding the EDS-MD Device	97
Web Manager Customization _____	97
Short and Long Name Customization _____	98
To Customize Short or Long Names _____	98
Appendix A: Lantronix Technical Support	99
Appendix B: Binary to Hexadecimal Conversions	100
Converting Binary to Hexadecimal _____	100
Conversion Table _____	100
Scientific Calculator _____	100
Appendix C: Compliance	102
Appendix D: Lantronix Power Cords, Cables, Adapters and Serial Port Pinouts	106
Cables and Adapters _____	106
Adapters and Serial Port Pinouts _____	107

List of Figures

Figure 2-1 EDS-MD Unit Product Label _____	20
Figure 3-1 Front View of the EDS-MD 16 Device Servers _____	22
Figure 3-2 Back View of the EDS-MD 4, EDS-MD 8 and EDS-MD 16 Device Servers _____	22
Figure 3-3 RJ45 Serial Port _____	22
Figure 3-4 EDS-MD Ethernet Switch in a Sample Hospital Record System _____	23
Figure 3-8 EDS-MD Dimensions _____	27
Figure 3-9 Mounting Screws Included with the EDS-MD Medical Device Server in Inches _____	28
Figure 3-10 Mounting the EDS-MD Device Server _____	29
Figure 5-1 Device Status Page _____	34
Figure 5-2 Components of the Web Manager Page _____	35
Figure 13-1 Uploading New Firmware _____	95
Figure B-2 Windows Scientific Calculator _____	101
Figure B-3 Hexadecimal Values in the Scientific Calculator _____	101
Figure C-3 Suppliers Declaration of Conformity _____	103
Figure C-4 EU Declaration of Conformity _____	104
Figure 18-2 RJ45 Pinout Diagram _____	107
Figure R-3 RJ45 Receptacle to DB25M DTE Adapter (PN 200.2066A) _____	107
Figure R-4 RJ45 Receptacle to DB25M DCE Adapter (PN 200.2073) _____	108
Figure R-5 RJ45 Receptacle to DB25F DTE Adapter (PN 200.2067A) _____	108
Figure R-6 RJ45 Receptacle to DB25F DCE Adapter (PN 200.2074) _____	109
Figure R-7 RJ45 Receptacle to DB9M DTE Adapter (PN 200.2069A) _____	109
Figure R-8 RJ45 Receptacle to DB9M DCE Adapter (PN 200.2071) _____	110
Figure R-9 RJ45 Receptacle to DB9F DTE Adapter (PN 200.2070A) _____	110
Figure R-10 RJ45 Receptacle to DB9F DCE Adapter (PN 200.2072) _____	111

List of Tables

Table 3-5 System LEDs on the Top of EDS-MD Device Server	24
Table 3-6 Serial Indicator LEDs on the Top of EDS-MD Device Server	24
Table 3-7 RJ45 LEDs on the Back Panel (Ethernet Indicators).	24
Table 5-3 Web Manager Pages	36
Table 6-1 Network 1 (eth0) Interface Settings	38
Table 6-2 Network 1 (eth0) Link Settings	40
Table 6-3 Network 2 (eth1) Interface Settings	41
Table 6-4 Network 2 (eth1) Link Settings	42
Table 6-5 Network 3 (eth2) Interface Settings	43
Table 6-6 Network 3 (eth2) Link Settings	43
Table 6-7 GRE Settings	44
Table 7-1 Line Configuration Settings	46
Table 7-2 Line Command Mode Settings	47
Table 7-3 Tunnel Serial Settings	48
Table 7-4 Tunnel Packing Mode Settings	49
Table 7-5 Tunnel Accept Mode Settings	51
Table 7-6 Tunnel Connect Mode Settings	53
Table 7-7 Tunnel Disconnect Mode Settings	56
Table 7-8 Tunnel Modem Emulation Settings	57
Table 8-1 Terminal on Network and Line Settings	58
Table 8-2 Host Configuration	59
Table 9-1 DNS Settings	61
Table 9-2 FTP Settings	62
Table 9-3 Syslog Settings	62
Table 9-4 HTTP Settings	63
Table 9-5 HTTP Authentication Settings	65
Table 9-6 RSS Settings	65
Table 9-7 RTC Settings	66
Table 9-8 Email Configuration	67
Table 10-1 SSH Server Host Keys	72
Table 10-2 SSH Client Known Hosts	73
Table 10-3 SSH Server Authorized Users	73
Table 10-4 SSH Client Users	74
Table 10-5 Create New Keys	74
Table 10-6 Create a New Credentials	76
Table 10-7 Upload Certificate Settings	76

Table 10-8 Certificate and Key Generation Settings	77
Table 11-1 File Statistics	79
Table 11-2 File Display Settings	80
Table 11-3 File Modification Settings	80
Table 11-4 File Transfer Settings	81
Table 11-5 IP Protocol Stack Settings	82
Table 11-6 ICMP Protocol Stack Settings	82
Table 11-7 ARP Protocol Stack Settings	83
Table 11-8 SMTP Protocol Stack Settings	84
Table 11-9 Ping Settings	85
Table 11-10 Traceroute Settings	86
Table 11-11 Log Settings	86
Table 11-12 System Settings	88
Table 12-1 CLI Configuration Settings	89
Table 12-2 Telnet Settings	90
Table 12-3 SSH Settings	90
Table 12-4 XML Exporting Configuration	91
Table 12-5 Exporting Status	92
Table 12-6 Import Configuration from Filesystem Settings	93
Table 14-1 Short and Long Name Settings	98
Table B-1 Binary to Hexadecimal Conversion	100
Table C-1 Applicable Medical Standards	102
Table C-2 Applicable ITE Standards	102
Table D-1 Lantronix Cables and Adapters	106

1: Using This Guide

Purpose and Audience

This guide provides the information needed to configure, use, and update the Lantronix® EDS-MD® medical device server models: EDS-MD 4, EDS-MD 8 and EDS-MD 16. It is intended for system integrators who are installing this product into their designs.

Note: EDS-MD device servers are commonly referred to as either EDS-MD 4/8/16 or as EDS-MD when mentioned within a description equally applicable to any of the three models.

Summary of Chapters

The remaining chapters in this guide include:

Chapter	Description
2: Introduction	Main features of the product and the protocols it supports. Includes technical specifications.
3: Installation of EDS-MD Device Servers	Instructions for installing the EDS-MD.
4: Using DeviceInstaller	Instructions for viewing the device and configuration using UPnP and the DeviceInstaller utility.
5: Configuration Using Web Manager	Instructions for accessing Web Manager and using it to configure settings for the device.
6: Network Settings	Instructions for configuring network settings.
7: Line and Tunnel Settings	Instructions for configuring line and tunnel settings.
8: Terminal and Host Settings	Instructions for configuring terminal and host settings.
9: Network Services	Instructions for configuring DNS, FTP, HTTP and Syslog settings.
10: Security Settings	Instructions for configuring SSL security settings.
11: Maintenance and Diagnostics Settings	Instructions EDS-MD to view statistics, files, and diagnose problems.
12: Management Interface Settings	Instructions for configuring CLI and XML settings.
13: Updating Firmware	Instructions for obtaining and updating the latest firmware for the EDS-MD device.
14: Branding the EDS-MD Device	Instructions on how to brand your device.
Appendix A: Lantronix Technical Support	Instructions for contacting Lantronix Technical Support.
Appendix B: Binary to Hexadecimal Conversions	Instructions for converting binary values to hexadecimals.
Appendix C: Compliance	Lantronix compliance information.
Appendix D: Lantronix Power Cords, Cables, Adapters and Serial Port Pinouts	Information about the device driver for Windows host.

Safety Information

This section describes the safety precautions that should be followed when installing and operating the EDS-MD.

Warning:

- ◆ ***This equipment is not suitable for use in the presence of a flammable anesthetic mixture including air, oxygen or nitrous oxide. To avoid the risk of electric shock, this equipment must only be connected to a supply mains with protective earth.***
- ◆ ***The EDS-MD is not to be used in life support or as a life sustaining product.***
- ◆ ***No modification of this equipment is allowed.***

Cover



Warning: ***Do not remove the cover of the EDS-MD device server. There are no user-serviceable parts inside. Opening or removing the cover may expose you to dangerous voltage that could cause fire or electric shock. Do not operate the EDS-MD if the housing is broken.***

Note: *Refer all servicing to Lantronix.*

Power Plug

- ◆ When disconnecting the power cord from the socket, pull on the plug, not the cord.
- ◆ Always connect the power cord to a properly wired and grounded power source. Do not use adapter plugs or remove the grounding prong from the cord.
- ◆ Only use a power cord with a voltage and current rating greater than the voltage and current rating marked on the unit.
- ◆ The appliance inlet serves as the main supply disconnect. Do not position the EDS-MD in such a way that it is difficult to the disconnect EDS-MD.

Note:

- ◆ Install the unit near an AC outlet that is easily accessible.
- ◆ Always connect any equipment used with the product to properly wired and grounded power sources.
- ◆ To help protect the product from sudden, transient increases and decreases in electrical power, use a surge suppressor, line conditioner, or uninterruptible power supply (UPS).
- ◆ Do not connect or disconnect this product during an electrical storm.

Input Supply

- ◆ Check nameplate ratings to assure there is no overloading of supply circuits that could affect over current protection and supply wiring.

Grounding

- ◆ Maintain reliable grounding of this product.
- ◆ Pay particular attention to supply connections when connecting to power strips, rather than directly to the branch circuit.

Fuses

There are fuses on the internal power supply serviceable only by Lantronix.

Battery

A Lithium battery cell inside the unit maintains the unit's date and time when the device is powered off. **Do not attempt to replace it.** The battery is serviceable only by Lantronix.

Caution: **DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED. REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE RECOMMENDED BY THE MANUFACTURER. DISPOSE OF USED BATTERIES ACCORDING TO THE MANUFACTURER'S INSTRUCTIONS.**

Attention

IL Y A DANGER D'EXPLOSION S'IL Y A REMPLACEMENT INCORRECT DE LA BATTERIE, REMPLACER UNIQUEMENT AVEC UNE BATTERIE DU MÊME TYPE OU D'UN TYPE ÉQUIVALENT RECOMMANDÉ PAR LE CONSTRUCTEUR. METTRE AU REBUT LES BATTERIES USAGÉES CONFORMÉMENT AUX INSTRUCTIONS DU FABRICANT.

Wall Mounting

If wall-mounted units are installed, the following items must be considered:

- ◆ Do not install the unit in such a way that a hazardous stability condition results because of uneven loading. A drop or fall could cause injury.
- ◆ Make sure to install the EDS-MD unit in an environment with an ambient temperature less than the maximum operating temperature of the EDS-MD device. Therefore, consideration should be given to installing the equipment in an environment compatible with the maximum ambient temperature (T_{ma}) specified by the manufacturer.
- ◆ Maintain reliable earthing of wall-mounted equipment. Give particular attention to supply connections other than direct connections to the branch circuit (e.g. use of power strips) because of the effect that overloading of the circuits might have on overcurrent protection and supply wiring. Appropriate consideration of equipment nameplate ratings should be used when addressing this concern.

Note: *Before operating the EDS-MD device, make sure the device mounting is secured.*

Port Connections

- ◆ Only connect the network port to an Ethernet network that supports 10 Base-T/100 Base-TX/1000 Base-T.
- ◆ Only connect device ports to equipment with serial ports that support EIA-232 (formerly RS-232C). Unless specified otherwise, only connect USB ports to USB thumb drives.

Warning: *To avoid overloading and overheating, do not use a USB port as a charger port or a power port for other devices such as a cellular phone, PDA device, disk drive, etc.*

WARNINGS OF NETWORK CONNECTIONS

The integration of the EDS-MD medical device server into an IT network may constitute a Medical Electrical (ME) System. It is recommended that the system leakage current be measured to verify that the basic requirement for the safety of the ME System, after installation or subsequent modification of the system, does not result in an unacceptable risk.

The integration of the EDS-MD into a IT network may result in unforeseen risks associated with the interconnection of the EDS-MD Programmable Electronic Subsystem (PESS)/Programmable Electrical Medical Systems (PEMS) to IT Networks. Connection of equipment containing PEMS to an IT NETWORK/DATA COUPLING that includes other equipment could result in previously unidentified risks to patients, operators or third parties. The entity accountable for the use and maintenance of an ME EQUIPMENT or an ME SYSTEM should identify, analyze, evaluate and control these RISKS. Subsequent changes to the IT NETWORK/DATA COUPLING could introduce new RISKS and require additional analysis. Changes to the IT NETWORK/DATA COUPLING include:

- ◆ Changes in NETWORK/DATA COUPLING configuration
- ◆ Connection of additional items to the IT NETWORK/DATA COUPLING
- ◆ Disconnecting items from the IT NETWORK/DATA COUPLING
- ◆ Update of equipment connected to the IT NETWORK/DATA COUPLING
- ◆ Upgrade of equipment connected to the IT NETWORK/DATA COUPLING

Equipment Classifications

- ◆ Classification according to the type of protection against electric shock: Class I Equipment
- ◆ Classification according to the degree of protection against electric shock: No Applied Parts
- ◆ Classification according to the degree of protection against ingress of water: IP20
- ◆ Classification according to the mode of operation: Continuous Operation

Environmental Conditions for Transportation and Storage

- ◆ An ambient temperature range of -30°C to +80°C
- ◆ A relative humidity range of 0% to 95%, noncondensing
- ◆ An atmospheric pressure range of 50 kPa to 106 kPa

Cleaning Instructions

1. Disconnect all cables and unplug AC power cord from the device.
2. Prepare a disinfectant solution using 1 part bleach mixed with 9 parts water.
3. Lightly moisten a tissue with the mild detergent and wipe down only the outside of the device.
4. Allow the device to air-dry or wipe dry with a clean dry tissue before use.

Caution: *To avoid electric shock and for the device to work properly, do not allow cleaning solution to get inside the device, specifically the interface port connectors or the power inlet. Do not immerse the device in any liquid.*

Electromagnetic Interference

This equipment has been tested and found to comply with the EMC limits for the Medical Device Directive 93/42/EEC (EN 55022 Class A and EN 60601-1-2). These limits are designed to provide reasonable protection against harmful interference in a typical medical installation. The equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with these instructions, may cause harmful interference to other devices in the vicinity. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference with other devices, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ Reorient or relocate the receiving device
- ◆ Increase the separation between the equipment
- ◆ Connect the equipment into an outlet on a circuit different from that to which the other device(s) is connected
- ◆ Consult the manufacturer or field service technician for help

Additional Documentation

Visit the Lantronix Web site at www.lantronix.com/support/documentation for the latest documentation and the following additional documentation.

Document	Description
EDS-MD Medical Device Server Command Reference	Instructions for accessing Command Mode (the command line interface) using a Telnet connection, SSH connection or through the serial port. Detailed information about the commands. Also provides details for XML configuration and status.
EDS-MD Medical Device Server Quick Start	Instructions for getting the EDS-MD device up and running.
DeviceInstaller™ Utility Online Help	Instructions for using the Windows® operating system-based utility to locate the device server and to view its current settings.
Com Port Redirector Quick Start and Online Help	Instructions for using the Windows operating system-based utility to create virtual com ports.
Secure Com Port Redirector User Guide	Instructions for using the Windows operating system-based utility to create secure virtual com ports.

2: Introduction

The EDS-MD medical device server is a complete network-enabling solution. This device server allows system integrators and administrators to go to market quickly and easily with Ethernet networking and web server capabilities. EDS-MD models are available in 4, 8 and 16 port configurations.

Key Features

- ◆ **Power Supply:** Direct plug-in to wall AC with universal 100-240 VAC input.
- ◆ **Controller:** 32-bit ARM11 microprocessor running at 600 megahertz
- ◆ **Memory:** 64 megabit Flash, 2 gigabit DDR2 DRAM, and a 4 gigabyte SDHC card (internal only-not user replaceable).
- ◆ **Ethernet:** Gigabit Ethernet support (10/100/1000Base-T) speed auto-sensing, automatic MDI/MDIX (straight and cross-over cables are OK to use)
- ◆ **Serial Ports:** 4 to 16 ports depending on model (EDS-MD 4, EDS-MD 8 or EDS-MD 16), electrically isolated from one another and other circuits. Hardware/Software handshaking capability. Custom/standard baud rates up to 921600 bits per second (bps).
- ◆ **USB Ports:** 2 ports of fixed full-speed 2.0 USB Host, electrically isolated from one another and other circuits, capable of providing 0.5A each.
- ◆ **Temperature Range:** 0°C to +50°C (32° to 122°F).

Applications

The EDS-MD 4, EDS-MD 8 and EDS-MD 16 device servers are suitable for these application scenarios:

- ◆ Patient Monitoring Devices
- ◆ Glucose Analyzers
- ◆ Infusion Pumps

Protocol Support

The EDS-MD medical device server contain a full-featured IP networking stack:

- ◆ ARP, UDP, TCP, ICMP, DHCP, Auto IP, Telnet, SMTP, DNS, FTP, TFTP, and Syslog for network communications and management.
- ◆ TCP, UDP and tunneling to the serial port.
- ◆ TFTP for uploading/downloading files.
- ◆ FTP, SFTP, HTTPS and HTTP for firmware upgrades and uploading/downloading files.

Troubleshooting Capabilities

The EDS-MD medical device servers offer a comprehensive diagnostic toolset that lets you troubleshoot problems quickly and easily. Available from the CLI or Web Manager, the diagnostic tools let you:

- ◆ View critical hardware, memory, buffer pool, IP socket information and routing table
- ◆ Perform ping and traceroute operations
- ◆ Conduct forward or reverse DNS lookup operations
- ◆ View all processes currently running on the EDS-MD 4, EDS-MD 8 and EDS-MD 16 device server including CPU utilization
- ◆ View system log messages

Configuration Methods

After installation, the EDS-MD unit requires configuration. For the unit to operate correctly on a network, it must have a unique IP address on the network. There are four basic methods for logging into the EDS-MD 4/8/16 device server and assigning IP addresses and other configurable settings:

- ◆ **Web Manager:** View and configure all settings easily through a web browser using the Lantronix Web Manager. (See [Configuration Using Web Manager on page 33](#).)
- ◆ **DeviceInstaller:** Configure the IP address and related settings and view current settings on the EDS-MD 4/8/16 device server using a Graphical User Interface (GUI) on a PC attached to a network. You will need the latest version of the Lantronix® DeviceInstaller™ utility. (See [Accessing the PremierWave XC HSPA+ Device Using DeviceInstaller on page 30](#).)
- ◆ **Command Mode:** There are a few methods for accessing Command Mode (CLI): making a Telnet connection, or connecting a PC or other host running a terminal emulation program to the unit's port. (See the *EDS-MD Medical Device Server Command Reference* for instructions and available commands.)
- ◆ **XML:** The EDS-MD 4/8/16 device server supports XML-based configuration and setup records that make device configuration transparent to users and administrators. XML is easily editable with a standard text or XML editor. (See the *EDS-MD Medical Device Server Command Reference* for instructions and commands).

Addresses and Port Numbers

Hardware Address

The hardware address is also referred to as the Ethernet address, physical address, or MAC address. The first three bytes of the Ethernet address are fixed and identify the unit as a Lantronix product. The fourth, fifth, and sixth bytes are unique numbers assigned to each unit. Sample hardware address:

- ◆ 00-20-4A-14-1B-18
- ◆ 00:20:4A:14:1B:18

IP Address

Every device connected to an IP network must have a unique IP address. This address references the specific unit.

Port Numbers

Every TCP connection and every UDP datagram is defined by a destination and source IP address, and a destination and source port number. For example, a Telnet server commonly uses TCP port number 23.

The following is a list of the default server port numbers running on the EDS-MD 4/8/16 device server:

- ◆ TCP Port 23: Telnet Server (Command Mode configuration)
- ◆ TCP Port 80: HTTP (Web Manager Configuration)
- ◆ TCP Port 21: FTP
- ◆ UDP Port 30718: LDP (Lantronix Discovery Protocol) port
- ◆ TCP/UDP Port 10001: Tunnel 1 (see note below)

Note: Additional TCP/UDP ports and tunnels will be available, depending on the product type. The default numbering of each additional TCP/UDP port and corresponding tunnel will increase sequentially (i.e., TCP/UDP Port 1000X: Tunnel X).

Product Information Label

The product information label on the unit contains the following information about the specific unit:

- ◆ Part Number
- ◆ Serial Number (MAC Address)
- ◆ Country of Origin
- ◆ Product Revision
- ◆ Manufacturing Date Code

Note: The hardware address on the label is also the product serial number. The hardware address on the label is the address for the Ethernet (eth0) interface.

Figure 2-1 EDS-MD Unit Product Label



3: Installation of EDS-MD Device Servers

This chapter describes how to install the EDS-MD 4, EDS-MD 8 and EDS-MD 16 device servers.

Package Contents

Your EDS-MD package includes the following items:

- ◆ One EDS-MD device server (an EDS-MD 4, EDS-MD 8 or EDS-MD 16)
- ◆ One RJ45 CAT 5E cable (part number 500-207-R) for network connection
- ◆ One RJ45 cable loopback adapter (part number 500-153)
- ◆ *EDS-MD Medical Device Server Quick Start Guide*

Note: *Power cords designed for the EDS-MD are sold separately. Refer to [Table D-1](#) for a list of power cords.*

User-Supplied Items

To complete installation of your EDS-MD device server, you need the following items:

- ◆ RS-232 serial devices that require network connectivity. Each serial port of the EDS-MD device supports a directly connected RS-232 serial device.
- ◆ A serial cable for each serial device to be connected to the EDS-MD unit. All devices attached to the device ports support the RS-232C (EIA-232) standard. Category 5 cabling with RJ45 connections is used for the device port connections.

Note: *To connect the serial port of an EDS-MD medical device server to a DTE device, you need a DTE cable, such as the one supplied with your EDS-MD package, or an RJ45 patch cable and DTE adapter. To connect the serial port of the EDS-MD device server to a DCE device, you need a DCE (modem) cable, or an RJ45 patch cable and DCE adapter. For a list of the Lantronix cables and adapters you can use with the EDS-MD, see the [Appendix D: Lantronix Power Cords, Cables, Adapters and Serial Port Pinouts on page 106](#).*

- ◆ An available connection to your Ethernet network and an Ethernet cable.
- ◆ A working, properly grounded power outlet.

Identifying Hardware Components


Figure 3-1 shows the front of the EDS-MD 16. Figure 3-2 shows the back of the EDS-MD 4, EDS-MD 8 or EDS-MD 16.

Figure 3-1 Front View of the EDS-MD 16 Device Servers



Note: EDS-MD 4 has 4 RJ45 Serial Ports and EDS-MD 8 has 8 RJ45 Serial Ports.

Figure 3-2 Back View of the EDS-MD 4, EDS-MD 8 and EDS-MD 16 Device Servers

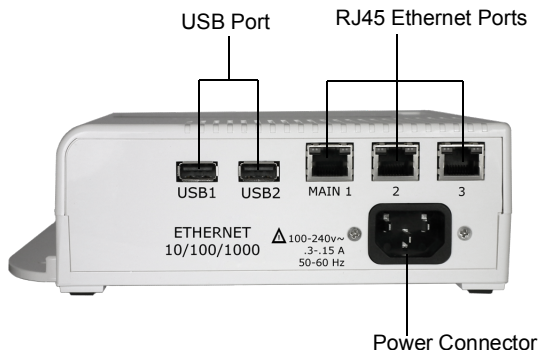

Serial Ports

In the front of the device, the EDS-MD 4 has 4 serial ports, the EDS-MD 8 has 8 serial ports, and the EDS-MD 16 has 16 serial ports. All are configured as DTE and support up to 921600 baud.

Ethernet Port

The back panel of the EDS-MD 4/8/16 provides a network interface via the “Main 1” RJ45 port. This port can connect to an Ethernet network at 10/100/1000Base-T. The Speed LED on the back of the EDS-MD shows the connection of the attached Ethernet network. The EDS-MD 4/8/16 can be configured to operate at a fixed Ethernet speed and duplex mode (half- or full-duplex). Otherwise by default, the EDS-MD auto-negotiates the connection to the Ethernet network.

Note: Additional Ethernet interfaces can be enabled through the Ethernet switching function. The EDS-MD switch includes one Ethernet up link connection and two down link connections. See Figure 3-4 for an example demonstrating a sample network topology and constraints.

Figure 3-3 RJ45 Serial Port


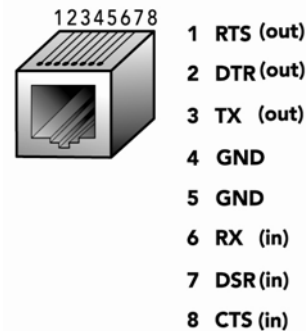


Figure 3-4 EDS-MD Ethernet Switch in a Sample Hospital Record System

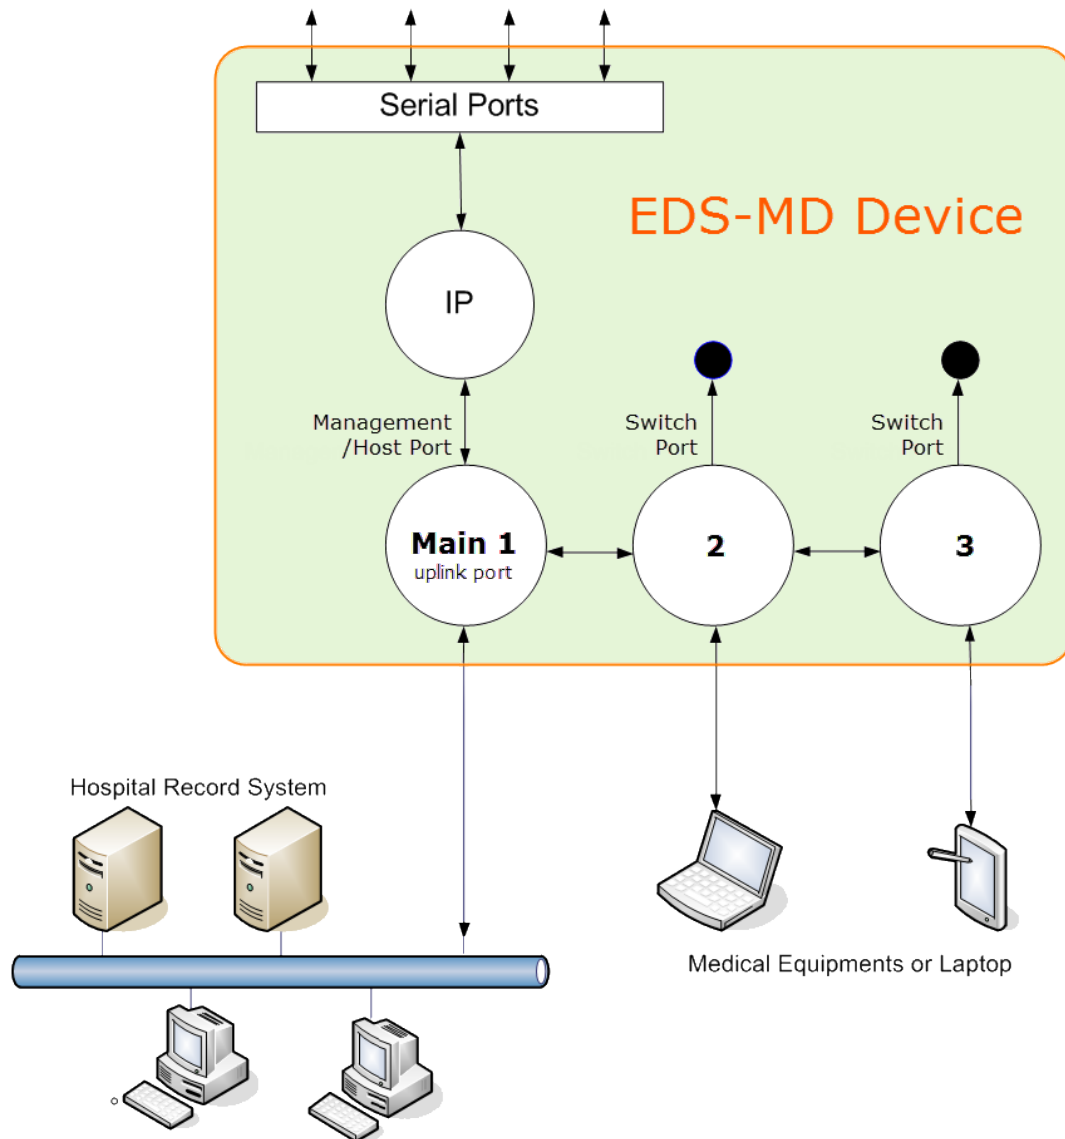

- (1) Single IP only
- (2) The EDS-MD device server can only be managed through the management port (**Main 1**)
- (3) Devices attached to **switch port 2** or **3** can communicate with the hospital record system
- (4) Devices attached to **switch port 2** and **3** cannot access EDS-MD device applications

LEDs

Light-emitting diodes (LEDs) on the EDS-MD show status information.

- ◆ Each serial port has a corresponding status LED.
- ◆ The Ethernet port LEDs indicate Speed, Activity, Power, and Status.

The tables below describe the LEDs on the EDS-MD 4, EDS-MD 8 or EDS-MD 16.

Table 3-5 System LEDs on the Top of EDS-MD Device Server

LED	Description
Steady Green	Unit operational.
Off	Unit powered down or not operational.

Table 3-6 Serial Indicator LEDs on the Top of EDS-MD Device Server

LED	Description
Green	Indicates there is a tunnel connection to or from the EDS-MD.
Red	Not supported.
Off	There is no tunnel connection on the serial line.

Note: Number of Serial LEDs correspond with the EDS-MD model number. For instance, EDS-MD 4 has 4 LEDs, EDS-MD 8 has 8 LEDs, and EDS-MD 16 has 16 LEDs.

Table 3-7 RJ45 LEDs on the Back Panel (Ethernet Indicators).

LED	Description
Left LED Green	Connected at 1000 Mbps.
Left LED Amber	Connected at 100 Mbps.
Left LED Off	Connected at 10 Mbps or no link.
Right LED Green (Solid)	Full duplex with no activity
Right LED Green (Blinking)	Full duplex with activity
Right LED Amber (Solid)	Half duplex with no activity.
Right LED Amber (Blinking)	Half duplex with activity.
Right LED Off	No connection.

Reset to Default Button

The EDS-MD device can be restored to factory defaults which includes clearing all networking settings. The IP address, gateway and netmask are set to all zeros. The reset-to-default button is located on the side of the housing, accessible with a paper clip or other similar object, through a pin hole.

To restore factory default settings:

1. Power cycle the unit.
2. *During the bootup*, hold down the reset-to-default button for a minimum of 25 seconds.
3. Release the button. The firmware restores factory default settings to the configuration.

Technical Specification

Category	Description
NETWORK INTERFACE	
Ethernet Ports	3 RJ45 10Base-T/100Base-TX/1000Base-T Ethernet ports Auto sensing Automatic MDI/MDI-X crossover Full duplex IEEE 802.3x flow control Half-duplex back pressure flow control
Left LED Indicator	See Table 3-7 .
Right LED Indicator	See Table 3-7 .
Isolation from internal circuit	1.5 KVAC
Isolation from adjacent port	1.5 KVAC
USB INTERFACE	
USB Ports	2 of USB-A Host, USB 2.0, Full Speed only
Output Capability	0.5 A
Isolation from internal circuit	1.5 KVAC
Isolation from adjacent port	1.5 KVAC
SERIAL INTERFACE	
Serial Ports	Options of 4-port, 8-port, 16-port RS232 Serial Ports DTE via RJ45 connectors
Baud rate	Selectable from 300 bps to 921600 bps
Serial Line Formats	Characters: 7 or 8 data bits Stop bits: 1 or 2 Parity: odd, even, none
Modem Control	DTR/DSR
Flow Control	Hardware: CTS/RTS Software: XON/XOFF
Serial LED Indicators	See Table 3-6 .
Protection from ESD	15kV (human body model)
Isolation from internal circuit	1.5 KVAC
Isolation from adjacent port	1.5 KVAC
Reset-to-Default-Parameters Switch	Side panel pin-hole recessed push button switch

Category (continued)	Description
POWER RATING	
Power Input AC Connector	IEC60320 C14 receptacle with no power switch
Power Usage	100-240 VAC, 50/60 Hz, 0.4A, 23W maximum
PHYSICALS	
Dimensions	L x W x H = 8.25 x 7.5 x 2.4 in. (21 x 19 x 6 cm)
Weight	16-port = 2.0 lbs (0.9 Kg) 8-port = 1.8 lbs (0.82 Kg) 4-port = 1.75 lbs (0.8 Kg)
Environmental	Temperature Operating 0° to 50°C (32° to 122°F) Temperature for Transportation and Storage -30° to 80°C Humidity 0% to 95% non-condensing Atmospheric Pressure 50 kPa to 105 kPa
Humidity Operating	20% to 90% relative humidity, non-condensing

Installing the EDS-MD

Finding a Suitable Location

- ◆ You can install the EDS-MD medical device server either on a shelf, on a desktop or mounted on the wall (see [Wall Mounting Instructions on page 28](#)).
- ◆ If using AC power, do not use outlets controlled by a wall switch.


Warning: *To avoid the risk of electric shock, this equipment must only be connected to a supply mains with protective earth.*

Connect the EDS-MD to one or more serial devices

All serial ports on the EDS-MD medical device server support RS-232 devices.

1. Power off the serial devices.
2. Attach a CAT 5 serial cable between the EDS-MD unit and your serial device.
See [Appendix D: Lantronix Power Cords, Cables, Adapters and Serial Port Pinouts on page 106](#), for a list of cables and adapters you can use.
3. Connect an Ethernet cable between the Ethernet port of the EDS-MD device and your Ethernet network.
4. Insert the power cord into the power connector located in the back of the EDS-MD device server. Plug the other end into an AC wall outlet.
5. Power up the serial devices.

Figure 3-8 EDS-MD Dimensions

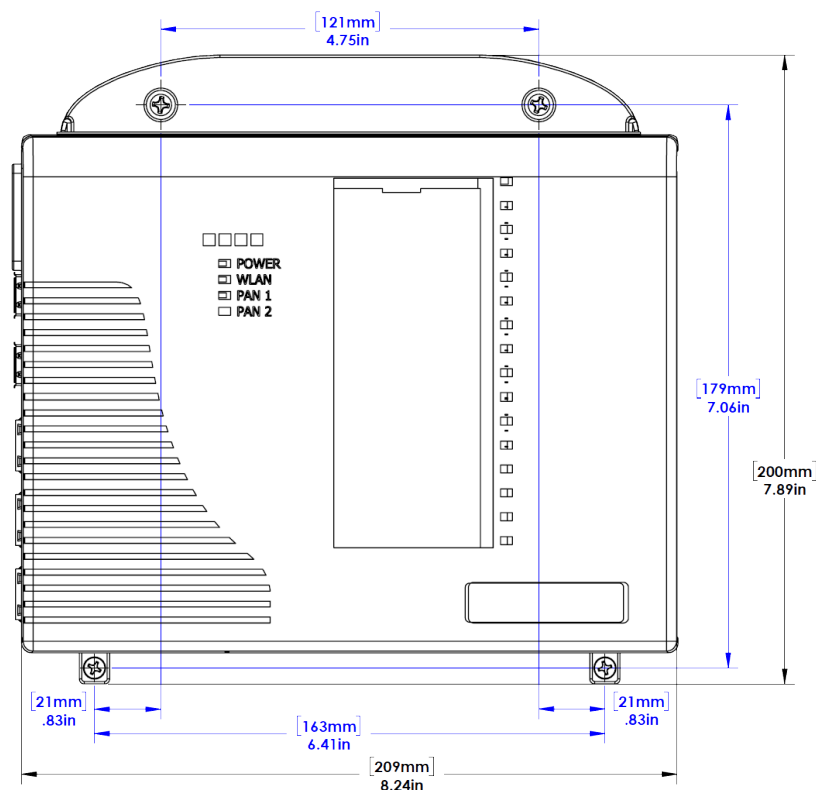

Wall Mounting Instructions

For Installations to Walls Requiring Anchors

These instructions are for mounting the EDS-MD medical device server to walls made of solid concrete, block, brick or pasterboard.

1. Locate the place where you want to mount your EDS-MD and mark four holes using your EDS-MD mount as a guide for the screws.
2. Drill four 3/16 inch (4.8 mm) diameter holes at a depth of 1.25 inches (32 mm). See [Figure 3-10](#) for the screws the dimensions of the screws that come with your EDS-MD medical device server, and [Figure 3-10](#) for the location of the screw holes.
3. Insert the anchors until they are flush with the surface.
4. Thread four pan head top mount screws through your EDS-MD mount hole and through the anchor, tightening them.

For Installations to Walls Not Requiring Anchors

These instructions are for mounting the EDS-MD medical device server to walls made of solid wood at least 2 inches thick.

1. Locate the place where you want to mount your EDS-MD and mark four holes using your EDS-MD mount as a guide for the screws. See [Figure 3-10](#) for the location of the screw holes.
2. Drill four 1/8 inch (3.2 mm) diameter holes at a hole depth of 1.25 inches (32 mm). See [Figure 3-10](#) for the screws the dimensions of the screws that come with your EDS-MD medical device server.
3. Thread four pan head top mount screws through your EDS-MD mount hole, tightening them.

Figure 3-9 Mounting Screws Included with the EDS-MD Medical Device Server in Inches


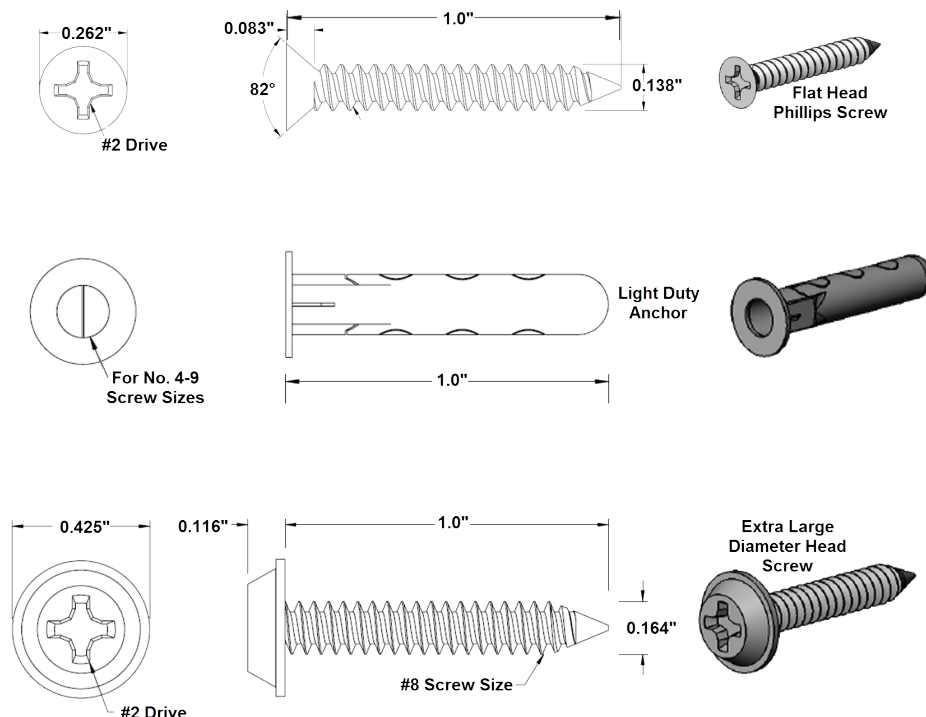


Figure 3-10 Mounting the EDS-MD Device Server

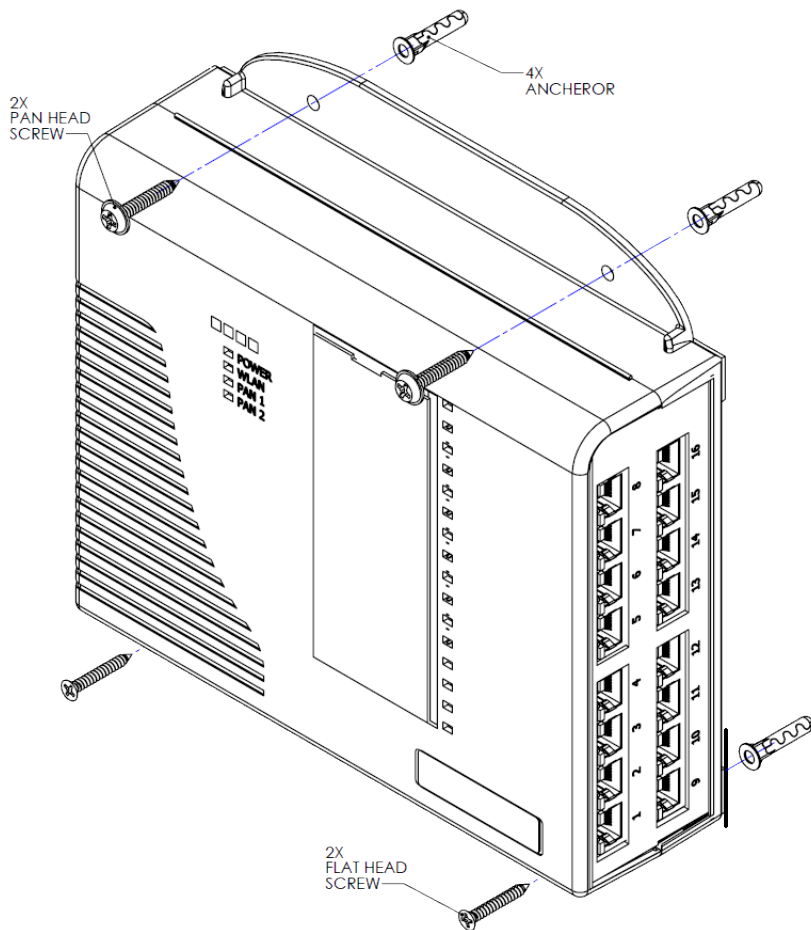

Note: Figure 3-10 represents the installation of an EDS-MD device server to a wall, indicating where anchors and screws should be positioned. The actual screw type to be used and whether an anchor is necessary for your installation will depend on the material of the wall to which the EDS-MD will be installed. See Figure 3-9 for the screw types and the anchors that come with the EDS-MD device server and see the correct installation section depending on your wall type: [For Installations to Walls Requiring Anchors](#) or [For Installations to Walls Not Requiring Anchors](#).

4: Using DeviceInstaller

This chapter covers the steps for locating an EDS-MD unit and viewing its properties and device details. The Lantronix® DeviceInstaller™ application is a free utility program provided by Lantronix that discovers, configures, upgrades and manages Lantronix device servers.

Notes:

- ◆ For instructions on using the DeviceInstaller utility to configure the IP address and related settings or for more advanced features, see the DeviceInstaller Online Help.
- ◆ Auto IP generates a random IP address in the range of 169.254.0.1 to 169.254.255.254, with a netmask of 255.255.0.0, if no BOOTP or DHCP server is found. These addresses are not routable.

Accessing EDS-MD Using DeviceInstaller

Note: Make note of the MAC address. It may be needed to perform various functions in the DeviceInstaller application.

To use the DeviceInstaller utility, first install the latest version from the downloads page on the Lantronix web site www.lantronix.com/downloads.

1. Run the executable to start the installation process and respond to the installation wizard prompts. (If prompted to select an installation type, select **Typical**.)
2. Click **Start -> All Programs -> Lantronix -> DeviceInstaller 4.3 -> DeviceInstaller**.
3. When DeviceInstaller starts, it will perform a network device search. To perform another search, click **Search**.
4. Expand the EDS-MD 4, EDS-MD 8 or EDS-MD 16 folder by clicking the + symbol next to the folder icon. The list of available Lantronix EDS-MD 4 devices appears.
5. Select the EDS-MD unit by expanding its entry and clicking on its IP address to view its configuration.
6. On the right page, click the **Device Details** tab. The current EDS-MD device configuration appears. This is only a subset of the full configuration; the full configuration may be accessed via Web Manager, CLI or XML.

Device Detail Summary

Note: The settings are Display Only in this table unless otherwise noted

Current Settings	Description
Name	Shows "EDS-MD".
DHCP Device Name	Displays one of the names the EDS-MD device will send to the DHCP server if it is configured to obtain an address in this manner.
Group	Configurable field. Enter a group to categorize the EDS-MD unit. Double-click the field, type in the value, and press Enter to complete. This group name is local to this PC and is not visible on other PCs or laptops using DeviceInstaller.
Comments	Configurable field. Enter comments for the EDS-MD device. Double-click the field, type in the value, and press Enter to complete. This description or comment is local to this PC and is not visible on other PCs or laptops using DeviceInstaller.
Device Family	Shows the EDS device family type as ""EDS-MD".
Short Name	Shows ""edsmd4", "edsmd8", or "edsmd16" by default.
Long Name	Shows "Lantronix EDS-MD4", "Lantronix EDS-MD", or "Lantronix EDS-MD16" by default.
Type	Shows the device type as "EDS-MD".
ID	Shows the EDS-MD ID embedded within the unit.
Hardware Address	Shows the EDS-MD hardware (MAC) address.
Firmware Version	Shows the firmware currently installed on the EDS-MD.
Extended Firmware Version	Provides additional information on the firmware version.
Online Status	Shows the EDS-MD status as Online , Offline , Unreachable (the EDS-MD device is on a different subnet), or Busy (the EDS-MD is currently performing a task).
IP Address	Shows the EDS-MD current IP address. To change the IP address, click the Assign IP button on the DeviceInstaller menu bar.
IP Address was Obtained	Appears "Dynamically" if the EDS-MD unit automatically received an IP address (e.g., from DHCP). Appears "Statically" if the IP address was configured manually. If the IP address was assigned dynamically, the following fields appear: <ul style="list-style-type: none"> ◆ Obtain via DHCP with values of True or False. ◆ Obtain via BOOTP with values of True or False.
Subnet Mask	Shows the subnet mask specifying the network segment on which the EDS-MD device resides.
Gateway	Shows the IP address of the router of this network. There is no default.
Number of Ports	Shows the number of serial ports on this EDS-MD device server.
Supports Configurable Pins	Shows False , indicating configurable pins are not available on the EDS-MD device server.
Supports Email Triggers	Shows True , indicating email triggers are available on the EDS-MD device server.
Telnet Supported	Indicates whether Telnet is enabled on this EDS-MD device server.
Telnet Port	Shows the EDS-MD port for Telnet sessions.

Current Settings	Description
Web Port	Shows the EDS-MD port for Web Manager configuration (if Web Enabled field is True).
Firmware Upgradable	Shows True , indicating the EDS-MD firmware is upgradable as newer versions become available.

5: Configuration Using Web Manager

This chapter describes how to configure the EDS-MD 4, EDS-MD 8 or EDS-MD 16 device server using Web Manager, the Lantronix browser-based configuration tool. The unit's configuration is stored in non-volatile memory and is retained without power. All changes take effect immediately, unless otherwise noted. It contains the following sections:

- ◆ [Accessing Web Manager](#)
- ◆ [Device Status Page](#)
- ◆ [Web Manager Components](#)
- ◆ [Navigating Web Manager](#)

Accessing Web Manager

Note: You can also access the Web Manager by selecting the Web Configuration tab on the DeviceInstaller application window.

To access Web Manager, perform the following steps:

1. Open a standard web browser. Lantronix supports the latest versions of Internet Explorer, Mozilla Firefox, Safari or Chrome web browsers.
2. Enter the IP address or hostname of the EDS-MD unit in the address bar. The IP address may have been assigned manually using DeviceInstaller (see the *EDS-MD Medical Device Server Quick Start Guide*) or automatically by DHCP.
3. Enter your username and password. The factory-default username is “**admin**” and “**PASS**” is the default password. The Device Status web page displays configurations including network settings, line settings, tunneling settings, and product information.

Device Status Page

The Device Status page is the first to appear after you log into Web Manager. The Device Status page also appears when you click **Status** in the menu bar in Web Manager.

Figure 5-1 Device Status Page

The screenshot displays the EDS-MD Device Status page. On the left is a sidebar menu with 'Status' selected. The main content area is titled 'Device Status' and contains the following sections:

Product Information

Product Type:	Lantronix EDS-MD16 (edsmd16)
Firmware Version:	7.2.0.3R2
Build Date:	Mar 11 17:23:01 PDT 2015
Serial Number:	00204A9D01BA
Uptime:	13 days 23:59:41
Current Date/Time:	Sat Mar 28 01:20:20 UTC 2015
Temperature:	Board Temperature = 40.64C CPU Temperature = 70.0C
Permanent Config:	Unsaved

Network Settings

Interface:	eth0
Link:	Auto 10/100 Mbps Auto Half/Full (1000 Mbps Full)
MAC Address:	00:20:4a:9d:01:ba
Hostname:	TESTTEST
IP Address:	172.19.100.181/16<DHCP>
Default Gateway:	172.19.0.1 <DHCP>
Domain:	eng.lantronix.com. <DHCP>
Primary DNS:	172.19.1.1
Secondary DNS:	172.19.1.2
MTU:	1500
VIP Conduit:	Disabled

Line Settings

<text>	RS232, 9600, Odd, 8, 2, Software [Log]
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software
<text>	RS232, 9600, Odd, 8, 2, Software

Tunneling


Tunneling	Connect Mode	Accept Mode
Tunnel 1:	Waiting	Waiting
Tunnel 2:	Waiting	Waiting
Tunnel 3:	Waiting	Waiting
Tunnel 4:	Waiting	Waiting
Tunnel 5:	Waiting	Waiting
Tunnel 6:	Waiting	Waiting
Tunnel 7:	Waiting	Waiting
Tunnel 8:	Waiting	Waiting
Tunnel 9:	Waiting	Waiting
Tunnel 10:	Waiting	Waiting
Tunnel 11:	Waiting	Waiting
Tunnel 12:	Waiting	Waiting
Tunnel 13:	Waiting	Waiting
Tunnel 14:	Waiting	Waiting
Tunnel 15:	Waiting	Waiting
Tunnel 16:	Waiting	Waiting

Copyright © Lantronix, Inc. 2007-2011. All rights reserved.

Web Manager Components

The layout of a typical Web Manager page is below.

Figure 5-2 Components of the Web Manager Page

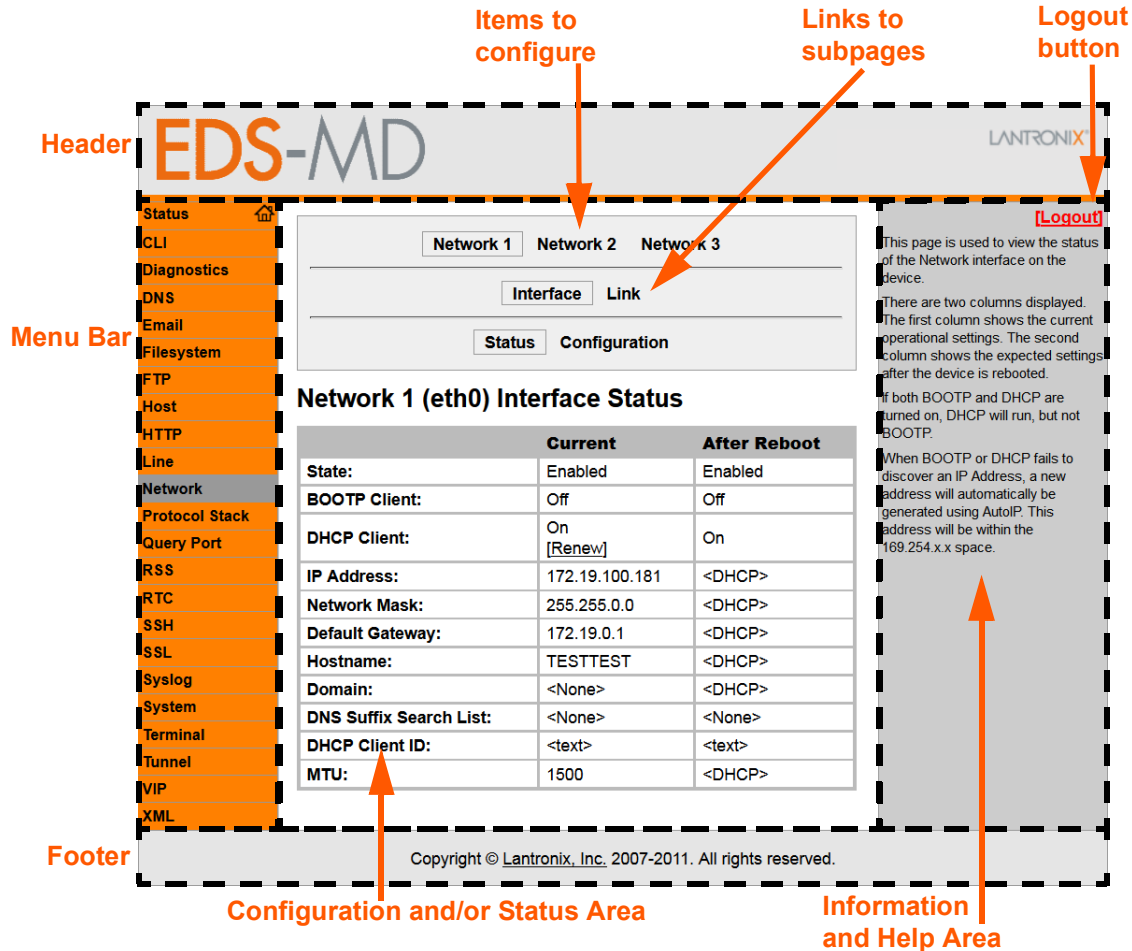

Web Manager pages have these sections:

The menu bar always appears at the left side of the page, regardless of the page shown. The menu bar lists the names of the pages available. To bring up a page, click it in the menu bar.

The main area of the page has these additional sections:

- ◆ Links near the top of many pages, such as the one in the example above, enable you to link to additional subpages. On some pages, you must also select the item you are configuring, such as a tunnel.
- ◆ In the middle of many pages, you can select or enter new configuration settings. Some pages show status or statistics in this area rather than allow you to enter settings.
- ◆ At the bottom of most pages, the current configuration is displayed. In some cases, you can reset or clear a setting.

- ◆ When a parameter is changed on the page, a **Submit** button will appear. Click on this button to save the change.
- ◆ The information or help area shows information or instructions associated with the page.
- ◆ A **Logout** link is available at the upper right corner of every page. In Chrome or Safari, it is necessary to close out of the browser to completely logout. If necessary, reopen the browser to log back in.
- ◆ The footer appears at the very bottom of the page. It contains copyright information and a link to the Lantronix home page.

Navigating Web Manager

The Web Manager provides an intuitive point-and-click interface. A menu bar on the left side of each page provides links you can click to navigate from one page to another. Some pages are read-only, while others let you change configuration settings.

Note: *There may be times when you must reboot the EDS-MD device for the new configuration settings to take effect. The chapters that follow indicate when a change requires a reboot. Anytime you reboot the unit, this operation will take some time to complete. Please wait a minimum of 25-30 seconds after rebooting the unit before attempting to make any subsequent connections.*

Table 5-3 Web Manager Pages

Web Manager Page	Description	See Page
Status	Shows product information, network, line, and tunneling settings.	34
CLI	Shows Command Line Interface (CLI) statistics and lets you change the current CLI configuration settings.	89
Email	Shows email statistics and lets you clear the email log, configure email settings, and send an email.	67
Filesystem	Shows file system statistics and lets you browse the file system to view a file, create a file or directory, upload files using HTTP, copy a file, move a file, or perform TFTP actions.	79
FTP	Shows statistics and lets you change the current configuration for the File Transfer Protocol (FTP) server.	62
Host	Lets you view and change settings for a host on the network.	59
HTTP	Shows HyperText Transfer Protocol (HTTP) statistics and lets you change the current configuration and authentication settings.	63
Line	Shows statistics and lets you change the current configuration and Command mode settings of a serial line.	45
Network	Shows status and lets you configure the network interface.	38
Protocol Stack	Lets you perform lower level network stack-specific activities.	82
Query Port	Lets you change configuration settings for the query port.	84
RSS	Lets you change current Really Simple Syndication (RSS) settings.	65

Web Manager Page (continued)	Description	See Page
Syslog	Lets you specify the severity of events to log and the server and ports to which the syslog should be sent.	62
System	Lets you reboot device, restore factory defaults, upload new firmware, and change the device long and short names.	88
Terminal	Lets you change current settings for a terminal.	58
Tunnel	Lets you change the current configuration settings for an incoming tunnel connection.	48
XML	Lets you export XML configuration and status records, and import XML configuration records.	91

6: Network Settings

The Network Settings show the status of the EDS-MD device interface/link and lets you configure the settings on the device. Interface settings are related to the configuration of the IP and related protocols. Link settings are related to the physical link connection, which carries the IP traffic.

The EDS-MD device server contains three interfaces:.

- ◆ Network 1 Interface (eth0) or Link (eth0)
- ◆ Network 2 Interface (eth1) or Link (eth1)
- ◆ Network 3 Interface (eth2) or Link (eth2)

Notes:

- ◆ *Some settings require a reboot to take effect. These settings are noted below.*
- ◆ *Wait a minimum of 10-20 seconds after rebooting the unit before attempting to make any subsequent connections.*
- ◆ *The blue text in the XML command strings of this chapter are to be replaced with a user-specified name.*

Network 1 (eth0) Status

In the Network 1 status pages, you can view both the current interface operational settings as well as the settings that would take effect upon a device reboot, as well as Link, QoS and Failover status information.

- ◆ To view Ethernet (eth0) Interface status, click **Network** on the menu and select **Network 1 -> Interface -> Status**.
- ◆ To view Ethernet (eth0) Link status, click **Network** on the menu and select **Network 1 -> Link -> Status**.
- ◆ To view Ethernet (eth0) QoS status, click **Network** on the menu and select **Network 1 -> QoS -> Status**.
- ◆ To view Ethernet (eth0) Failover status, click **Network** on the menu and select **Network 1 -> Failover -> Status**.

Network 1 (eth0) Interface Settings

Table 6-1 shows the network interface settings that can be configured.

Table 6-1 Network 1 (eth0) Interface Settings

Network 1 (eth0) Interface Settings	Description
State	Select to enable or disable the interface.

Network 1 (eth0) Interface Settings	Description
BOOTP Client	<p>Select to turn On or Off. At boot up, after the physical link is up, the EDS-MD device will attempt to obtain IP settings from a BOOTP server.</p> <p>Note: Overrides the configured IP address/mask, gateway, hostname, and domain. When DHCP is Enabled, the system automatically uses DHCP, regardless of whether BOOTP is Enabled. Changing this value requires you to reboot the device.</p>
DHCP Client	<p>Select to turn On or Off. At boot up, after the physical link is up, the EDS-MD 4/8/16 unit will attempt to obtain IP settings from a DHCP server and will periodically renew these settings with the server.</p> <p>Note: Overrides BOOTP, the configured IP address/mask, gateway, hostname, and domain. Changing this value requires you to reboot the device.</p> <p>Note: Within Web Manager, click Renew to renew the DHCP lease.</p>
IP Address	<p>Enter the static IP address to use for the interface. You may enter it alone or in CIDR format.</p> <p>Note: This setting will be used if Static IP is active (both DHCP and BOOTP are Disabled). Changing this value requires you to reboot the device. When DHCP or BOOTP is enabled, the EDS-MD 4/8/16 device tries to obtain an IP address from a DHCP or BOOTP server. If it cannot, the EDS-MD 4/8/16 unit generates and uses an Auto IP address in the range of 169.254.xxx.xxx, with a network mask of 255.255.0.0.</p>
Default Gateway	<p>Enter the IP address of the router for this network.</p> <p>Note: This setting will be used if Static IP is active (both DHCP and BOOTP are Disabled).</p>
Hostname	<p>Enter the hostname for the interface. It must begin with a letter or number, continue with a sequence of letters, numbers, or hyphens, and end with a letter or number. This setting will take effect immediately, but will not register the hostname with a DNS server until the next reboot.</p>
Domain	<p>Enter the domain name suffix for the interface.</p> <p>Note: This setting will be used when either Static IP or Auto IP is active, or if DHCP/BOOTP is active and no Domain Suffix was acquired from the server.</p>
DHCP Client ID	<p>Enter the ID if the DHCP server requires a DHCP Client ID option. The DHCP server's lease table shows IP addresses and MAC addresses for devices. The lease table shows the Client ID, in hexadecimal notation, instead of the EDS-MD 4/8/16 device server MAC address.</p>
Primary DNS	<p>Enter the IP address of the primary Domain Name Server.</p> <p>Note: This setting will be used when either Static IP or Auto IP is active, or if DHCP/BOOTP is active and no DNS server was acquired from the server.</p>
Secondary DNS	<p>Enter the IP address of the secondary Domain Name Server.</p> <p>Note: This setting will be used when either Static IP or Auto IP is active, or if DHCP/BOOTP is active and no DNS server was acquired from the server.</p>
MTU	<p>When DHCP is enabled, the MTU size is (usually) provided with the IP address. When not provided by the DHCP server, or using a static configuration, this value is used. The MTU size can be from 576 to 1500 bytes, the default being 1500 bytes.</p>

To Configure Network 1 (eth0) Interface Settings

Using Web Manager

- ◆ To modify Ethernet (eth0) settings, click **Network** on the menu and select **Network 1 -> Interface -> Configuration**.

Using the CLI

- ◆ To enter the eth0 command level: `enable -> config -> if 1`

Using XML

- ◆ Include in your file: `<configgroup name="interface" instance="eth0">`

Network 1 (eth0) Link Settings

Physical link parameters can be configured for an Ethernet (eth0) Network Link (see [Table 6-2](#)).

Table 6-2 Network 1 (eth0) Link Settings

Network 1 Ethernet (eth0) Link Settings	Description
Speed	Select the Ethernet link speed. (Default is Auto) <ul style="list-style-type: none"> ◆ Auto = Auto-negotiation of Link Speed ◆ 10 Mbps = Force 10 Mbps ◆ 100 Mbps = Force 100 Mbps ◆ 1000 Mbps = Force 1000 Mbps
Duplex	Select the Ethernet link duplex mode. (Default is Auto) <ul style="list-style-type: none"> ◆ Auto = Auto-negotiation of Link Duplex ◆ Half = Force Half Duplex ◆ Full = Force Full Duplex

Notes:

- ◆ When speed is **Auto**, duplex must be **Auto** or **Half**.
- ◆ When speed is not **Auto**, duplex must be **Half** or **Full**.
- ◆ Fixed speed Full duplex will produce errors connected to Auto, due to duplex mismatch.

To View or Configure Link 1(eth0) Settings

Using Web Manager

- ◆ To view Ethernet (eth0) Status, click **Network** on the menu and select **Network 1 -> Link**.

Using the CLI

- ◆ To enter the eth0 command level: `enable -> config -> if 1`

Using XML

- ◆ Include in your file: `<configgroup name="link" instance="eth0">`

Network 2 (eth1) Interface Settings

Table 6-3 shows the network 2 interface settings that can be configured.

Table 6-3 Network 2 (eth1) Interface Settings

Network 1 (eth0) Interface Settings	Description
State	Select to enable or disable. Click the Submit button to enter your choice.

To Configure Network 2 (eth1) Interface Settings

Using Web Manager

- ◆ To modify Network 2 (eth1) interface settings, click **Network** on the menu and select **Network 2 -> Interface -> Configuration**.

Using the CLI

- ◆ To enter the eth0 command level: `enable -> config -> if 2`

Using XML

- ◆ Include in your file: `<configgroup name="interface" instance="eth1">`

To View Network 2 (eth1) Interface Status

Using Web Manager

In Network 2 (eth1) Interface Status, you can view and configure the current operational settings.

- ◆ To view Ethernet (eth1) Status, click **Network** on the menu and select **Network 2 -> Interface -> Status**.

Network 2 (eth1) Link Settings

Physical link parameters can be viewed and configured for an Network 2 (eth1) Interface (see [Table 6-4](#)) and a Network 2 (eth2) Interface (see [Table 6-5](#)).

Table 6-4 Network 2 (eth1) Link Settings

Network 2 Ethernet (eth1) Link Settings	Description
Speed	Select the wlan0 link speed. (Default is Auto) ◆ Auto = Auto-negotiation of Link Speed ◆ 10 Mbps = Force 10 Mbps ◆ 100 Mbps = Force 100 Mbps ◆ 1000 Mbps = Force 1000 Mbps
Duplex	Select the wlan0 link duplex mode. (Default is Auto) ◆ Auto = Auto-negotiation of Link Duplex ◆ Half = Force Half Duplex ◆ Full = Force Full Duplex

To View or Configure Link 2 (eth1) Settings

Using Web Manager

In Network 2 Link, you can view and modify the current operational settings.

- ◆ To view Ethernet (eth1) Link Status, click **Network** on the menu and select **Network 2 -> Link**.

Using the CLI

- ◆ To enter the eth1 command level: `enable -> config -> if 2`

Using XML

- ◆ Include in your file: `<configgroup name="link" instance="eth1">`

Network 3 (eth2) Interface Settings

Table 6-5 shows the network 2 interface settings that can be configured.

Table 6-5 Network 3 (eth2) Interface Settings

Network 3 (eth2) Interface Settings	Description
State	Select to enable or disable. Click the Submit button to enter your choice.

To Configure Network 3 (eth2) Interface Settings

Using Web Manager

- ◆ To modify Network 3 (eth2) interface settings, click **Network** on the menu and select **Network 3 -> Interface -> Configuration**.

Using the CLI

- ◆ To enter the eth2 command level: `enable -> config -> if 3`

Using XML

- ◆ Include in your file: `<configgroup name="interface" instance="eth2">`

To View Network 3 (eth2) Interface Status

Using Web Manager

In Network 3 (eth2) Interface Status, you can view and configure the current operational settings.

- ◆ To view Ethernet (eth2) Status, click **Network** on the menu and select **Network 3 -> Interface -> Status**.

Network 3 (eth2) Link Settings

Physical link parameters can be viewed and configured for an Network 3 (eth2) Interface (see Table 6-6).

Table 6-6 Network 3 (eth2) Link Settings

Network 3 Ethernet (eth2) Link Settings	Description
Speed	Select the Ethernet link speed. (Default is Auto) <ul style="list-style-type: none"> ◆ Auto = Auto-negotiation of Link Speed ◆ 10 Mbps = Force 10 Mbps ◆ 100 Mbps = Force 100 Mbps ◆ 1000 Mbps = Force 1000 Mbps

Network 3 Ethernet (eth2) Link Settings (continued)	Description
Duplex	Select the Ethernet link duplex mode. (Default is Auto) <ul style="list-style-type: none"> ◆ Auto = Auto-negotiation of Link Duplex ◆ Half = Force Half Duplex ◆ Full = Force Full Duplex

To View or Configure Link 3 (eth2) Settings

Using Web Manager

In Network Link3, you can view and modify the current operational settings as well as the settings that would take effect upon a device reboot.

- ◆ To view Ethernet (eth2) Link Status, click **Network** on the menu and select **Network 3-> Link**.

Using the CLI

- ◆ To enter the eth2 command level: `enable -> config -> if 3`

Using XML

- ◆ Include in your file: `<configgroup name="link" instance="eth2">`

Network 2 (eth0) Status

In the Network 2 status pages, you can view both the current interface operational settings as well as the settings that would take effect upon a device reboot, as well as Link, QoS and Failover status information.

- ◆ To view Ethernet (wlan0) Interface status, click **Network** on the menu and select **Network 2 -> Interface -> Status**.
- ◆ To view Ethernet (wlan0) Link status, click **Network** on the menu and select **Network 2 -> Link -> Status**.
- ◆ To view Ethernet (wlan0) QoS status, click **Network** on the menu and select **Network 2 -> QoS -> Status**.

Table 6-7 GRE Settings

GRE Settings	Description
Name	Enter the user-defined name of the GRE tunnel.
State	Select to enable and disable GRE tunnel.
IP Address	Assign an IP address/mask for the GRE tunnel.
MTU	Enter the number of bytes indicating the largest physical packet size that the network can transmit.
Local Network	Select the local network to use the GRE tunnel. Select vpn to use the VPN network. Select any to use any available interface to remote host.
Remote Host	Enter the remote IP address to use for the GRE tunnel.
Remote Network	Enter the remote network to use for the GRE tunnel.

7: Line and Tunnel Settings

The EDS-MD device servers contain four, eight or sixteen serial lines depending on the specific model. All lines use standard RS232 serial ports. All lines can be configured to operate in the following modes:

- ◆ RS232
- ◆ All serial settings such as Baud Rate, Parity, Data Bits, etc, apply to these lines.

Line Statistics

This page displays the current status and various statistics for the serial line.

Note: The following section describes the steps to view Line 1 statistics; these steps apply to other line instances of the device.

Using Web Manager

- ◆ To view statistics for Line 1, click **Line** in the menu and select **Line 1 -> Statistics**.

Using the CLI

- ◆ To view Line statistics: `enable -> line 1, show statistics`

Using XML

- ◆ Include in your file: `<statusgroup name="line" instance="1">`

Line Settings

Note: The following section describes the steps to configure Line 1; these steps apply to other line instances of the device.

To Configure Line Settings

Using Web Manager

- ◆ To configure Line 1, click **Line** in the menu and select **Line 1 -> Configuration**.

Using the CLI

- ◆ To view Line statistics: `enable -> line 1, show statistics`

Using XML

- ◆ Include in your file: `<statusgroup name="line" instance="1">`

The Line Settings allow configuration of the serial lines (ports).

Table 7-1 Line Configuration Settings

Line Settings	Description
Name	Enter a name or short description for the line, if desired. By default, there is no name specified. A name that contains white space must be quoted.
State	Select to enable or disable the operational state of the Line. The default is Enabled .
Protocol	Set the operational protocol for the Line. The default is Tunnel. Choices are: <ul style="list-style-type: none"> ◆ None ◆ Tunnel = Serial-Network tunneling protocol.
Baud Rate	Set the Baud Rate (speed) of the Line. The default is 9600 . Any set speed between 300 and 921600 may be selected: 300, 600, 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800, 921600. When selecting a Custom baud rate, you may manually enter any value between 300 and 5000000. <i>Note: Custom baud rates are not supported when a line is configured for Command Mode.</i>
Parity	<i>Note: Set the Parity of the Line. The default is None.</i>
Data Bits	<i>Note: Set the number of data bits for the Line. The default is 8.</i>
Stop Bits	<i>Note: Set the number of stop bits for the Line. The default is 1.</i>
Flow Control	<i>Note: Set the flow control for the Line. The default is None.</i>
Xon Char	Set Xon Char to be used when Flow Control is set to Software. Prefix decimal with \ or prefix hexadecimal with 0x or prefix a single control character <control>. <i>Note: This field becomes available for configuration when Software is selected under Flow Control.</i>
Xoff Char	Set Xoff Char to be used when Flow Control is set to Software. Prefix decimal with \ or prefix hexadecimal with 0x or prefix a single control character <control>. <i>Note: This field becomes available for configuration when Software is selected under Flow Control.</i>
Gap Timer	Set the Gap Timer delay to Set the number of milliseconds to pass from the last character received before the driver forwards the received serial bytes. By default, the delay is four character periods at the current baud rate (minimum 1 msec).
Threshold	Set the number of threshold bytes which need to be received in order for the driver to forward received characters.

Table 7-2 Line Command Mode Settings

Line Command Mode Settings	Description
Mode	<p>Set the Command Mode state of the Line. When in Command Mode, a CLI session operates exclusively on the Line. Choices are:</p> <ul style="list-style-type: none"> ◆ Always ◆ User Serial String ◆ Disabled <p>Note: In order to enable Command Mode on the Line, Tunneling on the Line must be Disabled (both Connect and Accept modes). Also, custom baud rates are not supported in Command Mode.</p>
Wait Time	<p>Enter the amount of time to wait during boot time for the Serial String. This timer starts right after the Signon Message has been sent on the Serial Line and applies only if mode is "Use Serial String".</p> <p>Note: This field becomes available when Use Serial String is selected for Mode.</p>
Serial String	<p>Enter the Text or Binary string of bytes that must be read on the Serial Line during boot time in order to enable Command Mode. It may contain a time element to specify a required delay in milliseconds x, formed as {x}. Applies only if mode is "User Serial String". It may contain a binary character(s) of the form [x]. For example, use decimal [12] or hex [0xc].</p> <p>Note: This field becomes available when Use Serial String is selected for Mode.</p>
Echo Serial String	<p>Select Enable or Disable for Echo Serial String. Applies only if mode is "User Serial String". Select enable to echo received characters backed out on the line while looking for the serial string.</p> <p>Note: This field becomes available when Use Serial String is selected for Mode.</p>
Signon Message	<p>Enter the string of bytes to be sent to the Serial Line during boot time. It may contain a binary character(s) of the form [x]. For example, use decimal [12] or hex [0xc].</p>

Note: The following section describes the steps to view and configure Line 1 settings; these steps apply to other line instances of the device.

To Configure Line Command Mode

Using Web Manager

- ◆ To configure a specific line, click **Line** in the menu and select **Line 1 -> Configuration** ([Table 7-1](#)).
- ◆ To configure a specific line in Command Mode, click **Line** in the menu and select **Line 1 -> Command Mode** ([Table 7-2](#)).

Using the CLI

- ◆ To enter Line 1 command level: `enable -> line 1`

Using XML

- ◆ Include in your file: `<configgroup name="line" instance="1">`
- ◆ Include in your file: `<configgroup name="serial command mode" instance="1">`

Tunnel Statistics

Tunnel statistics contains data counters, error counters, connection time and connection information. Statistics are available at each individual connection and aggregated across all connections.

Note: The following section describes the steps to view Tunnel 1 statistics; these steps apply to other tunnel instances of the device.

To View Tunnel Statistics

Using Web Manager

- ◆ To view statistics for a specific tunnel, click **Tunnel** in the menu and select the **Tunnel 1 -> Statistics**.

Using the CLI

- ◆ To view Tunnel 1 statistics: enable -> tunnel 1, show statistics

Using XML

- ◆ Include in your file: <statusgroup name="tunnel" instance="1" >

Tunnel Settings

Tunneling allows serial devices to communicate over a network, without “being aware” of the devices that establish the network connection between them. Tunneling parameters are configured using the Tunnel menu and submenus. The Tunnel settings allow you to configure how the Serial-Network tunneling operates. Tunneling is available on all serial lines. The connections on one serial line are separate from those on another serial port.

Note: The following section describes the steps to view and configure Tunnel 1 settings; these steps apply to other tunnel instances of the device.

Serial Settings

These serial settings for the tunnel apply to the Serial Line interface. The Line Settings and Protocol are displayed for informational purposes and must be configured from the Line settings.

Table 7-3 Tunnel Serial Settings

Tunnel Serial Settings	Description
Line Settings	Line Settings information here is display only. Go to the section, To Configure Line Command Mode to modify these settings.
Protocol	Protocol information here is display only. Go to the section, To Configure Line Command Mode to modify these settings.

Tunnel Serial Settings (continued)	Description
DTR	<p>Select the conditions under which the Data Terminal Ready (DTR) control signal on the serial line is asserted. Choices are:</p> <ul style="list-style-type: none"> ◆ Unasserted ◆ TruPort = the DTR is asserted whenever either a connect or an accept mode tunnel connection is active with the Telnet Protocol RFC2217 saying that the remote DSR is asserted. ◆ Asserted while connected = the DTR is asserted whenever either a connect or an accept mode tunnel connection is active. ◆ Continuously asserted

To Configure Tunnel Serial Settings

Using Web Manager

- ◆ To configure the Serial Settings for a specific tunnel, click **Tunnel** in the menu and select **Tunnel 1 -> Serial Settings**.

Using the CLI

- ◆ To enter Tunnel 1 command level: `enable -> tunnel 1 -> serial`

Using XML

- ◆ Include in your file: `<configgroup name="tunnel serial" instance="1">`

Packing Mode

With Packing, data from the serial Line is not sent over the network immediately. Instead, data is queued and sent in segments, when either the timeout or byte threshold is reached. Packing applies to both Accept and Connect Modes.

Table 7-4 Tunnel Packing Mode Settings

Tunnel Packing Mode Settings	Description
Mode	<p>Configure the Tunnel Packing Mode. Choices are:</p> <ul style="list-style-type: none"> ◆ Disable = Data not packed. ◆ Timeout = data sent after timeout occurs. ◆ Send Character = data sent when the Send Character is read on the Serial Line.
Threshold	<p>Set the threshold (byte count). If the received serial data reaches this threshold, then the data will be sent on the network. Valid range is 100 to 1450 bytes. Default is 512.</p>
Timeout	<p>Set the timeout value, in milliseconds, after the first character is received on the serial line, before data is sent on the network. Valid range is 1 to 30000 milliseconds. Default is 1000. This setting becomes available when the Timeout mode is selected.</p>

Tunnel Packing Mode Settings	Description
Send Character	Enter Control Characters in any of the following forms: <ul style="list-style-type: none"> ◆ <control>J ◆ 0xA (hexadecimal) ◆ \10 (decimal) If used, the Send Character is a single printable character or a control character that, when read on the Serial Line, forces the queued data to be sent on the network immediately.
Trailing Character	Enter Control Characters in any of the following forms: <ul style="list-style-type: none"> ◆ <control>J ◆ 0xA (hexadecimal) ◆ \10 (decimal). If used, the Trailing Character is a single printable character or a control character that is injected into the outgoing data stream right after the Send Character. Disable the Trailing Character by blanking the field (setting it to <None>).

To Configure Tunnel Packing Mode Settings

Using Web Manager

- ◆ To configure the Packing Mode for a specific tunnel, click **Tunnel** in the menu and select **Tunnel 1 -> Packing Mode**.

Using the CLI

- ◆ To enter the Tunnel 1 Packing command level: `enable -> tunnel 1 -> packing`

Using XML

- ◆ Include in your file: `<configgroup name="tunnel packing" instance="1">`

Accept Mode

In Accept Mode, the EDS-MD device listens (waits) for incoming connections from the network. A remote node on the network initiates the connection.

The configurable local port is the port the remote device connects to for this connection. There is no remote port or address. Supported serial lines and associated local port numbers progress sequentially in matching value. For instance, the default local port is 10001 for serial line 1 and the default local port for serial line 2 is 10002, and so on for the number of serial lines supported.

Serial data can still be received while waiting for a network connection, keeping in mind serial data buffer limitations.

Table 7-5 Tunnel Accept Mode Settings

Tunnel Accept Mode Settings	Description
Mode	Set the method used to start a tunnel in Accept mode. Choices are: <ul style="list-style-type: none"> ◆ Disable = do not accept an incoming connection. ◆ Always = accept an incoming connection (<i>default</i>). ◆ Any Character = start waiting for an incoming connection when any character is read on the serial line. ◆ Start Character = start waiting for an incoming connection when the start character for the selected tunnel is read on the serial line. ◆ Modem Control Asserted = start waiting for an incoming connection as long as the Modem Control pin (DSR) is asserted on the serial line until a connection is made. ◆ Modem Emulation = start waiting for an incoming connection when triggered by modem emulation AT commands. Connect mode must also be set to Modem Emulation.
Local Port	Set the port number for use as the network local port. The default local port number for each supported serial line number progresses sequentially in equal value so that Tunnel X: 1000X. For example: <ul style="list-style-type: none"> ◆ Tunnel 1: 10001 ◆ Tunnel 2: 10002
Protocol	Select the protocol type for use with Accept Mode: <ul style="list-style-type: none"> ◆ SSH ◆ SSL ◆ TCP (default protocol) ◆ TCP AES <p><i>Note:</i> Telnet</p>
TCP Keep Alive Idle Time	Enter the time, in milliseconds, the EDS-MD 4, EDS-MD 8 or EDS-MD 16 module waits during a silent TCP connection before checking if the currently connected network device is still on the network.
Flush Serial	Set whether the serial line data buffer is flushed upon a new network connection. Choices are: <ul style="list-style-type: none"> ◆ Enabled = serial data buffer is flushed on network connection ◆ Disabled = serial data buffer is not flushed on network connection (<i>default</i>)
Block Serial	Set whether Block Serial is enabled for debugging purposes. Choices are: <ul style="list-style-type: none"> ◆ Enabled = if Enabled, incoming characters from the serial line will not be forwarded to the network. Instead, they will be buffered and will eventually flow off the serial line if hardware or software flow control is configured. ◆ Disabled = this is the default setting; incoming characters from the Serial Line are sent on into the network. Any buffered characters are sent first.
Block Network	Set whether Block Network is enabled for debugging purposes. Choices are: <ul style="list-style-type: none"> ◆ Enabled = if Enabled, incoming characters from the network will not be forwarded to the Serial Line. Instead, they will be buffered and will eventually flow off the network side. ◆ Disabled = this is the default setting; incoming characters from the network are sent on into the Serial Line. Any buffered characters are sent first.

Tunnel Accept Mode Settings (continued)	Description
Password	Enter a password. This password can be up to 31 characters in length and must contain only alphanumeric characters and punctuation. When set, clients must send the correct password string to the unit within 30 seconds from opening network connection in order to enable data transmission. The password sent to the unit must be terminated with one of the following: <ul style="list-style-type: none"> ◆ 0A (Line Feed) ◆ 00 (Null) ◆ 0D 0A (Carriage Return/Line Feed) ◆ 0D 00 (Carriage Return/Null) If, Prompt for Password is set to Enabled and a password is provided, the user will be prompted for the password upon connection.
Email on Connect	Select an email profile number to which an email notification will be sent upon the establishment of an accept mode tunnel.
Email on Disconnect	Select an email profile number to which an email notification will be sent upon the disconnection of an accept mode tunnel.

To Configure Tunnel Accept Mode Settings

Using Web Manager

- ◆ To configure the Accept Mode for a specific tunnel, click **Tunnel** in the menu and select **Tunnel 1 -> Accept Mode**.

Using the CLI

- ◆ To enter Tunnel 1 Accept Mode command level: `enable -> tunnel 1 -> accept`

Using XML

- ◆ Include in your file: `<configgroup name="tunnel accept" instance="1">`

Connect Mode

In Connect Mode, the EDS-MD unit continues to attempt an outgoing connection on the network, until established (based on which connection method is selected in the configuration described in [Table 7-6](#)). If the connection attempt fails or the connection drops, then it retries after a timeout. The remote node on the network must listen for the Connect Mode's connection.

For Connect Mode to function, it must be enabled, have a remote station (node) configured, and a remote port configured (TCP or UDP). When established, Connect Mode is always on. Enter the remote station as an IPv4 or IP address or DNS name. The EDS-MD device will not make a connection unless it can resolve the address.

For Connect Mode using UDP, the EDS-MD module accepts packets from any device on the network. It will send packets to the last device that sent it packets.

Note: *The port in Connect Mode is not the same port configured in Accept Mode.*

The TCP keepalive time is the time in which probes are periodically sent to the other end of the connection. This ensures the other side is still connected.

Table 7-6 Tunnel Connect Mode Settings

Tunnel Connect Mode Settings	Description
Mode	<p>Set the method to be used to attempt a connection to a remote host or device. Choices are:</p> <ul style="list-style-type: none"> ◆ Disable = an outgoing connection is never attempted. (<i>default</i>) ◆ Always = a connection is attempted until one is made. If the connection gets disconnected, the device retries until it makes a connection. ◆ Any Character = a connection is attempted when any character is read on the serial line. ◆ Start Character = a connection is attempted when the start character for the selected tunnel is read on the serial line. ◆ Modem Control Asserted = a connection is attempted as long as the Modem Control pin (DSR) is asserted, until a connection is made. ◆ Modem Emulation = a connection is attempted when triggered by modem emulation AT commands.
Local Port	<p>Enter an alternative Local Port. The Local Port is set to <Random> by default but can be overridden. Blank the field to restore the default.</p>
Host (Number)	<p>Click on the displayed information to expand it for editing. If <None> is displayed, clicking it will allow you to configure a new host. At least one Host is required to enable Connect Mode as this information is necessary to connect to that host. Once you start to edit Host 1, a box for Host 2 will show up. Editing Host 2 will cause a Host 3 box to appear. Up to 32 hosts are available. Complete the following fields to configure a host:</p> <ul style="list-style-type: none"> ◆ Address: enter the address for the remote host connection. Either a DNS address or an IP address maybe provided. ◆ Port: designate the TCP or UDP port on the remote host for connection. ◆ Protocol: select the desired security protocol. SSH is recommended for circumstances with high security concerns. When using SH, both the SSH server host keys and the SSH server authorized users must be configured. ◆ TCP Initial Keep Alive: specify the amount of time to wait before the first Keep Alive probe is sent to the remote host in order to keep the TCP connection up during idle transfer periods. Set to 0 to disable and blank the display field to restore the default. ◆ TCP Keep Alive Interval: specify the amount of time to wait before probing the remote host, after the initial probe, in order to keep the TCP connection up during idle transfer periods. Blank the display field to restore the default. ◆ TCP Keep Alive Probes: specify the number of TCP Keep Alive probes (after the TCP Initial Keep Alive Probe) to send before closing the connection if no response is received. Valid values are between 1 and 16. Blank the display field to restore the default.

Tunnel Connect Mode Settings (continued)	Description
Host (Number) (continued)	<ul style="list-style-type: none"> ◆ TCP User Timeout: specify the amount of time the TCP segments will be retransmitted before the connection is closed. ◆ AES Encrypt Key: enter the AES encrypt key to encrypt outgoing data. Enter the key in the fixed 16, 24, or 32 byte length and either in Text or Hexadecimal form. Keys are stored and exchanged in Hexadecimal form only. To remove a key, delete <Configured> in the display. All keys are shared secret keys which are known by both sides of the connection and kept secret. ◆ AES Decrypt Key: enter the AES decrypt key to decrypt outgoing data. Enter the key in the fixed 16, 24, or 32 byte length and either in Text or Hexadecimal form. Keys are stored and exchanged in Hexadecimal form only. To remove a key, delete <Configured> in the display. All keys are shared secret keys which are known by both sides of the connection and kept secret. ◆ Initial Send: enter the Initial Send string for data sent out of the network upon connection establishment (before any data from the Line). The string may contain one or more Directives of the form %<char> and can be entered in Text or Binary form. <p>Notes:</p> <ul style="list-style-type: none"> ◆ <i>If the keep alive idle time (the initial keep alive probe) expires, the user timeout is expired, and there are probes in flight, the connection will be reset. For this reason, it is recommended that if keep alive is used in conjunction with the user timeout, the keep alive timeouts be larger than the user timeout. If they are smaller, what will typically be seen is that the initial probe will be sent, then at the interval where the next probe would normally be sent, the connection will be reset, with no additional probes sent. Also note that the probe count can be disregarded in these cases: if the keep alive timers are significantly smaller than the user timeout, probes will continue to be sent for an unreachable host until the user timeout expires.</i> ◆ <i>If there is data in flight when the TCP retransmission timeout kicks in, the user timeout is checked as a limiting condition only when the timer expirations would normally be checked during RTO handling. In other words, the user timeout will not be an exact limit; in practice, it will always take somewhat longer for the connection to be closed. The longer the user timeout is, the more likely it will expire between exponentially slower retransmissions, and the connection will not experience an error until the next retransmission timeout is checked. Also note that the user timeout expiration during retransmission returns an error to the application; it does not automatically reset the connection as happens with keep alive timeout. It is up to the application (e.g., tunneling) to close the connection (this happens almost immediately with tunneling).</i>
Reconnect Timer	Set the value of the reconnect timeout (in milliseconds) for outgoing connections established by the device. Valid range is 1 to 65535 milliseconds. Default is 15000.
Flush Serial Data	Set whether the serial Line data buffer is flushed upon a new network connection. Choices are: <ul style="list-style-type: none"> ◆ Enabled = serial data buffer is flushed on network connection ◆ Disabled = serial data buffer is not flushed on network connection (<i>default</i>)

Tunnel Connect Mode Settings (continued)	Description
Block Serial	Set whether Block Serial is enabled for debugging purposes. Choices are: <ul style="list-style-type: none"> ◆ Enabled = If Enabled, incoming characters from the Serial Line will not be forwarded to the network. Instead, they will be buffered and will eventually flow off the Serial Line if hardware or software flow control is configured. ◆ Disabled = this is the default setting; incoming characters from the Serial Line are sent on into the network. Any buffered characters are sent first.
Block Network	Set whether Block Network is enabled for debugging purposes. Choices are: <ul style="list-style-type: none"> ◆ Enabled = If Enabled, incoming characters from the network will not be forwarded to the Serial Line. Instead, they will be buffered and will eventually flow off the network side. ◆ Disabled = this is the default setting; incoming characters from the network are sent on into the Serial Line. Any buffered characters are sent first.
Email on Connect	Select an email profile number to which an email notification will be sent upon the establishment of an accept mode tunnel.
Email on Disconnect	Select an email profile number to which an email notification will be sent upon the disconnection of an accept mode tunnel.

To Configure Tunnel Connect Mode Settings

Using Web Manager

- ◆ To configure the Connect Mode for a specific tunnel, click **Tunnel** in the menu and select **Tunnel 1 -> Connect Mode**.

Using the CLI

- ◆ To enter the Tunnel 1 Connect Mode command level: `enable -> tunnel 1 -> connect`

Using XML

- ◆ Include in your file: `<configgroup name="tunnel connect" instance="1">`

Connecting Multiple Hosts


If more than one host is configured, a **Host Mode** option appears. Host Mode controls how multiple hosts will be accessed. For the EDS-MD device, the Connect Mode supports up to 32 hosts. Hosts may be accessed sequentially or simultaneously:

- ◆ **Sequential** – Sequential host lists establish a prioritized list of tunnels. The host specified as Host 1 will be attempted first. If that fails, it will proceed to Host 2, 3, etc, in the order they are specified. When a connection drops, the cycle starts again with Host 1 and proceeds in order. Establishing the host order is accomplished with host list promotion (see [Host List Promotion on page 56](#)). Sequential is the default Host Mode.
- ◆ **Simultaneous** – A tunnel will connect to all hosts accepting a connection. Simultaneous connections occur at the same time to all listed hosts. The device can support a maximum of 64 total aggregate connections.

Host List Promotion

This feature allows Host IP promotion of individual hosts in the overall sequence.

To promote a specific Host:

1. Click the  icon in the desired Host field, for example Host 2 and Host 3.
2. The selected Host(s) exchanges its place with the Host above it.
3. Click **Submit**. The hosts change sequence.

Disconnect Mode

Specifies the optional conditions for disconnecting any Accept Mode or Connect Mode connection that may be established. If any of these conditions are selected but do not occur and the network disconnects to the device, a Connect Mode connection will attempt to reconnect. However, if none of these conditions are selected, a closure from the network is taken as a disconnect.

Table 7-7 Tunnel Disconnect Mode Settings

Tunnel Disconnect Mode Settings	Description
Stop Character	Enter the Stop Character which, when received on the Serial Line, disconnects the tunnel. The Stop Character may be designated as a single printable character or as a control character. Control characters may be input in any of the following forms: <control>J or 0xA(hexadecimal) or \10 (decimal). Disable the Stop Character by blanking the field to set it to <None>.
Modem Control	Set whether Modem Control enables disconnect when the Modem Control pin is not asserted on the Serial Line. Choices are: <ul style="list-style-type: none"> ◆ Enabled ◆ Disabled (default)
Timeout	Enter the number of milliseconds a tunnel may be idle before disconnection. The value of zero disables the idle timeout.
Flush Serial Data	Set whether to flush the Serial Line when the Tunnel is disconnected. Choices are: <ul style="list-style-type: none"> ◆ Enabled ◆ Disabled (default)

To Configure Tunnel Disconnect Mode Settings

Using Web Manager

- ◆ To configure the Disconnect Mode for a specific tunnel, click **Tunnel** in the menu and select **Tunnel 1 -> Disconnect Mode**.

Using the CLI

- ◆ To enter the Tunnel 1 Disconnect command level: `enable -> tunnel 1 -> disconnect`

Using XML

- ◆ Include in your file: `<configgroup name="tunnel disconnect" instance="1">`

Modem Emulation

Some older equipment is designed to attach to a serial port and dial into a network with a modem. This equipment uses AT commands to control the connection. For compatibility with these older devices on modern networks, the EDS-MD device mimics the behavior of the modem.

Table 7-8 Tunnel Modem Emulation Settings

Tunnel Modem Emulation Settings	Description
Echo Pluses	Set whether the pluses will be echoed back during a "pause +++ pause" escape sequence on the Serial Line. Choices are: <ul style="list-style-type: none"> ◆ Enabled ◆ Disabled (default)
Echo Commands	Set whether characters read on the Serial Line will be echoed, while the Line is in Modem Command Mode. Choices are: <ul style="list-style-type: none"> ◆ Enabled ◆ Disabled (default)
Verbose Response	Set whether Modem Response Codes are sent out on the Serial Line. Choices are: <ul style="list-style-type: none"> ◆ Enabled ◆ Disabled (default)
Response Type	Select a representation for the Modem Response Codes sent out on the Serial Line: <ul style="list-style-type: none"> ◆ Text (ATV1) (default) ◆ Numeric (ATV0)
Error Unknown Commands	Set whether the Error Unknown Commands is enabled (ATU0) and ERROR is returned on the Serial Line for unrecognized AT commands. Otherwise (ATU1) OK is returned for unrecognized AT commands. Choices are: <ul style="list-style-type: none"> ◆ Enabled ◆ Disabled (default)
Incoming Connection	Set if and how requests are answered after an incoming RING (ATS0=2): <ul style="list-style-type: none"> ◆ Disabled (default) ◆ Automatic ◆ Manual
Connect String	Enter the customized Connect String sent to the Serial Line with the Connect Modem Response Code.
Display Remote IP	Set whether the Display Remote IP is enabled so that the incoming RING sent on the Serial Line is followed by the IP address of the caller. Choices are: <ul style="list-style-type: none"> ◆ Enabled ◆ Disabled (default)

To Configure Tunnel Modem Emulation Settings

Using Web Manager

To configure the Modem Emulation for a specific tunnel, click **Tunnel** in the menu and select **Tunnel 1 -> Modem Emulation**. *Using the CLI*

- ◆ To enter the Tunnel 1 Modem command level: `enable -> tunnel 1 -> modem`

Using XML

- ◆ Include in your file: `<configgroup name="tunnel modem" instance="1">`

8: Terminal and Host Settings

Predefined connections are available via Telnet, SSH, or a serial port. A user can choose one of the presented options and the device automatically makes the predefined connection.

Either the Telnet, SSH, or serial port connection can present the CLI or the Login Connect Menu. By default, the CLI is presented when the device is accessed. When configured to present the Login Connect Menu, the hosts configured via the Host selections, and named serial lines are presented.

Terminal Settings

You can configure whether each serial line or the Telnet/SSH server presents a CLI or a Login Connect menu when a connection is made.

Table 8-1 Terminal on Network and Line Settings

Terminal on Network and Line Settings	Description
Terminal Type	Enter text to describe the type of terminal. The text will be sent to a host via IAC. <i>Note:</i> IAC means, "interpret as command." It is a way to send commands over the network such as send break or start echoing . IAC is only supported in Telnet.
Login Connect Menu	Select the interface to display when the user logs in. Choices are: ◆ Enabled = shows the Login Connect Menu. ◆ Disabled = shows the CLI (default)
Exit Connect Menu	Select whether to display a choice for the user to exit the Login Connect Menu and reach the CLI. Choices are: ◆ Enabled = a choice allows the user to exit to the CLI. ◆ Disabled = there is no exit to the CLI (default)
Send Break	Enter a Send Break control character, e.g., <control> Y, or blank to disable. When the Send Break control character is received from the network on its way to the serial line, it is not sent to the line; instead, the line output is forced to be inactive (the break condition). <i>Note:</i> This configuration option is only available for Line Terminals.
Break Duration	Enter how long the break should last in milliseconds, up to 10000. Default is 500. <i>Note:</i> This configuration option is only available for Line Terminals.
Echo	Select whether to enable echo: ◆ Enabled ◆ Disabled <i>Note:</i> Applies only to Connect Mode Telnet connections, not to Accept Mode. Only disable Echo if your terminal echoes, in which case you will see double of each character typed. Default is enabled.

To Configure the Terminal Network Connection

Using Web Manager

- ◆ To configure the Terminal on Network, click **Terminal** on the menu and select **Network -> Configuration**.

Using the CLI

- ◆ To enter the Terminal Network command level: `enable -> config -> terminal network`

Using XML

- ◆ Include in your file: `<configgroup name="terminal" instance="network">`

To Configure the Terminal Line Connection

Note: The following section describes the steps to view and configure Terminal 1 settings; these steps apply to other terminal instances of the device.

Using Web Manager

- ◆ To configure a particular Terminal Line, click **Terminal** on the menu and select **Line 1 -> Configuration**.

Using the CLI

- ◆ To enter the Terminal Line command level: `enable -> config -> terminal 1`

Using XML

- ◆ Include in your file: `<configgroup name="terminal" instance="1">`

Host Configuration

Table 8-2 Host Configuration

Host Settings	Description
Name	Enter a name for the host. This name appears on the Login Connect Menu. To leave a host out of the menu, leave this field blank.
Protocol	Select the protocol to use to connect to the host. Choices are: <ul style="list-style-type: none"> ◆ Telnet ◆ SSH <p>Note: SSH keys must be loaded or created on the SSH page for the SSH protocol to work.</p>

Host Settings	Description
SSH Username	Appears if you selected SSH as the protocol. Enter a username to select a pre-configured Username/Password/Key (configured on the SSH: Client Users page), or leave it blank to be prompted for a username and password at connect time. <i>Note: This configuration option is only available when SSH is selected for Protocol.</i>
Remote Address	Enter an IP address for the host to which the device will connect.
Remote Port	Enter the port on the host to which the device will connect.

To Configure Host Settings

Note: The following section describes the steps to view and configure Host 1 settings; these steps apply to other host instances of the device.

Using Web Manager

- ◆ To configure a particular Host, click **Host** on the menu and select **Host 1 -> Configuration**.

Using the CLI

- ◆ To enter the Host command level: `enable -> config -> host 1`

Using XML

- ◆ Include in your file: `<configgroup name="host" instance="1">`

9: Network Services

DNS Settings

This section describes the active run-time settings for the domain name system (DNS) protocol. The primary and secondary DNS addresses come from the active interface. The static addresses from the Network Interface configuration settings may be overridden by DHCP.

Note: The blue text in the XML command strings of this chapter are to be replaced with a user-specified name.

Table 9-1 DNS Settings

Setting / Field	Description
Lookup	Perform one of the following: <ul style="list-style-type: none">◆ Enter an IP address, and perform a reverse Lookup to locate the hostname for that IP address◆ Enter a hostname, and perform a forward Lookup to locate the corresponding IP address

To View or Configure DNS Settings:

Using Web Manager

- ◆ To view DNS current status, click **DNS** in the menu.
- ◆ To lookup DNS name or IP address, click **DNS** in the menu to access the **Lookup** field.

Note: To configure DNS for cases where it is not supplied by a protocol, click **Network** in the menu and select **Interface -> Configuration**.

Using the CLI

- ◆ To enter the DNS command level: `enable -> dns`

Using XML

- ◆ Include in your file: `<configgroup name="interface" instance="eth0">`

FTP Settings

The FTP protocol can be used to upload and download user files, and upgrade the EDS-MD device server firmware. A configurable option is provided to enable or disable access via this protocol.

Table 9-2 FTP Settings

FTP Settings	Description
State	Select to enable or disable the FTP server: <ul style="list-style-type: none"> ◆ Enabled (default) ◆ Disabled

To Configure FTP Settings

Using Web Manager

- ◆ To configure FTP and view FTP statistics, click **FTP** in the menu.

Using the CLI

- ◆ To enter the FTP command level: `enable -> config -> ftp`

Using XML

- ◆ Include in your file: `<configgroup name="ftp server">`

Syslog Settings

The Syslog information shows the current configuration and statistics of the syslog. Here you can configure the syslog host and the severity of the events to log.

Note: *The system log is always saved to local storage, but it is not retained through reboots unless diagnostics logging to the file system is enabled. Saving the system log to a server that supports remote logging services (see RFC 3164) allows the administrator to save the complete system log history. The default port is 514.*

Table 9-3 Syslog Settings

Syslog Settings	Description
State	Select to enable or disable the syslog: <ul style="list-style-type: none"> ◆ Enabled ◆ Disabled (default)
Host	Enter the IP address of the remote server to which system logs are sent for storage.
Remote Port	Enter the number of the port on the remote server that supports logging services. The default is 514.

Syslog Settings (continued)	Description
Severity Log Level	Specify the minimum level of system message the EDS-MD device should log by selecting from the drop-down menu. This setting applies to all syslog facilities. The drop-down list in the Web Manager is in descending order of severity (e.g., Emergency is more severe than Alert.)

To View or Configure Syslog Settings

Using Web Manager

- ◆ To configure the Syslog and view current Syslog status, click **Syslog** in the menu.

Using the CLI

- ◆ To enter the Syslog command level: `enable -> config -> syslog`

Using XML

- ◆ Include in your file: `<configgroup name="syslog">`

HTTP Settings

Hypertext Transfer Protocol (HTTP) is the transport protocol for communicating hypertext documents on the Internet. HTTP defines how messages are formatted and transmitted. It also defines the actions web servers and browsers should take in response to different commands. HTTP Authentication enables the requirement of usernames and passwords for access to the device.

Table 9-4 HTTP Settings

HTTP Settings	Description
State	Select to enable or disable the HTTP server: <ul style="list-style-type: none"> ◆ Enabled (default) ◆ Disabled
Port	Enter the port for the HTTP server to use. The default is 80 .
Secure Port	Enter the port for the HTTPS server to use. The default is 443 . The HTTP server only listens on the HTTPS Port when an SSL certificate is configured.
Secure Protocols	Select to enable or disable the following protocols: <ul style="list-style-type: none"> ◆ SSL3 = Secure Sockets Layer version 3 ◆ TLS1.0 = Transport Layer Security version 1.0. TLS 1.0 is the successor of SSL3 as defined by the IETF. ◆ TLS1.1 = Transport Layer Security version 1.1 The protocols are enabled by default. <p><i>Note: A server certificate and associated private key need to be installed in the SSL configuration section to use HTTPS.</i></p>
Secure Credentials	Specify the name of the set of RSA and/or DSA certificates and keys to be used for the secure connection.

HTTP Settings (continued)	Description
Max Timeout	Enter the maximum time for the HTTP server to wait when receiving a request. This prevents Denial-of-Service (DoS) attacks. The default is 10 seconds.
Max Bytes	Enter the maximum number of bytes the HTTP server accepts when receiving a request. The default is 40 KB (this prevents DoS attacks). Note: You may need to increase this number in some cases where the browser is sending data aggressively within TCP Windows size limit, when file (including firmware upgrade) is uploaded from webpage.
Logging State	Select to enable or disable HTTP server logging: <ul style="list-style-type: none"> ◆ Enabled (default) ◆ Disabled
Max Log Entries	Set the maximum number of HTTP server log entries. Only the last Max Log Entries are cached and viewable.
Log Format	Set the log format string for the HTTP server. Follow these Log Format rules: <ul style="list-style-type: none"> ◆ %a - remote IP address (could be a proxy) ◆ %b - bytes sent excluding headers ◆ %B - bytes sent excluding headers (0 = '-') ◆ %h - remote host (same as '%a') ◆ %{h}i - header contents from request (h = header string) ◆ %m - request method ◆ %p - ephemeral local port value used for request ◆ %q - query string (prepend with '?' or empty '-') ◆ %t - timestamp HH:MM:SS (same as Apache '%(%H:%M:%S)t' or '%(%T)t') ◆ %u - remote user (could be bogus for 401 status) ◆ %U - URL path info ◆ %r - first line of request (same as '%m %U%q <version>') ◆ %s - return status
Authentication Timeout	The timeout period applies if the selected authentication type is either Digest or SSL/Digest . After this period of inactivity, the client must authenticate again.
Submit (button)	Click the Submit button which appears when any changes are entered in the HTTP Configuration table. Clicking the Submit button submits the changes.

To Configure HTTP Settings

Using Web Manager

- ◆ To view HTTP statistics, click **HTTP** in the menu and select **Statistics**.
- ◆ To configure HTTP settings, click **HTTP** in the menu and select **Configuration**.

Using the CLI

- ◆ To enter the HTTP command level: `enable -> config -> http`

Using XML

- ◆ Include in your file: `<configgroup name="http server">`

Table 9-5 HTTP Authentication Settings

HTTP Authentication Settings	Description
URI	Enter the Uniform Resource Identifier (URI). <i>Note: The URI must begin with '/' to refer to the filesystem.</i>
Auth Type	Select the authentication type: <ul style="list-style-type: none"> ◆ None = no authentication is necessary. ◆ Basic = encodes passwords using Base64. ◆ Digest = encodes passwords using MD5. ◆ SSL = can only be accessed over SSL (no password is required). ◆ SSL/Basic = is accessible only over SSL and encodes passwords using Base64. ◆ SSL/Digest = is accessible only over SSL and encodes passwords using MD5. <i>Note: When changing the parameters of Digest or SSL Digest authentication, it is often best to close and reopen the browser to ensure it does not attempt to use cached authentication information.</i>
Submit (button)	Click the Submit button after entering the HTTP authentication information.
Delete (button)	Click the Delete button to delete the HTTP authentication information.

To Configure HTTP Authentication

Using Web Manager

- ◆ To configure HTTP Authentication, click **HTTP** in the menu and select **Authentication**.

Using the CLI

- ◆ To enter the HTTP command level: `enable -> config -> http`

Using XML

- ◆ Include in your file:

```
<configgroup name="http authentication uri"
instance="uri name">
```

RSS Settings

Really Simple Syndication (RSS) (sometimes referred to as Rich Site Summary) is a method of feeding online content to Web users. Instead of actively searching for configuration changes, RSS feeds permit viewing only relevant and new information regarding changes made via an RSS publisher. The RSS feeds may also be stored to the file system `cfg_log.txt` file.

Table 9-6 RSS Settings

RSS Settings	Description
RSS Feed	Select On or Off for RSS feeds to an RSS publisher. The default setting is off.
Persistent	Select On or Off for RSS feed to be written to a file (<code>cfg_log.txt</code>) and to be available across reboots. The default setting is off.
Max Entries	Set the maximum number of log entries. Only the last Max Entries are cached and viewable.

RSS Settings	Description
View	Click the button to view RSS feeds.
Clear	Click the button to clear RSS feed data.

To Configure RSS Settings

Using Web Manager

- ◆ To configure RSS and view current RSS statistics, click **RSS** in the menu.

Using the CLI

- ◆ To enter the RSS command level: `enable -> config -> rss`

Using XML

- ◆ Include in your file: `<configgroup name="rss">`

Real Time Clock (RTC) Settings

The current date and time displayed on the EDS-MD can be modified.

Table 9-7 RTC Settings

RTC Settings	Description
Time Zone	Select the time zone corresponding to the location of the EDS-MD.
Date	Select the Year , Month and Day corresponding to the current date at the location of the EDS-MD
Time (24 hour)	Select the Hour , Min (minutes) and Sec (seconds) corresponding to the current time at the location of the EDS-MD.

To Configure RTC Settings

Using Web Manager

- ◆ To configure RTC, click **RTC** in the menu.

Using the CLI

- ◆ To enter the RTC command level: `enable -> config -> rtc`

Using XML

- ◆ Include in your file: `<configgroup name="clock">`

Email Settings

View and configure email alerts relating to events occurring within the system.

Table 9-8 Email Configuration

Email – Configuration Settings	Description
To	Enter the email address to which the email alerts will be sent. Multiple addresses are separated by semicolon (;). Required field if email is to be sent.
CC	Enter the email address to which the email alerts will be copied. Multiple addresses are separated by semicolon (;).
From	Enter the email address from which email alerts will be sent. Multiple addresses are separated by semicolon (;). Required field if email is to be sent.
Reply To	Enter the email address to list in the Reply-To field of the email alert.
Subject	Note: Enter the subject for the email alert.
Message File	Enter the path of the file to send with the email alert. This file appears within the message body of the email, not as an attachment.
Overriding Domain	Enter an overriding domain to forge the sender Domain Name in the outgoing email message. This might be necessary, for example, if this device is located behind a firewall whose IP address resolves to a different domain name than this device. For SPAM protection, many SMTP servers perform reverse lookups on the sender IP address to the originator of the message.
Server Port	Enter the server port to be used when configuring the email subsystem for delivery of email notifications.
Local Port	Enter the local port to be used when configuring the email subsystem for delivery of email notifications.
Priority	Select the priority level for the email alert: <ul style="list-style-type: none"> ◆ Urgent ◆ High ◆ Normal ◆ Low ◆ Very Low

To View, Configure, and Send Email

Note: The following section describes the steps to view and configure Email 1 settings; these steps apply to other emails available for the device.

Using Web Manager

- ◆ To view Email statistics, click **Email** in the menu and select **Email 1 -> Statistics**.
- ◆ To configure basic Email settings, click **Email** in the menu and select **Email 1 -> Configuration**.
- ◆ To send an email, click **Email** in the menu and select **Email 1 -> Send Email**.

Using the CLI

- ◆ To enter Email command level: `enable -> email 1`

Using XML

- ◆ Include in your file: `<configgroup name="email" instance="1">`

10: Security Settings

The EDS-MD device supports Secure Shell (SSH) and Secure Sockets Layer (SSL). SSH is a network protocol for securely accessing a remote device. SSH provides a secure, encrypted communication channel between two hosts over a network. It provides authentication and message integrity services.

Secure Sockets Layer (SSL) is a protocol that manages data transmission security over the Internet. It uses digital certificates for authentication and cryptography against eavesdropping and tampering. It provides encryption and message integrity services. SSL is widely used for secure communication to a web server. SSL uses certificates and private keys.

Note: *The device supports SSLv3 and its successors, TLS1.0 and TLS1.1. An incoming SSLv2 connection attempt is answered with an SSLv3 response. If the initiator also supports SSLv3, SSLv3 handles the rest of the connection.*

Public Key Infrastructure

Public key infrastructure (PKI) is based on an encryption technique that uses two keys: a public key and private key. Public keys can be used to encrypt messages which can only be decrypted using the private key. This technique is referred to as asymmetric encryption, as opposed to symmetric encryption, in which a single secret key is used by both parties.

TLS (SSL)

Transport Layer Security (TLS) and its predecessor, Secure Sockets Layer (SSL), use asymmetric encryption for authentication. In some scenarios, only a server needs to be authenticated, in others both client and server authenticate each other. Once authentication is established, clients and servers use asymmetric encryption to exchange a secret key. Communication then proceeds with symmetric encryption, using this key.

SSH and some authentication methods on the EDS-MD device servers make use of SSL. The EDS-MD 4/8/16 unit supports SSLv2, SSLv3, and TLS1.0.

TLS/SSL application hosts use separate digital certificates as a basis for authentication in both directions: to prove their own identity to the other party, and to verify the identity of the other party. In proving its own authenticity, the EDS-MD device servers will use its own "personal" certificate. In verifying the authenticity of the other party, the EDS-MD devices will use a "trusted authority" certificate.

In short:

- ◆ When using EAP-TLS, the EDS-MD device server needs a personal certificate with matching private key to identify itself and sign its messages.
- ◆ When using EAP-TLS, EAP-TTLS or PEAP, the EDS-MD unit needs the authority certificate(s) that can authenticate those it wishes to communicate with.

Digital Certificates

The goal of a certificate is to authenticate its sender. It is analogous to a paper document that contains personal identification information and is signed by an authority, for example a notary or government agency. With digital certificates, a cryptographic key is used to create a unique digital signature.

Trusted Authorities

A private key is used by a trusted certificate authority (CA) to create a unique digital signature. Along with this private key is a certificate of authority, containing a matching public key that can be used to verify the authority's signature but not re-create it.

A chain of signed certificates, anchored by a root CA, can be used to establish a sender's authenticity. Each link in the chain is certified by a signed certificate from the previous link, with the exception of the root CA. This way, trust is transferred along the chain, from the root CA through any number of intermediate authorities, ultimately to the agent that needs to prove its authenticity.

Obtaining Certificates

Signed certificates are typically obtained from well-known CAs, such as VeriSign, Inc. This is done by submitting a certificate request for a CA, typically for a fee. The CA will sign the certificate request, producing a certificate/key combo: the certificate contains the identity of the owner and the public key, and the private key is available separately for use by the owner.

As an alternative to acquiring a signed certificate from a CA, you can act as your own CA and create self-signed certificates. This is often done for testing scenarios, and sometimes for closed environments where the expense of a CA-signed root certificate is not necessary.

Self-Signed Certificates

A few utilities exist to generate self-signed certificates or sign certificate requests. The EDS-MD device servers also have the ability to generate its own self-signed certificate/key combo. You can use XML to export the certificate in PEM format, but you cannot export the key. Hence, the internal certificate generator can only be used for certificates that are to identify that particular EDS-MD module.

Certificate Formats

Certificates and private keys can be stored in several file formats. Best known are PKCS12, DER and PEM. Certificate and key can be in the same file or in separate files. Additionally, the key can be either be encrypted with a password or left in the clear. However, EDS-MD device servers currently only accepts separate PEM files, with the key unencrypted.

Several utilities exist to convert between the formats.

OpenSSL

OpenSSL is a widely used open source set of SSL related command line utilities. It can act as server or client. It can also generate or sign certificate requests, and can convert from and to several different of formats.

OpenSSL is available in binary form for Linux and Windows.

To generate a self-signed RSA certificate/key combo:

```
openssl req -x509 -nodes -days 365 -newkey rsa:1024 -keyout mp_key.pem -
out mp_cert.pem
```

See www.openssl.org or www.madboa.com/geek/openssl for more information.

Note: *Signing other certificate requests is also possible with OpenSSL but the details of this process are outside the scope of this document.*

Steel Belted RADIUS

Steel Belted RADIUS is a commercial RADIUS server from Juniper Networks that provides a GUI administration interface. It also provides a certificate request and self-signed certificate generator.

The self-signed certificate has extension .sbrpvk and is in the PKCS12 format. OpenSSL can convert this into a PEM format certificate and key:

```
openssl pkcs12 -in sbr_certkey.sbrpvk -nodes -out sbr_certkey.pem
```

The sbr_certkey.pem file contains both certificate and key. If loading the SBR certificate into an EDS-MD device server as an authority, you will need to edit it:

1. Open the file in any plain text editor.
2. Delete all info before "----- BEGIN CERTIFICATE-----" and after "----- END CERTIFICATE-----", and then save as sbr_cert.pem.

SBR accepts trusted-root certificates in the DER format. Again, OpenSSL can convert any format into DER:

```
openssl x509 -inform pem -in mp_cert.pem -outform der -out mp_cert.der
```

Note: *With SBR, when the identity information includes special characters such as dashes and periods, SBR changes the format it uses to store these strings and becomes incompatible with the current EDS-MD device server release. Support may be added for this and other formats in future releases.*

Free RADIUS

Note: Free RADIUS is another versatile Linux open-source RADIUS server.

SSH Settings

SSH is a network protocol for securely accessing a remote device over an encrypted channel. This protocol manages the security of internet data transmission between two hosts over a network by providing encryption, authentication, and message integrity services.

Configuration is required when the EDS-MD device is either (1) the SSH server or (2) an SSH client. The SSH server is used by the CLI (Command Mode) and for tunneling in Accept Mode. The SSH client is for tunneling in Connect Mode.

To configure the EDS-MD device server as an SSH server, there are two requirements:

- ◆ **Defined Host Keys:** both private and public keys are required. These keys are used for the Diffie-Hellman key exchange (used for the underlying encryption protocol).
- ◆ **Defined Users:** these users are permitted to connect to the EDS-MD device SSH server.

SSH Server Host Keys

The SSH Server Host Keys are used by all applications that play the role of an SSH Server. Specifically Tunneling in Accept Mode. These keys can be created elsewhere and uploaded to the device or automatically generated on the device.

If uploading existing keys, take care to ensure the Private Key will not be compromised in transit. This implies the data is uploaded over some kind of secure private network.

Note: Some SSH Clients require RSA Host Keys to be at least 1024 bits in size.

Table 10-1 SSH Server Host Keys

SSH Settings	Description
Private Key	Click Choose File to browse to and select the existing private key you want to upload. In Web Manager, you can also browse to the private key to be uploaded. Be sure the private key will not be compromised in transit. This implies the data is uploaded over some kind of secure private network.
Public Key	Click Choose File to browse to and select the existing public key you want to upload. In Web Manager, you can also browse to the public key to be uploaded.
Key Type	Select a key type to use for the new key: <ul style="list-style-type: none"> ◆ RSA ◆ DSA
Bit Size	Select a bit length for the new key: <ul style="list-style-type: none"> ◆ 512 ◆ 768 ◆ 1024
Submit (button)	Click the Submit button after setting the information for Upload Keys or Create New Keys .

Note: SSH Keys from other programs may be converted to the required EDS-MD 4/8/16 unit format. Use Open SSH to perform the conversion.

SSH Client Known Hosts

The SSH Client Known Hosts are used by all applications that play the role of an SSH Client. Specifically in Connect Mode. Configuring these public keys are optional but if they exist another layer of security is offered which helps prevent Man-in-the-Middle (MITM) attacks.

Table 10-2 SSH Client Known Hosts

SSH Settings	Description
Server	Specify either a DNS Hostname or IP Address when adding public host keys for a Server. This Server name should match the name used as the Remote Address in Connect Mode Tunneling.
Public RSA Key	Click Choose File to browse to and select the existing public RSA key you want to use with this user. In Web Manager, you can also browse to the public RSA key to be uploaded. If authentication is successful with the key, no password is required.
Public DSA Key	Click Choose File to browse to and select the existing public DSA key you want to use with this user. In Web Manager, you can also browse to the public DSA key to be uploaded. If authentication is successful with the key, no password is required.
Submit (button)	Click the Submit button after setting the information for SSH Client: Known Hosts .

Note: These settings are not required for communication. They protect against Man-In-The-Middle (MITM) attacks.

SSH Server Authorized Users

The SSH Server Authorized Users are used by all applications that play the role of an SSH Server and specifically Tunneling in Accept Mode. Every user account must have a Password.

The user's Public Keys are optional and only necessary if public key authentication is wanted. Using public key authentication will allow a connection to be made without the password being asked at that time.

Note: When uploading the security keys, ensure the keys are not compromised in transit.

Table 10-3 SSH Server Authorized Users

SSH Settings	Description
Username	Enter a new username or edit an existing one.
Password	Enter a new password or edit an existing one.
Public RSA Key	Click Choose File to browse to and select the existing public RSA key you want to use with this user. In Web Manager, you can also browse to the public RSA key to be uploaded. If authentication is successful with the key, no password is required.
Public DSA Key	Click Choose File to browse to and select the existing public DSA key you want to use with this user. In Web Manager, you can also browse to the public DSA key to be uploaded. If authentication is successful with the key, no password is required.
Add/Edit (key)	Click the Add/Edit button after setting the information for SSH Client: Authorized Users .

SSH Client Users

The SSH Client Users are used by all applications that play the role of an SSH Client. Specifically Tunneling in Connect Mode. To configure the EDS-MD device server as an SSH client, an SSH client user must be both configured and also exist on the remote SSH server.

At the very least, a Password or Key Pair must be configured for a user. The keys for public key authentication can be created elsewhere and uploaded to the device or automatically generated on the device.

If uploading existing Keys, take care to ensure the Private Key will not be compromised in transit. This implies the data is uploaded over some kind of secure private network.

The default Remote Command is '<Default login shell>' which tells the SSH Server to execute a remote shell upon connection. This can be changed to anything the SSH Server on the remote host can execute.

Note: *If you are providing a key by uploading a file, make sure that the key is not password protected.*

Table 10-4 SSH Client Users

SSH Settings	Description
Username	Enter the name that the device uses to connect to an SSH server.
Password	Enter the password associated with the username.
Remote Command	Enter the command that can be executed remotely. Default is shell, which tells the SSH server to execute a remote shell upon connection. This command can be changed to anything the remote host can perform.
Private Key	Click Choose File to browse to and select the existing private key you want to upload. In Web Manager, you can also browse to the private key to be uploaded. Be sure the private key will not be compromised in transit. This implies the data is uploaded over some kind of secure private network.
Public Key	Click Choose File to browse to and select the existing public key you want to upload. In Web Manager, you can also browse to the public key to be uploaded.
Key Type	Select a bit length for the key: <ul style="list-style-type: none"> ◆ RSA ◆ DSA
Add/Edit (button)	Click the Add/Edit button after completing the Username, Password, and Remote Command fields above, and selecting the key and key type.

Table 10-5 Create New Keys

SSH Settings	Description
Username	Enter the name that the device uses to connect to an SSH server.
Key Type	Select a bit length for the key: <ul style="list-style-type: none"> ◆ RSA ◆ DSA

SSH Settings	Description
Bit Size	<p>Select the bit length of the new key:</p> <ul style="list-style-type: none"> ◆ 512 ◆ 768 ◆ 1024 <p>Using a larger Bit Size takes more time to generate the key. Approximate times are:</p> <ul style="list-style-type: none"> ◆ 1 second for a 512 bit RSA key ◆ 1 second for a 768 bit RSA key ◆ 1 second for a 1024 bit RSA key ◆ 2 seconds for a 512 bit DSA key ◆ 2 seconds for a 768 bit DSA key ◆ 20 seconds for a 1024 bit DSA key <p>Note: Some SSH clients require RSA host keys to be at least 1024 bits long. This device generates keys up to 2048 bits long.</p>
Submit (button)	Click the Submit button after entering the information for the new key.

To Configure SSH Settings

Using Web Manager

- ◆ To configure SSH, click **SSH** in the menu.

Using the CLI

- ◆ To enter the SSH command level: `enable -> ssh`

Using XML

- ◆ Include in your file: `<configitem name="ssh username">`

SSL Settings

Secure Sockets Layer (SSL) is a protocol for managing the security of data transmission over the Internet. It provides encryption, authentication, and message integrity services. SSL is widely used for secure communication to a web server.

Certificate/Private key combinations can be obtained from an external Certificate Authority (CA) and uploaded into the unit. Self-signed certificates with associated private key can be generated by the device server itself.

Note: The blue text in the XML command strings of this chapter are to be replaced with a user-specified name.

Create a New Credential

After creating a new credential, you can either establish your credential through [Certificate and Key Generation](#) or [Upload Certificate](#).

Table 10-6 Create a New Credentials

Upload Field	Description
Create new credential	Enter the name of the new credential to be created.
Submit (button)	Click the Submit button after entering the new credential name.

To Create a New Credential

Using Web Manager

- ◆ To create a new credential, click **SSL** in the menu and select **Credentials**.

Using the CLI

- ◆ To enter the SSL command level: `enable -> ssl`
- ◆ To enter the Credentials command level: `enable -> ssl -> credentials`

Using XML

- ◆ Not applicable.

Upload Certificate

SSL certificates identify the EDS-MD device server to peers. Certificate and key pairs can be uploaded to the EDS-MD unit through either the CLI or XML import mechanisms. Certificates can be identified on the EDS-MD device server by a name provided at upload time.

Table 10-7 Upload Certificate Settings

Upload Certificate Settings	Description
New Certificate	Click Choose File to browse to and select the new certificate file to be uploaded. The SSL certificate to be uploaded. RSA or DSA certificates are allowed. The format of the certificate must be PEM. It must start with "-----BEGIN CERTIFICATE-----" and end with "-----END CERTIFICATE-----". Some Certificate Authorities add comments before and/or after these lines. Those need to be deleted before upload.
New Private Key	Click Choose File to browse to and select the certificate type being uploaded. The key needs to belong to the certificate entered above. The format of the file must be PEM. It must start with "-----BEGIN RSA PRIVATE KEY-----" and end with "-----END RSA PRIVATE KEY-----". Read DSA instead of RSA in case of a DSA key. Some Certificate Authorities add comments before and/or after these lines. Those need to be deleted before upload.
Submit (button)	Click the Submit button after selecting the certificate and private key information for the uploaded certificate.

Certificate and Key Generation

The EDS-MD device server can generate self signed certificates and their corresponding keys. This can be done for both the rsa and dsa certificate formats. Certificates can be identified on the EDS-MD unit by a name provided at generation time.

Table 10-8 Certificate and Key Generation Settings

Certificate Generation Settings	Description
Country (2 Letter Code)	Enter the 2-letter country code to be assigned to the new self-signed certificate. Examples: US for United States and CA for Canada
State/Province	Enter the state or province to be assigned to the new self-signed certificate.
Locality (City)	Enter the city or locality to be assigned to the new self-signed certificate.
Organization	Enter the organization to be associated with the new self-signed certificate.
Organization Unit	Enter the organizational unit to be associated with the new self-signed certificate.
Common Name	Enter the common name to be associated with the new self signed certificate, preferably matching the host name or the ip address of the device, whichever will be the intended access approach. This is a required field.
Expires	Enter the expiration date, in mm/dd/yyyy format, for the new self-signed certificate. Example: An expiration date of May 9, 2018 is entered as 05/09/2018.
Type	Select the type of key: <ul style="list-style-type: none"> ◆ RSA = Public-Key Cryptography algorithm based on large prime numbers, invented by Rivest Shamir and Adleman. Used for encryption and signing. ◆ DSA = Digital Signature Algorithm also based on large prime numbers, but can only be used for signing. Developed by the US government to avoid the patents on RSA.
Key Length	Select the bit size of the new self-signed certificate. Choices are: <ul style="list-style-type: none"> ◆ 512 bit ◆ 768 bit ◆ 1024 bit ◆ 2048 bit The larger the bit size, the longer it takes to generate the key.
Submit (button)	Click the Submit button after setting the information for new self-signed certificate.

To Configure an Existing SSL Credential

Follow these steps after a new credential has been established via [Create a New Credential on page 75](#).

Using Web Manager

- ◆ To configure an existing SSL Credential, click **SSL** in the menu, select **Credentials**, and click on the name of an existing SSL credential.

Using the CLI

- ◆ To enter the SSL command level: `enable -> ssl`
- ◆ To enter the Credential command level: `enable -> ssl -> credentials`

Using XML

- ◆ Include in your file:

```
<configgroup name="ssl">
  and <configitem name="credentials" instance="name">
  and <value name="RSA certificate"/> or <value name="DSA certificate"/>
```

Trusted Authorities

One or more authority certificates are needed to verify a peer's identity. These certificates do not require a private key.

Trusted Authorities Settings	Description
Authority	Click Choose File to browse to and select the SSL authority certificate. RSA or DSA certificates are allowed. The format of the authority certificate can be PEM or PKCS7. PEM files must start with "-----BEGIN CERTIFICATE-----" and end with "-----END CERTIFICATE-----". Some Certificate Authorities add comments before and/or after these lines. Those need to be deleted before upload.
Delete	Click the Delete button beside a specific certificate authority to delete it.
Delete All	Click the Delete All button to delete all existing certificate authorities.

Using Web Manager

- ◆ To upload an Authority Certificate, click **SSL** in the menu and select **Trusted Authorities**.

Using the CLI

- ◆ To enter the SSL command level: `enable -> ssl`
- ◆ To enter the Trusted Authorities command level: `enable -> ssl -> trusted authorities`

Using XML

- ◆ Include in your file:

```
<configgroup name="ssl">
  and <configitem name="trusted authority" instance="1">
  and <configitem name="intermediate authority" instance="1">
```

11: Maintenance and Diagnostics Settings

Filesystem Settings

Use the file system to list, view, create, upload, copy, move, remove, and transfer files. The EDS-MD device server uses an EXT3 flash file system to store files.

Statistics

The filesystem statistics page displays statistics and current usage information of the flash filesystem. The filesystem can be formatted here.

Warning: *Formatting the filesystem will delete all files on it.*

When the USB drive is connected to one of the two USB ports on the device, it will be automatically mounted and accessed using the filesystem. USB drives can be simultaneously connected to both the USB ports.

Table 11-1 File Statistics

Filesystem Commands	Description
Format	Displays a list of files on the EDS-MD 4/8/16 device, and their respective sizes.

To View Statistics

Using Web Manager

- ◆ To view statistics, format the filesystem or configure USB auto mount features, click **Filesystem** in the menu and select **Statistics**.

This is a journaled file system, which means that changes to the file system are recorded before the actual changes themselves are made. In the event of power loss, the use of journaling can usually recover from changes that had been started but not completed.

Some file systems may contain a 'lost+found' directory. In the event of power loss in the midst of file system I/O, file data that cannot be fully recovered will be placed in this directory. It is recommended to always restart the system from the Web Manager application or the CLI.

Note: *It is recommended to always use the Web Manager application or the CLI to shutdown/restart the system.*

File Display

View the list of existing files and their contents in the ASCII or hexadecimal formats.

Table 11-2 File Display Settings

File Display Commands	Description
ls	Displays a list of files on the EDS-MD 4/8/16 device, and their respective sizes.
cat	Displays the specified file in ASCII format.
dump	Displays the specified file in a combination of hexadecimal and ASCII formats.
pwd	Print working directory.
cd	Change directories.
show tree	Display file/directory tree.

To Display Files

Using Web Manager

- ◆ To view existing files and file contents, click **Filesystem** in the menu and select **Browse**.

Using the CLI

- ◆ To enter the Filesystem command level: `enable -> filesystem`

Using XML

- ◆ Not applicable.

File Modification

The EDS-MD 4/8/16 device server allows for the creation and removal of files on the Filesystem.

Table 11-3 File Modification Settings

File Modification Commands	Description
rm	Removes the specified file from the file system.
touch	Creates the specified file as an empty file.
cp	Creates a copy of a file.
mkdir	Creates a directory on the file system.
rmdir	Removes a directory from the file system.
format	Format the file system and remove all data.

File Transfer

Files can be transferred to and from the EDS-MD 4/8/16 device via the TFTP protocol. This can be useful for saving and restoring XML configuration files. Files can also be uploaded via HTTP.

Table 11-4 File Transfer Settings

File Transfer Settings	Description
Create	Type in a File or Directory name and click the Create button. The newly created File or Directory will appear above.
Upload File	Click Choose FileBrowse to browse to location of the file to be uploaded via HTTP. Click Upload to upload the chosen file.
Copy File	Enter the Source and Destination name for file to be copied and click the Copy button.
Move	Enter the Source and Destination name for file to be moved and click the Move button.
TFTP	
Action	Select the action that is to be performed via TFTP: <ul style="list-style-type: none"> ◆ Get = a “get” command will be executed to store a file locally. ◆ Put = a “put” command will be executed to send a file to a remote location.
Local File	Enter the name of the local file on which the specified “get” or “put” action is to be performed.
Remote File	Enter the name of the file at the remote location that is to be stored locally (“get”) or externally (“put”).
Host	Enter the IP address or name of the host involved in this operation.
Port	Enter the number of the port involved in TFTP operations.
Transfer (button)	Click the Transfer button after TFTP settings are entered.

To Transfer or Modify Filesystem Files

Using Web Manager

- ◆ To create a new file or directory, upload an existing file, copy or move a file, or view existing files, click **Filesystem** in the menu and select **Browse**.

Using the CLI

- ◆ To enter the Filesystem command level: `enable -> filesystem`

Using XML

- ◆ Not applicable.

Protocol Stack Settings

There are various low level network stack specific items that are available for configuration. This includes settings related to IP, ICMP, ARP and SMTP, which are described in the sections below.

IP Settings

Table 11-5 IP Protocol Stack Settings

Protocol Stack IP Settings	Description
IP Time to Live	This value typically fills the Time To Live in the IP header. SNMP refers to this value as "ipDefaultTTL". Enter the number of hops to be transmitted before the packet is discarded.
Multicast Time to Live	This value fills the Time To Live in any multicast IP header. Normally this value will be one so the packet will be blocked at the first router. It is the number of hops allowed before a Multicast packet is discarded. Enter the value to be greater than one to intentionally propagate multicast packets to additional routers.

To Configure IP Protocol Stack Settings

Using Web Manager

- ◆ To configure IP protocol settings, click **Protocol Stack** in the menu and select **IP**.

Using the CLI

- ◆ To enter the command level: `enable -> config -> ip`

Using XML

- ◆ Include in your file: `<configgroup name="ip">`

ICMP Settings

Table 11-6 ICMP Protocol Stack Settings

Protocol Stack ICMP Settings	Description
State	Click to enable or disable the processing of ICMP messages. This includes both incoming and outgoing messages.

To Configure ICMP Protocol Stack Settings

Using Web Manager

- ◆ To configure ICMP protocol settings, click **Protocol Stack** in the menu and select **ICMP**.

Using the CLI

- ◆ To enter the command level: `enable -> config -> icmp`

Using XML

- ◆ Include in your file: `<configgroup name="icmp">`

To View ICMP Protocol Stack Settings**Using Web Manager**

- ◆ To view ICMPv6 protocol settings, click **Protocol Stack** in the menu and select **ICMPv6**.

Using the CLI

- ◆ Not applicable.

Using XML

- ◆ Not applicable.

ARP Settings**Table 11-7 ARP Protocol Stack Settings**

Protocol Stack ARP Settings	Description
IP Address	Enter the IP address to add to the ARP cache. After entering the MAC address, click the Add button.
MAC Address	Enter the MAC address to add to the ARP cache. After also entering the IP address, click the Add button.
Add (button)	Click the Add button after entering the ARP Cache information.
Remove	Click the Remove link beside a specific address to remove it.
Remove All	Click the Remove All link underneath all listed addresses to remove all the addresses.

To Configure ARP Network Stack Settings**Using Web Manager**

- ◆ To configure ARP protocol settings, click **Protocol Stack** in the menu and select **ARP**.

Using the CLI

- ◆ To enter the command level: `enable -> config -> arp`

Using XML

- ◆ Include in your file: `<configgroup name="arp">`

SMTP Settings

Table 11-8 SMTP Protocol Stack Settings

Protocol Stack SMTP Settings	Description
Relay Address	Enter the relay address to be used to direct all outbound email messages through a mail server.
Relay Port	Enter the relay port to be used for all outbound email messages through a mail server.

To Configure SMTP Protocol Stack Settings

Using Web Manager

- ◆ To configure ARP protocol settings, click **Protocol Stack** in the menu and select **SMTP**.

Using the CLI

- ◆ To enter the command level: `enable -> config -> smtp`

Using XML

- ◆ Include in your file: `<configgroup name="smtp" >`

Diagnostics

The EDS-MD device servers have several tools for diagnostics and statistics. Various options allow for the configuration or viewing of IP socket information, ping, traceroute, memory, and processes.

Hardware

To View Hardware Information

Using Web Manager

- ◆ To view hardware information, click **Diagnostics** in the menu and select **Hardware**.

Using the CLI

- ◆ To enter the command level: `enable -> device, show hardware information`

Using XML

- ◆ Include in your file: `<statusgroup name="hardware" >`

IP Sockets

You can view the list of listening and connected IP sockets.

To View the List of IP Sockets

Using Web Manager

- ◆ To view IP Sockets, click **Diagnostics** in the menu and select **IP Sockets**.

Using the CLI

- ◆ To enter the command level: `enable, show ip sockets`

Using XML

- ◆ Include in your file: `<statusgroup name="ip sockets">`

Ping

The ping command can be used to test connectivity to a remote host.

Table 11-9 Ping Settings

Diagnostics: Ping Settings	Description
Host	Enter the IP address or host name for the EDS-MD unit to ping.
Count	Enter the number of ping packets EDS-MD device should attempt to send to the Host . The default is 5 .
Timeout	Enter the time, in seconds, for the EDS-MD to wait for a response from the host before timing out. The default is 5 seconds.
Submit (Button)	Click the Submit button after entering ping information.

To Ping a Remote Host

Using Web Manager

- ◆ To ping a Remote Host, click **Diagnostics** in the menu and select **Ping**.

Using the CLI

- ◆ To enter the command level: `enable, ping <host> <count> <timeout>`

Using XML

- ◆ Not applicable.

Traceroute

Here you can trace a packet from the EDS-MD device server to an Internet host, showing how many hops the packet requires to reach the host and how long each hop takes. If you visit a web site whose pages appear slowly, you can use traceroute to determine where the longest delays are occurring.

Table 11-10 Traceroute Settings

Diagnostics: Traceroute Settings	Description
Host	Enter the IP address or DNS hostname. This address is used to show the path between it and the EDS-MD device when issuing the traceroute command.
Protocol	Select the traceroute protocol from the drop-down menu.
Submit (button)	Click the Submit button after entering traceroute information.

To Perform a Traceroute

Using Web Manager

- ◆ To perform a Traceroute, click **Diagnostics** in the menu and select **Traceroute**.

Using the CLI

- ◆ To enter the command level: `enable, trace route <host>`

Using XML

- ◆ Not applicable.

Log

Table 11-11 Log Settings

Diagnostics: Log	Description
Output	Select a diagnostic log output type: <ul style="list-style-type: none"> ◆ Disable - Turn off the logging feature. ◆ Filesystem - Directs logging to /log.txt. ◆ Line (1 2 3 or 4) - Directs logging to the selected serial line.
Max Length	Set the maximum length of the log.txt file in Kbytes. <i>Note: This setting becomes available when Filesystem is selected.</i>

To Configure the Diagnostic Log Output

Using Web Manager

- ◆ To configure the Diagnostic Log output, click **Diagnostics** in the menu and select **Log**.

Using the CLI

- ◆ To enter the command level: `enable -> config -> diagnostics -> log`

Using XML

- ◆ Include in your file:

```
<configgroup name="diagnostics">
and
```

```
<configitem name="log">
```

Memory

The memory information shows the total, used, and available memory (in kilobytes).

To View Memory Usage

Using Web Manager

- ◆ To view memory information, click **Diagnostics** in the menu and select **Memory**.

Using the CLI

- ◆ To enter the command level: `enable -> device, show memory`

Using XML

- ◆ Include in your file: `<statusgroup name="memory">`

Processes

The EDS-MD 4/8/16 device shows all the processes currently running on the system. It shows the Process ID (PID), Parent Process ID (PPID), user, CPU percentage, percentage of total CPU cycles, and process command line information.

To View Process Information

Using Web Manager

- ◆ To view process information, click **Diagnostics** in the menu and select **Processes**.

Using the CLI

- ◆ To enter the command level: `enable, show processes`

Using XML

- ◆ Include in your file: `<statusgroup name="processes">`

Threads

The EDS-MD 4/8/16 unit threads information shows details of threads in the `ltrx_evo` task which can be useful for technical experts in debugging.

To View Thread Information

Using Web Manager

- ◆ To view thread information, click **Diagnostics** in the menu and select **Threads**.

Using the CLI

- ◆ To enter the command level: `enable -> device, show task state`

System Settings

The EDS-MD device server system settings allow for rebooting the device, restoring factory defaults, uploading new firmware and updating a system's short and long name.

Note: Anytime you reboot the unit, this operation will take some time to complete. Please wait a minimum of 10-20 seconds after rebooting the unit before attempting to make any subsequent connections.

Table 11-12 System Settings

System Settings	Description
State	Click to enable or disable the reboot schedule.
Reboot Device	Click the Reboot button to reboot the device.
Restore Factory Defaults	Click Factory Defaults to restore the device to the original factory settings. All configuration will be lost. The EDS-MD unit automatically reboots upon setting back to the defaults.
Upload New Firmware	FTP to the EDS-MD device. Upload new firmware to the EDS-MD unit by clicking Choose File to browse to the new firmware file, and click Upload button to upload the chosen file to the system. The device automatically reboots upon the installation of new firmware.
Short Name	Enter a short name for the system name. A maximum of 32 characters are allowed.
Long Name	Enter a long name for the system name. A maximum of 64 characters are allowed.
Submit (button)	Click Submit after entering the system name.

To Reboot or Restore Factory Defaults

Using Web Manager

- ◆ To access the area with options to reboot, restore to factory defaults, upload new firmware, update the system name (long or short names) or to view the current configuration, click **System** in the menu.

Using the CLI

- ◆ To enter the command level: `enable`

Using XML

- ◆ Include in your file: `<configgroup name="xml import control">`

12: Management Interface Settings

Command Line Interface Settings

The Command Line Interface settings allow you to control how users connect to and interact with the command line of the EDS-MD device server. It is possible to configure access via the Telnet and SSH protocols, in addition to general CLI options.

Basic CLI Settings

The basic CLI settings control general CLI access and usability options.

Table 12-1 CLI Configuration Settings

Command Line Interface Configuration Settings	Description
Login Password	Enter the password for the admin account. "PASS" is the default password.
Enable Level Password	Enter the password for access to the Command Mode Enable level. There is no password by default.
Quit Connect Line	Enter the Quit Connect Line string to be used to terminate a Telnet and SSH session and resume the CLI. Type <control> before the key to be pressed while holding down the [Ctrl] key (example: <control>L)
Inactivity Timeout	Set a time period in which the CLI session should disconnect if no data is received. Enter 0 to disable. Blank the display field to restore the default.
Line Authentication	Select to enable or disable authentication for CLI access on the serial lines.

To View and Configure Basic CLI Settings

Using Web Manager

- ◆ To view CLI statistics, click **CLI** in the menu and select **Statistics**.
- ◆ To configure basic CLI settings, click **CLI** in the menu and select **Configuration**.

Using the CLI

- ◆ To enter CLI command level: `enable -> config -> cli`

Using XML

- ◆ Include in your file: `<configgroup name="cli">`

Telnet Settings

The Telnet settings control CLI access to the EDS-MD 4/8/16 device server telnet over the Telnet protocol.

Table 12-2 Telnet Settings

Telnet Settings	Description
Telnet State	Select to enable or disable CLI access via Telnet
Telnet Port	Enter an alternative Telnet Port to override the default used by the CLI server. Blank the field to restore the default.
Telnet Max Sessions	Specify the maximum number of concurrent Telnet sessions that will be allowed.
Telnet Authentication	Select to enable or disable authentication for Telnet logins.

To Configure Telnet CLI Settings

Using Web Manager

- ◆ To configure Telnet settings, click **CLI** in the menu and select **Configuration**.

Using the CLI

- ◆ To enter the Telnet command level: `enable -> config -> cli -> Telnet`

Using XML

- ◆ Include in your file:


```
<configgroup name="Telnet">
and
<configitem name="state">
and
<configitem name="authentication">
```

SSH CLI Settings

The SSH settings control CLI access to the EDS-MD device over the SSH protocol.

Table 12-3 SSH Settings

SSH Settings	Description
SSH State	Select to enable or disable CLI access via SSH.
SSH Port	Specify the SSH Port and override the default, as needed. Blank the field to restore the default.
SSH Max Sessions	Specify the maximum number of concurrent SSH sessions that will be allowed.

To Configure SSH Settings

Using Web Manager

- ◆ To configure SSH settings, click **CLI** in the menu and select **Configuration**.

Using the CLI

- ◆ To enter the SSH command level: `enable -> config -> cli -> ssh`

Using XML

- ◆ Include in your file:

```
<configgroup name="ssh"> and <configitem name="state">
```

XML Settings

The EDS-MD device server allows for the configuration of units using an XML configuration record (XCR). Export a current configuration for use on other EDS-MD unit or import a saved configuration file.

XML: Export Configuration

You can export the current system configuration in XML format. The generated XML file can be imported later to restore a configuration. It can also be modified and imported to update the configuration on this EDS-MD unit or another. The XML data can be dumped to the screen or exported to a file on the file system.

By default, all groups are exported. You may also select a subset of groups to export.

Table 12-4 XML Exporting Configuration

XML Export Configuration Settings	Description
Export to browser	Select this option to export the XCR data in the selected fields to the browser. Use the "xcr dump" command to export the data to the browser.
Export to local file	Select this option to export the XCR data to a file on the device. If you select this option, enter a file name for the XML configuration record. Use the "xcr export" command to export the data to a local file.
Export secrets	Select to export secret password and key information. Use only with a secure link, and save only in secure locations. Note: Only use with extreme caution.
Comments	Select this option to include descriptive comments in the XML.
Lines to Export	Select instances to be exported in the line, serial, tunnel and terminal groups. Click Clear All to clear all checkmarks, or Select All to check all checkmarks.

XML Export Configuration Settings (continued)	Description
Groups to Export	Check the configuration groups that are to be exported to the XML configuration record. The group list should be comma delimited and encased in double quotes. The list of available groups can be viewed with the “xcr list” command. Click Clear All to clear all checkmarks, or Select All but Networking to check all checkmarks except Networking.
Export (button)	Click Export after selecting the XML: Export Configuration settings.

To Export Configuration in XML Format

Using Web Manager

- ◆ To export configuration format, click **XML** in the menu and select **Export Configuration**.

Using the CLI

- ◆ To enter the XML command level: `enable -> xml`

Using XML

- ◆ Not applicable.

XML: Export Status

You can export the current status in XML format. By default, all groups are exported. You may also select a subset of groups to export.

Table 12-5 Exporting Status

XML Export Status Settings	Description
Export to browser	Select this option to export the XCR data in the selected fields to the browser. Use the “xcr dump” command to export the data to the browser.
Export to local file	Select this option to export the XCR data to a file on the device. If you select this option, enter a file name for the XML configuration record. Use the “xcr export” command to export the data to a local file.
Lines to Export	Select instances to be exported in the line, serial, tunnel and terminal groups. Click Clear All to clear all checkmarks, or Select All to check all checkmarks.
Groups to Export	Check the configuration groups that are to be exported to the XML configuration record. The group list should be comma delimited and encased in double quotes. The list of available groups can be viewed with the “xcr list” command. Click Clear Click Clear All to clear all checkmarks, or Select All to check all checkmarks.
Export (button)	Click Export after selecting the XML: Export Status settings.

To Export in XML Format

Using Web Manager

- ◆ To export configuration format, click **XML** in the menu and select **Export Status**.

Using the CLI

- ◆ To enter the XML command level: `enable -> xml`

Using XML

- ◆ Not applicable.

XML: Import Configuration

Here you can import a system configuration from an XML file.

The XML data can be imported from a file on the file system or pasted into a CLI session. The groups to import can be specified at the command line, the default is all groups.

Configuration from External File

This import option requires entering the path and file name of the external XCR file you want to import.

Configuration from Filesystem

This import option picks up settings from a file and your import selections of groups, lines, and instances. The list of files can be viewed from the filesystem level of the CLI.

Line(s) from single line Settings on the Filesystem

This import option copies line settings from an the input file containing only one Line instance to all of the selected Lines.

Table 12-6 Import Configuration from Filesystem Settings

Import Configuration from Filesystem Settings	Description
Filename	Enter the name of the file on the EDS-MD unit (local to its filesystem) that contains XCR data.
Lines to Import	Select filter instances to be imported in the line, serial, tunnel and terminal groups. This affects both Whole Groups to Import and Text List selections. Click Clear All to clear all checkmarks, or Select All to check all checkmarks.
Whole Groups to Import	Select the configuration groups to import from the XML configuration record. This option imports all instances of each selected group. Click Clear All to clear all checkmarks, or Select All but Networking to check all checkmarks except Networking.
Import (button)	Click Import after selecting the XML: Import Configuration settings.

To Import Configuration in XML Format

Using Web Manager

- ◆ To import configuration, click **XML** in the menu and select **Import Configuration**.

Using the CLI

- ◆ To enter the XML command level: `enable -> xml`

Using XML

- ◆ Not applicable.

13: Updating Firmware

Obtaining Firmware

Obtain the most up-to-date firmware and release notes for the unit from the Lantronix Web site (www.lantronix.com/support/downloads/) or by using anonymous FTP (<ftp://ftp.lantronix.com/>).

Loading New Firmware through Web Manager

Upload the firmware using the device web manager System page.

To upload new firmware:

1. Select **System** in the menu bar. The System page appears.

Figure 13-1 Uploading New Firmware

The screenshot shows the EDS-MD web manager interface. On the left is a navigation menu with items like Status, CLI, Diagnostics, DNS, Email, Filesystem, FTP, Host, HTTP, Line, Network, Protocol Stack, Query Port, RSS, SSH, SSL, Syslog, System (highlighted), Terminal, Tunnel, VIP, and XML. The main content area is titled 'System' and contains several sections: 'Reboot Device' with a 'Reboot' button; 'Restore Factory Defaults' with a 'Factory Defaults' button; 'Upload New Firmware' with a file input field, a 'Browse...' button, and an 'Upload' button; 'Name' section with 'Short Name' and 'Long Name' input fields and a 'Submit' button; and 'Current Configuration' table.

Current Configuration	
Firmware Version:	7.2.0.0R24
Short Name:	edsmd16
Long Name:	Lantronix EDS-MD16

At the bottom of the page, it says: Copyright © Lantronix, Inc. 2007-2011. All rights reserved.

2. Click **Browse** (under the **Upload New Firmware** heading) to browse to the firmware file.
3. Select the file and click **Open**.
4. Click **Upload** to install the firmware on the EDS-MD unit.

5. Click **OK** in the confirmation popup which appears. The firmware will be installed and the device will automatically reboot afterwards.
6. Close and reopen the web manager internet browser to view the device's updated web pages.

Note: You may need to increase HTTP Max Bytes in some cases where the browser is sending data aggressively within TCP Windows size limit when file (including firmware upgrade) is uploaded from webpage.

Loading New Firmware through FTP

Firmware may be updated by sending the file to the EDS-MD 4, EDS-MD 8 or EDS-MD 16 device server over an FTP connection. The destination file name on the EDS-MD unit must have a "firmware.rom" type of format. The device will reboot upon successful completion of the firmware upgrade.

Example FTP session:

```
$ ftp 192.168.10.127
Connected to 192.168.10.127.
220 (vsFTPD 2.0.7)
Name (192.168.10.127:user): admin
331 Please specify the password.
Password:
230 Login successful.
Remote system type is UNIX.
Using binary mode to transfer files.
ftp> put edsmd_7_2_0_3R2
200 PORT command successful. Consider using PASV.
150 Ok to send data.
226 File receive OK.
9308164 bytes sent in 3.05 seconds (3047859 bytes/s)
ftp> quit
221 Goodbye.
```


14: Branding the EDS-MD Device

This chapter describes how to brand your EDS-MD device server by using Web Manager and Command Line Interface (CLI). It contains the following sections on customization:

- ◆ [Web Manager Customization](#)
- ◆ [Short and Long Name Customization](#)

Web Manager Customization

Customize the Web Manager's appearance by modifying `index.html`, `style.css`, and the product logo. The style (fonts, colors, and spacing) of the Web Manager is controlled with `style.css`. The text and graphics are controlled with `index.html`. The product logo is the image in top-left corner of the page and defaults to a product name image.

Note: *The recommended dimensions of the new graphic are 300px width and 50px height.*

The Web Manager files are hidden and are incorporated directly into the firmware image but may be overridden by placing the appropriate file in the appropriate directory on the EDS-MD 4/8/16 unit file system.

Web Manager files can be retrieved and overridden with the following procedure:

1. FTP to the EDS-MD 4/8/16 device.
2. Make a directory (`mkdir`) and name it `http/config`.
3. Change to the directory (`cd`) that you created in step 2 (`http/config`).
4. Save the contents of `index.html` and `style.css` by using a web browser and navigating to `http://<EDS-MD hostname>/config/index.html` and `http://<EDS-MD hostname>/config/style.css`.
5. Modify the file as required or create a new one with the same name.
6. To customize the product logo, save the image of your choice as `logo.gif`.
7. Put the file(s) by using `put <filename>`.
8. Type `quit`. The overriding files appear in the file system's `http/config` directory.
9. Restart any open browser to view the changes.
10. If you wish to go back to the default files in the firmware image, simply delete the overriding files from the file system.

Short and Long Name Customization

You can customize the short and long names in your EDS-MD device server. The names display in the CLI show command and in the System web page in the Current Configuration table. The short name is used for the show command. Both names display in the CLI Product Type field.

Note: See [System Settings \(on page 88\)](#) for additional configuration options available on the Systems page.

Table 14-1 Short and Long Name Settings

Name Settings	Description
Short Name	Enter a short name for the system name. A maximum of 32 characters are allowed.
Long Name	Enter a long name for the system name. A maximum of 64 characters are allowed.

To Customize Short or Long Names

Using Web Manager

- ◆ To access the area with options to customize the short name and the long name of the product, or to view the current configuration, click **System** in the menu.

Using the CLI

- ◆ To enter the command level: `enable`

Using XML

- ◆ Include in your file:


```
<configitem name="short name">
and
<configitem name="long name">
```

Appendix A: Lantronix Technical Support

Lantronix offers many resources to support our customers and products at <http://www.lantronix.com/support>. For instance, you can ask a question, find firmware downloads, access the FTP site and search through tutorials. At this site you can also find FAQs, bulletins, warranty information, extended support services and product documentation.

To contact technical support or sales, look up your local office at <http://www.lantronix.com/about/contact.html>. When you report a problem, please provide the following information:

- ◆ Your name, company name, address, and phone number
- ◆ Lantronix product and model number
- ◆ Lantronix MAC address or serial number
- ◆ Firmware version and current configuration
- ◆ Description of the problem
- ◆ Status of the unit when the problem occurred (please try to include information on user and network activity at the time of the problem).

Appendix B: Binary to Hexadecimal Conversions

Many of the unit's configuration procedures require you to assemble a series of options (represented as bits) into a complete command (represented as a byte).

The resulting binary value must be converted to a hexadecimal representation.

Use this chapter to learn to convert binary values to hexadecimal or to look up hexadecimal values in the tables of configuration options. The tables include:

- ◆ Command Mode (serial string sign-on message)
- ◆ AES Keys

Converting Binary to Hexadecimal

Following are two simple ways to convert binary numbers to hexadecimal notation.

Conversion Table

Hexadecimal digits have values ranging from 0 to F, which are represented as 0-9, A (for 10), B (for 11), etc. To convert a binary value (for example, 0100 1100) to a hexadecimal representation, treat the upper and lower four bits separately to produce a two-digit hexadecimal number (in this case, 4C). Use the following table to convert values from binary to hexadecimal.

Scientific Calculator


Another simple way to convert binary to hexadecimal is to use a scientific calculator, such as the one available on the Windows operating systems. For example:

1. On the Windows Start menu, click **Programs -> Accessories -> Calculator**.
2. On the View menu, select **Scientific**. The scientific calculator appears.
3. Click **Bin** (Binary), and type the number you want to convert.

Table B-1 Binary to Hexadecimal Conversion


Decimal	Binary	Hex
0	0000	0
1	0001	1
2	0010	2
3	0011	3
4	0100	4
5	0101	5
6	0110	6
7	0111	7
8	1000	8
9	1001	9
10	1010	A
11	1011	B
12	1100	C
13	1101	D
14	1110	E
15	1111	F

Figure B-2 Windows Scientific Calculator

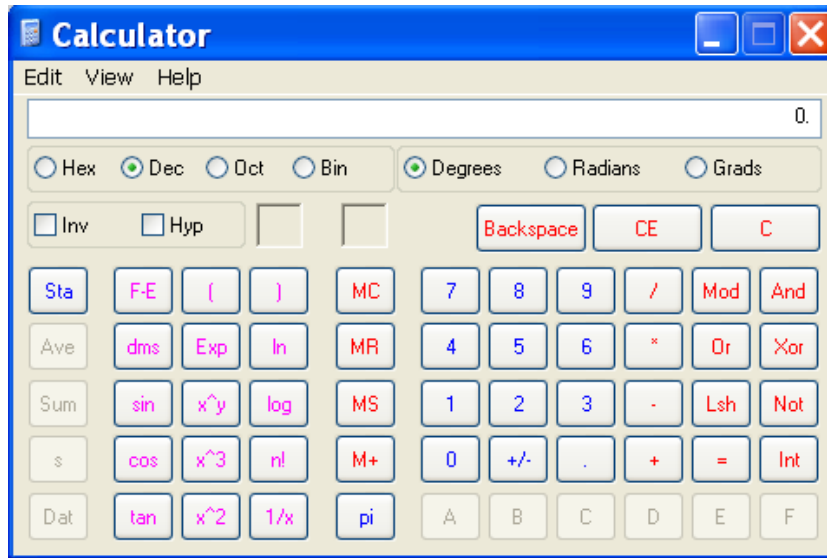

4. Click **Hex**. The hexadecimal value appears.

Figure B-3 Hexadecimal Values in the Scientific Calculator

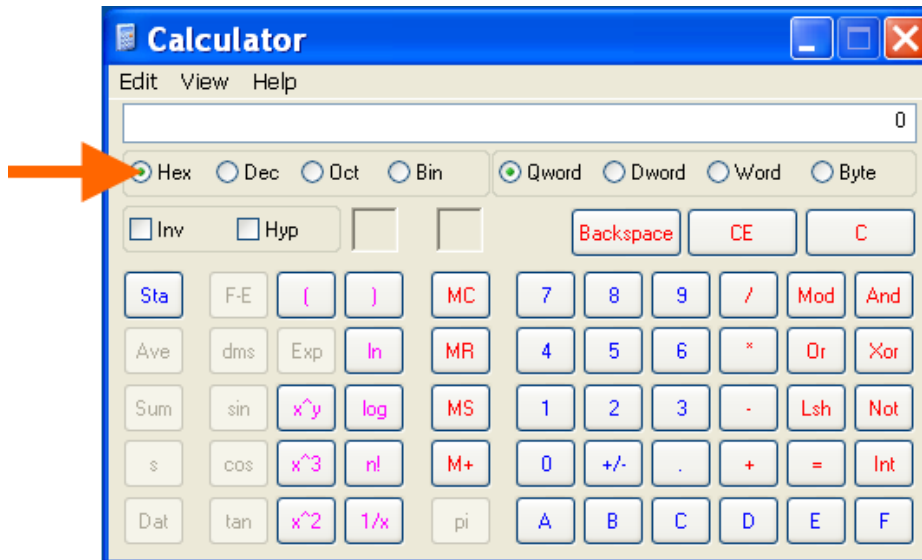

Appendix C: Compliance

(According to ISO/IEC Guide 22 and EN 45014)

Manufacturer's Name & Address:

Lantronix, Inc.
7535 Irvine Center Drive
Suite 100
Irvine, CA 92618, USA

Product Name Model: Lantronix® EDS-MD® 4, EDS-MD 8 and EDS-MD 16 Port Device Servers

Conform to the following standards or other normative documents:

Table C-1 Applicable Medical Standards

Emissions	Immunity
EN 60601-1-2: 2015	EN 60601-1-2: 2015
CISPR 11:2015 + A1: 2016	IEC/EN 61000-4-2: 2009
EN 61000-3-2: 2014	IEC/EN 61000-4-3: 2006 + A1: 2008 + A2: 2010
EN 61000-3-3: 2013	IEC/EN 61000-4-4: 2012
	IEC/EN 61000-4-5: 2014
	IEC/EN 61000-4-6: 2013
	IEC/EN 61000-4-8: 2009, 2010
	IEC/EN 61000-4-11: 2004

Table C-2 Applicable ITE Standards

Emissions	Immunity
FCC Part 15 Subpart B, Class A	EN 55024: 2010
ICES-003 Issue 6, Class A	EN 61000-4-2: 2009
CISPR 32: 2012, Class A	EN 61000-4-3: 2006 + A1: 2008 + A2: 2010
VCCI V-3/2010-04, Class A Emissions	EN 61000-4-4: 2012
EN 61000-3-2: 2014	EN 61000-4-5: 2014
EN 61000-3-3: 2013	EN 61000-4-6: 2013
	EN 61000-4-8: 2009, 2010
	EN 61000-4-11: 2004

Note: In the event of an ESD surge to the unit, a full power cycle may be needed on the unit for it to regain its full functionality.

Figure C-3 Suppliers Declaration of Conformity



SUPPLIERS DECLARATION OF CONFORMITY

We, Lantronix, hereby declare that the product listed below, to which this Declaration of Conformity relates, is in conformity with the Standards and other Normative Documents listed below:

Product Type: MULTI-PORT MEDICAL DEVICE SERVER - EDS-MD
Product Number: EDSOR04P-01, EDSOR08P-01, EDSOR16P-01
Rated: 100-240 VAC, 50/60 Hz, 0.4A
Intended use: Commercial installations, indoor use

North America

Medical Safety:

- ANSI/AAMI ES60601-1: 2005 + C1:2009 + A2: 2010
- CAN/CSA-C22.2 NO. 60601-1-08

Emissions:

- FCC Part 15, Subpart B, Class A
- ICES-003 Issue 6 Class A

Non-Medical Safety:

- UL 60950-1-2011, 2nd Edition
- CAN/CSA C22.2 No. 60950-1-07, 2nd Edition, 2006-07

European Union

Medical Safety: Medical Device Directive (93/42/EEC)

- EN 60601-1: 2006 + AC: 2010 + A1: 2013
- IEC 60601-1: 2005 + A1: 2012

Non-Medical Safety: Low Voltage Directive (2014/35/EC)

- EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013

Emissions: Directives (2014/30/EU)

- EN 60601-1-2: 2015
- EN 55032: 2012, Class A
- EN 61000-3-2: 2014
- EN 61000-3-3: 2013

Immunity: Directives (2014/30/EU)

- EN 60601-1-2: 2015
- EN 55024: 2010
- IEC/EN 61000-4-2: 2009
- IEC/EN 61000-4-3: 2006 + A1: 2008 + A2: 2010
- IEC/EN 61000-4-4: 2012
- IEC/EN 61000-4-5: 2014
- IEC/EN 61000-4-6: 2013
- IEC/EN 61000-4-8: 2009, 2010
- IEC/EN 61000-4-11: 2004

Other Countries


• **Australia**

- CISPR 11: 2015 + A1: 2016
- CISPR 32: 2012, Class A Emissions
- AS/NZS CISPR 22: 2009, Class A Emissions
- EN 55032: 2012, Class A

• **Japan**

- VCCI V-3: 2010-04, Class A Emissions
- National Deviation to IEC 60601-1: 1988 + A1: 1991 + A2: 1995 based on JIST 0601-1

"Lantronix, 7535 Irvine Center Drive, Suite 100, Irvine, CA 92618, USA declares that the equipment specified above conforms to the referenced EU Directives and Harmonized Standards."

Signature:  Date: 01-03-2014
Name: Fathi Hakam Title: VP of Engineering

CERT-DOC-EDS-MD rev G

Figure C-4 EU Declaration of Conformity

LANTRONIX®



EU DECLARATION OF CONFORMITY

Manufacturer's Name: LANTRONIX INC.
Manufacturer's Address: 7535 Irvine Center Drive, Suite 100
Irvine, CA. 92618. USA

Type of Product: MULTI-PORT MEDICAL DEVICE SERVER - EDS-MD
Product number: EDSOR04P-01, EDSOR08P-01, EDSOR16P-01
Rated: 100-240 VAC, 50/60 Hz, 0.4A
Intended use: Commercial installations, indoor use

Manufacturer's Quality System:



ISO 9001:2015 Certificate No. 74 300 4282 TUV Rheinland

Category of Equipment: Class 1 (Earthed)

Applicable EU Directives:

Safety: Medical Safety: Medical Device Directive (93/42/EEC)

- EN 60601-1: 2006 + AC: 2010 + A1: 2013
- IEC 60601-1: 2005 + A1: 2012

EMC: Directive (2014/30/EU)

- EN 60601-1-2: 2015
- EN 61000-3-2: 2014
- EN 61000-3-3: 2013
- EN 55032: 2012/AC: 2013, Class A Emissions
- EN 55024: 2010
- EN 61000-4-2: 2008, 2009
- EN 61000-4-3: 2006 + A1: 2008 + A2: 2010
- EN 61000-4-4: 2012
- EN 61000-4-5: 2014
- EN 61000-4-6: 2013
- EN 61000-4-8: 2009, 2010
- EN 61000-4-11: 2004

EU Directive 2011/65/EU for Restriction of Hazardous Substance (RoHS2) with exemption 7(c)-I

Statement of Conformity: The product specified above complies with applicable EU directive referenced, including the application of sound engineering practice.

Signature:  Date: 03-03-2019

Name: Fathi Hakam Title: VP of Engineering

CERT-DOC-EDS-MD rev G

Manufacturer's Contact:

Lantronix
7535 Irvine Center Drive
Suite 100
Irvine, CA 92618, USA
Tel: 949-453-3990
Fax: 949-453-3995

RoHS, REACH and WEEE Compliance Statement

Please visit <http://www.lantronix.com/legal/rohs/> for Lantronix's statement about RoHS, REACH and WEEE compliance.

Appendix D: Lantronix Power Cords, Cables, Adapters and Serial Port Pinouts

Lantronix cables and adapters for use with EDS-MD 4, EDS-MD 8 and EDS-MD 16 medical device servers are listed here according to part number and application.

Cables and Adapters

Table D-1 Lantronix Cables and Adapters

Lantronix P/N	Description	Applications
500-103-R	RJ45-to DB9F	Connects the RJ45 RS232 serial ports of EDS-MD to a DB9M DTE interface of a PC or serial device to check that serial ports in the EDS-MD are functioning properly.
200.2066A	Adapter RJ45-to-DB25M	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD RJ45 serial ports to the DB25F DTE interface of a serial device.
200.2067A	Adapter RJ45-to-DB25F	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD RJ45 serial ports to the DB25M DTE interface of a serial device.
200.2069A	Adapter RJ45-to-DB9M	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD RJ45 serial ports to the DB9F DTE interface of a serial device.
200.2070A	Adapter RJ45-to-DB9F	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD to the DB9M DTE interface of a PC or serial device.
200.2071	Adapter RJ45-to-DB9M	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD RJ45 serial ports to the DB9F DCE interface of a serial device.
200.2072	Adapter RJ45-to-DB9F	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD to the DB9M DCE interface of a PC or serial device.
200.2073	Adapter RJ45-to-DB25M	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD RJ45 serial ports to the DB25F DCE interface of a serial device.
200.2074	Adapter RJ45-to-DB25F	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD RJ45 serial ports to the DB25M DCE interface of a serial device.
930-073-R	Power Cord, Hospital Grade, US	Connects the EDS-MD to an AC power outlet, for the United States.
930-074-R	Power Cord, Hospital Grade, EU	Connects the EDS-MD to an AC power outlet, for Europe.
930-075-R	Power Cord, Hospital Grade, UK	Connects the EDS-MD to an AC power outlet, for the United Kingdom.
930-076-R	Power Cord, Hospital Grade, Australia	Connects the EDS-MD to an AC power outlet, for Australia.
930-077-R	Power Cord, Hospital Grade, Israel	Connects the EDS-MD to an AC power outlet, for Israel.
ADP010104-01	Adapter "Rolled" RJ45-to-RJ45	Allows a standard straight-pinned CAT5 cable to connect the EDS-MD to an RJ45 console port on products from Cisco and other manufacturers.

Adapters and Serial Port Pinouts

Figure 18-2 RJ45 Pinout Diagram

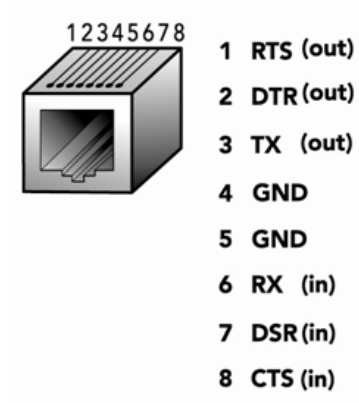


Figure R-3 RJ45 Receptacle to DB25M DTE Adapter (PN 200.2066A)

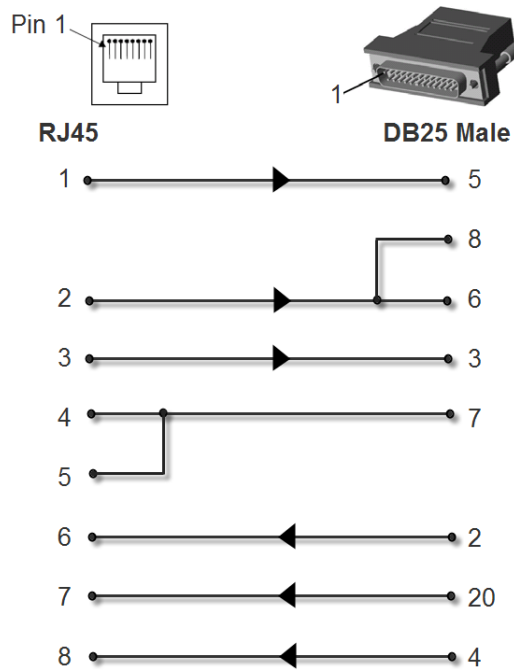


Figure R-4 RJ45 Receptacle to DB25M DCE Adapter (PN 200.2073)

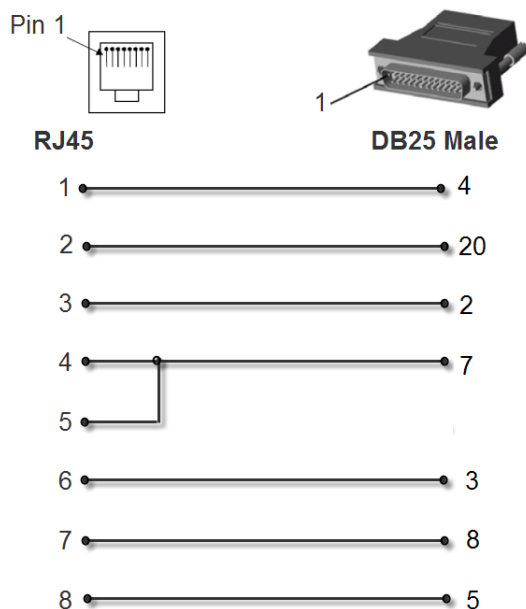


Figure R-5 RJ45 Receptacle to DB25F DTE Adapter (PN 200.2067A)

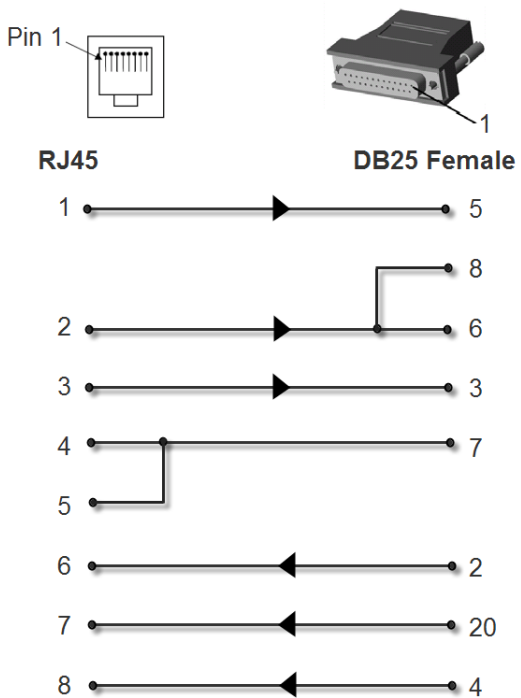


Figure R-6 RJ45 Receptacle to DB25F DCE Adapter (PN 200.2074)

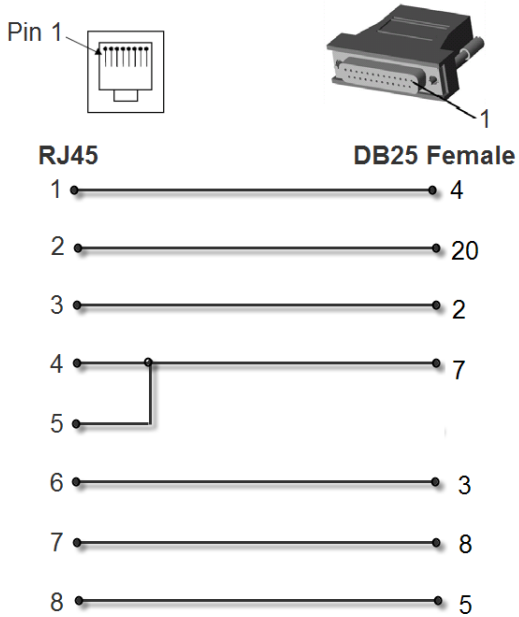


Figure R-7 RJ45 Receptacle to DB9M DTE Adapter (PN 200.2069A)

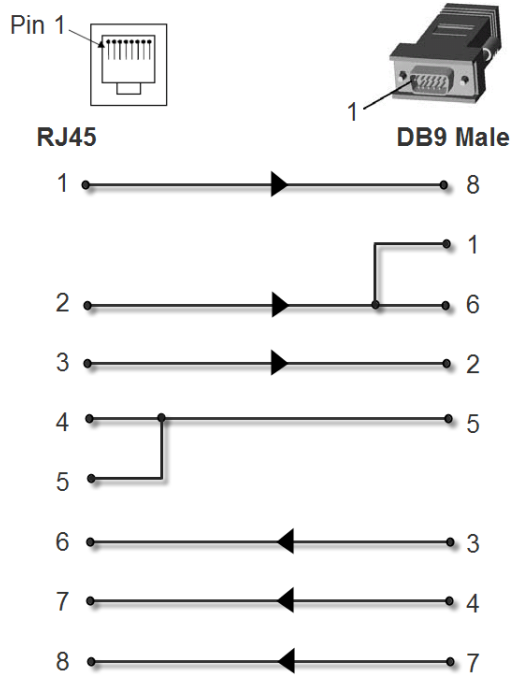


Figure R-8 RJ45 Receptacle to DB9M DCE Adapter (PN 200.2071)

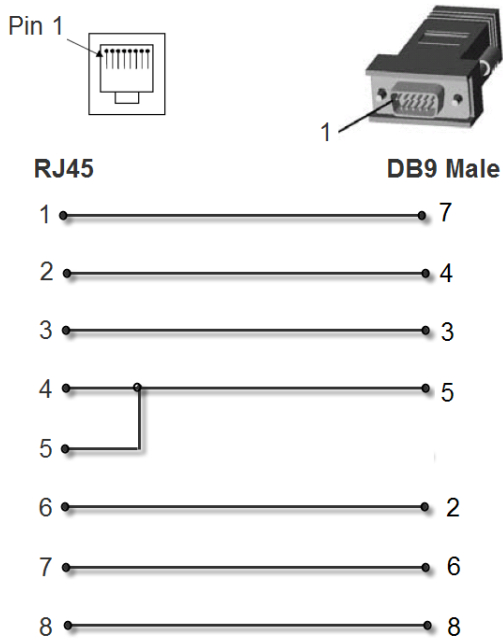


Figure R-9 RJ45 Receptacle to DB9F DTE Adapter (PN 200.2070A)

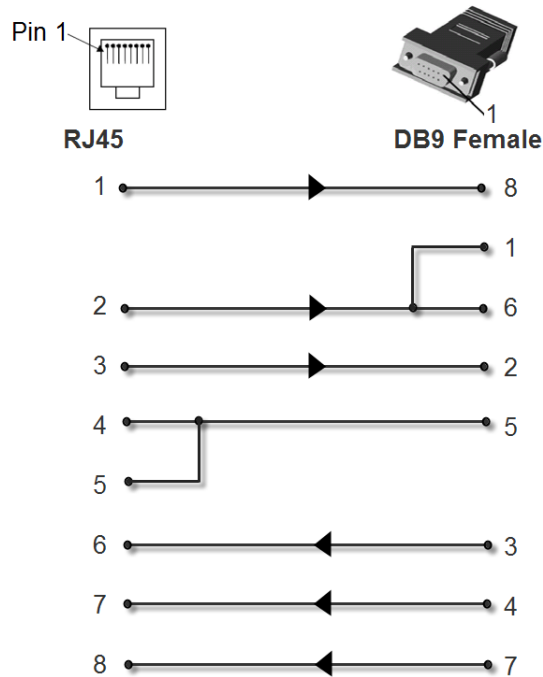


Figure R-10 RJ45 Receptacle to DB9F DCE Adapter (PN 200.2072)


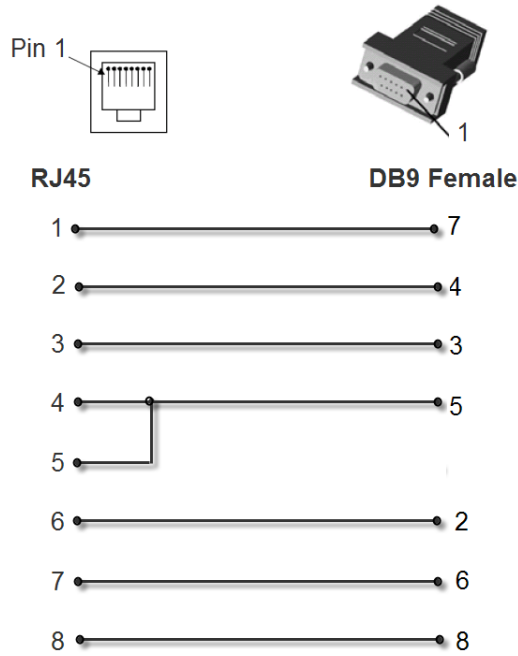


Figure R-11 RJ45 to RJ45 Adapter (ADP010104-01)

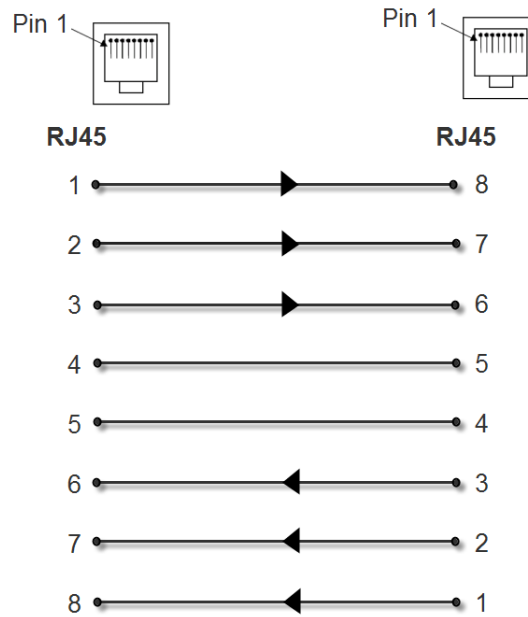

Note: The cable ends of the ADP010104-01 are an RJ45 socket on one end and a RJ45 plug on the other instead of RJ45 sockets on both ends.