

Packaging Contents

- 2 x Front/Rear Frame
- 2 x Floor Plates
- 6 x Adjustable Horizontal Arm
- 2 x Floor Mounting Brackets
- 1 x M8 Hex (Allen) key
- 8 x M8x25 Hex Socket Screws
- 42 x M5x15 Truss Head Screws
- 16 x Bushing Caps
- 50 x Cabinet Screws
- 50 x Cage Nuts

Tools Required

- 1 x Phillips (crosshead) Screwdriver

WARNING! Please ensure that the rack is full assembled with all included parts and fasteners before attempting to mount any rack equipment. Failure to install and fully tighten any hardware could severely compromise the structural integrity of the rack. If any hardware is missing, please contact StarTech.com customer service immediately.

Installation

1. Make sure that the front and rear frames are right side up. The bottom of the frame has holes for the floor mounting brackets and casters. Make sure that the pictured end is at the bottom.



Optional Caster mounting point, on bottom of rack frame

2. Attach the floor mounting brackets (the L-shaped brackets) to the bottom of the frames. Using the included hex key, install the hex socket screws. Install 4 screws per bracket.



Hex Socket Screws



3. Attach the arms to the frames. Separate your arms into pairs (consisting of one wide and one narrow arm per pair). You will have six pairs of arms, three for each side of the rack. The narrow arms that connect the bottom of the frames can be identified by the pre-mounted cage nuts on the inside of the arms.




Pre-installed cage nuts

NOTE: When installing the arms, it might be easiest to start with the top arms for stability reasons.

For the top and middle arms, snap the cage nuts into the back (inside) of the narrow arms. It is recommended that you install several cage nuts on each arm. The cage nuts are easier to install when the rack is not fully assembled. You should install more cage nuts than may be necessary in case you change the depth of the rack in the future.




Determine the desired depth of your rack. Using two screws, attach one of the arms to the holes on the inside of the frame. Attach the other arm to the other side of the frame, making sure that the wider arm is on the outside of the narrow arm. Secure the two arms together using the provided screws.

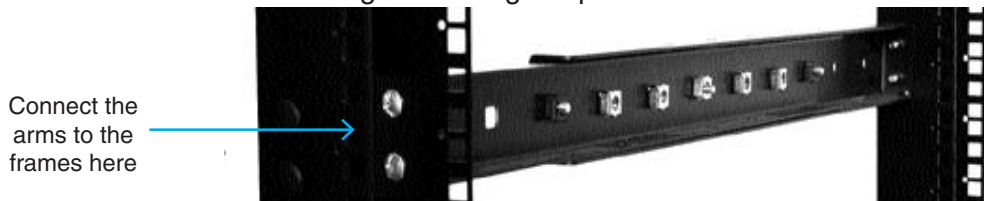

NOTE: For stability, StarTech.com recommends that you have use at least **two** screws to secure the rack arms.

4. Place the floor plates over the bottom of the rack. One floor plate has only one “flap” along the side. You can overlap this floor plate over the other when necessary. Secure the floor plates to the rack from the top.

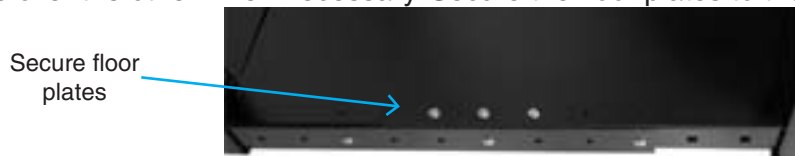

5. Secure the completed rack. Bolt the assembled rack into the ground or install the casters (StarTech.com ID: 4POSTCASTER). If you are bolting the rack, the type of bolt you use will depend on the floor material.



Secure casters to bottom of rack

6. Install your rackmount equipment. Using the rackmount cabinet screws and cage nuts, install your rackmount equipment into the rack.





StarTech.com

Making hard-to-find easy!®



Specifications

Description	DuraRak 36U Adjustable 4 Post Open Frame Equipment Rack
Colour	Black
Materials	SPCC (2.0mm)
Weight Capacity	450 kg
Dimensions (W x H)	571.0 mm x 1713.5 mm
Minimum/Maximum Mounting Depth	469.9 mm / 895.4 mm
Net Weight	42 kg
Standards	EIA-310C/D
Certifications	UL, CE, RoHS

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads.

Warranty Information

This product is backed by a lifetime warranty.

In addition, StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.