



HP ProBook 640 G2 Notebook PC
HP ProBook 645 G2 Notebook PC
HP ProBook 650 G2 Notebook PC
HP ProBook 655 G2 Notebook PC

Maintenance and Service Guide

© Copyright 2015 HP Development Company, L.P.

AMD and AMD Litho Pro are trademarks of Advanced Micro Devices, Inc. Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel, Skylake, and Core are trademarks of Intel Corporation in the U.S. and other countries. Microsoft and Windows are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Product notice

This guide describes features that are common to most models. Some features may not be available on your computer.

Not all features are available in all editions of Windows 8. This computer may require upgraded and/or separately purchased hardware, drivers and/or software to take full advantage of Windows 8 functionality. See <http://www.microsoft.com> for details.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.


For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Sound+ is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved .



First Edition: December 2015

Document Part Number: 839485-001

Important Notice about Customer Self-Repair Parts

 **CAUTION:** Your computer includes Customer Self-Repair parts and parts that should only be accessed by an authorized service provider. See Chapter 5, "Removal and replacement procedures for Customer Self-Repair parts," for details. Accessing parts described in Chapter 6, "Removal and replacement procedures for Authorized Service Provider only parts," can damage the computer or void your warranty.

Safety warning notice


 **WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950-1).

Table of contents

| | |
|--|-----------|
| 1 Product description | 1 |
| 2 External component identification | 6 |
| Right | 6 |
| Left | 8 |
| Display | 9 |
| Top | 10 |
| TouchPad | 10 |
| Lights | 11 |
| Buttons, speakers, and fingerprint reader | 12 |
| Special function keys | 14 |
| Using the hot keys | 15 |
| Bottom | 17 |
| Front | 17 |
| Rear | 19 |
| Locating system information | 19 |
| 3 Illustrated parts catalog | 21 |
| Computer major components | 21 |
| Display assembly subcomponents | 27 |
| Mass storage devices | 29 |
| Miscellaneous parts | 31 |
| 4 Removal and replacement procedures preliminary requirements | 32 |
| Tools required | 32 |
| Service considerations | 32 |
| Plastic parts | 32 |
| Cables and connectors | 33 |
| Drive handling | 33 |
| Grounding guidelines | 34 |
| Electrostatic discharge damage | 34 |
| Packaging and transporting guidelines | 35 |
| Workstation guidelines | 35 |
| Equipment guidelines | 36 |

| | |
|---|-----------|
| 5 Removal and replacement procedures for Customer Self-Repair parts | 37 |
| Component replacement procedures | 37 |
| Service door | 37 |
| Battery | 38 |
| Hard drive | 39 |
| Solid-state drive (select products only) | 41 |
| WWAN module (select products only) | 42 |
| WLAN module | 44 |
| Optical drive | 46 |
| Keyboard | 48 |
| Memory | 51 |
| | |
| 6 Removal and replacement procedures for Authorized Service Provider parts | 54 |
| Component replacement procedures | 54 |
| Hinge cover | 55 |
| Base enclosure | 57 |
| System board | 59 |
| Fan and heat sink assembly | 61 |
| Optical drive board | 64 |
| Top cover and TouchPad | 65 |
| RTC battery | 68 |
| Speaker | 70 |
| Power button board | 71 |
| Fingerprint reader (select products only) | 72 |
| Smart card reader | 74 |
| Near Field Communication module | 76 |
| Audio board | 78 |
| Serial | 80 |
| Display assembly | 82 |
| | |
| 7 Computer Setup (BIOS), TPM, and HP Sure Start in Windows 10 | 88 |
| Using Computer Setup | 88 |
| Starting Computer Setup | 88 |
| Navigating and selecting in Computer Setup | 88 |
| Restoring factory settings in Computer Setup | 89 |
| Updating the BIOS | 90 |
| Determining the BIOS version | 90 |
| Downloading a BIOS update | 90 |
| Changing the boot order using the f9 prompt | 91 |
| TPM BIOS settings (select products only) | 91 |

| | |
|---|------------|
| Using HP Sure Start (select products only) | 92 |
| 8 Computer Setup (BIOS), TPM, and HP Sure Start in Windows 8.1 | 93 |
| Using Computer Setup | 93 |
| Starting Computer Setup | 93 |
| Navigating and selecting in Computer Setup | 93 |
| Restoring factory settings in Computer Setup | 94 |
| Updating the BIOS | 95 |
| Determining the BIOS version | 95 |
| Downloading a BIOS update | 95 |
| Changing the boot order using the f9 prompt | 96 |
| TPM BIOS settings (select products only) | 96 |
| Using HP Sure Start (select products only) | 97 |
| 9 Computer Setup (BIOS), TPM, and HP Sure Start in Windows 7 | 98 |
| Using Computer Setup | 98 |
| Starting Computer Setup | 98 |
| Navigating and selecting in Computer Setup | 98 |
| Restoring factory settings in Computer Setup | 99 |
| Updating the BIOS | 100 |
| Determining the BIOS version | 100 |
| Downloading a BIOS update | 100 |
| Changing the boot order using the f9 prompt | 101 |
| TPM BIOS settings (select products only) | 101 |
| Using HP Sure Start (select products only) | 102 |
| 10 Using HP PC Hardware Diagnostics (UEFI) | 103 |
| Downloading HP PC Hardware Diagnostics (UEFI) to a USB device | 103 |
| 11 Backup and recovery | 105 |
| Creating recovery media and backups | 105 |
| Creating HP Recovery media (select products only) | 105 |
| Using Windows tools | 106 |
| Restore and recovery | 107 |
| Recovering using HP Recovery Manager | 107 |
| What you need to know before you get started | 107 |
| Using the HP Recovery partition (select products only) | 108 |
| Using HP Recovery media to recover | 108 |
| Changing the computer boot order | 109 |
| Removing the HP Recovery partition (select products only) | 110 |

| | |
|---|------------|
| 12 Backup and recovery in Windows 8.1 | 111 |
| Backing up your information | 111 |
| Performing a system recovery | 111 |
| Using the Windows recovery tools | 111 |
| Using f11 recovery tools | 112 |
| Using Windows operating system media (purchased separately) | 113 |
| Using Windows Refresh or Windows Reset | 113 |
| Using HP Software Setup | 113 |
| 13 Backup and recovery in Windows 7 | 114 |
| Creating recovery media and backups | 114 |
| Guidelines | 114 |
| Creating recovery media with HP Recovery Disc Creator | 114 |
| Creating recovery media | 115 |
| Backing up your information | 115 |
| Performing a system recovery | 116 |
| Using the Windows recovery tools | 116 |
| Using f11 recovery tools (select products only) | 117 |
| Using Windows 7 operating system media | 117 |
| 14 Specifications | 119 |
| Computer specifications | 119 |
| Hard drive specifications | 120 |
| Solid-state drive specifications | 120 |
| 15 Power cord set requirements | 122 |
| Requirements for all countries | 122 |
| Requirements for specific countries and regions | 122 |
| 16 Statement of memory volatility | 124 |
| Nonvolatile memory usage | 128 |
| Questions and answers | 130 |
| Using HP Sure Start (select models only) | 131 |
| 17 Recycling | 132 |
| Index | 133 |

1 Product description

| Category | Description |
|---------------------|---|
| Product Name | <p>HP 640 G2 Notebook PC</p> <p>HP 645 G2 Notebook PC</p> <p>HP 650 G2 Notebook PC</p> <p>HP 655 G2 Notebook PC</p> |
| Processors | <p>HP 640 and HP 650 products:</p> <p>Intel Skylake Core i3-6100U Dual Core 2.3GHz SoC BGA</p> <p>Intel Skylake Core i5-6200U Dual Core 2.3/2.8GHz SoC BGA</p> <p>Intel Skylake Core i5-6300U Dual Core 2.4/3.0GHz SoC BGA</p> <p>Intel Skylake Core i7-6600U Dual Core 2.6/3.4GHz SoC BGA</p> <p>HP 645 and HP 655 products:</p> <p>AMD Carrizo APU BGA ULV</p> <p>A6-Pro-8500B with Radeon R5 Graphics</p> <p>A8-Pro-8600B with Radeon R6 Graphics</p> <p>A10-Pro-8700B with Radeon R6 Graphics</p> |
| Chipset | <p>Intel Skylake Chipset—The chipset is integrated with the processor (PCH-LP).</p> <p>AMD Carrizo—The chipset is integrated with the processor.</p> |
| Graphics | <p>Intel UMA Graphics (GT2) with shared video memory</p> <p>AMD (128-bit) w/2 GB GDDR5 (128Mb x 32, 1.35V, 5Gbps, Qty 4)</p> <p>AMD Integrated UMA graphics</p> |
| Panel | <p>Anti-glare panels for 14" products:</p> <p>14.0" HD AG SVA 45% CG 220 nits eDP 1.2 flat (1366x768)</p> <p>14.0" HD AG SVA 45% CG 220 nits eDP 1.2 flat (1366x768) with camera</p> <p>14.0" HD AG SVA 45% CG 220 nits eDP 1.2 flat (1366x768) with WWAN</p> <p>14.0" HD AG SVA 45% CG 220 nits eDP 1.2 flat (1366x768) with camera and with WWAN</p> <p>14.0" FHD AG SVA 60% CG 300 nits eDP 1.3 + PSR slim flat (1920x1080)</p> <p>14.0" FHD AG SVA 60% CG 300 nits eDP 1.3 + PSR slim flat (1920x1080) with camera</p> <p>14.0" FHD AG SVA 60% CG 300 nits eDP 1.3 + PSR slim flat (1920x1080) with WWAN</p> <p>14.0" FHD AG SVA 60% CG 300 nits eDP 1.3 + PSR slim flat(1920x1080) with camera and WWAN</p> |

| Category | Description |
|--------------------------|--|
| | <p>14.0" FHD Slim eDP SVA 60% 300 nits (1920 x 1080) Touch with camera and with WWAN</p> <p>Anti-glare panels for 15" products with LED backlight:</p> <p>15.6" HD AG SVA 45% CG 220 nits eDP 1.2 flat (1366x768)</p> <p>15.6" HD AG SVA 45% CG 220 nits eDP 1.2 flat (1366x768) with camera</p> <p>15.6" HD AG SVA 45% CG 220 nits eDP 1.2 flat (1366x768) with WWAN</p> <p>15.6" HD AG SVA 45% CG 220 nits eDP 1.2 flat (1366x768) with camera and with WWAN</p> <p>15.6" FHD AG SVA 60% CG 300 nits eDP 1.3 + PSR slim flat (1920x1080)</p> <p>15.6" FHD AG SVA 60% CG 300 nits eDP 1.3 + PSR slim flat (1920x1080) with camera</p> <p>15.6" FHD AG SVA 60% CG 300 nits eDP 1.3 + PSR slim flat (1920x1080) with WWAN</p> <p>15.6" FHD AG SVA 60% CG 300 nits eDP 1.3 + PSR slim flat(1920x1080) with camera and WWAN</p> <p>14.0" FHD Slim eDP SVA 60% 300 nits (1920 x 1080) Touch with camera and with WWAN</p> |
| Memory | <p>DDR4 PC4-17000 (2133) SODIMMS Memory Module—Supports Dual Channel Memory up to 16 GB.</p> <p>4096 MB Total System Memory (4096 MB x 1)</p> <p>8192 MB Total System Memory (4096 MB x 2)</p> <p>8192 MB Total System Memory (8192 MB x 1)</p> <p>12288 MB Total System Memory (8192 MB + 4096 MB)</p> <p>16384 MB Total System Memory (8192 MB x 2)</p> |
| Hard drive | <p>Supports SATA3, 7mm, 2.5" HDDs:</p> <p>HDD 1TB 5400RPM 7mm SATA</p> <p>HDD 500GB 5400RPM 7mm Hybrid SATA 8GB NAND</p> <p>HDD 500GB 7200RPM 7mm FIPS SATA 8GB Opal2</p> <p>HDD 500GB 7200RPM 7mm SATA</p> <p>HDD 500GB 7200RPM 7mm self-encrypting drive SATA Opal2</p> |
| Solid-state drive | <p>SSD 128GB 2.5in SATA-3 TLC</p> <p>SSD 128GB 2280 M2 SATA-3 TLC</p> <p>SSD 180GB 2280 M2 SATA-3</p> <p>SSD 180GB 2280 M2 SATA-3 self-encrypting drive Opal2</p> <p>SSD 240GB 2280 M2 SATA-3</p> <p>SSD 256GB 2.5in SATA-3 TLC</p> <p>SSD 256GB 2280 M2 PCIe-3x4 SS</p> <p>SSD 256GB 2280 M2 PCIe-3x4 SS NVMe</p> <p>SSD 256GB 2280 M2 SATA-3 self-encrypting drive Opal2</p> <p>SSD 256GB 2280 M2 SATA-3 TLC</p> |


| Category | Description |
|--|--|
| | SSD 512GB 2280 M2 PCIe-3x4 DS SSD 512GB 2280 M2 PCIe-3x4 DS NVMe SSD 512GB 2280 M2 PCIe-3x4 SS NVMe SSD 512GB 2280 M2 SATA-3 self-encrypting drive Opal2 SSD 512GB 2280 M2 SATA-3 TLC |
| Optical drive | SATA-3 7 mm 2.5 fixed optical drives: DVD-ROM (defeated combo) DVD+/-RW SuperMulti DL Blu-ray ROM DVD+/-RW SuperMulti DL |
| Audio and video | HD Audio with DTS Sound+ Microphone (Dual Array) only for products without a webcam Microphone (Dual Array) only for products with a webcam Camera (720p) Stereo Speakers (2) |
| Ethernet | Intel I219LM (Jacksonville-LM) 10/100/1000 Ethernet, with iAMT Intel I219V (Jacksonville-V) 10/100/1000 Ethernet, no iAMT |
| Wireless LAN | WLAN Broadcom Luffy 943228 abgn 2x2 + BT 4 LE PCIe+USB NGFF 2230 MOW Broadcom Nami 43142 bgn 1x1 + BT 4 LE PCIe+USB NGFF 1630 MOW WLAN Intel 8260NGW M Snowfield Peak ac 2x2 + BT 4.1 LE PCIe+USB NGFF 2230 WW WLAN Realtek Shanks RTL8188EE bgn 1x1 PCI-e NGFF 2230 M.2 WW (NB) WLAN 11AC 7265NV M.2 D0 MOW WLAN 11ac 2x2 INT 8260NGW SnfP2 WLAN 11ac INT 3165 M.2 MOW WLAN 11 ABGN+BT4 x 2.2 LUFFY INDO |
| Wireless WAN (select products only) | WWAN Foxconn Amstel LTE/EVDO/HSPA+ w/GPS M.2 WWAN T77W595 LTE M.2 w/GPS WWAN Huawei Wrangler MU736 HSPA+ w/GPS M.2 |
| External media cards | SD Media Reader slot supports SD, SDHC, and SDXC. |
| Ports | VGA (Dsub 15 pin) supporting 1920 x 1200 external resolution @ 60Hz Hot Plug / Unplug and auto detect DisplayPort 1.2 (1) USB Type C Charging Port (2) USB 3.0 Port (1 Charging) RJ-45 / Ethernet Docking connector |





| Category | Description |
|----------------------------------|---|
| | Headphone / Microphone (Combo jack) AC Port (4.5mm) |
| Docking | Quest 2 dock support |
| Keyboard/pointing devices | HP Advanced Keyboard Touchpad, Spill-resistant with drain Touchpad, Spill-resistant with drain, DuraKeys and backlit Dual Point, Spill-resistant with drain, DuraKeys and backlit |
| Power requirements | <p>Battery:</p> <p>3-cell HP Long Life Prismatic 48 WHr (4.21 Ahr) Battery</p> <p>AC adapter:</p> <p>45 Watt Smart nPFC 3 pin RC 4.5mm connector - non slim 45 Watt Smart nPFC 3 pin RC 4.5mm connector - non slim 2 prong 65 Watt Smart nPFC 3 pin RC 4.5mm connector 65 Watt Smart nPFC EM 4.5mm connector 90 W PFC S-3P 4.5mm connector (select 15" products only)</p> <p>Power Cord (localized):</p> <p>2-wire plug - 1m 3-wire plug - 1.8m 3-wire plug - 1m</p> |
| Security | Supports Security Lock TPM 1.2 (Infineon; soldered down) Fingerprint Reader (select products only) Integrated Smart Card Reader (Active) Preboot Authentication (Password, Smart Card) |
| Operating system | <p>Operating System Version:</p> <ul style="list-style-type: none"> • Windows 7: SP1 • Windows 8.1: Update • Windows 10: Threshold 2 <p>Preinstalled:</p> <ul style="list-style-type: none"> • Win 7 Pro 32 • Win 7 Pro 32 - MSNA • Win 7 Pro 64 • Win 8.1 CH 64 (CPPP) • Win 8.1 Core for Higher Education ML 64 • Win 8.1 EM 64 • Win 8.1 EM 64 |



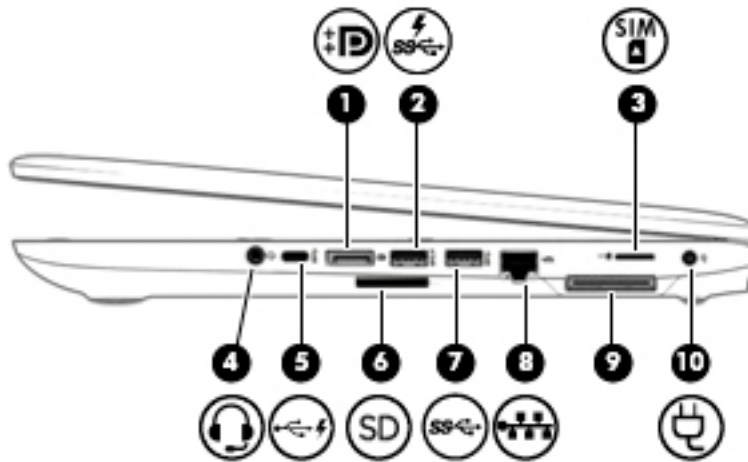



| Category | Description |
|----------------|--|
| Serviceability | <ul style="list-style-type: none"> • Win 8.1 64 High-End Emerging Markets • Win 8.1 64 High-End Multi-Language • Win 8.1 PRO 64 • Win 10 Home 64 • Win 10 Home 64 Single Language • Win 10 Home 64 CPPP • Win 10 Home 64 High-end • Win 10 Home 64 High-end Single Language • Win 10 Pro 64 • Win 10 Pro 64 Downgrade Win 7 32 • Win 10 Pro 64 Downgrade Win 7 64 • FreeDOS 2.0 • NeoKylin Linux 64 bit <p>End user replaceable parts:</p> <ul style="list-style-type: none"> Memory Optical Drive Hard Drive Solid-state Drive Battery AC adapter Fan/Heat sink assembly Speaker WWAN (select products only) WLAN |

2 External component identification

Right





| Component | Description |
|---|--|
| (1)  | Dual-Mode DisplayPort Connects an optional digital display device, such as a high-performance monitor or projector. |
| (2)  | USB 3.0 charging (powered) port Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub. Standard USB ports will not charge all USB devices or will charge using a low current. Some USB devices require power and require you to use a powered port. NOTE: USB charging ports can also charge select models of cell phones and MP3 players, even when the computer is off. |
| (3)  | SIM card slot (select products only) Supports a wireless subscriber identity module (SIM) card. |
| (4)  | Audio-out (headphone)/Audio-in (microphone) combo jack Connects optional powered stereo speakers, headphones, earbuds, a headset, or a television audio cable. Also connects an optional headset microphone. This jack does not support optional microphone-only devices. |

| Component | Description |
|---|--|
| | <p>WARNING! To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, refer to the <i>Regulatory, Safety, and Environmental Notices</i>.</p> <p>To access this guide:</p> <ol style="list-style-type: none"> 1. Type <code>support</code> in the taskbar search box, and then select the HP Support Assistant app. <p>– or –</p> <p>Click the question mark icon in the taskbar.</p> <ol style="list-style-type: none"> 2. Select My PC, select the Specifications tab, and then select User Guides. <p>NOTE: When a device is connected to the jack, the computer speakers are disabled.</p> |
| <p>(5)  USB Type-C (charging) port</p> | <p>Connects any USB device with a Type-C connector.</p> <p>NOTE: USB Type-C ports charge products such as cell phones, laptops, tablets, and MP3 players, even when the computer is off. Also, some USB Type-C ports connect DisplayPort, VGA, HDMI and other video devices to provide video output.</p> <p>NOTE: Adapters (purchased separately) may be required.</p> |
| <p>(6)  Memory card reader</p> | <p>Reads optional memory cards that store, manage, share, or access information.</p> |
| <p>(7)  USB 3.0 port</p> | <p>Connects an optional USB device, such as a keyboard, mouse, external drive, printer, scanner or USB hub.</p> |
| <p>(8)  RJ-45 (network) jack/status lights</p> | <p>Connects a network cable.</p> <ul style="list-style-type: none"> • Green (left): The network is connected. • Amber (right): Activity is occurring on the network. |
| <p>(9)  Docking port</p> | <p>Connects an optional docking device.</p> |
| <p>(10)  Power connector</p> | <p>Connects an AC adapter.</p> |


Left

 **NOTE:** Refer to the illustration that most closely matches your computer.

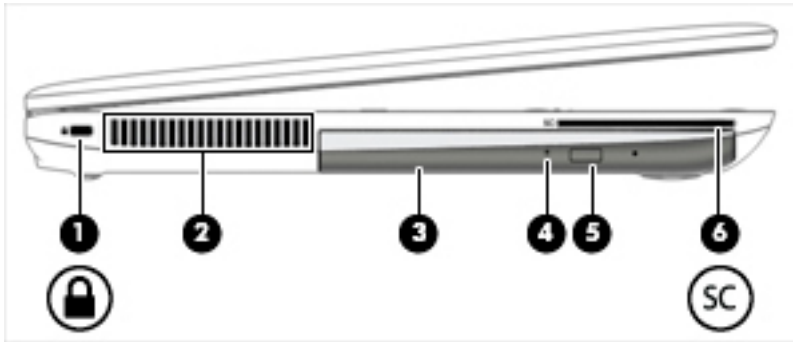

| Component | Description |
|---|--|
| (1)  Security cable slot | Attaches an optional security cable to the computer. NOTE: The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen. |
| (2) Vent | Enables airflow to cool internal components. NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation. |
| (3) Optical drive (select products only) | Depending on your computer model, reads an optical disc or reads and writes to an optical disc. |
| (4) Optical drive light | Green: The optical drive is in use. Off: The optical drive is off. |
| (5) Optical drive eject button | Releases the optical drive disc tray. |
| (6) Smart card reader | Supports optional smart cards. |

Display

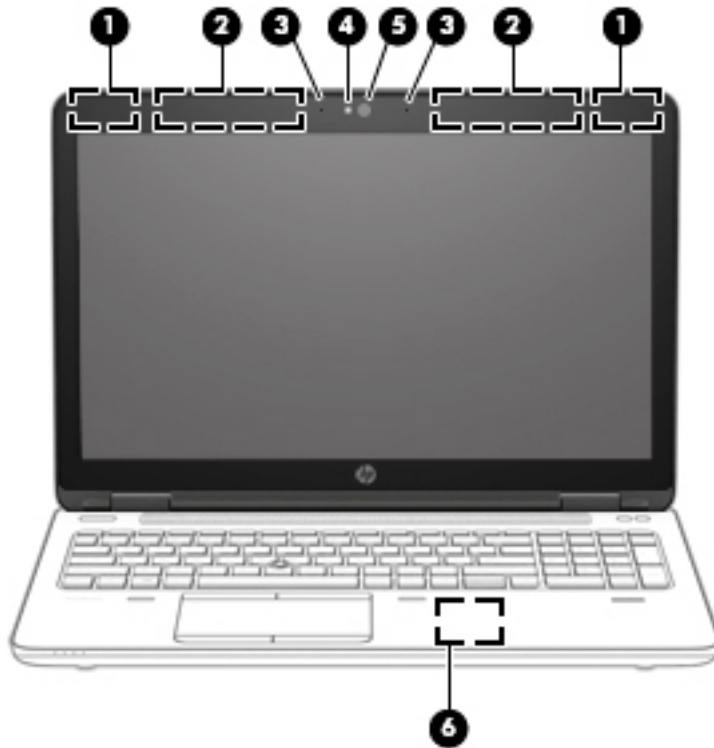

| Component | Description |
|---|---|
| (1) WLAN antennas* | Send and receive wireless signals to communicate with wireless local area networks (WLANs). |
| (2) WWAN antennas* | Send and receive wireless signals to communicate with wireless wide area networks (WWANs). |
| (3) Internal microphones | Record sound. |
| (4) Webcam light | On: The webcam is in use. |
| (5) Webcam (select products only) | Records video and captures photographs. Some models allow you to video conference and chat online using streaming video. To use the webcam: ▲ Type <code>camera</code> in the taskbar search box, and then select Camera . |
| (6) Near Field Communication (NFC) tapping area* (select products only) | Tap another NFC-enabled device to the NFC tapping area to transfer files. |

*The antennas are not visible from the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions.

For wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region.

To access this guide:

1. Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.


– or –

Click the question mark icon in the taskbar.

| Component | Description |
|-----------|--|
| 2. | Select My PC , select the Specifications tab, and then select User Guides . |


Top

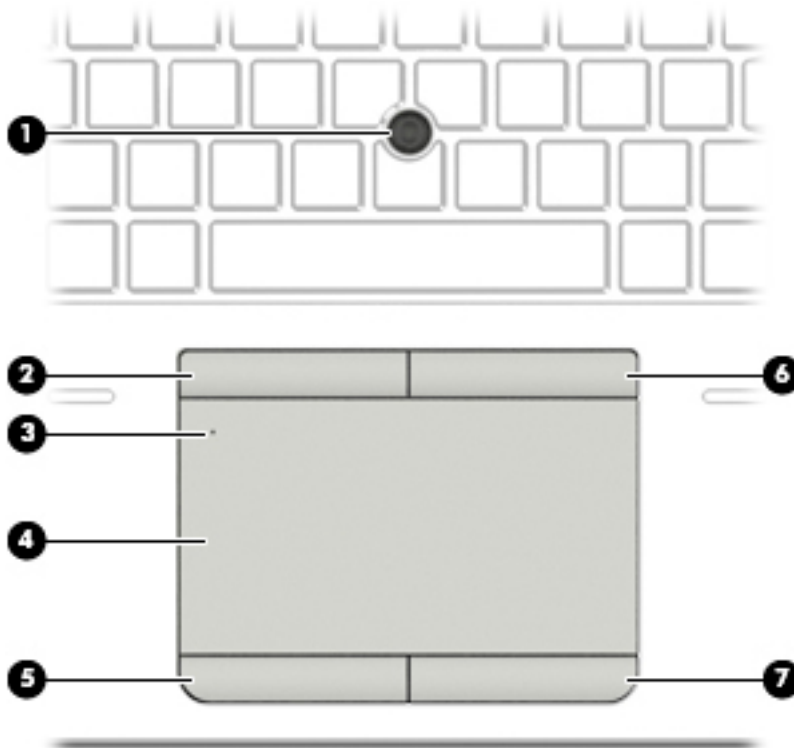



TouchPad




| Component | Description | |
|-----------|--|--|
| (1) | Pointing stick (select products only) | Moves the pointer and selects or activates items on the screen. |
| (2) | Left pointing stick button (select products only) | Functions like the left button on an external mouse. |
| (3) | TouchPad light | <ul style="list-style-type: none"> On: The TouchPad is off. Off: The TouchPad is on. |
| (4) | TouchPad zone | Reads your finger gestures to move the pointer or activate items on the screen. |
| (5) | Left TouchPad button | Functions like the left button on an external mouse. |
| (6) | Right pointing stick button (select products only) | Functions like the right button on an external mouse. |
| (7) | Right TouchPad button | Functions like the right button on an external mouse. |

 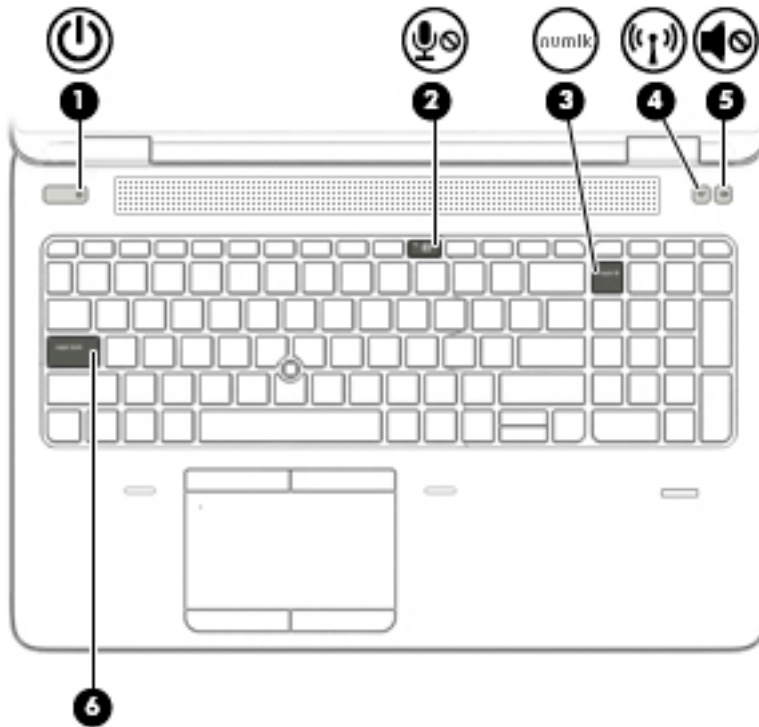
 
Lights




| Component | Description |
|---|---|
| (1)  Power light | <ul style="list-style-type: none"> On: The computer is on. Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power. |
| (2)  Microphone mute light | <ul style="list-style-type: none"> Amber: microphone sound is off. Off: microphone sound is on. |
| (3) Num lock light | On: Num lock is on. |
| (4)  Wireless light | <p>On: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth device, is on.</p> <p>NOTE: On some models, the wireless light is amber when all wireless devices are off.</p> |
| (5)  Mute light | <ul style="list-style-type: none"> Amber: Computer sound is off. Off: Computer sound is on. |
| (6) Caps lock light | On: Caps lock is on, which switches the key input to all capital letters. |

Buttons, speakers, and fingerprint reader

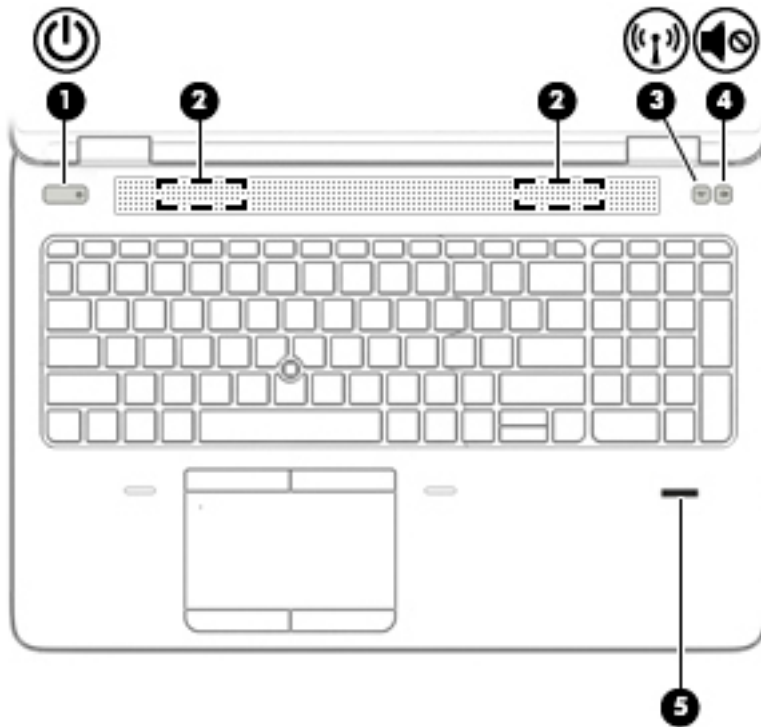




| Component | Description |
|--|--|
| (1)  Power button | <ul style="list-style-type: none"> When the computer is off, press the button to turn on the computer. When the computer is on, press the button briefly to initiate Sleep. When the computer is in the Sleep state, press the button briefly to exit Sleep. When the computer is in Hibernation, press the button briefly to exit Hibernation. <p>CAUTION: Pressing and holding down the power button results in the loss of unsaved information.</p> <p>If the computer has stopped responding and shutdown procedures are ineffective, press and hold the power button for at least 5 seconds to turn off the computer.</p> <p>To learn more about your power settings, see your power options.</p> <p>▲ Type power in the taskbar search box, and then select Power and sleep settings.</p> <p>– or –</p> <p>Right-click the Start button, and then select Power Options.</p> |
| (2) Speakers | Produce sound. |
| (3)  Wireless button | Turns the wireless feature on or off but does not establish a wireless connection. |


| Component | Description |
|---|---|
| (4)  Volume mute button (select products only) | A wireless network must be set up before a wireless connection is possible. |
| (5) Fingerprint reader (select products only) | Allows a fingerprint logon to Windows, instead of a password logon. |



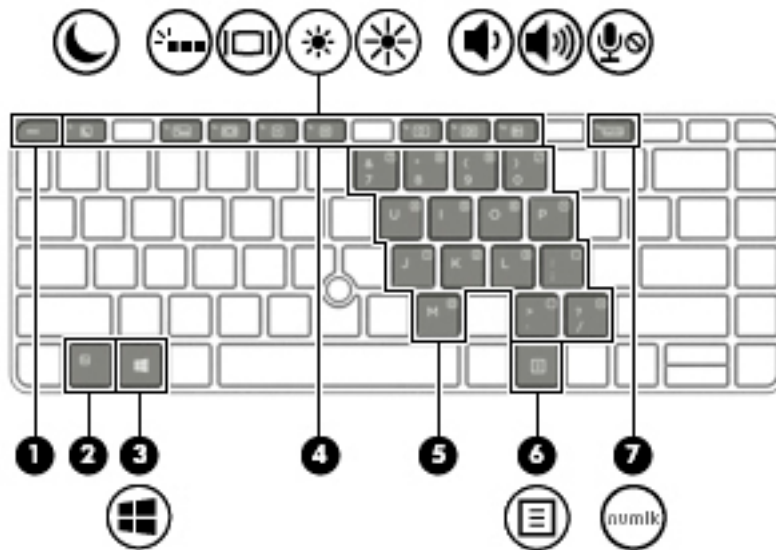

Special function keys

 **NOTE:** Refer to the illustration that most closely matches your computer.

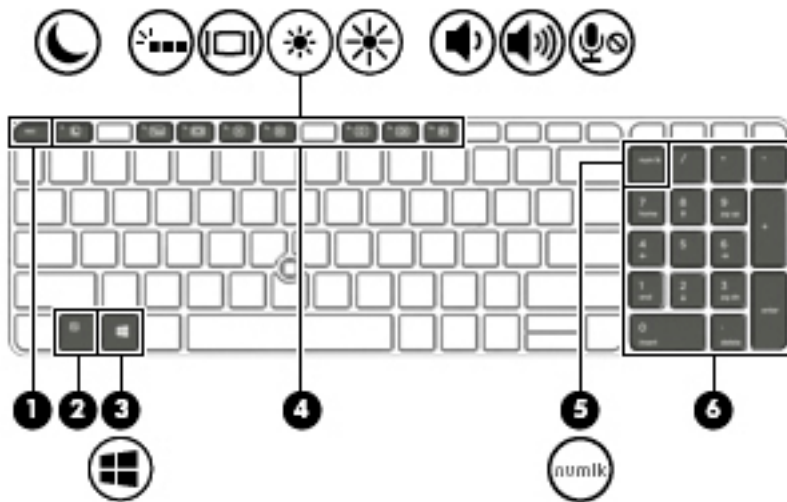

| Component | Description |
|---|---|
| (1) <code>esc</code> key | Displays system information when pressed in combination with the <code>fn</code> key. |
| (2) <code>fn</code> key | Executes frequently used system functions when pressed in combination with a function key, the <code>num lock</code> key, the <code>esc</code> key, or the <code>fn+b</code> . See Using the hot keys on page 15 |
| (3)  Windows key | Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu. |
| (4) Embedded numeric keypad | A numeric keypad superimposed over the keyboard alphabet keys that enables you to add, subtract, and perform other numeric tasks. When <code>num lock</code> is on, the keypad can be used like an external numeric keypad. |
| (5)  Windows application key | Displays options for a selected object. |
| (6) <code>num lock</code> key | Turns the embedded numeric keypad on and off. |










| Component | Description |
|---|--|
| (1)  esc key | Displays system information when pressed in combination with the fn key. |
| (2)  fn key | Executes frequently used system functions when pressed in combination with a function key, the num lock key, the esc key, or the fn+b . See Using the hot keys on page 15 |
| (3)  Windows key | Opens the Start menu. NOTE: Pressing the Windows key again will close the Start menu. |
| (4)  num lock key | Turns the embedded numeric keypad on and off. |
| (5) Integrated numeric keypad | A separate keypad to the right of the alphabet keyboard that enables you to add, subtract, and perform other numeric tasks. When num lock is on, the integrated keypad can be used like an external numeric keypad. |

Using the hot keys


To use a hot key:

- ▲ Press the **fn** key, and then press the correct function key represented by the icons below.

| Press fn +function key | Description |
|---|---|
|  | Initiates Sleep, which saves your information in system memory. The display and other system components turn off and power is conserved. To exit Sleep, briefly press the power button. CAUTION: To reduce the risk of information loss, save your work before initiating Sleep. |
|  | Turns the keyboard backlight off or on. NOTE: To conserve battery power, turn off this feature. |

| Press fn +function key | Description |
|---|---|
|  | Decreases the screen brightness incrementally as long as you hold down the key. |
|  | Increases the screen brightness incrementally as long as you hold down the key. |
|  | Decreases speaker volume incrementally while you hold down the key. |
|  | Increases speaker volume incrementally while you hold down the key. |
|  | Mutes the microphone. |

Bottom

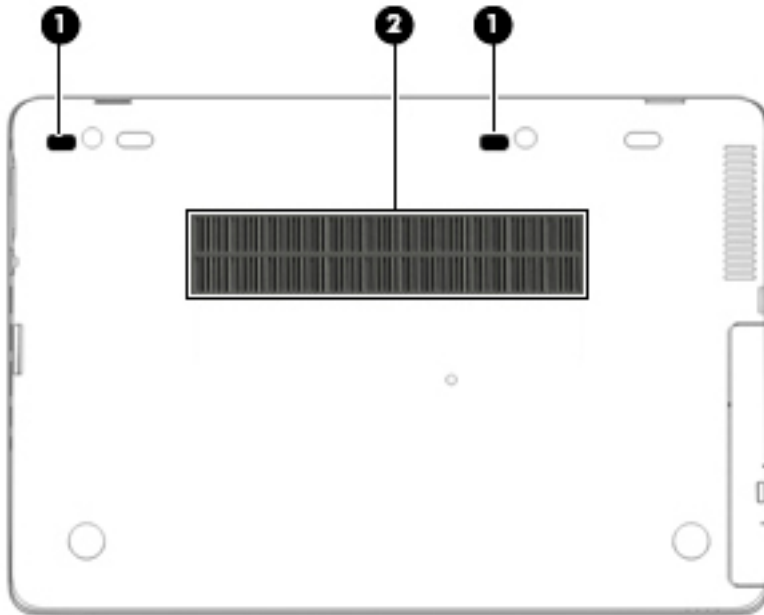





| Component | | Description |
|-----------|-------------------------------|--|
| (1) | Docking station support holes | Support an optional docking station. |
| (2) | Vent | Enables airflow to cool internal components. |

NOTE: The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.

Front


 


| Component | | Description |
|-----------|---|---|
| (1) |  | Wireless light On: An integrated wireless device, such as a wireless local area network (WLAN) device and/or a Bluetooth device, is on. NOTE: On some models, the wireless light is amber when all wireless devices are off. |
| (2) |  | Power light • On: The computer is on. |

| Component | Description |
|--|---|
| | <ul style="list-style-type: none"> • Blinking: The computer is in the Sleep state, a power-saving state. The computer shuts off power to the display and other unneeded components. • Off: The computer is off or in Hibernation. Hibernation is a power-saving state that uses the least amount of power. |
| (3)  Battery light | <p>When AC power is connected:</p> <ul style="list-style-type: none"> • White: The battery charge is greater than 90 percent. • Amber: The battery charge is from 0 to 90 percent. • Off: The battery is not charging. <p>When AC power is disconnected (battery not charging):</p> <ul style="list-style-type: none"> • Blinking amber: The battery has reached a low battery level. When the battery has reached a critical battery level, the battery light begins blinking rapidly. • Off: The battery is not charging. |
| (4)  Drive light | <ul style="list-style-type: none"> • Blinking white: The hard drive is being accessed. • Amber: HP 3D DriveGuard has temporarily parked the hard drive. |

Rear




| Component | Description |
|---|--|
| (1)  | External monitor port Connects an external VGA monitor or projector. |
| (2)  | Serial port (select products only) Connects an optional device such as a serial modem, mouse, or printer. |

Locating system information

Important system information is located on the bottom edge of the tablet or on the keyboard base. You may need the information when travelling internationally or when you contact support:


- (1): Serial number
- (2): Product number
- (3): Model number
- (4): Warranty period

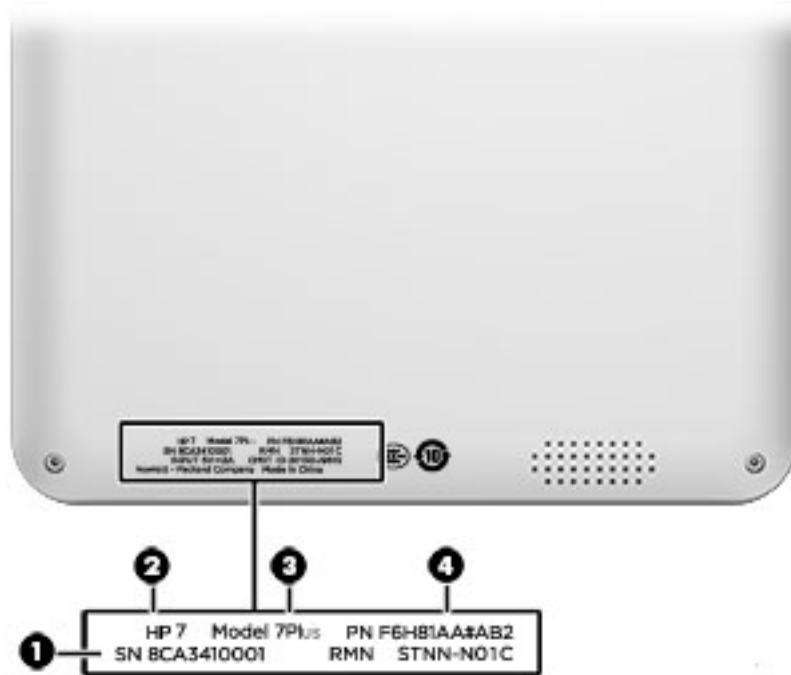


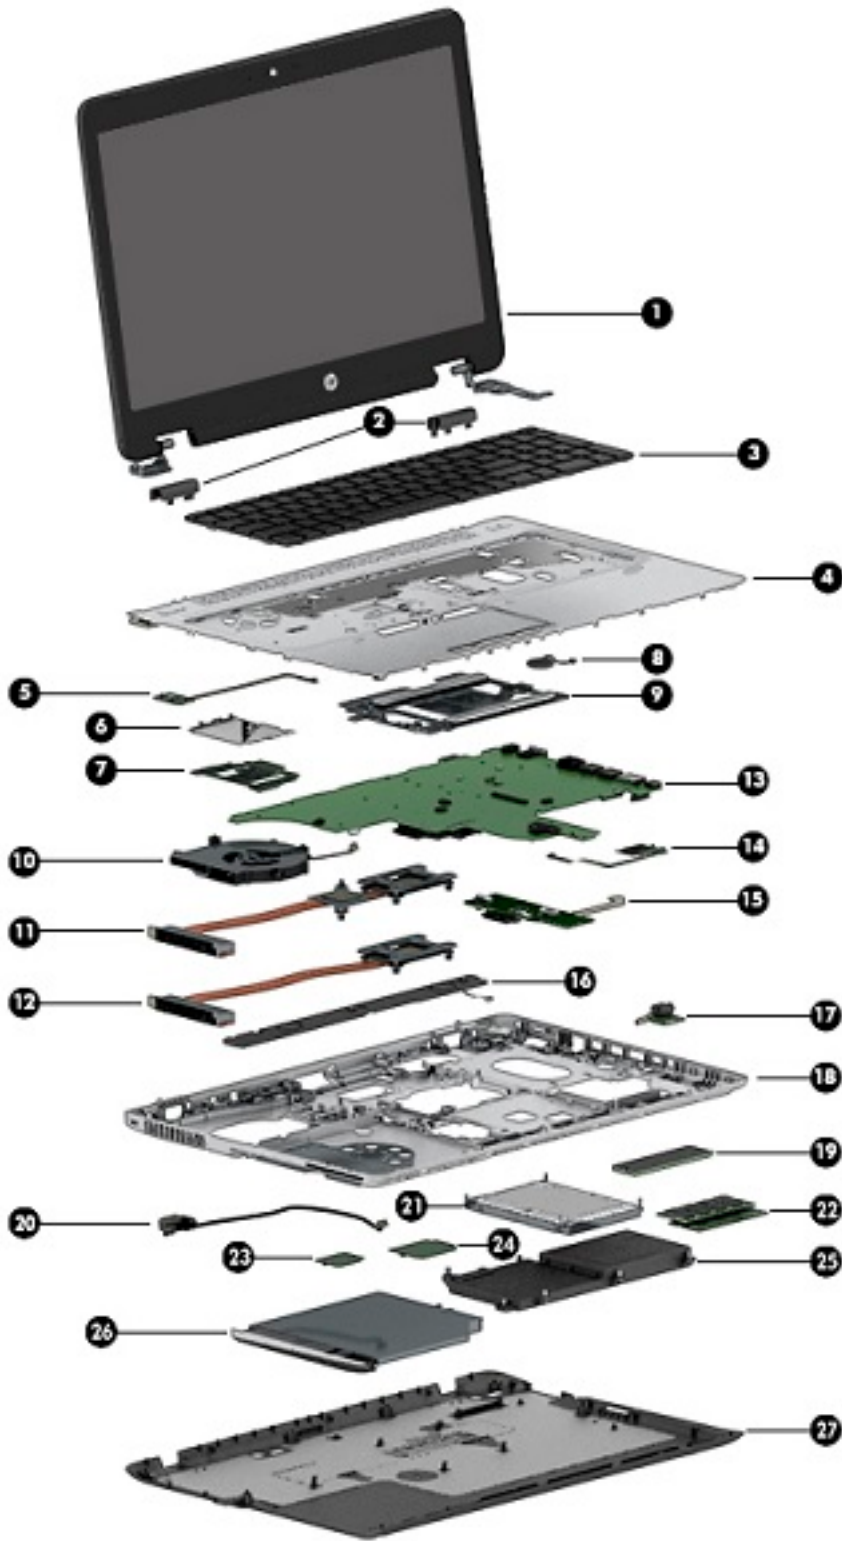
Using Windows, briefly press the **fn+esc** key combination to display the System Information screen, which provides the product name and serial number of your computer, as well as information about the memory, processor, BIOS, and keyboard.

3 Illustrated parts catalog

Computer major components

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Locating system information on page 19](#) for details.



| Item | Component | Spare part number |
|------|-----------|-------------------|
| (1) | Display | |

NOTE: For spare part information, see [Display assembly subcomponents on page 27.](#)


| Item | Component | Spare part number |
|-------------|---|-------------------|
| (2) | Hinge covers | |
| | For 14" products | 840685-001 |
| | For 14" products with a touch screen | 840686-001 |
| | For 15" products | 840738-001 |
| | For 15" products with a touch screen | 840739-001 |
| (3) | Keyboard | |
| | NOTE: For a detailed list of country codes, see Keyboard on page 48 . | |
| | Keyboard for 14" products (includes keyboard cable) | 840791-001 |
| | Backlit keyboard for 14" products (includes keyboard cable and backlight cable) | 840800-001 |
| | | 840801-001 |
| | Keyboard for 15" products (includes keyboard cable) | 841136-001 |
| | Backlit keyboard for 15" products (includes keyboard cable and backlight cable) | 841137-001 |
| | | 841145-001 |
| (4) | Top cover (includes TouchPad, bracket, and pointing stick (select products only)) | |
| | Top cover for 14" products with a TouchPad | 840719-001 |
| | Top cover for 14" products with a TouchPad and pointing stick | 840720-001 |
| | Top cover for 14" products with a TouchPad, TouchPad on/off button, and TouchPad bracket | 840721-001 |
| | Top cover for 14" products with a TouchPad, pointing stick, TouchPad on/off button, and bracket | 845170-001 |
| | Top cover for 15" products with a TouchPad | 840751-001 |
| | Top cover for 15" products with a TouchPad and pointing stick | 840752-001 |
| | Top cover for 15" products with a TouchPad, TouchPad on/off button, and bracket | 840753-001 |
| | Top cover for 15" products with a TouchPad, pointing stick, TouchPad on/off button, and bracket | 845172-001 |
| (5) | Power button board (includes cable) | |
| | For 15" products | 840693-001 |
| | For 15" products | 840744-001 |
| (6) | Smart card reader metal shield (included with Smart card reader) | |
| (7) | Smart card reader (includes metal shield) | 840694-001 |
| (8) | RTC battery (includes cable) | 651948-001 |
| (9) | TouchPad bracket (included with spare part numbers 840721-001, 840753-001, 845170-001, and 845172-001) | |
| (10) | Fan (includes heat sink) | |
| (11) | For 14" products with integrated graphics | 840662-001 |
| | For 15" products with integrated graphics | 840732-001 |

| Item | Component | Spare part number |
|---|---|--------------------------|
| (12) | For 15" products with high-quality integrated graphics | 840734-001 |
| | For 14" products with discrete graphics | 840663-001 |
| | For 15" products with discrete graphics | 840733-001 |
| (13) | System board | |
| | Discrete memory, Intel i5-6300U processor, and WWAN capability | 840712-001 |
| | Discrete memory, Intel i5-6300U processor, WWAN capability, and Windows | 840712-601 |
| | Discrete memory, Intel i7-6300U processor, and WWAN capability | 840713-001 |
| | Discrete memory, Intel i7-6300U processor, WWAN capability, and Windows | 840713-601 |
| | UMA memory, AMD A10-8700B processor, and WWAN capability | 841494-001 |
| | | 842345-001 |
| | UMA memory, AMD A6-8500B processor | 841495-001 |
| | | 842346-001 |
| | UMA memory, AMD A6-8500B processor, and Windows | 841495-601 |
| | | 842346-601 |
| | UMA memory, AMD A8-8600B processor, and Windows | 841497-001 |
| | | 842348-001 |
| | UMA memory, AMD A8-8600B processor, and Windows | 841497-601 |
| | | 842348-601 |
| | UMA memory, AMD A8-8600B processor, and WWAN capability | 841496-001 |
| | | 842347-001 |
| | UMA memory, AMD A8-8600B processor, and WWAN capability | 841496-001 |
| | | 842347-001 |
| | UMA memory, Intel i3-6100U processor | 840714-001 |
| | UMA memory, Intel i3-6100U processor and Windows | 840714-601 |
| | UMA memory, Intel i5-6200U processor | 840715-001 |
| | UMA memory, Intel i5-6200U processor and Windows | 840715-601 |
| | UMA memory, Intel i5-6200U processor, and WWAN capability | 840716-001 |
| | UMA memory, Intel i5-6200U processor, WWAN capability, and Windows | 840716-601 |
| | UMA memory, Intel i5-6300U processor, and WWAN capability | 840717-001 |
| | UMA memory, Intel i5-6300U processor, and WWAN capability, and Windows | 840717-601 |
| UMA memory, Intel i5-6440HQ processor, and WWAN capability | 844345-001 | |
| UMA memory, Intel i5-6440HQ processor, and WWAN capability, and Windows | 844345-601 | |
| UMA memory, Intel i7-6600U processor, and WWAN capability | 840718-001 | |
| UMA memory, Intel i7-6600U processor, and WWAN capability, and Windows | 840718-601 | |

| Item | Component | Spare part number |
|-------------|--|-------------------|
| | UMA memory, Intel i7-6820HQ processor, and WWAN capability | 844346-001 |
| | UMA memory, Intel i7-6820HQ processor, and WWAN capability, and Windows | 844346-601 |
| (14) | Fingerprint reader board (includes cable) | |
| | For 14" products | 840664-001 |
| | For 15" products | 840735-001 |
| (15) | Optical drive board (includes cable) | |
| (16) | Speaker (includes cable) | 840700-001 |
| (17) | Audio board (includes cable) | 840692-001 |
| (18) | Base enclosure | |
| | For 14" products | 840657-001 |
| | For 15" products | 840725-001 |
| (19) | Solid-state drive | |
| | NOTE: For spare part information, see Mass storage devices on page 29 . | |
| (20) | Serial port (includes cable) (select products only) | 840746-001 |
| (21) | Hard drive | |
| | NOTE: For spare part information, see Mass storage devices on page 29 . | |
| (22) | Memory | |
| | 2GB PC3L 12800 1600MHz shared memory | 691739-001 |
| | 4GB PC3L 12800 1600MHz shared memory | 691740-001 |
| | 8GB PC3L 12800 1600MHz shared memory | 693374-001 |
| | 4GB 2133MHz 1.2v DDR4 shared memory | 820569-001 |
| | 8GB 2133MHz 1.2v DDR4 shared memory | 820570-001 |
| (23) | WLAN module | |
| | Broadcom Nami 43142 bgn 1x1 + BT 4 LE PCIe+USB NGFF 1630 MOW | 792608-001 |
| | Realtek Shanks RTL8188EE bgn 1x1 PCI-e NGFF 2230 M.2 WW (NB) | 792609-001 |
| | 11AC 7265NV M.2 D0 MOW | 793840-001 |
| | 11ac 2x2 Intel 8260NGW Snowfield Peak 2 | 806721-001 |
| | 11ac Intel 3165 M.2 MOW | 806723-001 |
| | 11 ABGN+BT4 x 2.2 LUFFY INDO | 812132-001 |
| | Broadcom Luffy 943228 abgn 2x2 + BT 4 LE PCIe+USB NGFF 2230 MOW | 797884-001 |
| (24) | WWAN module (select products only) | |
| | NOTE: For spare part information, see WWAN module (select products only) on page 42 . | |
| | Foxconn Amstel LTE/EVDO/HSPA+ w/GPS M.2 | 822828-001 |
| | T77W595 LTE M.2 w/GPS | 800870-001 |

| Item | Component | Spare part number |
|-------------|--|--------------------------|
| | Huawei Wrangler MU736 HSPA+ w/GPS M.2 | 793516-001 |
| (25) | Battery | 801554-001 |
| (26) | Optical drive | |
| | NOTE: For spare part information, see Mass storage devices on page 29 . | |
| (27) | Service door | |
| | For 14" products | 845169-001 |
| | For 15" products | 845171-001 |


Display assembly subcomponents

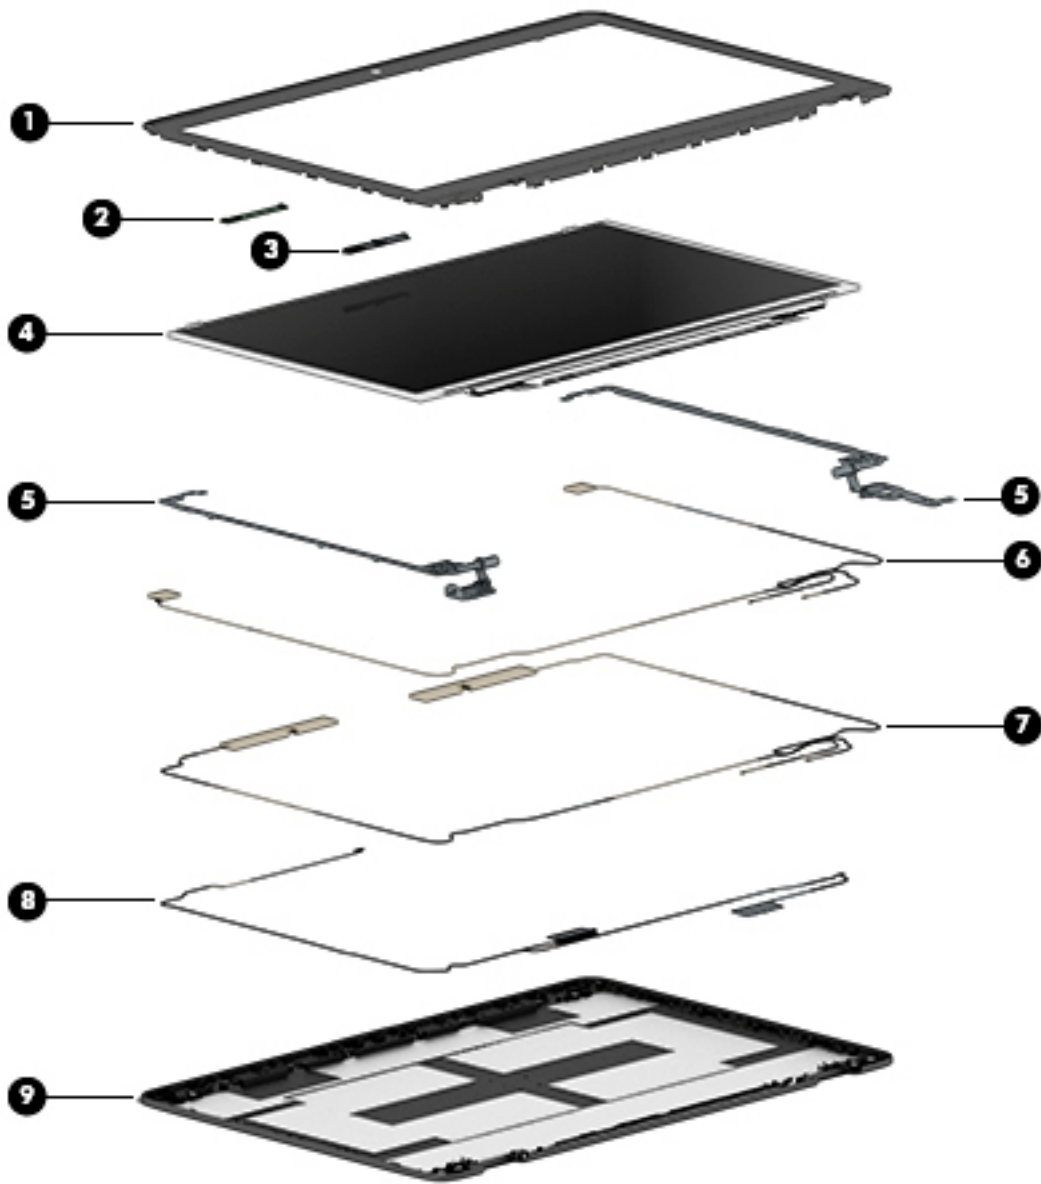

| Item | Component | Spare part number |
|------------|------------------------------|-------------------|
| (1) | Bezel | |
| | For 14" HP 640 products | 840658-001 |
| | For 15" HP 650 products | 840726-001 |
| | For 14" HP 645 products | 841482-001 |
| | For 15" HP 655 products | 842333-001 |
| (2) | Hinge cover | |
| | Hinge cover for 14" products | 840685-001 |
| | Hinge cover for 15" products | 840738-001 |

| Item | Component | Spare part number |
|-------------|--|--------------------------|
| (3) | Hinge cover | |
| | Hinge cover for 14" products with a touch screen | 840686-001 |
| | Hinge cover for 15" products with a touch screen | 845835-001 |
| (4) | Panel | |
| | Slim panel for 14" products | 840697-001 |
| | Flat panel for 14" products | 840698-001 |
| | Touch screen for 14" products (includes camera) | 840687-001 |
| | Slim panel for 15" products | 840748-001 |
| | Flat panel for 15" products | 840749-001 |
| | Touch screen for 15" products (includes camera) | 840740-001 |
| (5) | Hinge Kit | |
| | NOTE: For spare part information, see Mass storage devices on page 29 . | |
| (6) | WLAN cable , included in Cable Kit | |
| | Cable Kit for 14" products | 840659-001 |
| | Cable Kit for 15" products | 840727-001 |
| (7) | WWAN cable , included in Cable Kit | |
| | Cable Kit for 14" products | 840659-001 |
| | Cable Kit for 15" products | 840727-001 |
| (8) | Display cable | |
| | For 14" products | 840660-001 |
| | For 14" products with a touch screen | 845829-001 |
| | For 15" products | 840728-001 |
| | For 15" products with a touch screen | 845834-001 |
| (9) | Back cover | |
| | For 14" products | 840656-001 |
| | For 14" products with a touch screen | 845828-001 |
| | For 15" products | 840724-001 |
| | For 15" products with a touch screen | 845833-001 |

Mass storage devices

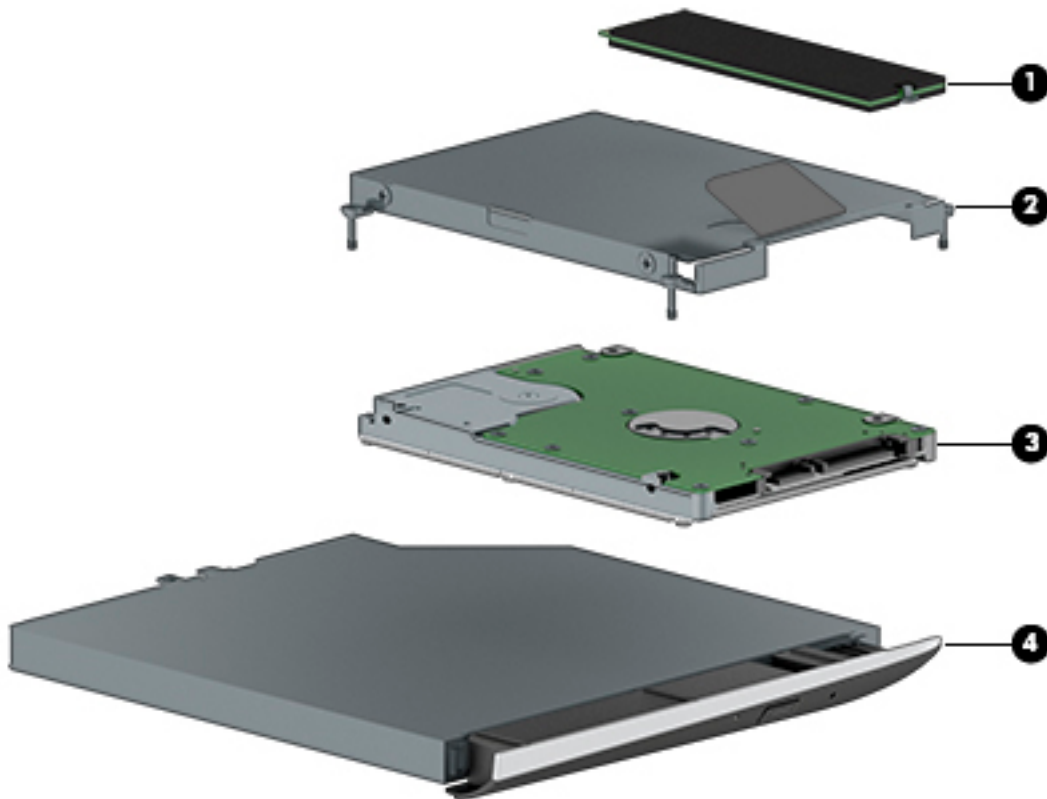

| Item | Component | Spare part number | |
|------|------------------------------------|---|------------|
| (1) | Solid-state drive | 128GB M2 SATA-3 TLC | 840701-001 |
| | | | 841485-001 |
| | | | 842336-001 |
| | | 128GB SATA-3 TLC for use in Brazil | 840708-001 |
| | | 180GB M2 SATA-3 MLC | 840702-001 |
| | | | 841486-001 |
| | | | 842337-001 |
| | | 180GB M2 SATA-3 self-encrypting Opal2 | 841487-001 |
| | | | 842338-001 |
| | | 180GB M2 SATA-3 self-encrypting OPAL2 MLC | 840703-001 |
| | SSD 240GB 2280 M2 SATA-3 | 843145-001 | |
| | 256GB M2 SATA-3 TLC | 840704-001 | |
| | | 841489-001 | |
| | | 842340-001 | |
| | 256GB SATA-3 TLC for use in Brazil | 840709-001 | |

| Item | Component | Spare part number |
|-------------|---|--|
| | 256GB M2 SATA-3 self-encrypting OPAL2 MLC | 840705-001 842341-001 841490-001 |
| | 256GB M2 PCIe-3x4 NVMe | 840710-001 |
| | 256GB PCIe-3x4 NVMe | 841488-001 842339-001 |
| | 512GB M2 SATA-3 TLC | 840706-001 841492-001 842343-001 |
| | 512GB M2 SATA-3 self-encrypting OPAL2 MLC | 840707-001 841493-001 842344-001 |
| | 512GB M2 PCIe-3x4 NVMe | 840711-001 841491-001 842342-001 |
| (2) | Hard Drive Hardware Kit | 840682-001 |
| (3) | Hard drive | |
| | 500GB 7200RPM RAW 7mm | 703267-001 |
| | 500GB 5400RPM SATA RAW HYB8G 7mm | 732000-001 |
| | 1TB 5400RPM RAW 7mm | 762990-001 |
| | 500GB 7200RPM SATA FIPS RAW 7mm | 820572-001 |
| | 500GB 7200RPM SATA self-encrypting RAW 7mm | 820573-001 |
| (4) | Optical drive (select products only) | |
| | Optical drive/Blu-ray combo for 14" products | 840688-001 |
| | Optical drive/DVD ROM combo for 14" products | 840689-001 840690-001 |
| | Optical drive/Blu-ray combo for 15" products | 840741-001 |
| | Optical drive/DVD combo for 15" products | 840742-001 |
| | Optical drive/DVD ROM combo for 15" products | 840743-001 |
| | For products with an optical drive | 840745-001 |
| | For products with an optical drive and a serial port (select products only) | 840746-001 |

Miscellaneous parts

| Component | Spare part number |
|---|-------------------|
| AC adapter | |
| 90 W PFC ADPTR S-3P 4.5MM (select 15" products only) | 710413-001 |
| 65 W AC adapter nPFC S-3P 4.5MM | 710412-001 |
| 65 W AC adapter nPFC SMART 4.5mm EM | 714657-001 |
| 45 W AC adapter NPFC SMART RC 4.5mm NSLIM | 741727-001 |
| 45 W AC adapter NPFC SMART RC 4.5mm 2P | 742436-001 |
| Antenna Kit | |
| For 14" products | 840655-001 |
| For 15" products | 840723-001 |
| Bracket Kit (includes fingerprint reader bracket, WLAN module bracket, and smart card reader bracket for 14" products) | 840683-001 |
| Cable Kit | |
| For 14" products | 840659-001 |
| For 15" products | 840728-001 |
| Plastics Kit | |
| For 14" products | 840696-001 |
| For 15" products | 840747-001 |
| Rubber Kit | |
| | 828884-001 |
| Screw Kit | |
| For 14" products | 840699-001 |
| For 15" products | 840750-001 |
| Speaker Kit | |
| | 840700-001 |

4 Removal and replacement procedures preliminary requirements

Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screwdriver
- Magnetic screwdriver
- Phillips P0 and P1 screwdrivers

Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



NOTE: As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

Plastic parts



CAUTION: Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic

Cables and connectors

⚠ CAUTION: When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

Drive handling

⚠ CAUTION: Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

Grounding guidelines

Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

⚠ CAUTION: To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

⚠ CAUTION: A product can be degraded by as little as 700 V.

| Typical electrostatic voltage levels | | | |
|--------------------------------------|-------------------|----------|---------|
| Event | Relative humidity | | |
| | 10% | 40% | 55% |
| Walking across carpet | 35,000 V | 15,000 V | 7,500 V |
| Walking across vinyl floor | 12,000 V | 5,000 V | 3,000 V |
| Motions of bench worker | 6,000 V | 800 V | 400 V |
| Removing DIPS from plastic tube | 2,000 V | 700 V | 400 V |
| Removing DIPS from vinyl tray | 11,500 V | 4,000 V | 2,000 V |
| Removing DIPS from Styrofoam | 14,500 V | 5,000 V | 3,500 V |
| Removing bubble pack from PCB | 26,500 V | 20,000 V | 7,000 V |
| Packing PCBs in foam-lined box | 21,000 V | 11,000 V | 5,000 V |

Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screwdrivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm 10% resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:


- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.


| Material | Use | Voltage protection level |
|-----------------------|------------|--------------------------|
| Antistatic plastics | Bags | 1,500 V |
| Carbon-loaded plastic | Floor mats | 7,500 V |
| Metallized laminate | Floor mats | 5,000 V |

5 Removal and replacement procedures for Customer Self-Repair parts

This chapter provides removal and replacement procedures for Customer Self-Repair parts.

 **NOTE:** The Customer Self-Repair program is not available in all locations. Installing a part not supported by the Customer Self-Repair program may void your warranty. Check your warranty to determine if Customer Self-Repair is supported in your location.

Component replacement procedures

 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Locating system information on page 19](#) for details.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

There are as many as xx screws that must be removed, replaced, and/or loosened when servicing Customer Self-Repair parts. Make special note of each screw size and location during removal and replacement.

Service door


| Description | Spare part number |
|------------------|-------------------|
| Service door | |
| For 14" products | 845169-001 |
| For 15" products | 845171-001 |

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Remove the service door:


1. Depending on the product, remove 8 (for 14 products) or 10 (for 15 products) M2.5x6L P1 screws **(1)**.

2. Lift the service door to remove it (2).

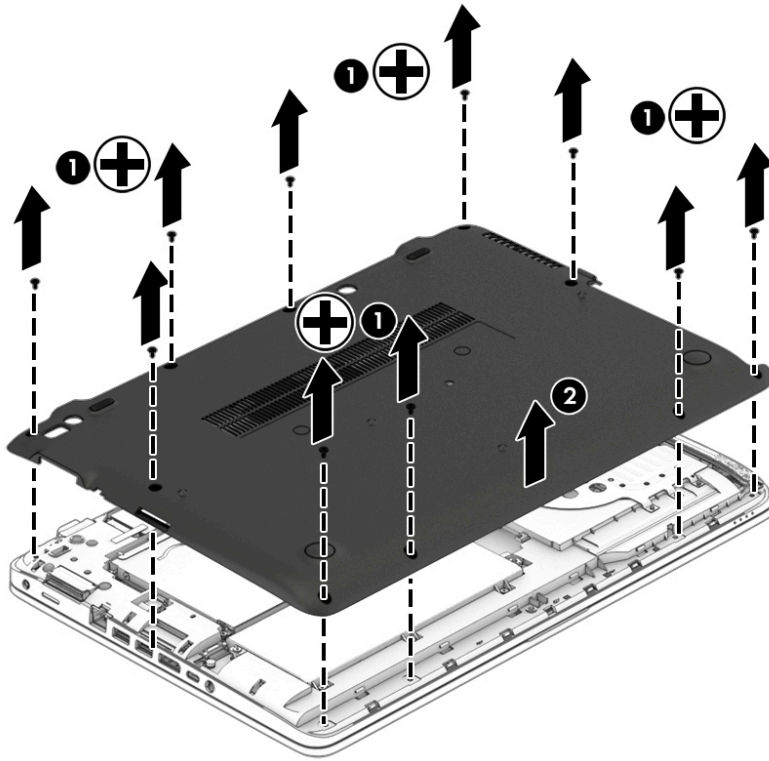

Battery

| Description | Spare part number |
|---|-------------------|
| Battery 3C 48WHr 4.21Ah LI CI03048XL-PR | 801554-001 |

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement


Before removing the battery, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the service door (see [Service door on page 37](#)).

Remove the battery:

1. Loosen 6 P1 captive screws (1).


2. Lift the battery (2), and remove it (3).

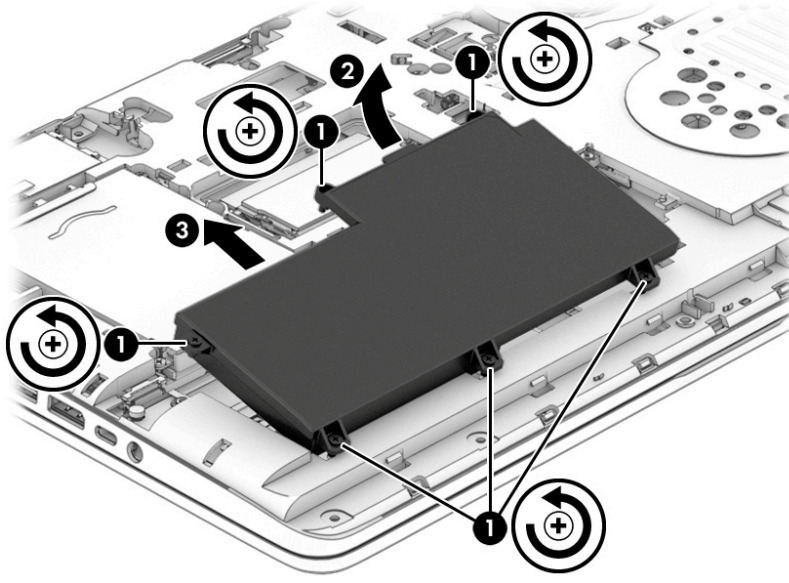

Reverse this procedure to install the battery.

Hard drive

| Description | Spare part number |
|--|-------------------|
| Hard drive | |
| 500GB 7200RPM RAW 7mm | 703267-001 |
| 500GB 5400RPM SATA RAW HYB8G 7mm | 732000-001 |
| 1TB 5400RPM RAW 7mm | 762990-001 |
| 500GB 7200RPM SATA FIPS RAW 7mm | 820572-001 |
| 500GB 7200RPM SATA self-encrypting RAW 7mm | 820573-001 |
| HDD Hardware Kit | 840682-001 |


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the hard drive, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Battery (see [Battery on page 38](#)).

Remove the hard drive:

1. Loosen 4 P1 captive screws or remove 4 M 2.0x8L P1 screws (1).
2. Pull the plastic tab (2), and then remove the hard drive (3).

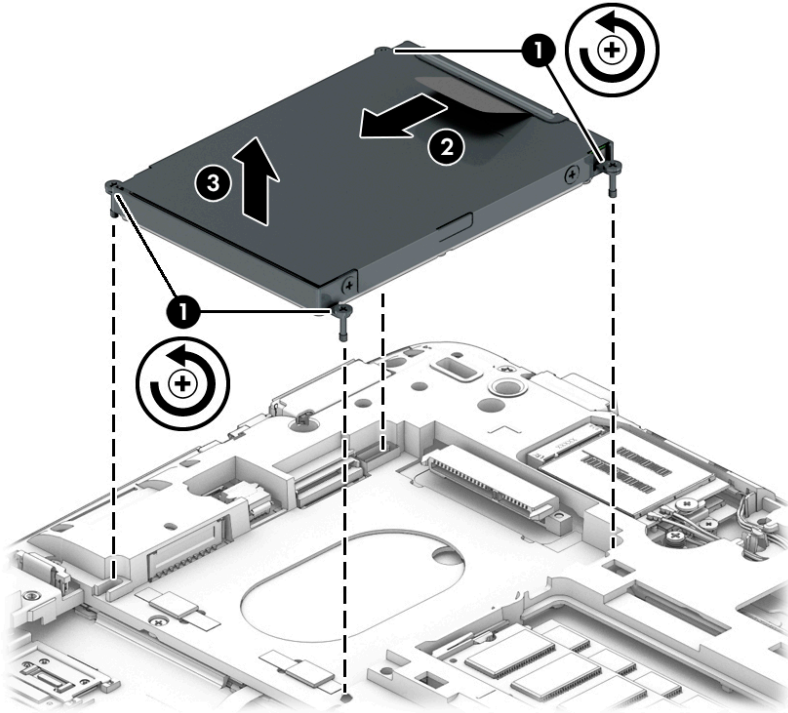

3. If it is necessary to disassemble the hard drive, remove the 4 screws (1), and then remove pull the tab (2) to remove the cover from the hard drive.

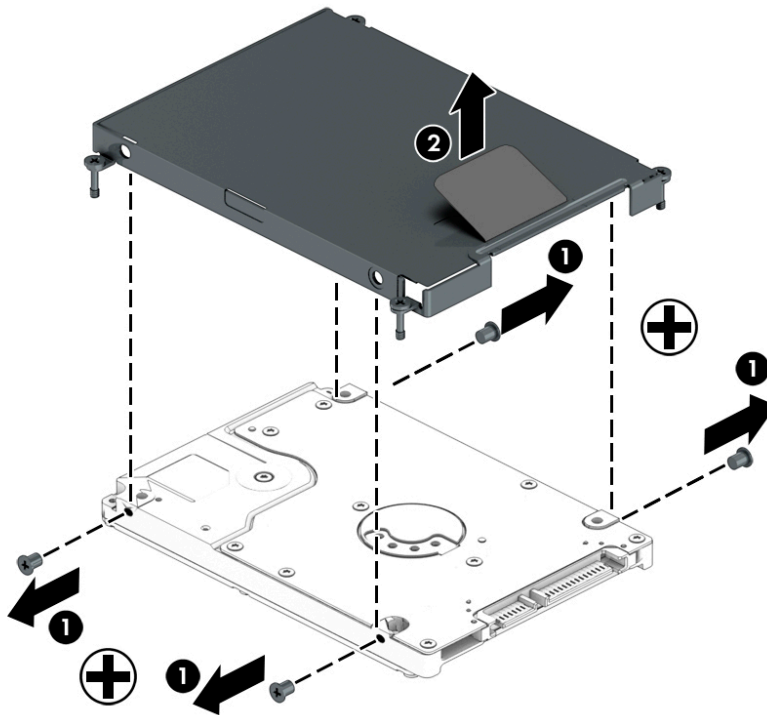

Reverse this procedure to reassemble and install the hard drive.

Solid-state drive (select products only)

| Description | Spare part number |
|---|-------------------|
| Solid-state drive | |
| 128GB M2 SATA-3 TLC | 840701-001 |
| | 841485-001 |
| | 842336-001 |
| 128GB SATA-3 TLC for use in Brazil | 840708-001 |
| 180GB M2 SATA-3 MLC | 840702-001 |
| | 841486-001 |
| | 842337-001 |
| 180GB M2 SATA-3 self-encrypting Opal2 | 841487-001 |
| | 842338-001 |
| 180GB M2 SATA-3 self-encrypting OPAL2 MLC | 840703-001 |
| SSD 240GB 2280 M2 SATA-3 | 843145-001 |
| 256GB M2 SATA-3 TLC | 840704-001 |
| | 841489-001 |
| | 842340-001 |
| 256GB SATA-3 TLC for use in Brazil | 840709-001 |
| 256GB M2 SATA-3 self-encrypting OPAL2 MLC | 840705-001 |
| | 842341-001 |
| | 841490-001 |
| 256GB M2 PCIe-3x4 NVMe | 840710-001 |
| 256GB PCIe-3x4 NVMe | 841488-001 |
| | 842339-001 |
| 512GB M2 SATA-3 TLC | 840706-001 |
| | 841492-001 |
| | 842343-001 |
| 512GB M2 SATA-3 self-encrypting OPAL2 MLC | 840707-001 |
| | 841493-001 |
| | 842344-001 |
| 512GB M2 PCIe-3x4 NVMe | 840711-001 |
| | 841491-001 |
| | 842342-001 |




IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the solid-state drive, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).

Remove the solid-state drive:

- ▲ Remove 1 Phillips M2.0x8 screw **(1)**, and then remove the solid-state drive **(2)**.

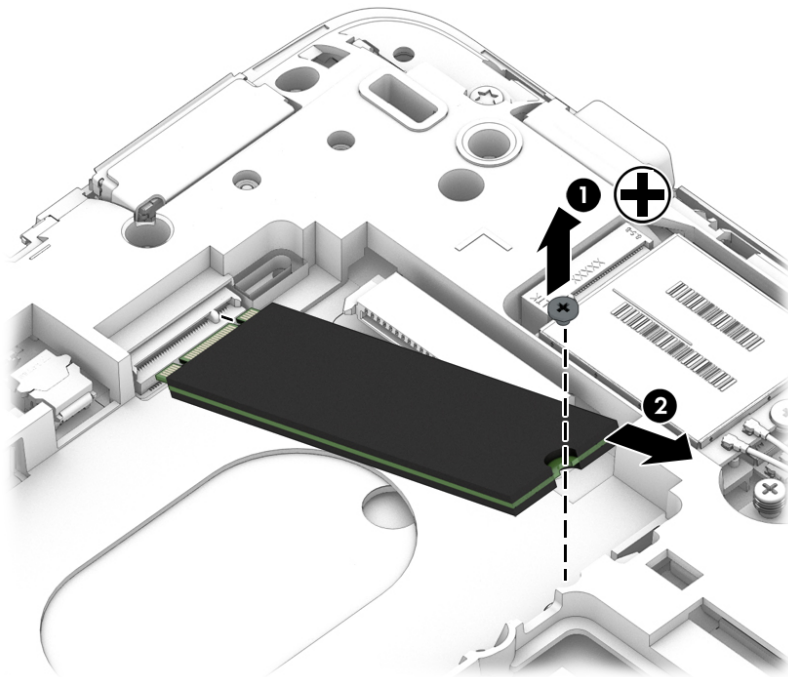

Reverse this procedure to install the solid-state drive.

WWAN module (select products only)



NOTE: The WWAN module spare part kit includes the cable.

| Description | Spare part number |
|---|-------------------|
| WWAN module | |
| Foxconn Amstel LTE/EVDO/HSPA+ w/GPS M.2 | 822828-001 |

| Description | Spare part number |
|---------------------------------------|-------------------|
| T77W595 LTE M.2 w/GPS | 800870-001 |
| Huawei Wrangler MU736 HSPA+ w/GPS M.2 | 793516-001 |



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the WWAN module, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid state drive (see [Solid-state drive \(select products only\) on page 41](#)).

Remove the WWAN module:

1. Disconnect the two cables **(1)**.

- Remove 1 M 2.0x 3L P1screw (2), and then remove the WWAN module.

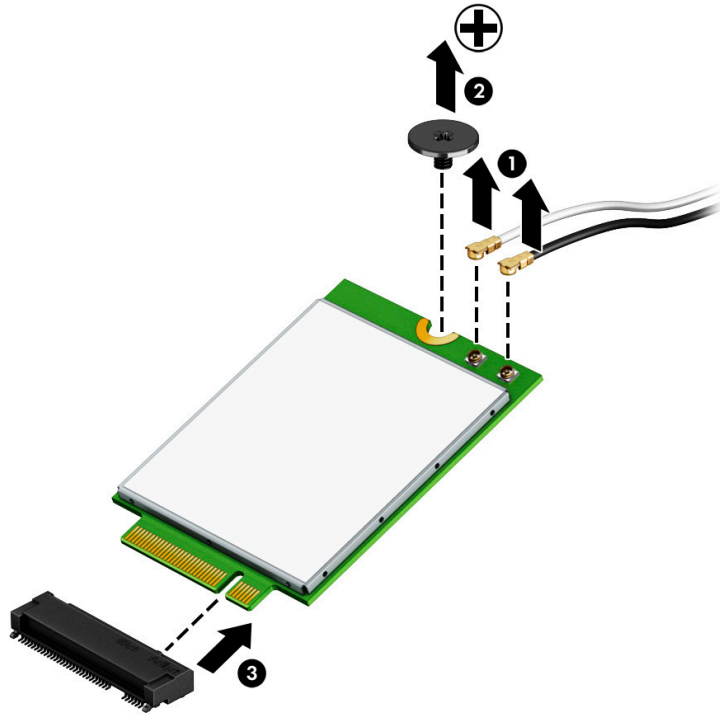

Reverse this procedure to install the WWAN module.

WLAN module

NOTE: The WLAN module spare part kit includes the cable.

| Description | Spare part number |
|---|-------------------|
| WLAN | |
| Broadcom Nami 43142 bgn 1x1 + BT 4 LE PCIe+USB NGFF 1630 MOW | 792608-001 |
| Realtek Shanks RTL8188EE bgn 1x1 PCI-e NGFF 2230 M.2 WW (NB) | 792609-001 |
| 11AC 7265NV M.2 D0 MOW | 793840-001 |
| 11ac 2x2 Intel 8260NGW Snowfield Peak 2 | 806721-001 |
| 11ac Intel 3165 M.2 MOW | 806723-001 |
| 11 ABGN+BT4 x 2.2 LUFFY INDO | 812132-001 |
| Broadcom Luffy 943228 abgn 2x2 + BT 4 LE PCIe+USB NGFF 2230 MOW | 797884-001 |


IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the WLAN, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).

Remove the WLAN module:

1. Disconnect the two cables (1).
2. Remove 1 M 2.0x3L P1 screw (2).
3. Remove the bracket (3), and then remove the WLAN module.

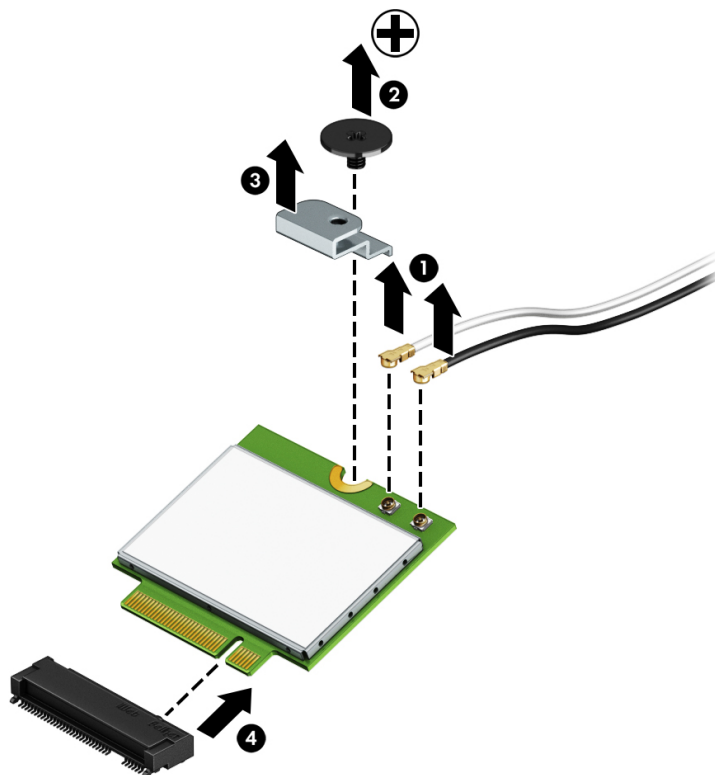

Reverse this procedure to install the WLAN module.

Optical drive

| Description | Spare part number |
|---|-------------------|
| Optical drive | |
| Optical drive/Blu-ray combo for 14" products | 840688-001 |
| Optical drive/DVD combo for 14" products | 840689-001 |
| Optical drive/DVD ROM combo for 14" products | 840690-001 |
| Optical drive/Blu-ray combo for 15" products | 840741-001 |
| Optical drive/DVD combo for 15" products | 840742-001 |
| Optical drive/DVD ROM combo for 15" products | 840743-001 |



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the optical drive, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Battery (see [Battery on page 38](#)).
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).

Remove the optical drive:

1. Remove 1 Phillips M2.0x8 screw **(1)**.

2. Remove the optical drive (2).

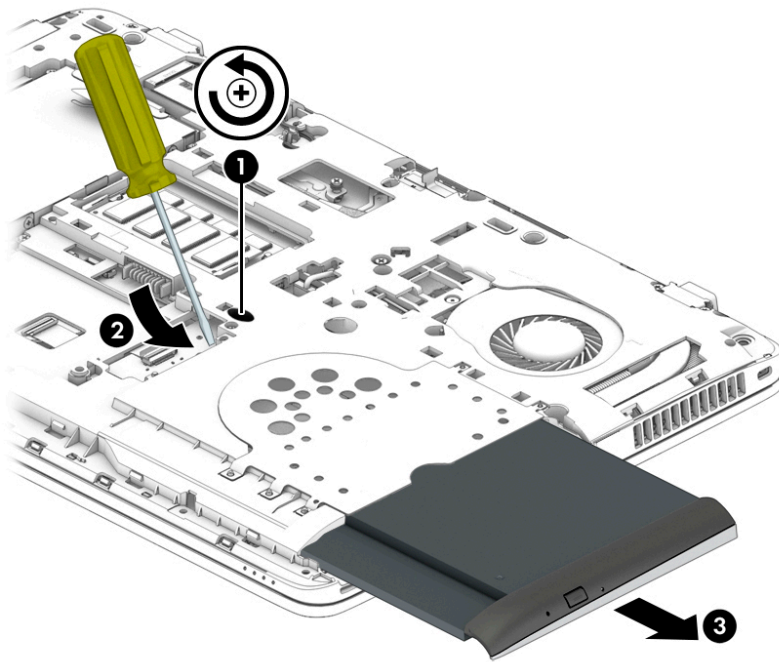

Reverse this procedure to install the optical drive.

Keyboard

In this section, the first table provides the main spare part number for the keyboard. The second table provides the country codes.

| Description | Spare part number |
|--|-------------------|
| Keyboard for 14" products (includes keyboard cable) | 840791-001 |
| Backlit keyboard for 14" products (includes keyboard cable and backlight cable) | 840800-001 |
| | 840801-001 |
| Keyboard for 15" products (includes keyboard cable) | 841136-001 |
| Backlit keyboard for 15" products (includes keyboard cable and backlight cable) | 841137-001 |
| | 841145-001 |

| For use in country or region | Spare part number | For use in country or region | Spare part number | For use in country or region | Spare part number |
|------------------------------|-------------------|------------------------------|-------------------|------------------------------|-------------------|
| Belgium | -A41 | India | -D61 | Saudi Arabia | -171 |
| Brazil | -201 | Israel | -BB1 | Slovenia | -BA1 |
| Bulgaria | -261 | Italy | -061 | South Korea | -AD1 |
| Canada | -DB1 | Japan | -291 | Spain | -071 |
| Czech Republic and Slovakia | -FL1 | Latin America | -161 | Sweden and Finland | -B71 |
| Denmark | -081 | The Netherlands | -B31 | Switzerland | -BG1 |
| Denmark, Finland, and Norway | -DH1 | Northern Africa | -FP1 | Taiwan | -AB1 |
| France | -051 | Norway | -091 | Thailand | -281 |
| Germany | -041 | Portugal | -131 | Turkey | -141 |
| Greece | -151 | Romania | -271 | United Kingdom | -031 |
| Hungary | -211 | Russia | -251 | United States | -001 |
| Iceland | -DD1 | | | | |


Before removing the keyboard, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))

- c. Hard drive (see [Hard drive on page 39](#)).
- d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
- e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
- f. WLAN module (see [WLAN module on page 44](#)).
- g. Optical drive (see [Optical drive on page 46](#)).

Remove the keyboard:


1. Remove the 3 M 2x4L screws that secure the keyboard to the computer.

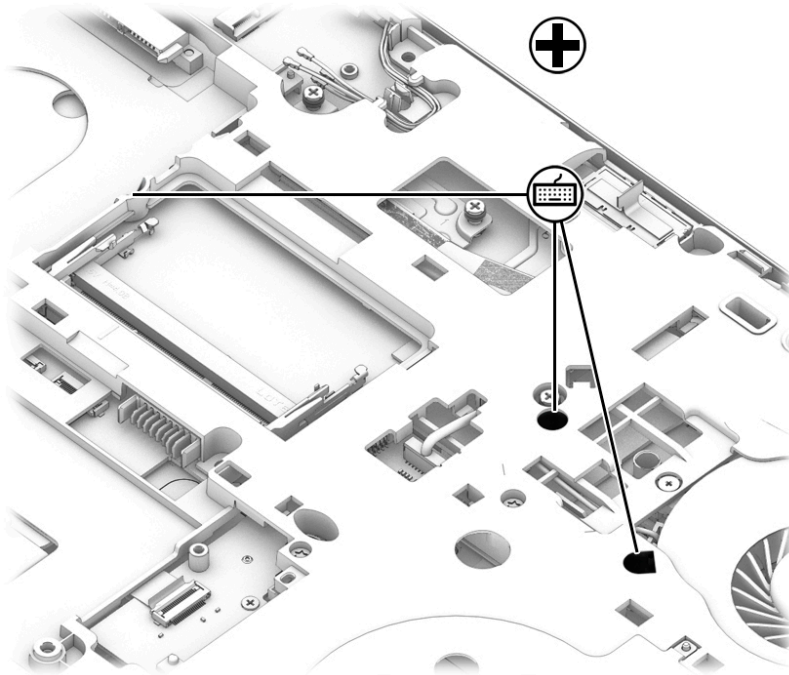


2. Position the computer open and on its side.

3. Gently insert a Torx screwdriver or other blunt tool into the keyboard release opening under the memory module, and then press gently on the back of the keyboard until the keyboard disengages from the computer.

CAUTION: Press gently to avoid damaging the mylar on the back of the keyboard.

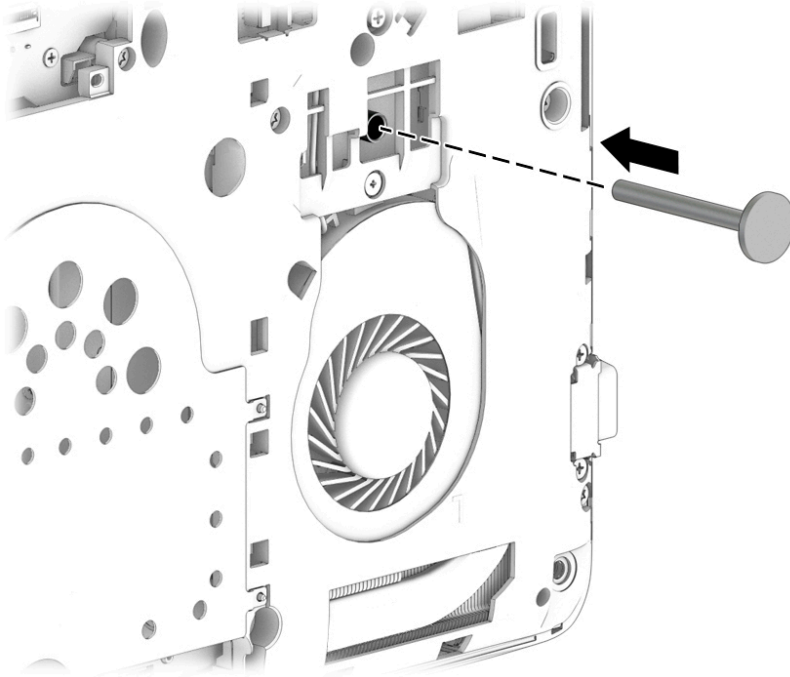

4. Rotate the keyboard downward **(1)** onto the top cover **(1)**, and then release and disconnect the following connectors and cables:
 - Release the keyboard connector **(2)** and then remove the cable **(3)**.
 - For products with a backlit keyboard, release the backlight connectors **(4)** and **(6)**, and then remove the cables **(5)** and **(7)**.

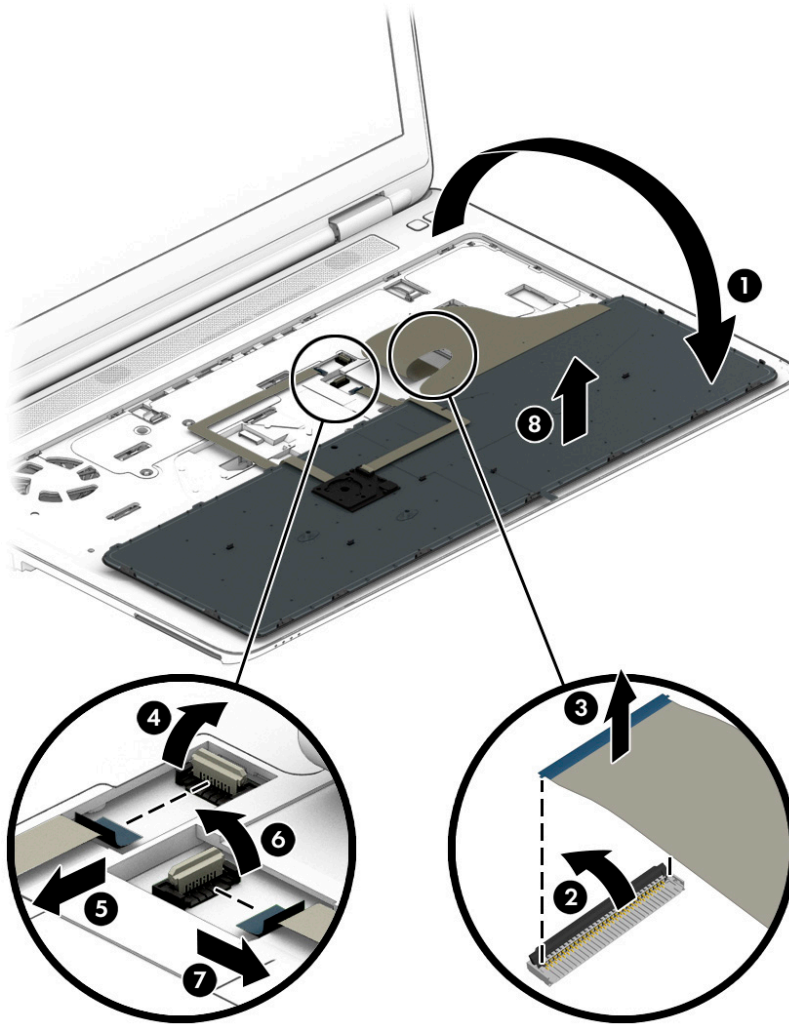


5. Remove the keyboard (8).

Reverse this procedure to install the keyboard.

Memory


| Description | Spare part number |
|--------------------------------------|-------------------|
| Memory | |
| 2GB PC3L 12800 1600MHz shared memory | 691739-001 |
| 4GB PC3L 12800 1600MHz shared memory | 691740-001 |
| 8GB PC3L 12800 1600MHz shared memory | 693374-001 |
| 4GB 2133MHz 1.2v DDR4 shared memory | 820569-001 |
| 8GB 2133MHz 1.2v DDR4 shared memory | 820570-001 |

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the memory module, follow these steps:

1. Shut down the computer.
 2. Disconnect all external devices connected to the computer.
 3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
 4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Battery (see [Battery on page 38](#)).
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
- ▲ If you are replacing a memory module, remove the existing memory module:
- ▲ Pull away the retention clips **(1)** on each side of the memory module.
The memory module tilts up.
 - ▲ Grasp the edge of the memory module **(2)**, and then gently pull the memory module out of the memory module slot.

⚠ CAUTION: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

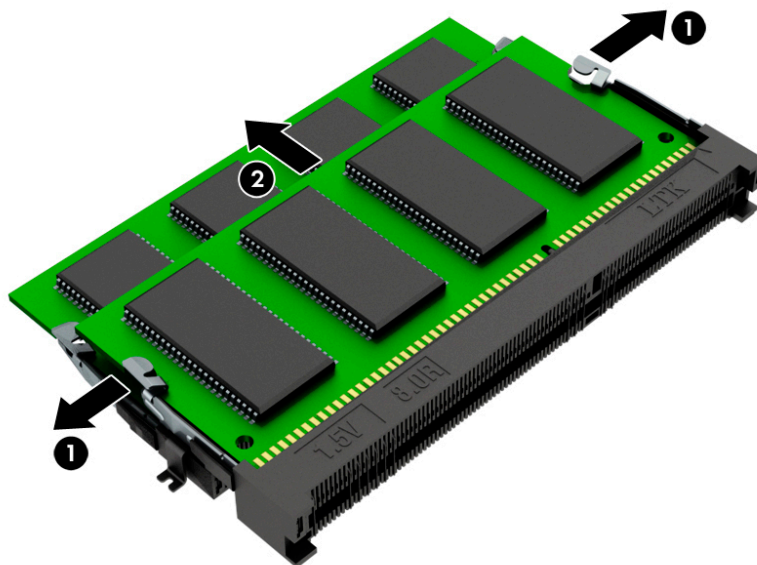


To protect a memory module after removal, place it in an electrostatic-safe container.

To install a memory module:

⚠ CAUTION: To prevent damage to the memory module, hold the memory module by the edges only. Do not touch the components on the memory module.

1. Align the notched edge **(1)** of the memory module with the tab in the memory module slot.
2. With the memory module at a 45-degree angle from the surface of the memory module compartment, press the module **(2)** into the memory module slot until it is seated.

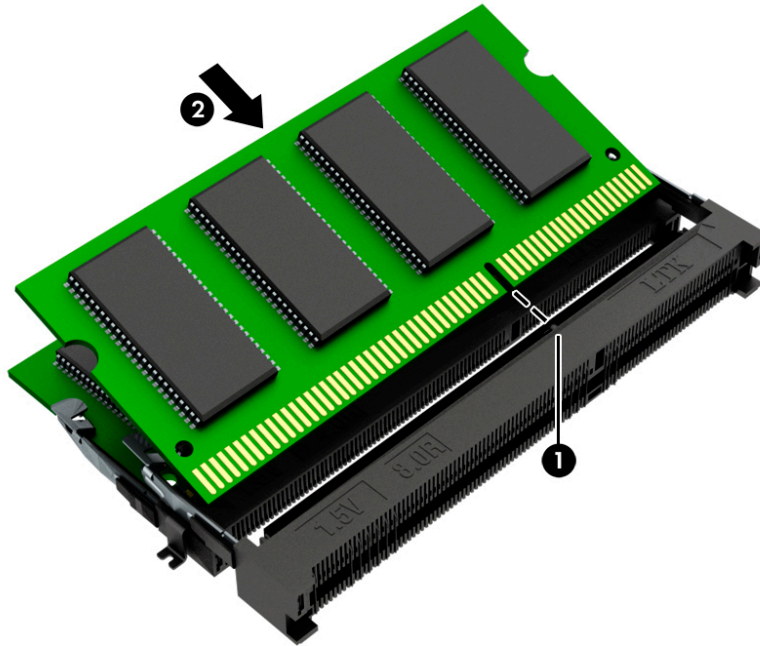


3. Gently press the memory module down, applying pressure to both the left and right edges of the memory module, until the retention clips snap into place.

⚠ CAUTION: To prevent damage to the memory module, be sure that you do not bend the memory module.


6 Removal and replacement procedures for Authorized Service Provider parts

This chapter provides removal and replacement procedures for Authorized Service Provider only parts.

 **CAUTION:** Components described in this chapter should only be accessed by an authorized service provider. Accessing these parts can damage the computer or void the warranty.

CAUTION: This computer does not have user-replaceable parts. Only HP authorized service providers should perform the removal and replacement procedures described here. Accessing the internal part could damage the computer or void the warranty.

Component replacement procedures


 **NOTE:** Details about your computer, including model, serial number, product key, and length of warranty, are on the service tag at the bottom of your computer. See [Locating system information on page 19](#) for details.

 **NOTE:** HP continually improves and changes product parts. For complete and current information on supported parts for your computer, go to <http://partsurfer.hp.com>, select your country or region, and then follow the on-screen instructions.

There are as many as xx screws that must be removed, replaced, and/or loosened when servicing Authorized Service Provider only parts. Make special note of each screw size and location during removal and replacement.

Hinge cover

| Description | Spare part number |
|--|-------------------|
| Hinge Kit for 14" products | 840684-001 |
| Hinge Kit for 15" products | 840737-001 |
| Hinge Kit for 14" products with a touch screen | 845830-001 |
| Hinge Kit for 15" products with a touch screen | 845835-001 |
| Hinge cover for 14" products | 840685-001 |
| Hinge cover for 15" products | 840738-001 |
| Hinge cover for 14" products with a touch screen | 840686-001 |
| Hinge cover for 15" products with a touch screen | 845835-001 |


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the hinge covers, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Memory (see [Memory on page 51](#)).

Remove the hinge covers:

- ▲ Remove the 2 M2x5L P1 screws **(1)**, and then remove the hinge covers **(2)**.

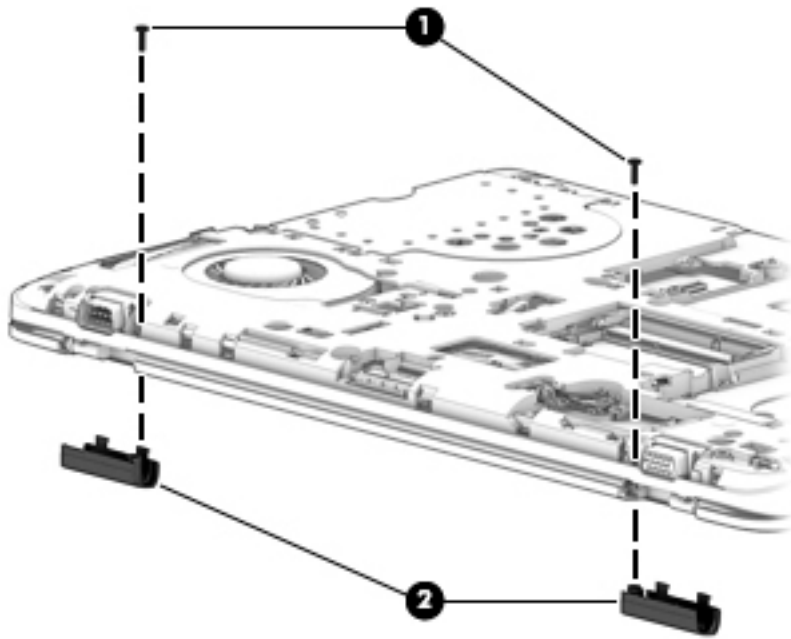

Reverse this procedure to replace the hinge covers.

Base enclosure



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement.


| Description | Spare part number |
|------------------|-------------------|
| Base enclosure | |
| For 14" products | 840712-001 |
| For 15" products | 840725-001 |

Before removing the base enclosure, follow these steps:


1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Memory (see [Memory on page 51](#)).
 - j. Hinge covers (see [Hinge cover on page 55](#)).

Remove the base enclosure:

1. Disconnect the fingerprint reader cable **(1)**, the speaker cable **(2)**, the display cable **(3)**, and the pointing stick cable **(4)**.

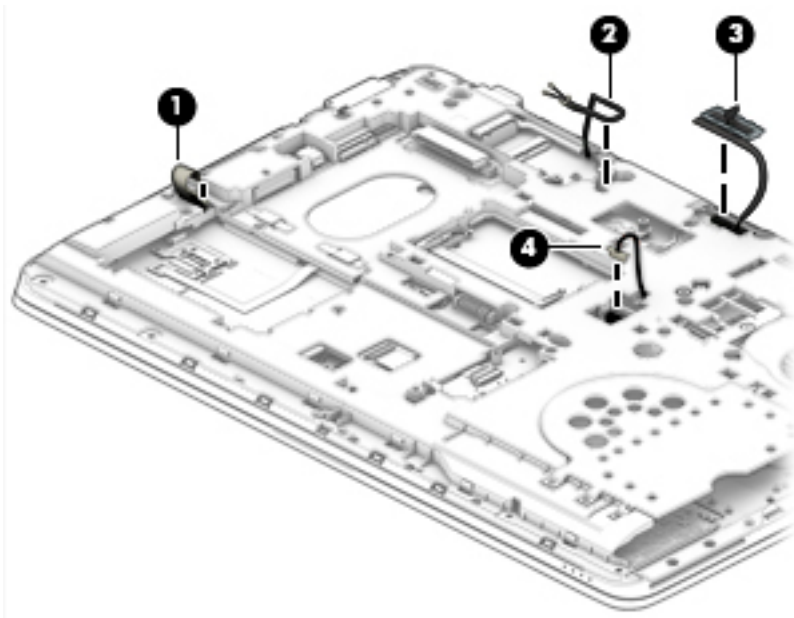

2. Remove the two M2x3L screws **(1)**, the two M2x1.5L P0 screws **(2)**, 1 M2.5x8L T8 screw **(3)**, and 10 M2.6x6L T8 screws **(4)**.

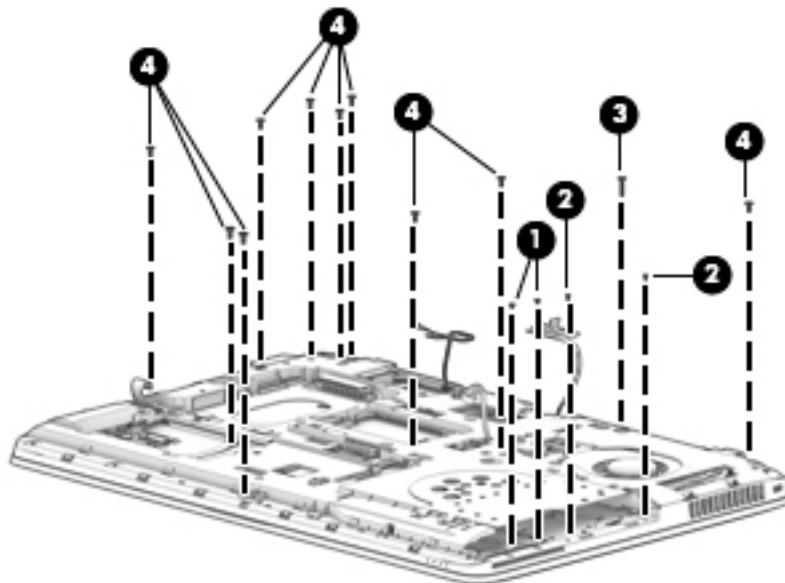

Reverse this procedure to install the base enclosure.

System board

| Description | Spare part number |
|---|-------------------|
| System board | |
| Discrete memory, Intel i5-6300U processor, and WWAN capability | 840712-001 |
| Discrete memory, Intel i5-6300U processor, WWAN capability, and Windows | 840712-601 |
| Discrete memory, Intel i7-6300U processor, and WWAN capability | 840713-001 |
| Discrete memory, Intel i7-6300U processor, WWAN capability, and Windows | 840713-601 |
| UMA memory, AMD A10-8700B processor, and WWAN capability | 841494-001 |
| | 842345-001 |
| UMA memory, AMD A6-8500B processor | 841495-001 |
| | 842346-001 |
| UMA memory, AMD A6-8500B processor, and Windows | 841495-601 |
| | 842346-601 |
| UMA memory, AMD A8-8600B processor, and Windows | 841497-001 |
| | 842348-001 |
| UMA memory, AMD A8-8600B processor, and Windows | 841497-601 |
| | 842348-601 |
| UMA memory, AMD A8-8600B processor, and WWAN capability | 841496-001 |
| | 842347-001 |
| UMA memory, AMD A8-8600B processor, and WWAN capability | 841496-001 |
| | 842347-001 |
| UMA memory, Intel i3-6100U processor | 840714-001 |
| UMA memory, Intel i3-6100U processor and Windows | 840714-601 |
| UMA memory, Intel i5-6200U processor | 840715-001 |
| UMA memory, Intel i5-6200U processor and Windows | 840715-601 |
| UMA memory, Intel i5-6200U processor, and WWAN capability | 840716-001 |
| UMA memory, Intel i5-6200U processor, WWAN capability, and Windows | 840716-601 |
| UMA memory, Intel i5-6300U processor, and WWAN capability | 840717-001 |
| UMA memory, Intel i5-6300U processor, and WWAN capability, and Windows | 840717-601 |
| UMA memory, Intel i5-6440HQ processor, and WWAN capability | 844345-001 |
| UMA memory, Intel i5-6440HQ processor, and WWAN capability, and Windows | 844345-601 |
| UMA memory, Intel i7-6600U processor, and WWAN capability | 840718-001 |
| UMA memory, Intel i7-6600U processor, and WWAN capability, and Windows | 840718-601 |
| UMA memory, Intel i7-6820HQ processor, and WWAN capability | 844346-001 |
| UMA memory, Intel i7-6820HQ processor, and WWAN capability, and Windows | 844346-601 |




IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the system board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Battery (see [Battery on page 38](#)).
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Hinge covers (see [Hinge cover on page 55](#)).
 - j. Base enclosure (see [Base enclosure on page 57](#)).


Remove the system board:

1. Disconnect the RTC battery cable **(2)** and the power button board cable **(2)**.

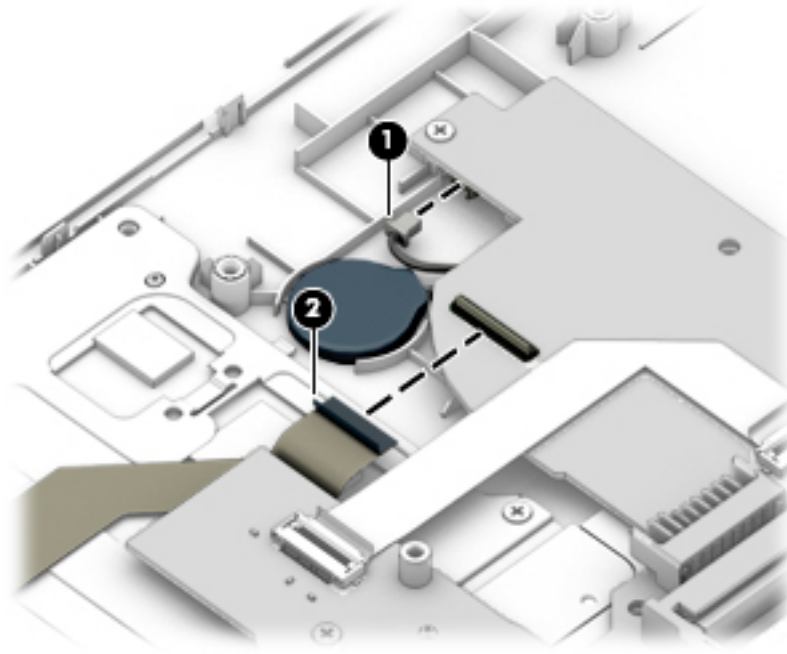

2. Loosen 3 P1 captive screws **(1)** on the fan, remove 4 M2x3L P1 screws **(2)** from the system board, and remove 2 M2x3L screws from the ODD board **(3)**.

3. Lift the system board (4), and then remove it (5).

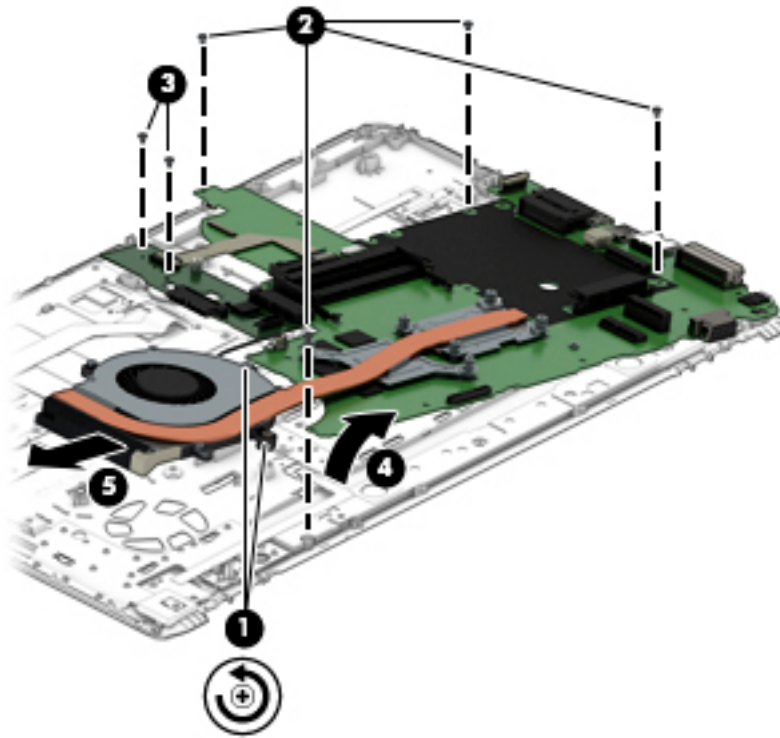

Reverse this procedure to install the system board.

Fan and heat sink assembly

| Description | Spare part number |
|--|-------------------|
| Fan and heat sink assembly | |
| For 14" products with integrated graphics | 840662-001 |
| For 14" products with discrete graphics | 840663-001 |
| For 15" products with integrated graphics | 840732-001 |
| For 15" products with high-quality integrated graphics | 840734-001 |
| For 15" products with discrete graphics | 840733-001 |

IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the fan and heat sink, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:

- a. Service door (see [Service door on page 37](#)).
- b. Remove the battery (see [Battery on page 38](#))
- c. Hard drive (see [Hard drive on page 39](#)).
- d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
- e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
- f. WLAN module (see [WLAN module on page 44](#)).
- g. Optical drive (see [Optical drive on page 46](#)).
- h. Keyboard (see [Keyboard on page 48](#)).
- i. Hinge covers (see [Hinge cover on page 55](#)).
- j. Base enclosure (see [Base enclosure on page 57](#)).
- k. System board (see [System board on page 59](#)).

To remove the fan and heat sink assembly for products with discrete graphics:


1. Disconnect the cable **(1)** from the system board.
2. Loosen 6 Phillips captive screws **(2)**.
3. Lift the fan and heat sink assembly **(3)** to remove it .

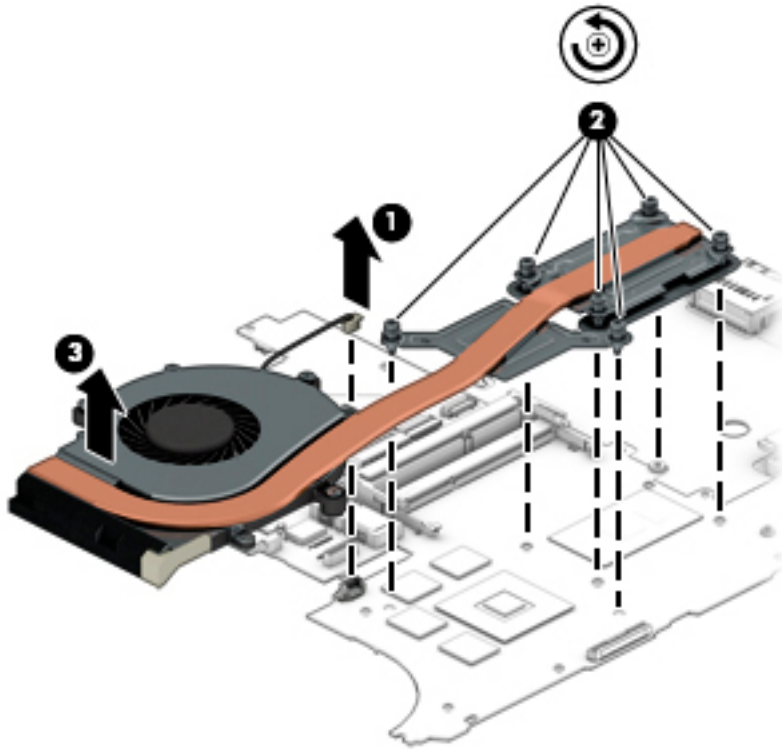

To remove the fan and heat sink assembly for products with integrated graphics:

1. Disconnect the cable **(1)** from the system board.
2. Loosen 4 Phillips captive screws **(2)**.

3. Lift the fan and heat sink assembly **(3)** to remove it.

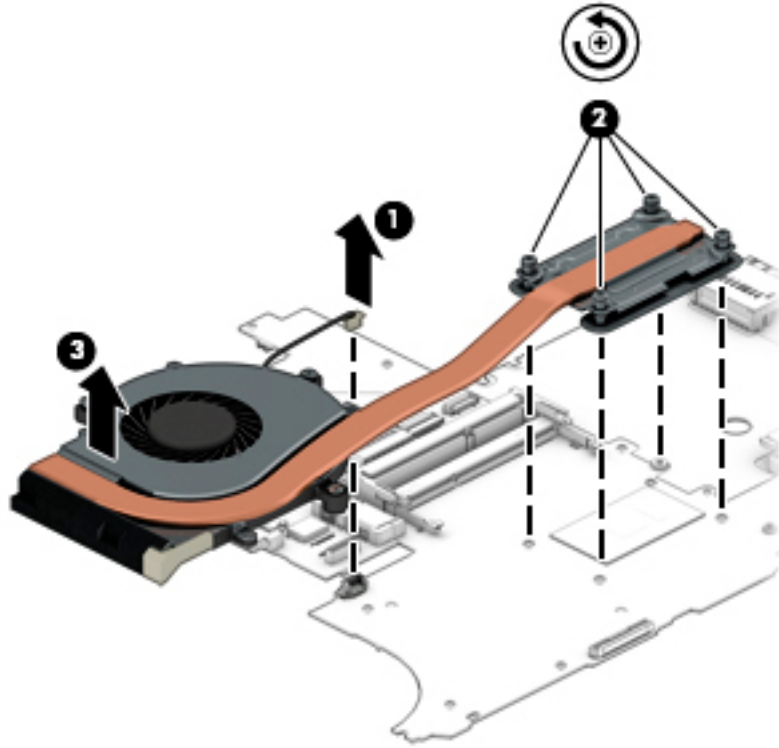

Reverse this procedure to install the fan and heat sink assembly.

Optical drive board

| Description | Spare part number |
|---|-------------------|
| Optical drive board | |
| For products with an optical drive | 840745-001 |
| For products with an optical drive and a serial port (select products only) | 840746-001 |




IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the optical drive board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#)).
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Hinge covers (see [Hinge cover on page 55](#)).
 - j. Base enclosure (see [Base enclosure on page 57](#)).
 - k. System board (see [System board on page 59](#)).
 - l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).


Remove the optical drive board:

- ▲ Disconnect the optical drive board cable **(1)**, and then remove the optical drive board **(2)**.

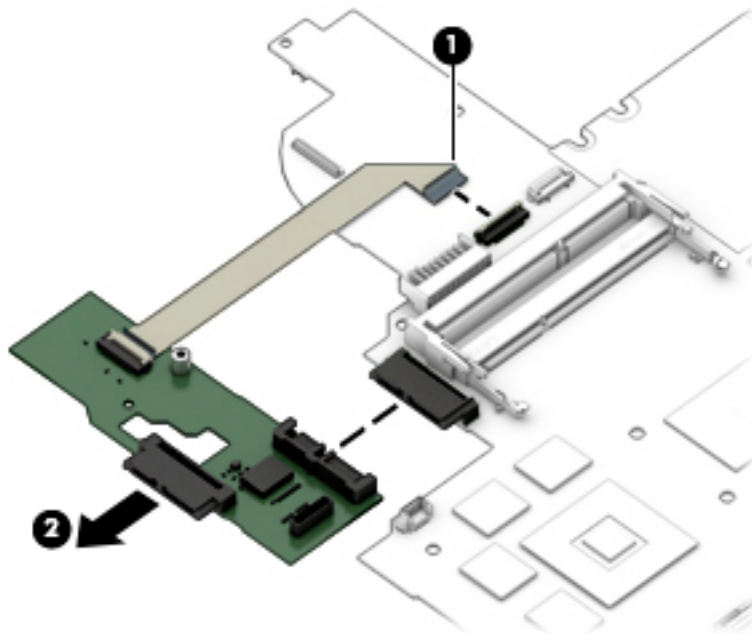


Reverse this procedure to install the optical drive board.

Top cover and TouchPad

 **NOTE:** The top cover spare part kit includes the TouchPad.

| Description | Spare part number |
|---|-------------------|
| Top cover (includes TouchPad) | |
| Top cover for 14" products with a TouchPad | 840719-001 |
| Top cover for 14" products with a TouchPad | 840720-001 |
| Top cover for 14" products with a TouchPad, TouchPad on/off button, and bracket | 840721-001 |
| Top cover for 14" products with a TouchPad, TouchPad on/off button, and bracket | 845170-001 |
| Top cover for 15" products with a TouchPad | 840751-001 |
| Top cover for 15" products with a TouchPad and pointing stick | 840752-001 |
| Top cover for 15" products with a TouchPad, TouchPad on/off button, and bracket | 840753-001 |
| Top cover for 15" products with a TouchPad, TouchPad on/off button, pointing stick, and bracket | 845172-001 |

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement


Before removing the top cover, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.


3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#)).
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Hinge covers (see [Hinge cover on page 55](#)).
 - j. Base enclosure (see [Base enclosure on page 57](#)).
 - k. System board (see [System board on page 59](#)).
 - l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).

Remove the top cover:


1. If the computer is equipped with a pointing stick (select products only), remove 2 M2x1.5L P0 pointing stick screws.

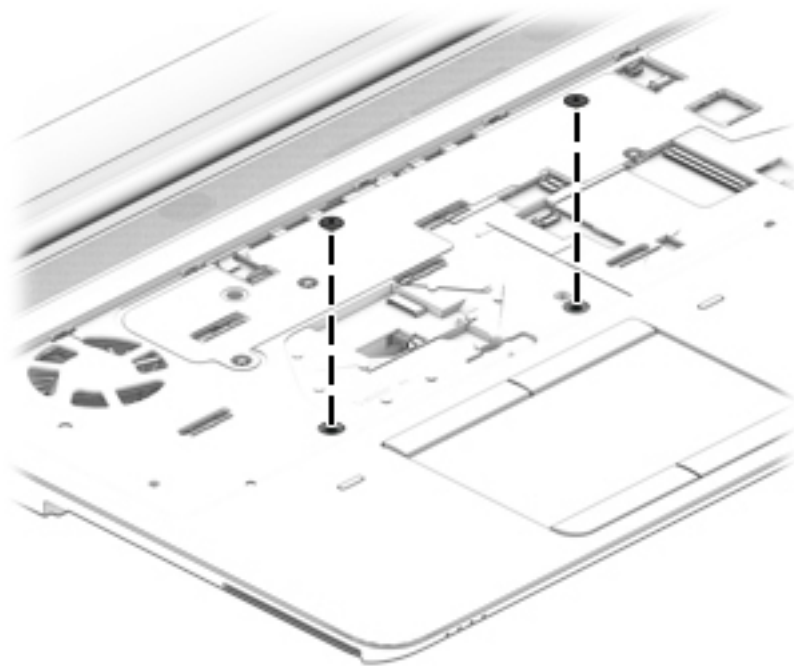

2. Turn the computer over, and then disconnect the power button board cable **(1)**, the speaker cable **(2)**, and the fingerprint reader board cable **(3)**.

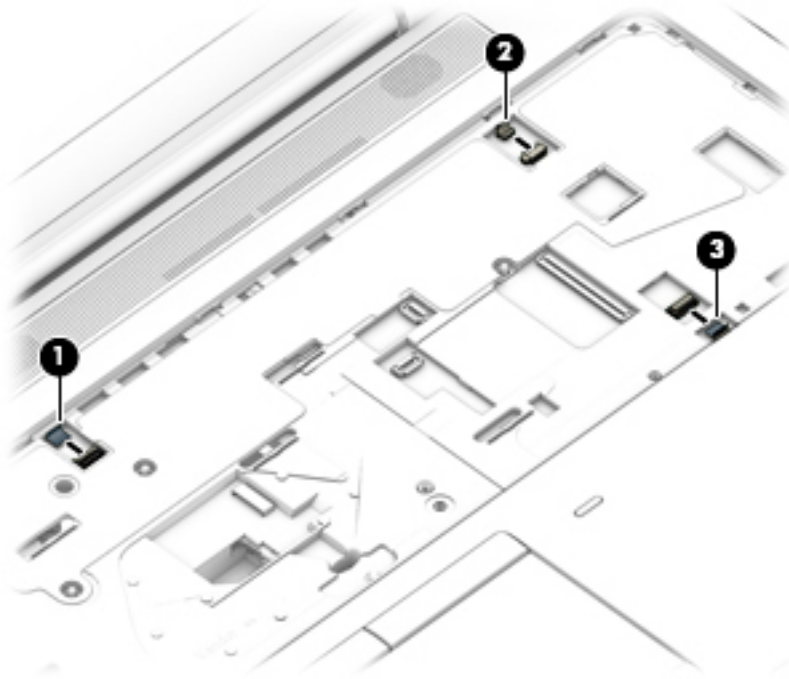


3. Carefully disconnect the plastic clips **(1)** on the front edge, and then remove the top cover **(1)**.

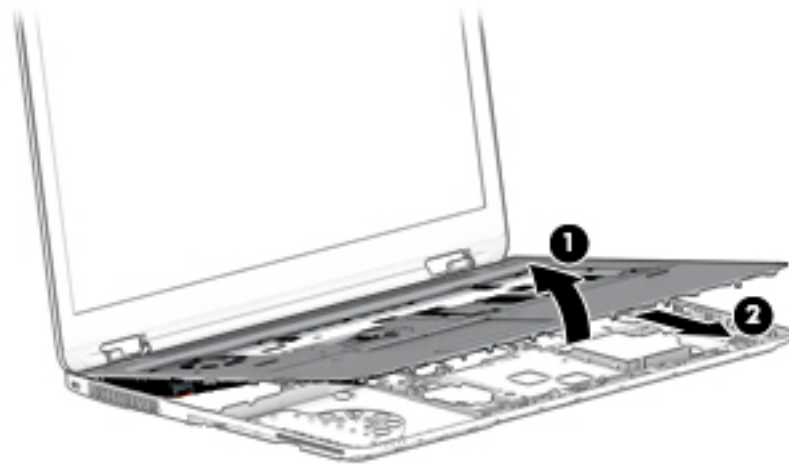


Reverse this procedure to install the top cover.

To remove the TouchPad:

1. Disconnect the TouchPad cables **(1)** and **(2)**.

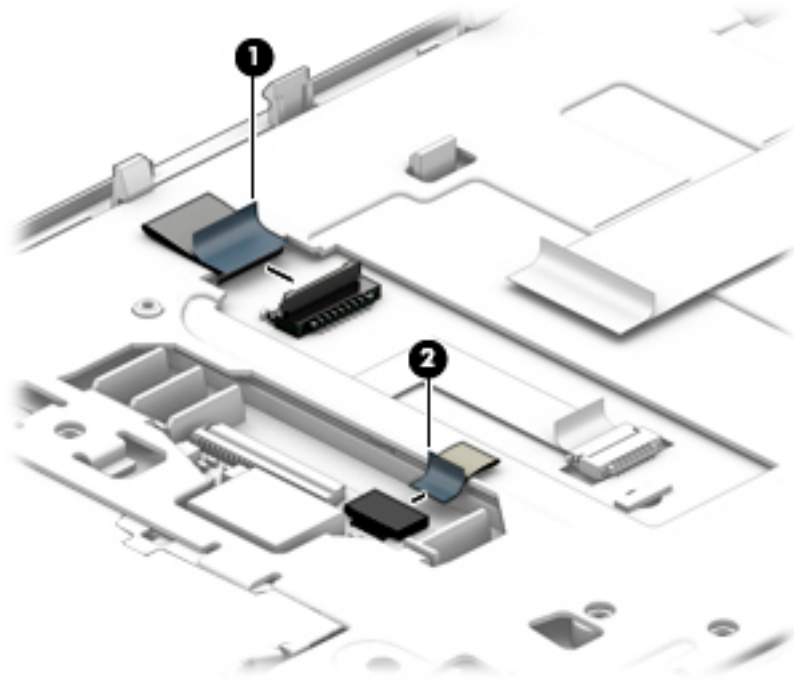


2. Remove 4 Phillips screws **(1)**, and then lift the TouchPad bracket **(2)** to remove it.

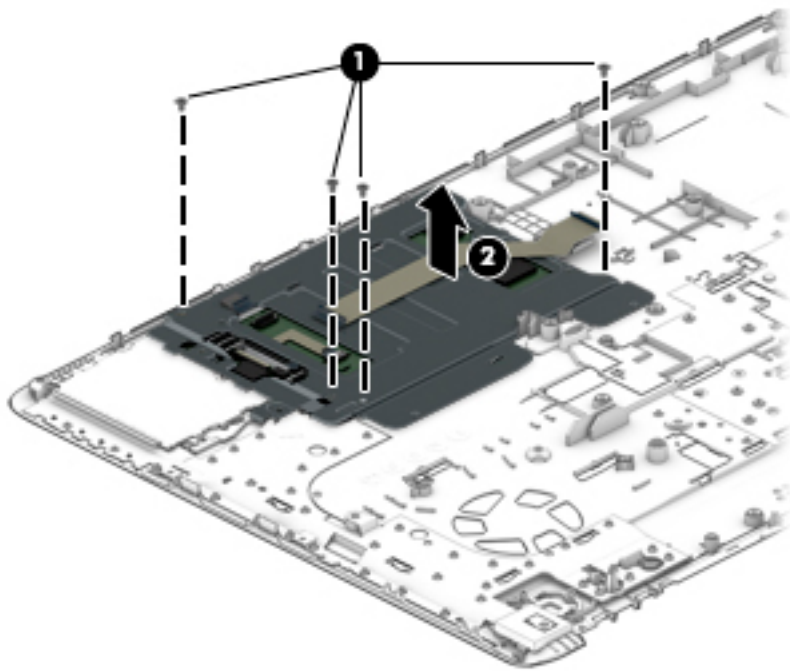

RTC battery

| Description | Spare part number |
|-------------|-------------------|
| RTC battery | 651948-001 |


 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement

Before removing the RTC battery, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Hinge covers (see [Hinge cover on page 55](#)).
 - j. Base enclosure (see [Base enclosure on page 57](#)).
 - k. System board (see [System board on page 59](#)).
 - l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
 - m. Top cover (see [Top cover and TouchPad on page 65](#)).

To remove the RTC battery:

- ▲ If not already disconnected, disconnect the cable, and then remove the RTC battery.

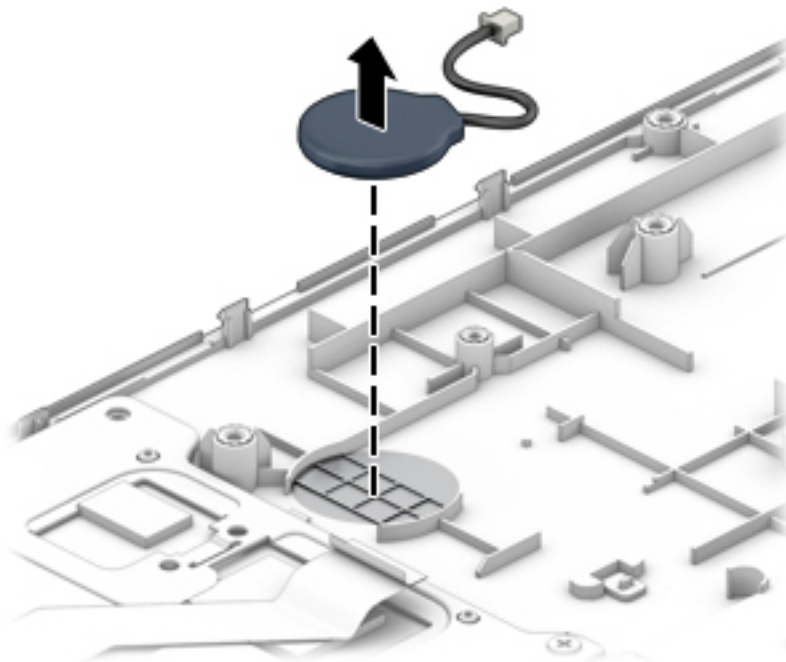

Reverse this procedure to install the RTC battery.

Speaker



NOTE: The speaker spare part kit includes the speaker cable.

| Description | Spare part number |
|-------------|-------------------|
| Speaker Kit | 840700-001 |



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the speaker, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Hinge covers (see [Hinge cover on page 55](#)).
 - j. Base enclosure (see [Base enclosure on page 57](#)).
 - k. System board (see [System board on page 59](#)).
 - l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
 - m. Top cover (see [Top cover and TouchPad on page 65](#)).

Remove the speaker:


1. Disconnect the speaker cable **(1)**...
2. Remove 2 Phillips screws **(2)**.

3. Lift the speaker assembly to remove it. **(3)**.

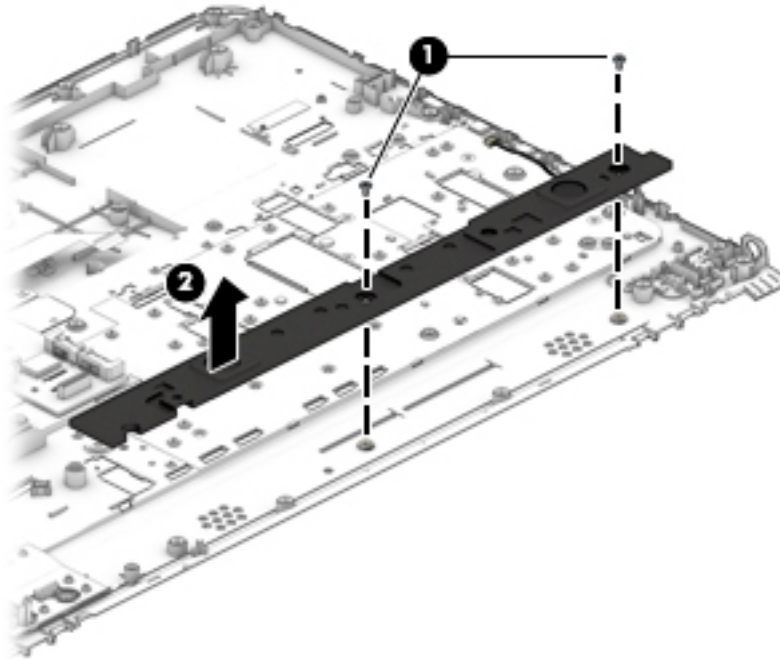


Reverse this procedure to install the speaker.

Power button board

 **NOTE:** The power button board spare part kit includes the cable.

| Description | Spare part number |
|--------------------|-------------------|
| Power button board | |
| For 14" products | 840694-001 |
| For 15" products | 840744-001 |

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement.


Before removing the power button board, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).

- f. WLAN module (see [WLAN module on page 44](#)).
- g. Optical drive (see [Optical drive on page 46](#)).
- h. Keyboard (see [Keyboard on page 48](#)).
- i. Hinge covers (see [Hinge cover on page 55](#)).
- j. Base enclosure (see [Base enclosure on page 57](#)).
- k. System board (see [System board on page 59](#)).
- l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
- m. Top cover (see [Top cover and TouchPad on page 65](#)).


Remove the power button board:

- ▲ Remove the 2 M2x3L, P1 screws **(1)**, release the power button power button board cable **(2)**, and then remove the power button board **(3)**:

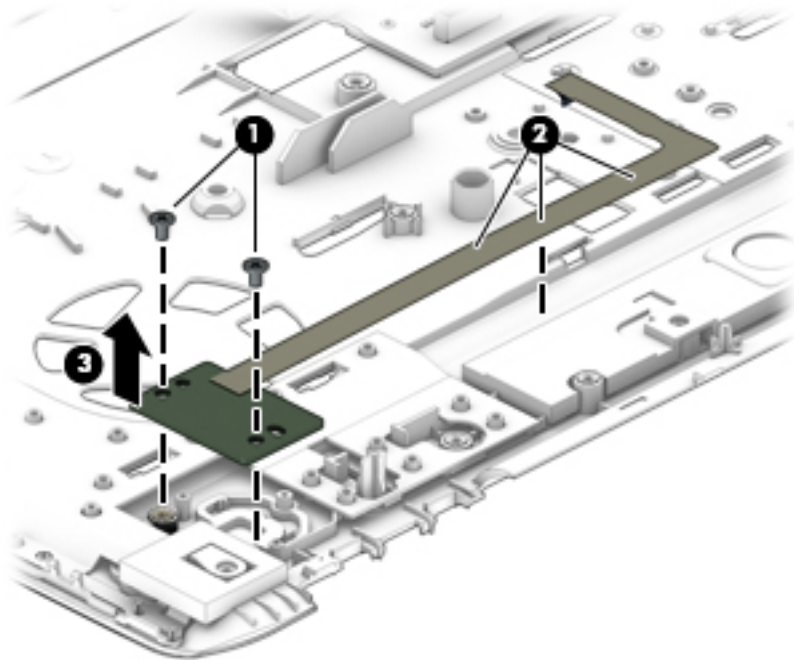

Reverse this procedure to install the power button board.

Fingerprint reader (select products only)

 **NOTE:** The fingerprint reader spare part kit includes the cable

| Description | Spare part number |
|---------------------------|-------------------|
| Fingerprint reader | |
| For 14" products | 840664-001 |
| For 15" products | 840735-001 |



IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement


Before removing the fingerprint reader, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Hinge covers (see [Hinge cover on page 55](#)).
 - j. Base enclosure (see [Base enclosure on page 57](#)).
 - k. System board (see [System board on page 59](#)).
 - l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
 - m. Top cover (see [Top cover and TouchPad on page 65](#)).

Remove the fingerprint reader:

1. Remove the Phillips screw from the fingerprint reader bracket**(1)**.
2. Remove the bracket**(2)**.

3. Remove the cable (3), and then remove the fingerprint reader (4).

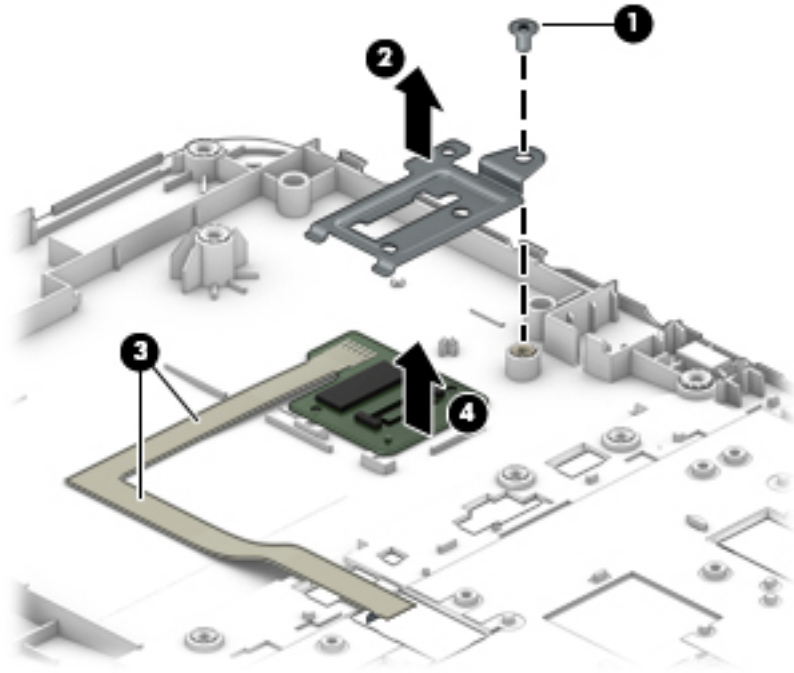


Reverse this procedure to install the fingerprint reader.

Smart card reader

 **NOTE:** The smart card reader spare part kit includes the metal shield

| Description | Spare part number |
|---|-------------------|
| Smart card reader board (includes metal shield) | 840694-001 |

 **IMPORTANT:** Make special note of each screw and screw lock size and location during removal and replacement


Before removing the smart card reader, follow these steps:

1. Shut down the computer.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet and then unplugging the AC adapter from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).

- f. WLAN module (see [WLAN module on page 44](#)).
- g. Optical drive (see [Optical drive on page 46](#)).
- h. Keyboard (see [Keyboard on page 48](#)).
- i. Hinge covers (see [Hinge cover on page 55](#)).
- j. Base enclosure (see [Base enclosure on page 57](#)).
- k. System board (see [System board on page 59](#)).
- l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
- m. Top cover (see [Top cover and TouchPad on page 65](#)).

Remove the smart card reader:

- ▲ Remove the metal shield, and then lift the smart card reader to remove it.

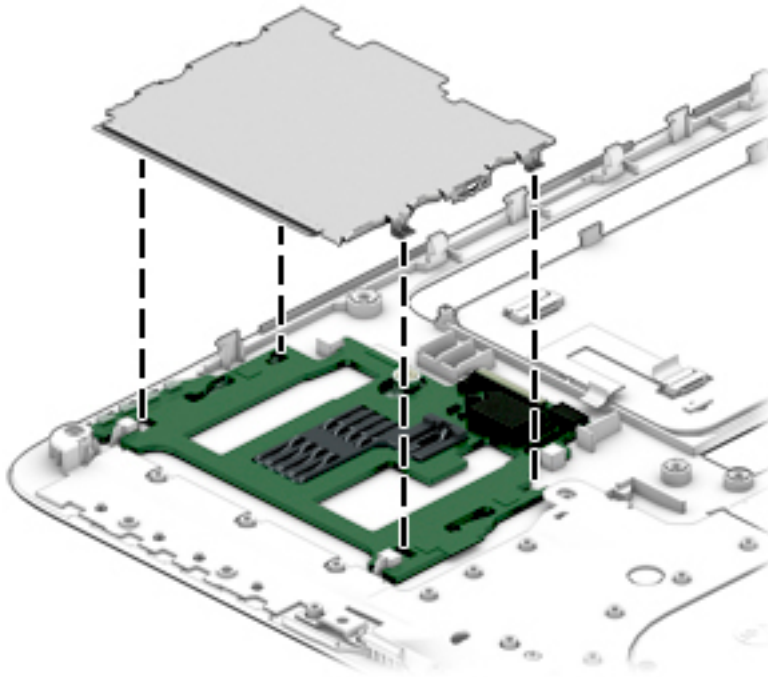

Reverse this procedure to install the smart card reader.

Near Field Communication module

| Description | Spare part number |
|--|-------------------|
| Near Field Communication (NFC) module | 840661-001 |
| For 14" products | 840661-001 |
| For 15" products | 840729-001 |
| Near Field Communication (NFC) cable | |
| For 14" products | 840661-001 |
| For 15" products | 840729-001 |




IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the NFC module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Hinge covers (see [Hinge cover on page 55](#)).
 - j. Base enclosure (see [Base enclosure on page 57](#)).
 - k. System board (see [System board on page 59](#)).
 - l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
 - m. Top cover (see [Top cover and TouchPad on page 65](#)).

Remove the NFC module:

- ▲ Disconnect the NFC module **(1)**, and then remove it **(2)**.

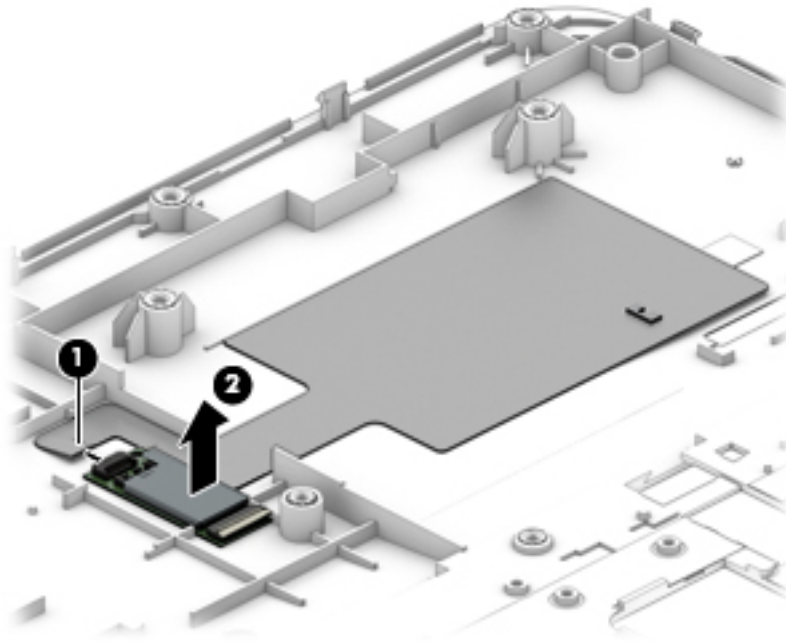

Reverse this procedure to replace the panel.

Audio board

| Description | Spare part number |
|-------------|-------------------|
| Audio board | 840692-001 |




IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the audio board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#))
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. Optical drive (see [Optical drive on page 46](#)).
 - f. Keyboard (see [Keyboard on page 48](#)).
 - g. Hinge covers (see [Hinge cover on page 55](#)).
 - h. Base enclosure (see [Base enclosure on page 57](#)).
 - i. System board (see [System board on page 59](#)).
 - j. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
 - k. Top cover (see [Top cover and TouchPad on page 65](#)).

Remove the audio board:

- ▲ Remove 2 M2x3L P1 screws **(1)**, and then remove the audio board **(2)**.

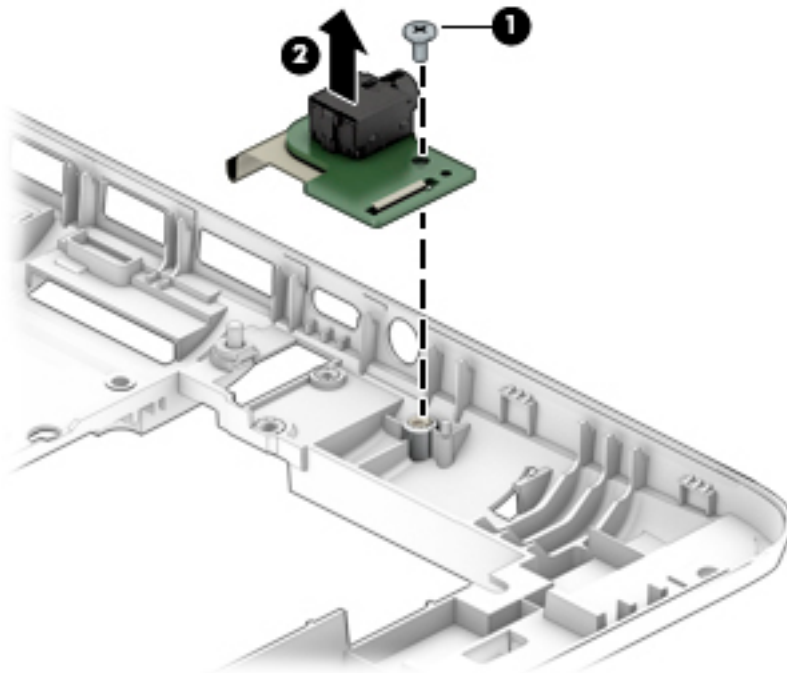

Reverse this procedure to replace the audio board.

Serial

| Description | Spare part number |
|-------------|-------------------|
| Serial | 840746-001 |




IMPORTANT: Make special note of each screw and screw lock size and location during removal and replacement

Before removing the audio board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the following components:
 - a. Service door (see [Service door on page 37](#)).
 - b. Remove the battery (see [Battery on page 38](#)).
 - c. Hard drive (see [Hard drive on page 39](#)).
 - d. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
 - e. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
 - f. WLAN module (see [WLAN module on page 44](#)).
 - g. Optical drive (see [Optical drive on page 46](#)).
 - h. Keyboard (see [Keyboard on page 48](#)).
 - i. Hinge covers (see [Hinge cover on page 55](#)).
 - j. Base enclosure (see [Base enclosure on page 57](#)).
 - k. System board (see [System board on page 59](#)).
 - l. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
 - m. Top cover (see [Top cover and TouchPad on page 65](#)).

Remove the serial port:

- ▲ Remove 2 M2x3L P1 screws**(1)**, remove the cable from the routing channels **(2)**, and then remove the serial port**(3)**.

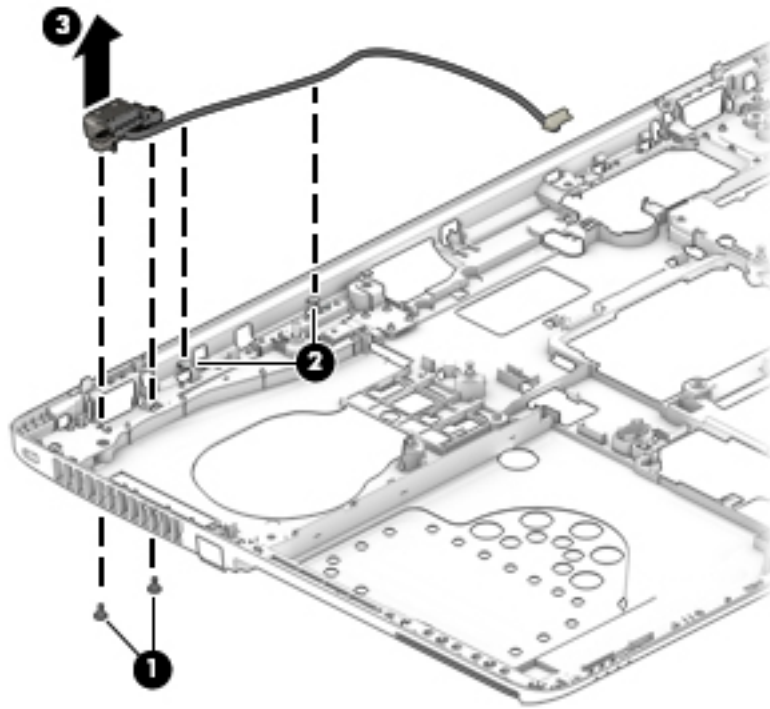

Reverse this procedure to replace the audio board.

Display assembly

All display assemblies include WLAN antenna transceivers and cables. WWAN models also include 2 WWAN antenna transceivers and cables.

Full hinge-up displays are not spared.

This section describes removing components that do not require that you entirely remove the display assembly from the computer. You can remove the display bezel, webcam/microphone module, and display panel with the display assembly still attached to the computer.

To remove the remaining display components, including the display brackets, antennas, and enclosure, you must remove the entire display assembly from the computer. See [Display assembly subcomponents on page 27](#) for more information about removing the remaining components.

| Description | Spare part number |
|--|-------------------|
| Display panels ([14.0-in], anti-glare, LED) | |
| Slim panel for 14" products | 840697-001 |
| Flat panel for 14" products | 840698-001 |
| Touch screen for 14" products (includes camera) | 840687-001 |
| Slim panel for 15" products | 840748-001 |
| Flat panel for 15" products | 840749-001 |
| Touch screen for 15" products (includes camera) | 840740-001 |
| Display bezels | |
| For 14" HP 640 products | 840658-001 |
| For 14" HP 645 products | 841482-001 |
| For 15" HP 650 products | 840726-001 |
| For 15" HP 655 products | 842333-001 |


Before removing the display panel, follow these steps:

1. Shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect all external devices connected to the computer.
3. Disconnect the power from the computer by first unplugging the power cord from the AC outlet, and then unplugging the AC adapter from the computer.
4. Remove the service door (see [Service door on page 37](#)).
5. Remove the battery (see [Battery on page 38](#)).
6. Remove the battery (see [Battery on page 38](#)).
7. Hard drive (see [Hard drive on page 39](#)).
8. Solid-state drive (see [Solid-state drive \(select products only\) on page 41](#)).
9. WWAN module (see [WWAN module \(select products only\) on page 42](#)).
10. WLAN module (see [WLAN module on page 44](#)).


11. Optical drive (see [Optical drive on page 46](#)).
12. Keyboard (see [Keyboard on page 48](#)).
13. Hinge covers (see [Hinge cover on page 55](#)).
14. Base enclosure (see [Base enclosure on page 57](#)).
15. System board (see [System board on page 59](#)).
16. Fan/heat sink assembly (see [Fan and heat sink assembly on page 61](#)).
17. Top cover (see [Top cover and TouchPad on page 65](#)).

Remove the display assembly components:


1. Position the computer upright, with the front toward you.
2. Open the computer as far as possible.
3. If it is necessary to replace the display bezel:
 - a. Close the computer, position it so you can access the bottom of the display, and then open the computer slightly.
 - b. Flex the inside edges of the top edge **(1)**, the left and right sides **(2)**, and the bottom edge **(3)** of the display bezel until the bezel disengages from the display enclosure. The display bezel is available using spare part number 840658-001.

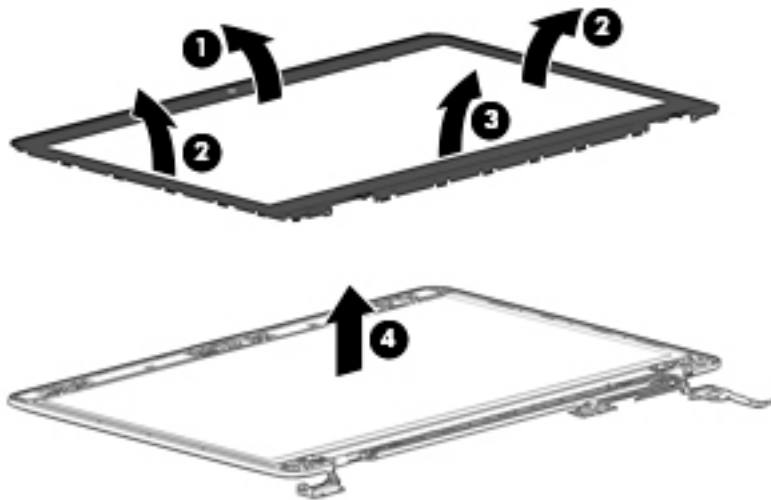

4. If it is necessary to replace the display panel:
 - a. Remove the four M2x3L P1 screws that secure the display panel to the display enclosure.
 - 781959-001—**35.6-cm** (14.0-in), LED, AntiGlare display panel, UWVA
 - 784476-001—**35.6-cm** (14.0-in), LED, AntiGlare display panel, SVA HD+

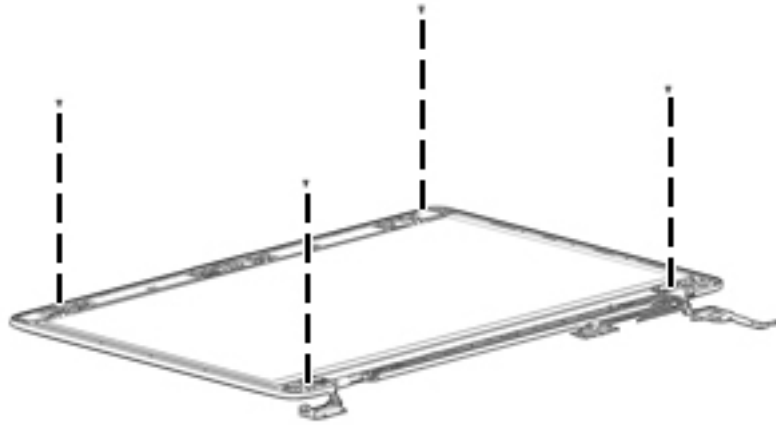


- b.** Rotate the top of the display panel downward **(1)** onto the keyboard.

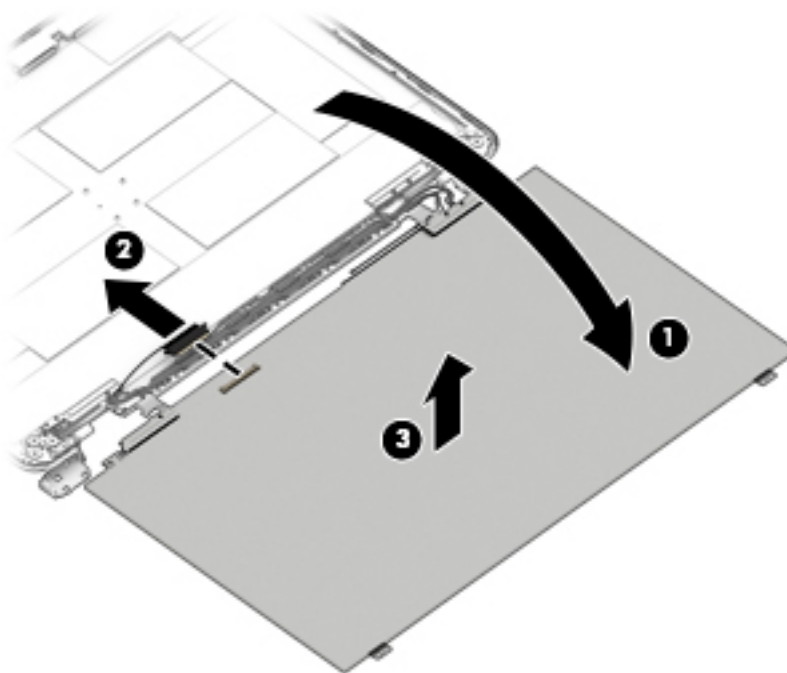


- c.** Disconnect the cable from the connector **(2)**, and then remove the panel **(3)**.


5. If it is necessary to replace the hinge brackets, remove the M2.5x2.5L P1 screws from each side **(1)**, and then remove the hinge brackets **(2)**.

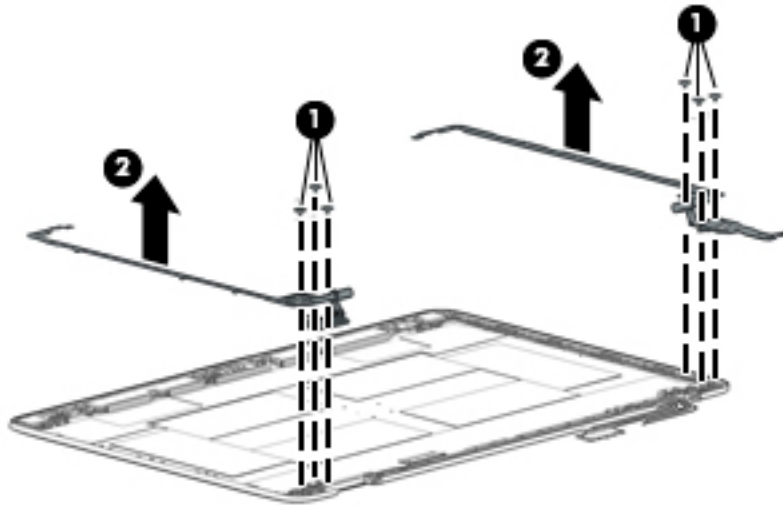


6. If it is necessary to replace the WLAN antenna cables, remove the 3 screws from each side **(1)**, and then remove the WLAN antenna cables **(2)**.

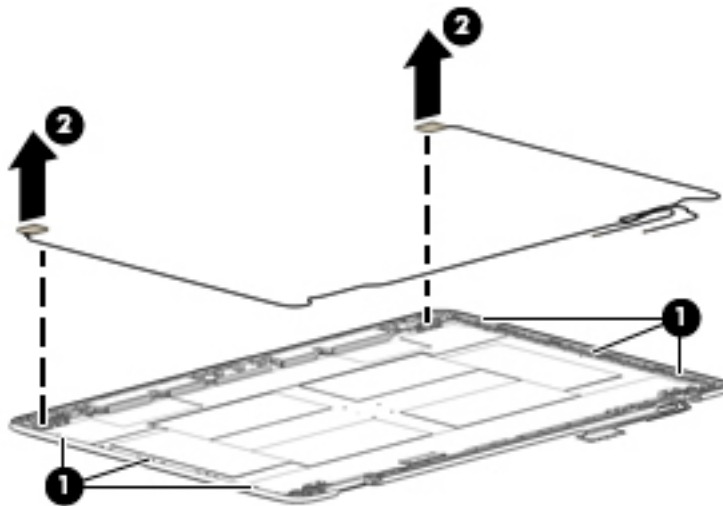

7. If it is necessary to replace the WWAN antenna cables (select products only, remove the 3 screws from each side **(1)**, and then remove the WWAN antenna cables **(2)**).

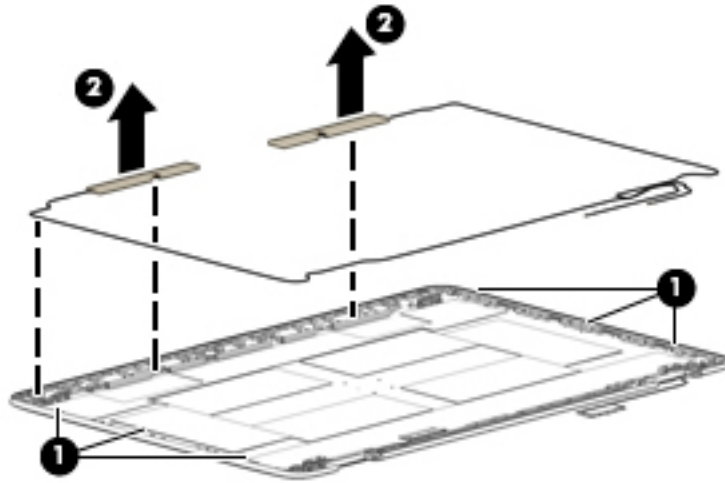


8. If it is necessary to replace the webcam:
- Disconnect the cable **(1)** from the webcam.
 - Detach the webcam **(2)** from the display enclosure.
- The webcam module is available using spare part number 840722-001.

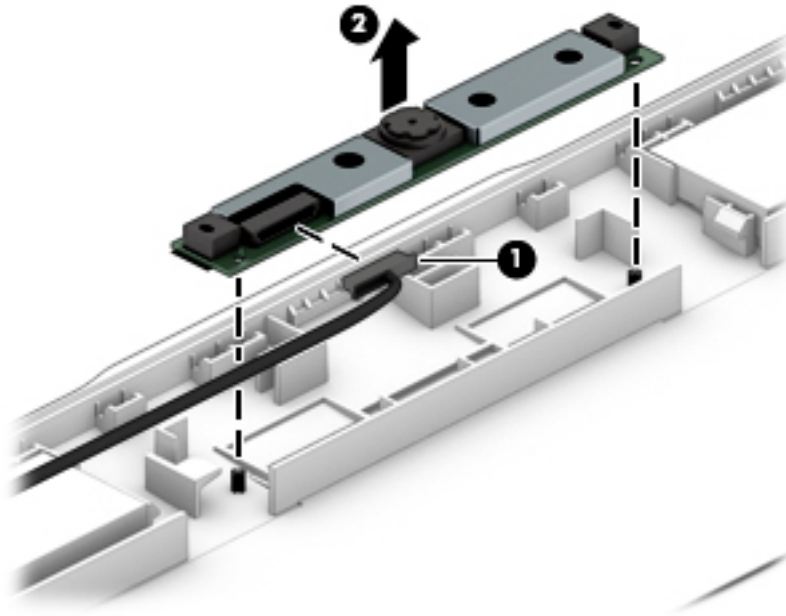

9. If it is necessary to replace the microphone board:
- Disconnect the cable **(1)** from the microphone board.

- b.** Detach the microphone board **(2)** from the display enclosure.
The microphone board is available using spare part number 840691-001.

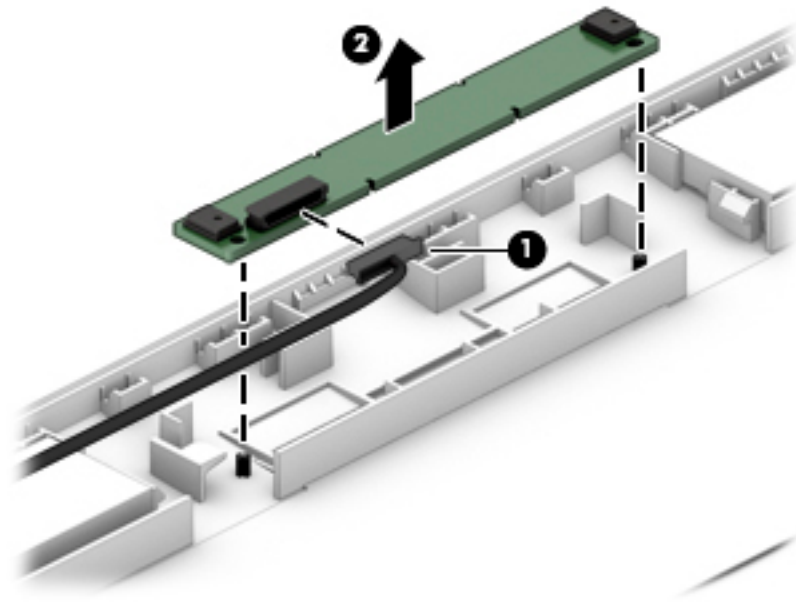


Reverse these procedures to reassemble and install the display assembly components.


7 Computer Setup (BIOS), TPM, and HP Sure Start in Windows 10

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

Starting Computer Setup


 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

To start Computer Setup, follow these steps:

- ▲ Start Computer Setup.
 - Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.
 - Tablets without keyboards:
 - ▲ Turn off the tablet. Press the power button in combination with the volume down button until the Startup menu is displayed, and then tap **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.

 **NOTE:** On tablets without keyboards, you can use your finger to make selections.


- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes:
Select the **Exit** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Ignore Changes and Exit**, and then press [enter](#).
- To save your changes and exit Computer Setup menus:
Select the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Save Changes and Exit**, and then press [enter](#).


Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

 **NOTE:** Restoring defaults will not change the hard drive mode.


To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Start Computer Setup. See [Starting Computer Setup on page 88](#).
2. Select **Main**, and then select **Apply Factory Defaults and Exit**.

 **NOTE:** On select products, the selections may display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

3. Follow the on-screen instructions.
4. To save your changes and exit, select the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Save Changes and Exit**, and then press [enter](#).

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

BIOS version information (also known as *ROM date* and *System BIOS*) can be accessed by pressing **fn+esc** (if you are already in Windows) or by using Computer Setup.


1. Start Computer Setup. See [Starting Computer Setup on page 88](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup without saving your changes, select the **Exit** icon in the lower-right corner of the screen, and then follow the on-screen instructions.

– or –

Select **Main**, select **Ignore Changes and Exit**, and then press **enter**.

To check for later BIOS versions, see [Downloading a BIOS update on page 90](#).

Downloading a BIOS update


 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power on the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.


Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. Type `support` in the taskbar search box, and then select the HP Support Assistant app.
– or –
Select the question mark icon in the taskbar.
2. Select **Updates**, and then select **Check for updates and messages**.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.
Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. Type `file` in the taskbar search box, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.


 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps:

1. Access the Boot Device Options menu:
 - Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
 - Tablets without keyboards:
 - ▲ Turn off the tablet. Press the power button in combination with the volume down button until the Startup menu is displayed, and then tap **F9** to enter the Boot Device Options menu.
2. Select a boot device, then press [enter](#).

TPM BIOS settings (select products only)

 **IMPORTANT:** Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation/usage of TPM which violates the above mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).

 **NOTE:** If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Starting Computer Setup on page 88](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.


8 Computer Setup (BIOS), TPM, and HP Sure Start in Windows 8.1

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

Starting Computer Setup


 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

To start Computer Setup, follow these steps:

- ▲ Start Computer Setup.
 - Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.
 - Tablets without keyboards:
 - ▲ Turn off the tablet. Press the power button in combination with the volume down button until the Startup menu is displayed, and then tap **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.

 **NOTE:** On tablets without keyboards, you can use your finger to make selections.


- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes:
Select the **Exit** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Ignore Changes and Exit**, and then press [enter](#).
- To save your changes and exit Computer Setup menus:
Select the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Save Changes and Exit**, and then press [enter](#).


Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

 **NOTE:** Restoring defaults will not change the hard drive mode.


To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Start Computer Setup. See [Starting Computer Setup on page 93](#).
2. Select **Main**, and then select **Apply Factory Defaults and Exit**.

 **NOTE:** On select products, the selections may display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

3. Follow the on-screen instructions.
4. To save your changes and exit, select the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Save Changes and Exit**, and then press [enter](#).

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

BIOS version information (also known as *ROM date* and *System BIOS*) can be accessed by pressing **fn+esc** (if you are already in Windows) or by using Computer Setup.


1. Start Computer Setup. See [Starting Computer Setup on page 93](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup without saving your changes, select the **Exit** icon in the lower-right corner of the screen, and then follow the on-screen instructions.

– or –

Select **Main**, select **Ignore Changes and Exit**, and then press **enter**.

To check for later BIOS versions, see [Downloading a BIOS update on page 95](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:

Do not disconnect power on the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, type `support`, and then select the **HP Support Assistant** app.
2. Make the selection for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.



NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. From the Start screen, type `file`, and then select **File Explorer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an `.exe` extension (for example, `filename.exe`).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.



NOTE: After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps:

1. Access the Boot Device Options menu:
 - Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, and when the HP logo appears, press **F9** to enter the Boot Device Options menu.
 - Tablets without keyboards:
 - ▲ Turn off the tablet. Press the power button in combination with the volume down button until the Startup menu is displayed, and then tap **F9** to enter the Boot Device Options menu.
2. Select a boot device, then press `enter`.

TPM BIOS settings (select products only)



IMPORTANT: Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation/usage of TPM which violates the above mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).



NOTE: If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Starting Computer Setup on page 93](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.

HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.


9 Computer Setup (BIOS), TPM, and HP Sure Start in Windows 7

Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

Starting Computer Setup


 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

To start Computer Setup, follow these steps:

- ▲ Start Computer Setup.
 - Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, and when the HP logo appears, press **F10** to enter Computer Setup.
 - Tablets without keyboards:
 - ▲ Turn off the tablet. Press the power button in combination with the volume down button until the Startup menu is displayed, and then tap **F10** to enter Computer Setup.

Navigating and selecting in Computer Setup

- To select a menu or a menu item, use the **tab** key and the keyboard arrow keys and then press **enter**, or use a pointing device to select the item.

 **NOTE:** On tablets without keyboards, you can use your finger to make selections.


- To scroll up and down, select the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key on the keyboard.
- To close open dialog boxes and return to the main Computer Setup screen, press **esc**, and then follow the on-screen instructions.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes:
Select the **Exit** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Ignore Changes and Exit**, and then press [enter](#).
- To save your changes and exit Computer Setup menus:
Select the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Save Changes and Exit**, and then press [enter](#).


Your changes go into effect when the computer restarts.

Restoring factory settings in Computer Setup

 **NOTE:** Restoring defaults will not change the hard drive mode.


To return all settings in Computer Setup to the values that were set at the factory, follow these steps:

1. Start Computer Setup. See [Starting Computer Setup on page 98](#).
2. Select **Main**, and then select **Apply Factory Defaults and Exit**.

 **NOTE:** On select products, the selections may display **Restore Defaults** instead of **Apply Factory Defaults and Exit**.

3. Follow the on-screen instructions.
4. To save your changes and exit, select the **Save** icon in the lower-right corner of the screen, and then follow the on-screen instructions.
– or –
Select **Main**, select **Save Changes and Exit**, and then press [enter](#).

Your changes go into effect when the computer restarts.

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

Determining the BIOS version

To decide whether you need to update Computer Setup (BIOS), first determine the BIOS version on your computer.

BIOS version information (also known as *ROM date* and *System BIOS*) can be accessed by pressing **fn+esc** (if you are already in Windows) or by using Computer Setup.


1. Start Computer Setup. See [Starting Computer Setup on page 98](#).
2. Select **Main**, and then select **System Information**.
3. To exit Computer Setup without saving your changes, select the **Exit** icon in the lower-right corner of the screen, and then follow the on-screen instructions.

– or –

Select **Main**, select **Ignore Changes and Exit**, and then press **enter**.

To check for later BIOS versions, see [Downloading a BIOS update on page 100](#).

Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:


Do not disconnect power on the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.


1. Access Help and Support by selecting **Start > All Programs > HP Help and Support > HP Support Assistant**.
2. Make the selection for updates.
3. Follow the on-screen instructions.
4. At the download area, follow these steps:
 - a. Identify the most recent BIOS update and compare it to the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
 - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.

 **NOTE:** If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are revealed on the screen after the download is complete. If no instructions are revealed, follow these steps:

1. Select **Start > Computer**.
2. Select your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).
The BIOS installation begins.
5. Complete the installation by following the on-screen instructions.


 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

Changing the boot order using the f9 prompt

To dynamically choose a boot device for the current startup sequence, follow these steps:

1. Access the Boot Device Options menu:
 - Computers or tablets with keyboards:
 - ▲ Turn on or restart the computer, and when the HP logo appears, press **f9** to enter the Boot Device Options menu.
 - Tablets without keyboards:
 - ▲ Turn off the tablet. Press the power button in combination with the volume down button until the Startup menu is displayed, and then tap **F9** to enter the Boot Device Options menu.
2. Select a boot device, then press [enter](#).

TPM BIOS settings (select products only)

 **IMPORTANT:** Before enabling Trusted Platform Module (TPM) functionality on this system, you must ensure that your intended use of TPM complies with relevant local laws, regulations and policies, and approvals or licenses must be obtained if applicable. For any compliance issues arising from your operation/usage of TPM which violates the above mentioned requirement, you shall bear all the liabilities wholly and solely. HP will not be responsible for any related liabilities.

TPM provides additional security for your computer. You can modify the TPM settings in Computer Setup (BIOS).

 **NOTE:** If you change the TPM setting to Hidden, TPM is not visible in the operating system.

To access TPM settings in Computer Setup:

1. Start Computer Setup. See [Starting Computer Setup on page 98](#).
2. Select **Security**, select **TPM Embedded Security**, and then follow the on-screen instructions.

Using HP Sure Start (select products only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors the computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start automatically restores the BIOS to its previously safe state, without user intervention.


HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

10 Using HP PC Hardware Diagnostics (UEFI)

HP PC Hardware Diagnostics is a Unified Extensible Firmware Interface (UEFI) that allows you to run diagnostic tests to determine whether the computer hardware is functioning properly. The tool runs outside the operating system so that it can isolate hardware failures from issues that are caused by the operating system or other software components.

When HP PC Hardware Diagnostics (UEFI) detects a failure that requires hardware replacement, a 24-digit Failure ID code is generated. This ID code can then be provided to support to help determine how to correct the problem.


 **NOTE:** To start diagnostics on a convertible computer, your computer must be in notebook mode and you must use the keyboard attached.

To start HP PC Hardware Diagnostics (UEFI), follow these steps:

1. Turn on or restart the computer, and quickly press [esc](#).
2. Press [f2](#).

The BIOS searches three places for the diagnostic tools, in the following order:

- a. Connected USB drive

 **NOTE:** To download the HP PC Hardware Diagnostics (UEFI) tool to a USB drive, see [Downloading HP PC Hardware Diagnostics \(UEFI\) to a USB device on page 103](#).


- b. Hard drive

- c. BIOS

3. When the diagnostic tool opens, select the type of diagnostic test you want to run, and then follow the on-screen instructions.

 **NOTE:** If you need to stop a diagnostic test, press [esc](#).

Downloading HP PC Hardware Diagnostics (UEFI) to a USB device

 **NOTE:** The HP PC Hardware Diagnostics (UEFI) download instructions are provided in English only, and you must use a Windows computer to download and create the HP UEFI support environment because only .exe files are offered.

There are two options to download HP PC Hardware Diagnostics to a USB device.

Download the latest UEFI version

1. Go to <http://www.hp.com/go/techcenter/pcdiags>. The HP PC Diagnostics home page is displayed.
2. In the HP PC Hardware Diagnostics section, click the **Download** link, and then select **Run**.

Download any version of UEFI for a specific product

1. Go to <http://www.hp.com/support>, and then select your country. The HP Support page is displayed.
2. Click **Drivers & Downloads**.

3. Use the categories listed to find your product.

– or –

Click **Find Now** to let HP automatically detect your product.

4. Select your computer, and then select your operating system.
5. In the **Diagnostic** section, follow the on-screen instructions to select and download the UEFI version you want.

11 Backup and recovery

This chapter provides information about the following processes. The information in the chapter is standard procedure for most products.


- Creating recovery media and backups
- Restoring and recovering your system

For additional information, refer to the HP support assistant app.

▲ Type `support` in the taskbar search box, and then select the **HP Support Assistant** app.

– or –

Click the question mark icon in the taskbar.

 **IMPORTANT:** If you will be performing recovery procedures on a tablet, the tablet battery must be at least 70% charged before you start the recovery process.


IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning any recovery process.

Creating recovery media and backups

The following methods of creating recovery media and backups are available on select products only. Choose the available method according to your computer model.

- Use HP Recovery Manager to create HP Recovery media after you successfully set up the computer. This step creates a backup of the HP Recovery partition on the computer. The backup can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced. For information on creating recovery media, see [Creating HP Recovery media \(select products only\) on page 105](#). For information on the recovery options that are available using the recovery media, see [Using Windows tools on page 106](#).
- Use Windows tools to create system restore points and create backups of personal information.

For more information, see [Recovering using HP Recovery Manager on page 107](#).

 **NOTE:** If storage is 32 GB or less, Microsoft System Restore is disabled by default.

Creating HP Recovery media (select products only)

If possible, check for the presence of the Recovery partition and the Windows partition. From the **Start** menu, select **File Explorer**, and then select **This PC**.

- If your computer does not list the Windows partition and the Recovery partition, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

You can use Windows tools to create system restore points and create backups of personal information, see [Using Windows tools on page 106](#).

- If your computer does list the Recovery partition and the Windows partition, you can use HP Recovery Manager to create recovery media after you successfully set up the computer. HP Recovery media can be used to perform system recovery if the hard drive becomes corrupted. System recovery reinstalls the original operating system and software programs that were installed at the factory and then configures the settings for the programs. HP Recovery media can also be used to customize the system or restore the factory image if you replace the hard drive.
 - Only one set of recovery media can be created. Handle these recovery tools carefully, and keep them in a safe place.
 - HP Recovery Manager examines the computer and determines the required storage capacity for the media that will be required.
 - To create recovery discs, your computer must have an optical drive with DVD writer capability, and you must use only high-quality blank DVD-R, DVD+R, DVD-R DL, or DVD+R DL discs. Do not use rewritable discs such as CD±RW, DVD±RW, double-layer DVD±RW, or BD-RE (rewritable Blu-ray) discs; they are not compatible with HP Recovery Manager software. Or, instead, you can use a high-quality blank USB flash drive.
 - If your computer does not include an integrated optical drive with DVD writer capability, but you would like to create DVD recovery media, you can use an external optical drive (purchased separately) to create recovery discs. If you use an external optical drive, it must be connected directly to a USB port on the computer; the drive cannot be connected to a USB port on an external device, such as a USB hub. If you cannot create DVD media yourself, you can obtain recovery discs for your computer from HP. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information on the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.
 - Be sure that the computer is connected to AC power before you begin creating the recovery media.
 - The creation process can take an hour or more. Do not interrupt the creation process.
 - If necessary, you can exit the program before you have finished creating all of the recovery DVDs. HP Recovery Manager will finish burning the current DVD. The next time you start HP Recovery Manager, you will be prompted to continue.

To create HP Recovery media:



IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps.

1. Type `recovery` in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Create recovery media**, and then follow the on-screen instructions.

If you ever need to recover the system, see [Recovering using HP Recovery Manager on page 107](#).

Using Windows tools

You can create recovery media, system restore points, and backups of personal information using Windows tools.




NOTE: If storage is 32 GB or less, Microsoft System Restore is disabled by default.

For more information and steps, see the Get started app.

- ▲ Select the **Start** button, and then select the **Get started** app.

Restore and recovery

There are several options for recovering your system. Choose the method that best matches your situation and level of expertise:

 **IMPORTANT:** Not all methods are available on all products.

- Windows offers several options for restoring from backup, refreshing the computer, and resetting the computer to its original state. For more information see the Get started app.
 - ▲ Select the **Start** button, and then select the **Get started** app.
- If you need to correct a problem with a preinstalled application or driver, use the Reinstall drivers and/or applications option (select products only) of HP Recovery Manager to reinstall the individual application or driver.
 - ▲ Type `recovery` in the taskbar search box, select **HP Recovery Manager**, select **Reinstall drivers and/or applications**, and then follow the on-screen instructions.
- If you want to recover the Windows partition to original factory content, you can choose the System Recovery option from the HP Recovery partition (select products only) or use the HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 107](#). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 105](#).
- On select products, if you want to recover the computer's original factory partition and content, or if you have replaced the hard drive, you can use the Factory Reset option of HP Recovery media. For more information, see [Recovering using HP Recovery Manager on page 107](#).
- On select products, if you want to remove the recovery partition to reclaim hard drive space, HP Recovery Manager offers the Remove Recovery Partition option.


For more information, see [Removing the HP Recovery partition \(select products only\) on page 110](#).

Recovering using HP Recovery Manager

HP Recovery Manager software allows you to recover the computer to its original factory state by using the HP Recovery media that you either created or that you obtained from HP, or by using the HP Recovery partition (select products only). If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 105](#).


What you need to know before you get started

- HP Recovery Manager recovers only software that was installed at the factory. For software not provided with this computer, you must either download the software from the manufacturer's website or reinstall the software from the media provided by the manufacturer.


 **IMPORTANT:** Recovery through HP Recovery Manager should be used as a final attempt to correct computer issues.

- HP Recovery media must be used if the computer hard drive fails. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 105](#).
- To use the Factory Reset option (select products only), you must use HP Recovery media. If you have not already created recovery media, see [Creating HP Recovery media \(select products only\) on page 105](#).
- If your computer does not allow the creation of HP Recovery media or if the HP Recovery media does not work, you can obtain recovery media for your system from support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP

website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

 **IMPORTANT:** HP Recovery Manager does not automatically provide backups of your personal data. Before beginning recovery, back up any personal data you want to retain.

Using HP Recovery media, you can choose from one of the following recovery options:

 **NOTE:** Only the options available for your computer display when you start the recovery process.


- System Recovery—Reinstalls the original operating system, and then configures the settings for the programs that were installed at the factory.
- Factory Reset—Restores the computer to its original factory state by deleting all information from the hard drive and re-creating the partitions. Then it reinstalls the operating system and the software that was installed at the factory.

The HP Recovery partition (select products only) allows System Recovery only.

Using the HP Recovery partition (select products only)

The HP Recovery partition allows you to perform a system recovery without the need for recovery discs or a recovery USB flash drive. This type of recovery can be used only if the hard drive is still working.

To start HP Recovery Manager from the HP Recovery partition:

 **IMPORTANT:** For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps (select products only).

1. Type `recovery` in the taskbar search box, select **Recovery Manager**, and then select **HP Recovery Environment**.

- or -

For computers or tablets with keyboards attached, press **f11** while the computer boots, or press and hold **f11** as you press the power button.

For tablets without keyboards:

Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f11**.

- or -


Turn on or restart the tablet, and then quickly hold down the Windows button; then select **f11**.

2. Select **Troubleshoot** from the boot options menu.
3. Select **Recovery Manager**, and then follow the on-screen instructions.

Using HP Recovery media to recover

You can use HP Recovery media to recover the original system. This method can be used if your system does not have an HP Recovery partition or if the hard drive is not working properly.

1. If possible, back up all personal files.
2. Insert the HP Recovery media, and then restart the computer.

 **NOTE:** If the computer does not automatically restart in HP Recovery Manager, change the computer boot order. See [Changing the computer boot order on page 109](#).

3. Follow the on-screen instructions.

Changing the computer boot order

If your computer does not restart in HP Recovery Manager, you can change the computer boot order, which is the order of devices listed in BIOS where the computer looks for startup information. You can change the selection to an optical drive or a USB flash drive.

To change the boot order:



IMPORTANT: For a tablet with a detachable keyboard, connect the keyboard to the keyboard dock before beginning these steps.

1. Insert the HP Recovery media.
2. Access BIOS:

For computers or tablets with keyboards attached:

- ▲ Turn on or restart the computer or tablet, quickly press **esc**, and then press **f9** for boot options.

For tablets without keyboards:

- ▲ Turn on or restart the tablet, and then quickly hold down the volume down button; then select **f9**.

- or -

Turn on or restart the tablet, and then quickly hold down the Windows button; then select **f9**.

3. Select the optical drive or USB flash drive from which you want to boot.
4. Follow the on-screen instructions.

Removing the HP Recovery partition (select products only)

HP Recovery Manager software allows you to remove the HP Recovery partition to free up hard drive space.



IMPORTANT: After you remove the HP Recovery partition, you will not be able to perform System Recovery or create HP recovery media from the HP Recovery partition. So before you remove the Recovery partition, create HP Recovery media; see [Creating HP Recovery media \(select products only\) on page 105](#).



NOTE: The Remove Recovery Partition option is only available on products that support this function.


Follow these steps to remove the HP Recovery partition:

1. Type `recovery` in the taskbar search box, and then select **HP Recovery Manager**.
2. Select **Remove Recovery Partition**, and then follow the on-screen instructions.


12 Backup and recovery in Windows 8.1

To protect your information, use Windows backup and restore utilities to back up individual files and folders, back up your entire hard drive, create system repair media (select products only) by using the installed optical drive (select products only) or an optional external optical drive, or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.

From the Start screen, type `restore`, and then select from the list of displayed options.

 **NOTE:** For detailed instructions on various backup and restore options, perform a search for these topics in Windows Help and Support.

In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. For more information, see Windows Help and Support.

Backing up your information


Recovery after a system failure is as good as your most recent backup. You should create system repair media and your initial backup immediately after initial system setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup.

For more information on the Windows backup features, see Windows Help and Support.

Performing a system recovery

In case of system failure or instability, the computer provides the following tools to recover your files:


- **Windows recovery tools:** You can use Windows Backup and Restore to recover information you have previously backed up. You can also use Windows Automatic Repair to fix problems that might prevent Windows from starting correctly.
- **f11 recovery tools:** You can use the [f11](#) recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

 **NOTE:** If you are unable to boot (start up) your computer and you cannot use the system repair media you previously created (select products only), you must purchase Windows operating system media to reboot the computer and repair the operating system. For additional information, see [Using Windows operating system media \(purchased separately\) on page 113](#).

Using the Windows recovery tools

To recover information you previously backed up, see Windows Help and Support for steps on restoring files and folders.

To recover your information using Automatic Repair, follow these steps:


 **CAUTION:** Some Startup Repair options will completely erase and reformat the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.

1. If possible, back up all personal files.
2. If possible, check for the presence of the Recovery Image partition and the Windows partition.


From the Start screen, type `file`, and then click **File Explorer**.

– or –


From the Start screen, type `pc`, and then select **This PC**.

 **NOTE:** If the Windows partition and the Recovery Image partition are not listed, you must recover your operating system and programs using the Windows operating system DVD and the *Driver Recovery* media (both purchased separately). For additional information, see [Using Windows operating system media \(purchased separately\) on page 113](#).

3. If the Windows partition and the Recovery Image partition are listed, restart the computer by pressing and holding the `shift` key while clicking **Restart**.
4. Select **Troubleshoot**, then select **Advanced Options**, and then select **Startup Repair**.
5. Follow the on-screen instructions.


 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Windows Help and Support.

Using f11 recovery tools

 **CAUTION:** Using `f11` completely erases hard drive contents and reformats the hard drive. All files that you have created and any software that you have installed on the computer are permanently removed. The `f11` recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled.

To recover the original hard drive image using `f11`:


1. If possible, back up all personal files.
2. If possible, check for the presence of the Recovery Image partition: From the Start screen, type `pc`, and then select **This PC**.

 **NOTE:** If the Recovery Image partition is not listed, you must recover your operating system and programs using the Windows operating system media and the *Driver Recovery* media (both purchased separately). For additional information, see [Using Windows operating system media \(purchased separately\) on page 113](#).


3. If the Recovery Image partition is listed, restart the computer, and then press `esc` while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.
4. Press `f11` while the "Press <F11> for recovery" message is displayed on the screen.
5. Follow the on-screen instructions.

Using Windows operating system media (purchased separately)

To order a Windows operating system DVD, contact support. See the *Worldwide Telephone Numbers* booklet included with the computer. You can also find contact information from the HP website. Go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions.

 **CAUTION:** Using a Windows operating system media completely erases hard drive contents and reformat the hard drive. All files that you have created and any software that you have installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

To initiate a full install of the operating system using a Windows operating system DVD:

 **NOTE:** This process takes several minutes.

1. If possible, back up all personal files.
2. Insert the Windows operating system DVD into the optical drive, and then restart the computer.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.

After the installation is completed:

1. Eject the Windows operating system media and then insert the *Driver Recovery* media.
2. Install the Hardware Enabling Drivers first, and then install Recommended Applications.

Using Windows Refresh or Windows Reset

When your computer is not working properly and you need to regain system stability, the Windows Refresh option allows you to start fresh and keep what is important to you.

The Windows Reset option allows you to perform detailed reformatting of your computer, or remove personal information before you give away or recycle your computer. For more information on these features, see Windows Help and Support.

Using HP Software Setup

HP Software Setup can be used to reinstall drivers or select software that has been corrupted or deleted from the system.

1. From the Start screen, type `HP Software Setup`.
2. Open HP Software Setup.
3. Follow the on-screen directions to reinstall drivers or select software.

13 Backup and recovery in Windows 7


Your computer includes HP and Windows tools to help you safeguard your information and retrieve it if you ever need to. These tools will help you return your computer to a proper working state, all with simple steps. This section provides information about the following processes:


- Creating recovery media and backups
- Restoring and recovering your system

Creating recovery media and backups

Recovery after a system failure is only as good as your most recent backup.

1. After you successfully set up the computer, create HP Recovery media. This step creates a Windows 7 operating system DVD and a *Driver Recovery* DVD. The Windows DVD can be used to reinstall the original operating system in cases where the hard drive is corrupted or has been replaced. The *Driver Recovery* DVD installs specific drivers and applications. See [Creating recovery media with HP Recovery Disc Creator on page 114](#).
2. Use Windows Backup and Recovery tools to perform the following:
 - Back up individual files and folders
 - Back up your entire hard drive (select products only)
 - Create system repair discs (select products only) with the installed optical drive (select products only) or an optional external optical drive
 - Create system restore points

 **NOTE:** This guide describes an overview of backing up, restoring, and recovering options. For more details about the tools provided, see Help and Support. To access Help and Support, select **Start > Help and Support**.

 **NOTE:** HP recommends that you print the recovery procedures and save them for later use, in case of system instability.

In case of system failure, you can use the backup files to restore the contents of your computer. See [Backing up your information on page 115](#).

Guidelines

- When creating recovery media or backing up to discs, use any of the following types of discs (purchased separately): DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD-RW. The discs you use will depend on the type of optical drive you are using.
- Be sure that the computer is connected to AC power before you start the recovery media creation process or the backup process.


Creating recovery media with HP Recovery Disc Creator

HP Recovery Disc Creator is a software program that offers an alternative way to create recovery media. After you successfully set up the computer, you can create recovery media using HP Recovery Disc Creator. This recovery media allows you to reinstall your original operating system as well as select drivers and

applications if the hard drive becomes corrupted. HP Recovery Disc Creator can create two kinds of recovery DVDs:

- Windows 7 operating system DVD—Installs the operating system without additional drivers or applications.
- *Driver Recovery* DVD—Installs specific drivers and applications only, in the same way that the HP Software Setup utility installs drivers and applications.

Creating recovery media

 **NOTE:** The Windows 7 operating system DVD can be created only once. Thereafter, the option to create that media will not be available after you create a Windows DVD.

To create the Windows DVD:

1. Select **Start > All Programs > Productivity and Tools > HP Recovery Disc Creator**.
2. Select **Windows disk**.
3. From the drop-down menu, select the drive for burning the recovery media.
4. Click the **Create** button to start the burning process.

After the Windows 7 operating system DVD has been created, create the *Driver Recovery* DVD:

1. Select **Start > All Programs > Productivity and Tools > HP Recovery Disc Creator**.
2. Select **Driver disk**.
3. From the drop-down menu, select the drive for burning the recovery media.
4. Click the **Create** button to start the burning process.

Backing up your information


You should create system repair media and your initial backup immediately after initial system setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup. You should also create Windows system repair media (select products only) which can be used to start up (boot) the computer and repair the operating system in case of system instability or failure. Your initial and subsequent backups allow you to restore your data and settings if a failure occurs.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents library, and back it up regularly.
- Back up templates that are stored in their associated directories.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.
- When backing up to discs, number each disc after removing it from the drive.

 **NOTE:** For detailed instructions on various backup and restore options, perform a search for these topics in Help and Support. To access Help and Support, select **Start > Help and Support**.

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support. To access Help and Support, select **Start > Help and Support**.

To create a backup using Windows Backup and Restore:



NOTE: The backup process may take over an hour, depending on file size and the speed of the computer.

1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to set up your backup, create a system image (select products only), or create system repair media (select products only).

Performing a system recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use Windows Backup and Restore to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools (select products only): You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.



NOTE: If you are unable to boot (start up) your computer and you cannot use the system repair media you previously created (select products only), you must purchase Windows 7 operating system media to reboot the computer and repair the operating system. For additional information, see [Using Windows 7 operating system media on page 117](#).

Using the Windows recovery tools

Using the Windows recovery tools, you can:

- Recover individual files
- Restore the computer to a previous system restore point
- Recover information using recovery tools



NOTE: For detailed instructions on various recovery and restore options, perform a search for these topics in Help and Support. To access Help and Support, select **Start > Help and Support**.



NOTE: Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to Help and Support. To access Help and Support, select **Start > Help and Support**.

To recover information you previously backed up:

1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to recover your system settings, your computer (select products only), or your files.

To recover your information using Startup Repair, follow these steps:



CAUTION: Some Startup Repair options will completely erase and reformat the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition.

To check for the Windows partition, select **Start > Computer**.



NOTE: If the Windows partition is not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the *Driver Recovery* media. For additional information, see [Using Windows 7 operating system media on page 117](#).

3. If the Windows partition is listed, restart the computer, and then press **f8** before the Windows operating system loads.
4. Select **Startup Repair**.
5. Follow the on-screen instructions.



NOTE: For additional information on recovering information using the Windows tools, select **Start > Help and Support**.

Using f11 recovery tools (select products only)



CAUTION: Using **f11** completely erases hard drive contents and reformats the hard drive. All files that you have created and any software that you have installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled.

To recover the original hard drive image using **f11**:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition: click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.



NOTE: If the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 7 operating system media and the *Driver Recovery* media. For additional information, see [Using Windows 7 operating system media on page 117](#).

3. If the HP Recovery partition is listed, restart the computer, and then press **esc** while the "Press the ESC key for Startup Menu" message is displayed at the bottom of the screen.
4. Press **f11** while the "Press <F11> for recovery" message is displayed on the screen.
5. Follow the on-screen instructions.

Using Windows 7 operating system media

If you cannot use the recovery media you previously created using the HP Recovery Disc Creator (select products only), you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system.

To order a Windows 7 operating system DVD, go to the HP website. For U.S. support, go to <http://www.hp.com/support>. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html. You can also order the DVD by calling support. For contact information, see the *Worldwide Telephone Numbers* booklet included with the computer.



CAUTION: Using a Windows 7 operating system DVD completely erases hard drive contents and reformats the hard drive. All files that you have created and any software that you have installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

To initiate recovery using a Windows 7 operating system DVD:



NOTE: This process takes several minutes.

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows 7 operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.
6. Select **Repair your computer**.
7. Follow the on-screen instructions.

After the repair is completed:

1. Eject the Windows 7 operating system DVD and then insert the *Driver Recovery* DVD.
2. Install the Hardware Enabling Drivers first, and then install Recommended Applications.

14 Specifications

Computer specifications

| | 15" products | 14" products |
|---|--|--|
| Dimensions | | |
| Width | 378 (14.88 in) | 340 (13.39 in) |
| Depth | 257 (10.11 in) | 237 (9.33 in) |
| Height (front to back) | 27.4 (1.07 in) | 27 (1.06 in) |
| Weight | | |
| | 5.1 or 5.37 lbs (depending on configuration) | 4.3 or 4.57 lbs (depending on configuration) |
| Input power | | |
| Operating voltage and current | 19.5 V dc @ 2.3 – 45 W (select products only) 19.5 V dc @ 3.33 A – 65 W 19 V dc @ 4.6 A – 90 W (only for products with an Intel quad-core processor) | |
| Temperature | | |
| Operating | 5°C to 35°C (41°F to 95°F) | |
| Nonoperating | -20°C to 60°C (-4°F to 140°F) | |
| Relative humidity (noncondensing) | | |
| Operating | 10% to 90% | |
| Nonoperating | 5% to 95% | |
| Maximum altitude (unpressurized) | | |
| Operating | -15 m to 3,048 m (-50 ft to 10,000 ft) | |
| Nonoperating | -15 m to 12,192 m (-50 ft to 40,000 ft) | |
| NOTE: Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures. | | |

Hard drive specifications

| | 1-TB, 5400-rpm SATA* | 750-GB, 5400-rpm Hybrid SATA 8GB NAND ** | 500-GB, 7200-rpm FIPS SATA Opal2 ** | 500-GB, 7200-rpm SATA ** | 500-GB, 7200-rpm self- encrypting SATA Opal2 ** |
|---|-----------------------------|--|--|-----------------------------|--|
| Dimensions | | | | | |
| Height | 7.2 mm (0.28 in) | | | | |
| Width | 69.85 mm (2.75 in) | | | | |
| Weight | 99 g max | | | | |
| Interface type | SATA | | | | |
| Transfer rate | | | | | |
| Synchronous (maximum) | 600 MB/s | | | | |
| Security | ATA security | | | | |
| Seek times (typical read, including setting) | | | | | |
| Single track | 1.5 ms | | | | |
| Average (read/write) | 12.0 ms | | | | |
| Maximum | 22 ms | | | | |
| Logical blocks | 1,953,525,168 | | 976,773,168 | | |
| Disk rotational speed | 5400 rpm | | 7200 rpm | | |
| Operating temperature | 0°C to 60°C (32°F to 140°F) | | | | |
| *1 TB = 1 trillion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. | | | | | |
| **1 GB = 1 billion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. | | | | | |
| NOTE: Certain restrictions and exclusions apply. Contact technical support for details. | | | | | |

Solid-state drive specifications

| | 128 GB 2280 M2 SATA-3 TLC* | 180 GB 2280 M2 SATA-3 MLC* | 180 GB 2280 M2 SATA-3 self- encryptin g MLC (Opal 2 * | 240 GB 2280 M2 SATA-3 MLC* | 256 GB 2280 M2 PCIe-3x4 NVMe MLC* | 256 GB 2280 M2 SATA-3 self- encryptin g MLC (Opal 2)* | 256 GB 2280 M2 SATA-3 TLC* | 512 GB SATA - 3 TLC* |
|-----------------------|-------------------------------------|-------------------------------------|---|-------------------------------------|--|---|-------------------------------------|----------------------------|
| Dimensions | | | | | | | | |
| Weight | 10 g | | | | | | | |
| Height | 2.38 mm (0.09 in) | | | | | | | |
| Width | 22 mm (0.87 in) | | | | | | | |
| Interface type | SATA Gen 3.0 (6 Gb/s) | | | | | | | |

| | 128 GB 2280 M2 SATA-3 TLC* | 180 GB 2280 M2 SATA-3 MLC* | 180 GB 2280 M2 SATA-3 self- encryptin g MLC (Opal 2 * | 240 GB 2280 M2 SATA-3 MLC* | 256 GB 2280 M2 PCIe-3x4 NVMe MLC* | 256 GB 2280 M2 SATA-3 self- encryptin g MLC (Opal 2)* | 256 GB 2280 M2 SATA-3 TLC* | 512 GB SATA - 3 TLC* |
|---|---|---|--|---|--|--|---|-------------------------------------|
| Performance | | | | | | | | |
| Maximum sequential read | Up to 540 MB/s | Up to 540 MB/s (Compressible Performance) | Up to 540 MB/s (Compressible Performance) | Up to 540 MB/s (Compressible Performance) | Up to 2260 MB/s | Up to 540 MB/s | Up to 540 MB/s | Up to 540 MB/s |
| Maximum sequential write | Up to 300 MB/s | Up to 490 MB/s (Compressible Performance) | Up to 490 MB/s (Compressible Performance) | Up to 490 MB/s (Compressible Performance) | Up to 1260 MB/s | Up to 460 MB/s | Up to 455 MB/s | Up to 500 MB/s |
| Security ATA-8 security | | | | | | | | |
| Logical blocks | 250,069,680 | 351,651,888 | 351,651,888 | 468,862,128 | 500,118,192 | 500,118,192 | 500,118,192 | 1,000,215,216 |
| Operating temperature 0°C to 70° C (32° F to 158° F) [ambient temp] | | | | | | | | |
| Features | DIPM; TRIM; DVESLP | DIPM; TRIM; DEVSLP | TCG OPAL 2.x; DIPM; TRIM; DEVSLP | TCG OPAL 2.x; DIPM; TRIM; DEVSLP | PCIe Gen3x4 , TRIM, L1.2 | TCG OPAL 2.x, DIPM; TRIM; DEVSLP | DIPM; TRIM; DEVSLP | DIPM; TRIM; DEVSLP |
| *1 TB = 1 trillion bytes when referring to hard drive storage capacity. Actual accessible capacity is less. | | | | | | | | |
| NOTE: Certain restrictions and exclusions apply. Contact technical support for details. | | | | | | | | |

15 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.

Requirements for specific countries and regions

| Country/region | Accredited agency | Applicable note number |
|--------------------------------|-------------------|------------------------|
| Australia | EANSW | 1 |
| Austria | OVE | 1 |
| Belgium | CEBC | 1 |
| Canada | CSA | 2 |
| Denmark | DEMKO | 1 |
| Finland | FIMKO | 1 |
| France | UTE | 1 |
| Germany | VDE | 1 |
| Italy | IMQ | 1 |
| Japan | METI | 3 |
| The Netherlands | KEMA | 1 |
| Norway | NEMKO | 1 |
| The People's Republic of China | COC | 5 |
| South Korea | EK | 4 |

| Country/region | Accredited agency | Applicable note number |
|-----------------------|--------------------------|-------------------------------|
| Sweden | SEMKO | 1 |
| Switzerland | SEV | 1 |
| Taiwan | BSMI | 4 |
| The United Kingdom | BSI | 1 |
| The United States | UL | 2 |


- 1.** The flexible cord must be Type H05VV-F, 3-conductor, 1.0-mm conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
- 2.** The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
- 3.** The appliance coupler, flexible cord, and wall plug must bear a T mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
- 4.** The flexible cord must be Type RVV, 3-conductor, 0.75-mm conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
- 5.** The flexible cord must be Type VCTF, 3-conductor, 0.75-mm conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

16 Statement of memory volatility

The purpose of this chapter is to provide general information regarding nonvolatile memory in HP Business PCs. This chapter also provides general instructions for restoring nonvolatile memory that can contain personal data after the system has been powered off and the hard drive has been removed.

HP Business PC products that use Intel -based or AMD -based system boards contain volatile DDR memory. The amount of nonvolatile memory present in the system depends upon the system configuration. Intel-based and AMD-based system boards contain nonvolatile memory subcomponents as originally shipped from HP, assuming that no subsequent modifications have been made to the system and assuming that no applications, features, or functionality have been added to or installed on the system.


Following system shutdown and removal of all power sources from an HP Business PC system, personal data can remain on volatile system memory (DIMMs) for a finite period of time and will also remain in nonvolatile memory. Use the steps below to remove personal data from the PC, including the nonvolatile memory found in Intel-based and AMD-based system boards.

 **NOTE:** If your tablet has a keyboard base, connect to the keyboard base before beginning steps in this chapter.


Current BIOS steps

1. Follow steps (a) through (l) below to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.
 - a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.


 **IMPORTANT:** If the **Main** menu displays **Restore Defaults** instead of **Apply Factory Defaults and Exit**, go to [Legacy BIOS Steps on page 125](#).

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.


- b. Select **Main**, select **Apply Factory Defaults and Exit**, and then select **Yes** to load defaults.
The computer will reboot.
 - c. During the reboot, press **esc** while the Press the ESC key for Startup Menu message is displayed at the bottom of the screen.


 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.

- d. Select the **Security** menu, select **Restore Security Settings to Factory Defaults**, and then select **Yes** to restore security level defaults.
The computer will reboot.
 - e. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.

 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.

- f. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.


- g. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Utilities** under the **Utilities** menu. Select **Hard Drive Utilities**, select **DriveLock**, then uncheck the checkbox for **DriveLock password on restart**. Select **OK** to proceed.
 - h. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Click **Yes** at the warning message.
The computer will reboot.
 - i. During the reboot, press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
-
-  **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.
- j. Select the **Main** menu, select **Apply Factory Defaults and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - k. Reboot the system. If the system has a Trusted Platform Module (TPM) and/or fingerprint reader, one or two prompts will appear one to clear the TPM and the other to Reset Fingerprint Sensor; press or tap **F1** to accept or **F2** to reject.
 - l. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following:
- Remove and retain the storage drive.
 - or –
 - Clear the drive contents by using a third party utility designed to erase data from an SSD.
 - or –
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:

 **IMPORTANT:** If you clear data using Secure Erase, it cannot be recovered.


- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select the **Security** menu and scroll down to the **Utilities** menu.
- c. Select **Hard Drive Tools**.
- d. Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.

Legacy BIOS Steps


Use the steps for older versions of BIOS.

 **NOTE:** If you already completed the steps in [Current BIOS steps on page 124](#), skip this section.


1. Follow steps (a) through (i) below to restore the nonvolatile memory that can contain personal data. Restoring or reprogramming nonvolatile memory that does not store personal data is neither necessary nor recommended.

 **NOTE:** If you have not already done so, access the BIOS menu.


- Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.


 **NOTE:** If the system has a BIOS administrator password, enter the password at the prompt.

- a. Select **Main**, select **Restore Defaults**, and then select **Yes** to load defaults.
 - b. Select the **Security** menu, select **Restore Security Level Defaults**, and then select **Yes** to restore security level defaults.
 - c. If an asset or ownership tag is set, select the **Security** menu and scroll down to the **Utilities** menu. Select **System IDs**, and then select **Asset Tracking Number**. Clear the tag, and then make the selection to return to the prior menu.
 - d. If a DriveLock password is set, select the **Security** menu, and scroll down to **Hard Drive Tools** under the **Utilities** menu. Select **Hard Drive Tools**, select **DriveLock**, then uncheck the checkbox for **DriveLock password on restart**. Select **OK** to proceed.
 - e. If an Automatic DriveLock password is set, select the **Security** menu, scroll down to **Hard Drive Tools** under the **Utilities** menu. Select **Hard Drive Tools**, scroll down to **Automatic DriveLock**, then select the desired hard drive and disable protection. At the automatic drive lock warning screen, select **Yes** to continue. Repeat this procedure if more than one hard drive has an Automatic DriveLock password.
 - f. Select the **Main** menu, and then select **Reset BIOS Security to factory default**. Click **Yes** at the warning message.
 - g. Select the **Main** menu, select **Save Changes and Exit**, select **Yes** to save changes and exit, and then select **Shutdown**.
 - h. Reboot the system. If the system has a Trusted Platform Module (TPM) and/or fingerprint reader, one or two prompts will appear, one to clear the TPM and the other to Reset Fingerprint Sensor; press or tap **F1** to accept or **F2** to reject.
 - i. Remove all power and system batteries for at least 24 hours.
2. Complete one of the following:
- Remove and retain the storage drive.
 - or –
 - Clear the drive contents by using a third party utility designed to erase data from an SSD.
 - or –
 - Clear the contents of the drive by using the following BIOS Setup Secure Erase command option steps:

 **IMPORTANT:** If you clear data using Secure Erase, it cannot be recovered.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
 - b. Select the **Security** menu and scroll down to the **Utilities** menu.
 - c. Select **Hard Drive Tools**.
 - d. Under **Utilities**, select **Secure Erase**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.
- or –
- Clear the contents of the drive by using the following Disk Sanitizer command steps:

 **IMPORTANT:** If you clear data using Disk Sanitizer, it cannot be recovered.

 **NOTE:** The amount of time it takes for Disk Sanitizer to run can take several hours. Plug the computer into an AC outlet before starting.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select the **Security** menu and scroll down to the **Utilities** menu.
- c. Select **Hard Drive Tools**.
- d. Under **Utilities**, select **Disk Sanitizer**, select the hard drive storing the data you want to clear, and then follow the on-screen instructions to continue.

Nonvolatile memory usage

| Nonvolatile Memory Type | Amount (Size) | Does this memory store customer data? | Does this memory retain data when power is removed? | What is the purpose of this memory? | How is data input into this memory? | How is this memory write-protected? |
|---|---|---------------------------------------|---|---|--|---|
| HP Sure Start flash (select models only) | 2 MBytes | No | Yes | Provides protected backup of critical System BIOS code, EC firmware, and critical PC configuration data for select platforms that support HP Sure Start. For more information, see Using HP Sure Start (select models only) on page 131. | Data cannot be written to this device via the host processor. The content is managed solely by the HP Sure Start Embedded Controller. | This memory is protected by the HP Sure Start Embedded Controller. |
| Real Time Clock (RTC) battery backed-up CMOS configuration memory | 256 Bytes | No | Yes | Stores system date and time and noncritical data. | RTC battery backed-up CMOS is programmed using the Computer Setup (BIOS), or changing the Microsoft Windows date & time. | This memory is not write-protected. |
| Controller (NIC) EEPROM | 64 KBytes (not customer accessible) | No | Yes | Stores NIC configuration and NIC firmware. | NIC EEPROM is programmed using a utility from the NIC vendor that can be run from DOS. | A utility is required to write data to this memory and is available from the NIC vendor. Writing data to this ROM in an inappropriate manner will render the NIC non-functional. |
| DIMM Serial Presence Detect (SPD) configuration data | 256 Bytes per memory module, 128 Bytes programmable (not customer accessible) | No | Yes | Stores memory module information. | DIMM SPD is programmed by the memory vendor. | Data cannot be written to this memory when the module is installed in a PC. The specific write-protection method varies by memory vendor. |
| System BIOS | 4 MBytes to 5 MBytes | Yes | Yes | Stores system BIOS code and PC configuration data. | System BIOS code is programmed at the factory. Code is updated when the system BIOS is updated. Configuration data and settings are input using the Computer Setup (BIOS) or a custom utility. | NOTE: Writing data to this ROM in an inappropriate manner can render the PC non-functional. A utility is required for writing data to this memory and is available on the HP website; go to http://www.hp.com/support . Select Find your product , and then follow |

| Nonvolatile Memory Type | Amount (Size) | Does this memory store customer data? | Does this memory retain data when power is removed? | What is the purpose of this memory? | How is data input into this memory? | How is this memory write-protected? |
|---|------------------------|---------------------------------------|---|---|---|--|
| Intel Management Engine Firmware (present in only specific ZBook and EliteBook models. For more information, go to http://www.hp.com/support . Select Find your product , and then follow the on-screen instructions.) | 1.5 MBytes or 5 MBytes | Yes | Yes | Stores Management Engine Code, Settings, Provisioning Data and iAMT third-party data store. | Management Engine Code is programmed at the factory. Code is updated via Intel secure firmware update utility. Unique Provisioning Data can be entered at the factory or by an administrator using the Management Engine (MEBx) setup utility. The third party data store contents can be populated by a remote management console or local applications that have been registered by an administrator to have access to the space. | the on-screen instructions. The Intel chipset is configured to enforce hardware protection to block all direct read/write access to this area. An Intel utility is required for updating the firmware. Only firmware updates digitally signed by Intel can be applied using this utility. |
| Bluetooth flash | 2 Mbit | No | Yes | Stores Bluetooth configuration and firmware. | Bluetooth flash is programmed at the factory. Tools for writing data to this memory are not publicly available but can be obtained from the silicon vendor. | A utility is required for writing data to this memory and is made available through newer versions of the driver whenever the flash requires an upgrade. |
| 802.11 WLAN EEPROM | 4 Kbit to 8 Kbit | No | Yes | Stores configuration and calibration data. | 802.11 WLAN EEPROM is programmed at the factory. Tools for writing data to this memory are not made public. | A utility is required for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue. |
| Web camera | 64 Kbit | No | Yes | Stores webcam configuration and firmware. | Webcam memory is programmed using a utility from the device manufacturer that can be run from Windows. | A utility is required for writing data to this memory and is typically not made available to the public unless a firmware upgrade is necessary to address a unique issue. |
| Fingerprint reader | 512 KByte flash | Yes | Yes | Stores fingerprint templates. | Fingerprint reader memory is programmed by user enrollment in HP ProtectTools Security Manager. | Only a digitally signed application can make the call to write to the flash. |

Questions and answers

1. How can the BIOS settings be restored (returned to factory settings)?



IMPORTANT: Restore defaults does not securely erase any data on your hard drive. See question and answer 6 for steps to securely erase data.

Restore defaults does not reset the Custom Secure Boot keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select **Main**, and then select **Restore defaults**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

2. What is a UEFI BIOS, and how is it different from a legacy BIOS?

The Unified Extensible Firmware Interface (UEFI) BIOS is an industry-standard software interface between the platform firmware and an operating system (OS). It is a replacement for the older BIOS architecture, but supports much of the legacy BIOS functionality.

Like the legacy BIOS, the UEFI BIOS provides an interface to display the system information and configuration settings and to change the configuration of your computer before an OS is loaded. BIOS provides a secure run-time environment that supports a Graphic User Interface (GUI). In this environment, you can use either a pointing device (Touchscreen, TouchPad, pointing stick, or USB mouse) or the keyboard to navigate and make menu and configuration selections. The UEFI BIOS also contains basic system diagnostics.

The UEFI BIOS provides functionality beyond that of the legacy BIOS. In addition, the UEFI BIOS works to initialize the computer’s hardware before loading and executing the OS; the run-time environment allows the loading and execution of software programs from storage devices to provide more functionality, such as advanced hardware diagnostics (with the ability to display more detailed system information) and advanced firmware management and recovery software.

HP has provided options in Computer Setup (BIOS) to allow you to run in legacy BIOS, if required by the operating system. Examples of this requirement would be if you upgrade or downgrade the OS.

3. Where does the UEFI BIOS reside?

The UEFI BIOS resides on a flash memory chip. A utility is required to write to the chip.


4. What kind of configuration data is stored on the DIMM Serial Presence Detect (SPD) memory module? How would this data be written?

The DIMM SPD memory contains information about the memory module, such as size, serial number, data width, speed/timing, voltage, and thermal information. This information is written by the module manufacturer and stored on an EEPROM. This EEPROM cannot be written to when the memory module is installed in a PC. Third-party tools do exist that can write to the EEPROM when the memory module is not installed in a PC. Various third-party tools are available to read SPD memory.

5. What is meant by “Restore the nonvolatile memory found in Intel-based system boards”?

This message relates to clearing the Real Time Clock (RTC) CMOS memory that contains PC configuration data.

6. How can the BIOS security be reset to factory defaults and data erased?

 **IMPORTANT:** Resetting will result in the loss of information.

These steps will not reset Custom Secure Boot Keys. See question and answer 7 for information about resetting the keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select **Main**, and then select **Reset BIOS Security to Factory Default**.
- c. Follow the on-screen instructions.
- d. Select **Main**, select **Save Changes and Exit**, and then follow the on-screen instructions.

7. How can the Custom Secure Boot Keys be reset?

Secure Boot is a feature to ensure that only authenticated code can start on a platform. If you enabled Secure Boot and created Custom Secure Boot Keys, simply disabling Secure Boot will not clear the keys. You must also select to clear the Custom Secure Boot Keys. Use the same Secure Boot access procedure you used to create the Custom Secure Boot Keys, but make the selection to clear or delete all Secure Boot Keys.

- a. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
- b. Select the **Security** menu, select **Secure Boot Configuration**, and then follow the on-screen instructions.
- c. At the **Secure Boot Configuration** window, select **Secure Boot**, select **Clear Secure Boot Keys**, and then follow the on-screen instructions to continue.

Using HP Sure Start (select models only)

Select computer models are configured with HP Sure Start, a technology that continuously monitors your computer's BIOS for attacks or corruption. If the BIOS becomes corrupted or is attacked, HP Sure Start restores the BIOS to its previously safe state, without user intervention. Those select computer models ship with HP Sure Start configured and enabled. HP Sure Start is configured and already enabled so that most users can use the HP Sure Start default configuration. The default configuration can be customized by advanced users.

To access the latest documentation on HP Sure Start, go to <http://www.hp.com/support>. Select **Find your product**, and then follow the on-screen instructions.

17 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

Index

A

- AC adapter, spare part numbers 31
- Antenna Kit, spare part numbers 31
- audio board
 - removal 78
 - spare part number 25, 78
 - spare part numbers 78
- audio, product description 3
- audio-out (headphone)/audio-in (microphone) combo jack, identifying 6

B

- back cover
 - spare part number 28
- Backup and Restore 116
- backup tools 114
- backups 105
 - creating 115
 - recovering 116
- Base enclosure
 - removal 57
- base enclosure
 - spare part number 25
- battery
 - removal 38
 - spare part number 26
 - spare part numbers 38
- battery light 18
- bezel
 - spare part number 27
- BIOS
 - determining version 90, 95, 100
 - downloading an update 90, 95, 100
 - updating 90, 95, 100
- boot order
 - changing 109
- buttons
 - left pointing stick 10
 - left TouchPad 10
 - optical drive eject 8
 - power 12
 - right pointing stick 10
 - right TouchPad 10

C

- Cable Kit, spare part numbers 31
 - caps lock light, identifying 11
 - chipset, product description 1
 - components
 - bottom 17
 - display 9
 - front 17
 - left side 8
 - rear 19
 - right side 6
 - top 10
 - computer major components 21
 - Computer Setup
 - navigating and selecting 88, 93, 98
 - restoring factory settings 89, 94, 99
 - computer specifications 119
 - connector, power 7
- ## D
- Display assembly
 - spare part numbers 22, 23
 - display assembly
 - subcomponents 27
 - display assembly components
 - removal 82
 - spare part numbers 82
 - display bezel
 - removal 83
 - spare part numbers 82, 83
 - display cable, spare part number 28
 - display panel
 - product description 1
 - removal 83
 - spare part number 82
 - spare part numbers 83
 - docking
 - product description 4
 - docking port, identifying 7
 - docking station support holes, identifying 17
 - drive light 18

- Driver Recovery DVD,
 - creating 114
 - using for restore 117
- Dual-Mode DisplayPort, identifying 6

E

- embedded numeric keypad, identifying 14
- esc key, identifying 14, 15
- Ethernet, product description 3
- external monitor port 19

F

- f11 recovery 112, 117
- fan
 - spare part numbers 23
- fan and heat sink assembly
 - spare part numbers 61
- Ffan and heat sink assembly
 - removal 61
- fingerprint reader
 - removal 72
 - spare part numbers 72
- fingerprint reader, identifying 13
- fn key, identifying 14, 15

G

- graphics, product description 1

H

- hard drive
 - product description 2
 - removal 39
 - spare part number 25, 30
 - spare part numbers 39
 - specifications 120
- hard drive hardware kit
 - spare part number 30
- hard drive recovery 112, 117
- heat sink
 - spare part numbers 23
- hinge
 - spare part number 27, 28

- hinge brackets
 - removal 85
 - hinge cover
 - removal 55
 - spare part numbers 55
 - Hinge Kit
 - spare part number 28
 - hot keys
 - microphone mute 16
 - using 15
 - HP PC Hardware Diagnostics (UEFI)
 - using 103
 - HP Recovery Disc Creator, using 114
 - HP Recovery Manager
 - correcting boot problems 109
 - starting 108
 - HP Recovery media
 - creating 105
 - recovery 108
 - HP Recovery partition
 - checking for presence 117
 - recovery 108
 - removing 110
 - using for recovery 117
 - HP Sure Start 131
- I**
- integrated numeric keypad,
 - identifying 15
 - integrated webcam light,
 - identifying 9
 - internal microphones, identifying 9
- J**
- jacks
 - audio-out (headphone)/audio-in (microphone) combo 6
 - network 7
 - RJ-45 (network) 7
- K**
- Keyboard
 - spare part numbers 23
 - keyboard
 - product description 4
 - removal 48
 - spare part numbers 48
 - keypad
 - embedded numeric 14
 - integrated numeric 15
- keys**
- esc 14, 15
 - fn 14, 15
 - Windows application 14
 - Windows key 14, 15
- L**
- labels
 - serial number 19
 - legacy support, USB 88, 93, 98
 - lights
 - battery 18
 - caps lock 11
 - drive 18
 - microphone mute 11
 - num lock 11
 - power 11, 17
 - RJ-45 (network) 7
 - webcam 9
 - wireless 11, 17
- M**
- memory
 - nonvolatile 124
 - removal 51
 - spare part number 25
 - spare part numbers 51
 - volatile 124
 - memory card reader, identifying 7
 - memory module
 - product description 2
 - microphone
 - product description 3
 - microphone board
 - removal 86
 - microphone mute key, identifying 16
 - microphone mute light, identifying 11
 - minimized image recovery 108
 - minimized image, creating 107
 - model name 1
- N**
- near field communication (NFC) cable
 - spare part number 76
 - near field communication (NFC) module
 - spare part number 76
 - network jack, identifying 7
- NFC**
- removal 76
 - spare part numbers 76
 - NFC antenna, identifying 9
 - NFC antennas, identifying 9
 - nonvolatile memory 124
 - num lock light 11
- O**
- operating system, product
 - description 4
 - optical drive
 - product description 3
 - removal 46
 - spare part number 26
 - spare part numbers 30, 46
 - optical drive board
 - removal 64
 - spare part number 25
 - spare part numbers 64
 - optical drive eject button,
 - identifying 8
 - optical drive light, identifying 8
 - optical drive, identifying 8
 - optical drive/Blu-ray combo
 - spare part number 25, 30, 46, 51
 - optical drive/DVD combo
 - spare part number 30, 46
 - original system recovery 107
- P**
- panel
 - spare part number 28
 - plastics kit, spare part numbers 31
 - pointing device, product
 - description 4
 - pointing stick 10
 - ports
 - Dual-Mode DisplayPort 6
 - external monitor 19
 - product description 3
 - serial 19
 - USB 3.0 charging (powered) 6
 - USB Type-C (charging) 7
 - power button board
 - removal 71
 - spare part number 23
 - spare part numbers 25, 71
 - power button, identifying 12

- power connector, identifying 7
- power cord
 - set requirements 122
- power lights 11, 17
- power requirements, product description 4
- processor
 - product description 1
- product description
 - audio 3
 - chipset 1
 - display panel 1
 - docking 4
 - Ethernet 3
 - external media cards 3
 - graphics 1
 - hard drive 2
 - keyboard 4
 - memory module 2
 - microphone 3
 - operating system 4
 - optical drive 3
 - pointing device 4
 - ports 3
 - power requirements 4
 - processors 1
 - product name 1
 - security 4
 - serviceability 5
 - solid-state drive 2
 - video 3
 - wireless 3
- product name 1
- product name and number, computer 19

- R**
- recover
 - options 107
- recovery 113
 - discs 106, 108
 - HP Recovery Manager 107
 - media 108
 - starting 108
 - supported discs 106
 - system 107
 - USB flash drive 108
 - using HP Recovery media 106
- recovery media
 - creating 105
 - creating using HP Recovery Manager 106
- recovery media, creating 114
- recovery media, using for restore 117
- recovery partition 112, 117
 - removing 110
- recovery tools 114
- recovery tools, Windows 116
- recovery, system 116
- refresh 113
- regulatory information 19
- removal/replacement
 - procedures 37, 54
- removing personal data from volatile system memory 124
- reset 113
- restoring the hard drive 112, 117
- RJ-45 (network) jack, identifying 7
- RJ-45 (network) lights, identifying 7
- RTC battery
 - removal 68
 - spare part number 23
 - spare part numbers 68
- Rubber Kit, spare part number 31

- S**
- Screw Kit, spare part numbers 31
- security cable slot, identifying 8
- security, product description 4
- serial
 - removal 80
 - spare part number 80
 - spare part numbers 80
- serial number 19
- serial number, computer 19
- serial port
 - spare part number 25
- serial port, identifying 19
- service door
 - removal 37
 - spare part number 26, 37
- service door, spare part number 37
- serviceability, product description 5

- setup utility
 - navigating and selecting 88, 93, 98
 - restoring factory settings 89, 94, 99
- SIM card slot, identifying 6
- slots
 - security cable 8
 - smart card 8
- smart card reader
 - removal 74
 - spare part numbers 74
- smart card reader board
 - spare part number 23
- smart card slot 8
- solid-state drive
 - removal 41
 - spare part number 25, 29
 - spare part numbers 41
- speaker
 - removal 70
 - spare part number 25
 - spare part numbers 70
- Speaker Kit, spare part number 31
- speakers, identifying 12
- specifications
 - computer 119
 - hard drive 120
- SSD
 - product description 2
- Startup Repair, using 116
- supported discs, recovery 106
- Sure Start
 - using 92, 97, 102
- system board
 - removal 59
 - spare part number 24
 - spare part numbers 59
- system information
 - locating 19
- system memory, removing personal data from volatile 124
- system recovery 107
- system restore point
 - creating 106
- system restore point, creating 105

T

- top cover
 - removal 65
 - spare part numbers 23, 65
- TouchPad
 - buttons 10
 - removal 65
 - spare part number 23
 - spare part numbers 23, 65
- TouchPad light, identifying 10
- TouchPad zone
 - identifying 10
- TPM settings 91, 96, 101

U

- USB 3.0 charging (powered),
 - identifying 6
- USB 3.0 port 7
- USB legacy support 88, 93, 98
- USB ports, identifying 7
- USB Type-C (charging) port,
 - identifying 7

V

- vents, identifying 8, 17
- video, product description 3

W

- warranty period 19
- webcam 9
 - removal 86
- webcam light, identifying 9
- webcam, identifying 9
- webcam/microphone module
 - removal 86
- Windows
 - Refresh 113
 - Reset 113
 - system restore point 105, 106
- Windows 7 operating system DVD
 - creating 114
 - using for restore 117
- Windows 7 operating system media
 - creating 114
 - using for restore 117
- Windows application key,
 - identifying 14
- Windows key, identifying 14, 15
- Windows operating system DVD 113
- Windows Startup Repair, using 116

- Windows tools
 - using 106
- wireless antennas, identifying 9
- wireless light 11, 17
- wireless, product description 3
- WLAN
 - removal 44
 - spare part numbers 44
- WLAN antenna cables
 - removal 85
- WLAN antennas, identifying 9
- WLAN cable
 - spare part number 28
- WLAN cable, spare part number 28
- WLAN module
 - spare part number 25
- WWAN
 - removal 42
 - spare part numbers 42
- WWAN antenna cables
 - removal 86
- WWAN antennas, identifying 9
- WWAN cable
 - spare part number 28
- WWAN module (select products only)
 - spare part number 25