GPX^{*} R633B Shortwave Radio

FCC Warnings

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment

Battery Backup

Requires 3, D-size, batteries (not included)

does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- · Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- · Consult the dealer or an experienced radio/TV technician for help.


Introduction and Setup

Power

Plug the AC power cord into an AC power outlet to power the dock.





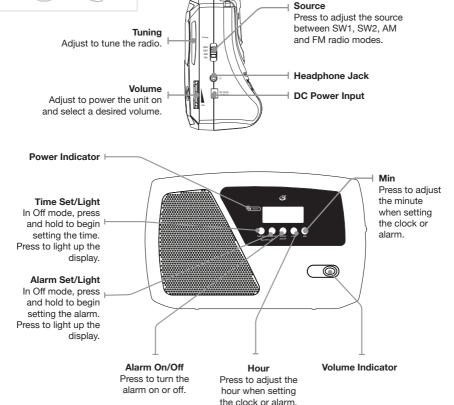

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com Customer Service: 1-888-999-4215 Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com

Copyright © 2012 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.

Clock and Sleep Timer

Setting the Clock

- 1. If in radio mode, turn the volume to Off to turn the unit off.
- Press and hold the Time Set button and while holding it down, press the Hour button to adjust the hour.

The PM indicator will light when the hour is set in the PM.

- 3. Release the Hour button.
- Press and hold the Time Set button and while holding it down, press the Min button to adjust the hour.
- Release the Time Set button to finish setting the time.

Alarm

Setting the Alarm

- 1. If in radio mode, turn the volume to Off to turn the unit off.
- Press and hold the Alarm Set button and while holding it down, press the Hour button to adjust the hour.

The PM indicator will light when the hour is set in the PM.

- 3. Release the Hour button.
- Press and hold the Alarm Set button and while holding it down, press the Min button to adjust the hour.
- 5. Release the **Alarm Set** button to finish setting the time.

Turning the Alarm On and Off

- 1. Follow the instructions for <u>Setting the Alarm.</u>
- 2. Press the **Alarm On/Off** button repeatedly.

Radio

Tuning the AM or FM Radio

- 1. Turn the volume dial to the desired level to turn the radio on.
- Adjust the Source switch to AM or FM as desired.
- 3. Adjust the tuning dial to tune to the desired frequency.

Radio Reception

Adjust the position of the **FM Antenna** to improve FM radio reception.

An AM antenna is built into the clock radio. To improve AM radio reception, adjust the position of the clock radio. Tuning the Shortwave Radio

- 1. Turn the volume dial to the desired level to turn the radio on.
- 2. Adjust the **Source** switch to SW1 or SW2 as desired.
- Adjust the tuning dial to search through any available frequencies.

Note: It is typical for reception to be poor or spotty.

 It is high recommended to use the radio at night, as more frequencies will be available.



International Support

www.gpx.com

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at: Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur

www.gpx.com

For Warranty Information and the most up-to-date version of this User's Guide, go to www.gpx.com Customer Service: 1-888-999-4215 Email Support: prodinfo@dpiinc.com, Email Parts: partsinfo@dpiinc.com

www.gpx.com

Copyright © 2012 Digital Products International (DPI, Inc.) All other trademarks appearing herein are the property of their respective owners. Specifications are subject to change without notice.