

PictureMate Charm[™]

Personal Photo Lab



Your photos.
Your way.



Features and Benefits

- **Print your favorite photos, PC-free** — print photos directly from any digital camera
- **Get pro quality photos, fast!** — print vibrant 4" x 6" photos in as fast as 37 seconds[†]
- **Portable printing** — grab the handle and take PictureMate Charm to parties, events, the office, even your vacation getaway!
- **Share prints for generations to come** — smudge, scratch, water and fade resistant prints; durable photos that last longer than traditional, film-processed photos¹
- **Get your photos, your way** — print popular photo sizes, black-and-white or sepia
- **Easily edit photos** — remove red eye, and more
- **Print stacks of photos at an everyday, low print price** — all the pictures you want at an affordable price
- **Ready to share** — instant-dry photos make it easy to give pictures to family and friends right away
- **Print in the great outdoors** — operate PictureMate Charm for hours on a single battery charge (with optional rechargeable battery)
- **Print wirelessly** — optional Bluetooth[®] adapter²

Printing Technology	Advanced MicroPiezo®, optimized for photo printing
Nozzle Configuration	90 nozzles x 4
Ink Type	4-color dye
Maximum Resolution (dots per inch)	5760 x 1440 dpi
Minimum Ink Droplet Size	2 picoliters
Print Speed†	4" x 6" photo in as fast as 37 seconds
Built-in Memory Card Slots Compatibility	Supports CompactFlash® (Type I and II), Secure Digital (SD™), SDHC,™ MMC, Memory Stick®, Microdrive® (Type M/H) and xD-Picture Card™
Connectivity³	USB connection between printer and PC, USB connection for external CD-R/RW drives, zip drives, PictBridge™ and USB Direct Print-enabled digital cameras. USB 2.0 connection cable not included
Supported Digital Camera Technologies	Exif Print, reads Digital Print Order Format (DPOF) from digital camera memory cards
Operating Systems	Windows® 7, Windows Vista®, Windows XP Professional x64, Windows XP, Windows 2000 Mac OS® X 10.3.9, 10.4.x, 10.5.x, 10.6.x For the latest information on Windows 7, please visit www.epson.com/support/windows7 For the latest information on Snow Leopard, please visit www.epson.com/support/snowleopard For all other operating systems, please visit www.epson.com/support for the latest in compatibility and drivers.
Layout Options	8 per page, wallet size, proofsheets
Maximum Printable Area	4" x 6" Top/bottom margin 0" Left/right margin 0"
Paper Capacity	Input paper tray — 20 sheets of PictureMate® photo paper

Weight and Dimensions (W x D x H)	Weight 7.9 lb Storage 9.1" x 6.7" x 5.7" Printing 9.1" x 13.5" x 10.5"
Sound Level	38 dB
Temperature	Operating 5 ° to 95 °F (10 ° to 35 °C) Storage -4 ° to 104 °F (-20 ° to 40 °C)
Safety Approvals	Safety standards: UL60950, CSA 22.2 No. 950 RFI: FCC part 15 subpart B class B, CSA C108.8 class B Caution: To avoid damaging your PictureMate, keep it out of the sun and don't leave it in locations where it can get too hot or cold.
Power Requirements	Rated voltage 120 VAC Rated frequency 50 – 60 Hz Rated current 0.4 Amp (Max 0.5 Amp)
Power Consumption	Approx. 11.5 W ISO 10561 (ENERGY STAR® compliant), Approx. 3.0 W in Sleep Mode
Warranty	Standard, one-year, limited warranty in the U.S. and Canada including Epson Exchange program. Extended warranties available beyond one year.
PictureMate Satisfaction Guarantee	If you are dissatisfied because you receive fewer prints than the total sheets of photo paper included in your Print Pack, return the remaining sheets and Epson will give you a pro-rated refund. This guarantee covers only end-user claims in the U.S. and Canada, and does not cover any non-Epson ink or paper, or commercial use of the printer. Call (562) 276-1347 (U.S.) or (905) 709-8676 (Canada). See www.MyPictureMate.com/satisfactionguarantee for more information about this satisfaction guarantee. For print quality, a variable amount of ink remains in the cartridge after the "Replace Print Pack" indicator.
What's in the Box	PictureMate Charm personal photo lab, initial photo cartridge and paper for about 20 4" x 6" photos, power cord, and Quick Start guide and CD

Better Products for a Better Future™

eco.epson.com

† Color photo without a PC in borderless layout, measured from start of paper feed. Actual print time will vary based on system configuration, software, and page complexity. See www.epson.com/printspeed for details.

1 Based on accelerated testing of prints displayed under glass in indoor display conditions. Actual print stability will vary according to media, printed image, display conditions, light intensity, temperature, humidity and atmospheric conditions. Epson does not guarantee the longevity of prints. For maximum print life, display all prints under glass or UV filter or properly store them.

2 Bluetooth adapter sold separately; please visit www.MyPictureMate.com for ordering information.

3 For a complete list of compatible drives, visit www.MyPictureMate.com/support



Epson America, Inc.
3840 Kilroy Airport Way, Long Beach, CA 90806

Epson Canada, Ltd.
3771 Victoria Park Avenue, Toronto, Ontario M1W 3Z5

www.epson.com
www.epson.ca