

PYLE[®]
PyleUSA.com

WIRELESS KARAOKE PLAYER



INSTRUCTION MANUAL

Model: **PKRK68MC**

WARNINGS

**TO PREVENT FIRE OR SHOCK HAZARD
DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**



This “bolt of lightning” indicates uninsulated material within your unit which may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.



The “exclamation point” calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

 
WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

Ventilation warning:

The normal ventilation of the product shall not be impeded for intended use.

Dripping warning:

The product shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the product.



Class II equipment symbol. This symbol indicates that the power adaptor has a double insulation system.

SAFE SOUND



Notes:

1. Reduce volume before plugging the earphones/headphone.
2. Speaker of the unit is automatically disconnected while earphone /headphones are connected.
3. Adjust the volume to a comfortable listening volume level.

Use

To Clean the set using dry soft cloth
Do not use any cleaning agents containing alcohol, ammoniac, benzene or abrasive as this may harm the housing.



SPECIFICATIONS:

Audio Monitoring: Capacitor style
Output: 10mW (Earphone)
3W (Speaker)
Frequency Range: 100Hz-10 KHz
SPL: >115dB 1 KHz THD<1%
Reverberation: ECHO
Battery: Built-in Polymer Lithium Battery
Battery Capacity: 1000mAH
Charging Supply: DC5V
Battery working Time:6-10 hours
Bluetooth: Version 2.1
Connections:3.5MM Headphone, Mini USB Compatible Port

IMPORTANT: Due to continual revision and improvement on our products design, specifications are subject to change without further notice.

BASIC FUNCTION:



ACCESSORIES



OPERATION:

FUNCTION OF CONTROLS

1. **Power button:** Turns the unit on and off.
2. **Volume +/- button:** Adjusts the microphone volume level
3. **ECHO +/- button:** Adjusts the ECHO function

BLUETOOTH MODE (*Allows you to sing using the Bluetooth microphone*)

1. Turn on microphone. The indicator will light blue and a sound will indicate that bluetooth function is enabled.

2. Search bluetooth ID "PKPK68MC" with your mobile device and connect it.

NOTE: If prompted, you will need to input a password of "0000." When successfully connected a confirmation sound will come from the microphone.

3. Open the APP software/karaoke software in your smartphone to select music file, and adjust mobile phone/tablet/pc's volume.

4. Adjust microphone's volume and echo.

5. Start to sing.

NOTE:

- If you want to use PKPK68MC as a Bluetooth speaker, turn off microphone's echo and volume.
- Your device's Bluetooth has a memory function, when mobile phone is restarted, it will connect automatically.
- In Bluetooth mode, PKPK68MC does not support the Karaoke app on Apple iOS.

Wired Mode (*Allows singing and recording at the same time*)

1. Download APP karaoke software to mobile phone.

2. Turn on microphone.

3. Connect microphone and mobile phone as following.



4. Open karaoke app to choose songs and sing.

5. Record song as per the karaoke app instruction.

CHARGING OPERATION

Recharging method is the same as mobile device charging: The battery power indicator will be red while recharging. The light automatically turns off after the unit is fully charged.

NOTE:

- Use a DC5V adapter to recharge
- The first charge must be over 8 hours.
- During normal use, the unit will only need to charge for 2 hours.

ATTENTION

1. If the device is wet, please allow the unit to air dry; do not use high temperatures to dry the unit, as it may cause internal component damage.
2. If the device is playing and electromagnetic interference occurs, it is normal and does not mean the device is damaged.
3. If the device is close to a speaker and creates interference, please try to avoid this action, and adjust the speaker volume level.
4. Do not use the device near fire.
5. Do not throw out to avoid falling damage.

TROUBLESHOOTING AND MAINTENANCE

Troubleshooting

- If an error occurs, please check the troubleshooting guide listed below before taking the set for repair.
- If you are unable to remedy the problem by following the points below, consult your dealer or service center.
- Do not open the device as this risks damage to the unit

Warning: Under no circumstances should you try to open the unit and/or repair the device yourself, as this will invalidate the warranty.

PROBLEM	POTENTIAL CAUSE	SOLUTION
Power LED not active	No power No charge	Recharge the unit Check cable connection
No Sound	Not powered on Volume knob off	Check if LED Power indicator is on Adjust volume knob
No ECHO	ECHO knob off	Adjust ECHO knob
Recording too low	Unit is too far from source	Make sure the unit is close to the source of recording
Recording noise	Ambient noise	Move to a quiet place
Poor recording from some phones	Phone issue Poor sound due to processing chip	Restart the phone Replace recording chip

PYLE®

PyleUSA.com