

LINKSYS®

A Division of Cisco Systems, Inc.



Package Contents

- Wireless-G Business Ethernet Bridge
- Two SMA Detachable Dipole Antennas
- User Guide on CD-ROM
- Quick Installation
- Ethernet Network Cable
- Power Adapter
- Product Stands
- Registration Card

QUICK INSTALLATION

BUSINESS SERIES

Wireless-G Business Ethernet Bridge

Model: **WET200**



1

Installation



NOTE: For details on placement options such as using the stands or wall-mounting, please refer to the User Guide on the CD-ROM.

- A.** Connect one end of an Ethernet network cable to the LAN port on your PC, then connect the other end to Ethernet port 1, 2, 3, 4, or 5 on the Bridge.



- B.** Connect the power adapter to the Bridge's Power port, and then plug the other end into an electrical outlet.



- C.** The Power LED on the front panel will light up green as soon as the power adapter is connected properly.

Hardware installation is now complete.

2

Configuration

Follow these instructions to set up the Bridge in Infrastructure mode. For information on advanced configuration refer to the User Guide on the CD-ROM.

- A.** Assign your PC a static IP address in the same subnet as the Bridge's default IP address, **192.168.1.226**.
- B.** Open your web browser. Enter **http://192.168.1.226** in its Address field. Press **Enter**.



- C. The login screen appears. Enter the default user name and password, **admin**, in lowercase letters in the *User name* and *Password* fields. Click **OK**.



- D. The web-based utility's *Setup* screen (the default screen) appears. Select the **Wireless** tab at the top of the screen.



- E. The *Wireless* tab's *Basic Settings* screen appears. Click **Site Survey** to search for your wireless network.



- F. The *Wireless Site Survey* screen displays a list of wireless networks in your area. Find your wireless network and connect to it by clicking the radio button to its left.



- G. The next screen shows your wireless network's security settings. If the *Security Mode* is **Disabled**, security is not configured; click **Apply**. Otherwise, fill in the security settings (for example, the shared secret, or the passphrase and keys). Then click **Apply**.



H. A message briefly notifies you that the system is restarting, then the Wireless tab's *Basic Settings* screen appears, displaying your wireless network's basic settings. Select the **Setup** tab to display the *Setup* screen.



I. If the Bridge's default IP address **192.168.1.226** conflicts with the addresses on your network, change the Bridge's IP address as follows:

- To assign a static IP address, select **Static IP Address** from the drop-down menu, then fill out the *Local IP Address*, *Subnet Mask*, *Default Gateway*, *Primary DNS*, and *Secondary DNS* fields. Then click **Apply**.
- To have a DHCP server assign an IP address to the Bridge, select **Automatic Configuration-DHCP** from the drop-down menu, then click **Apply**.

Congratulations! Configuration is now complete.

For additional information or troubleshooting help, please refer to the User Guide on the CD-ROM. Additional support is also available via e-mail or by phone.

24-Hour Technical Support

800-326-7114

E-mail Support

support@linksys.com

Website

<http://www.linksys.com>
<http://support.linksys.com>

RMA (Return Merchandise Authorization)

<http://www.linksys.com/support>

FTP Site

<ftp://ftp.linksys.com>

Sales Information

800-546-5797 (800-LINKSYS)

Linksys is a registered trademark or trademark of Cisco Systems, Inc. and/or its affiliates in the U.S. and certain other countries. Copyright © 2007 Cisco Systems, Inc. All rights reserved. Other brands and product names are trademarks or registered trademarks of their respective holders.

LINKSYS[®]
A Division of Cisco Systems, Inc.