

Sony Cybershot DSC-W55 Digital Cameras

Memory Stick Duo (memory card)

Do not touch the terminal with your hand or a metal object. Do not bend, drop, or get it wet. Keep it out of direct sunlight and avoid excessive heat and humidity.

terminal



Inserting into camera:

1. Open Battery/Memory Stick Duo cover
2. Insert with the terminal side facing the lens (see diagram)

Battery Pack

 
 
Inserting into camera: (see #3 on diagram)

Insert battery pack while pressing the battery eject lever with the tip of the battery pack

Ejecting: Press eject lever

Charging:


1. Insert battery pack into charger
2. Connect to wall outlet

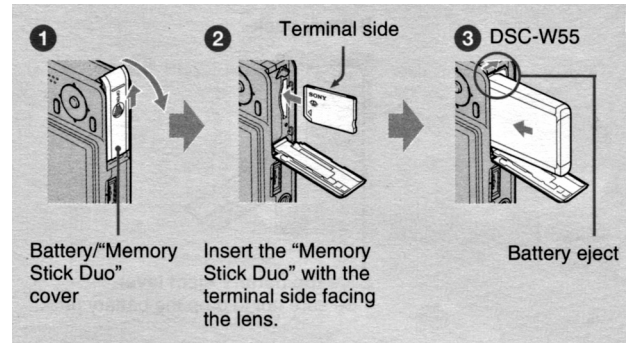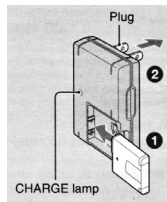

Shooting Images

Select Image Size: press button. Use button to select, then press again.

 Select a mode with the mode dial: **Still image (auto adjustment mode):** Select .
Movie: Select .

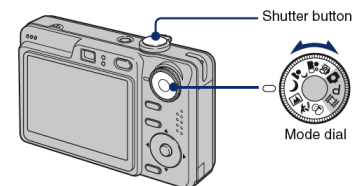

Program Modes are also available, depending on what you are shooting.

Still image:

 
1. Press and hold shutter halfway down to focus.
Autofocus Lock indicator: (green ● flashes and a beep sounds)
2. Press shutter button fully down.

Movie:

1. To start recording, press shutter button fully down.
2. To stop recording, press the shutter button fully down again.

Control button:

- Select a flash mode (auto, forced on, slow synchro, forced off)
- Macro (Shooting Close-Up)
- Self-Timer (choice of 10-second or 2-second delay)
- Exposure Adjustment (+ brightens image; - darkens image)

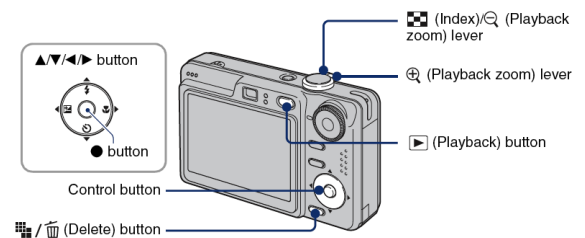



Viewing Images

Press playback button, then press or to advance through images.

Deleting Images

1. Display the image you want to delete and press (Delete) button.
2. Select [Delete] with , then press .

Formatting Memory Stick Duo (erases all images)

1. Press Menu button, then press ► until you get to the toolbox menu 
2. Press ▼ until you get to the . Press ► to get to Format. Press ► again to select OK, then press center of Control Button.
3. Press Menu button again to quit.

Downloading images

1. Place camera with screen facing upwards.
2. Turn power OFF, attach multiconnector USB/AV cable into bottom of camera and plug in USB connector to a port on your computer. You may also use the A/V cables to view on a TV monitor.
3. Turn camera power ON. A disk icon will appear on your desktop. Select picture folder and download as you would normally from a disk.

